


3421A Data Acquisition/ Control Unit

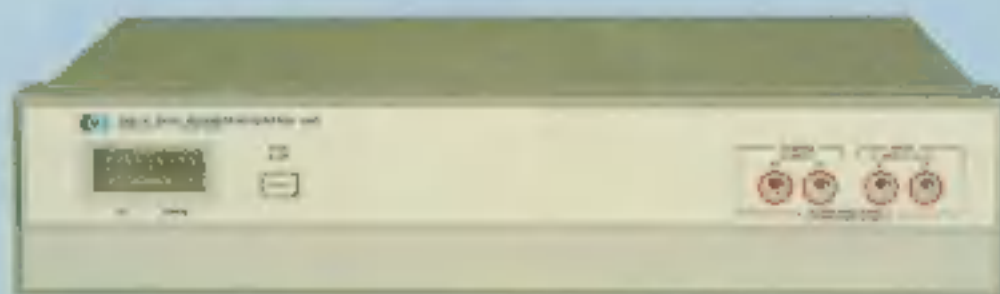

Operating, Programming, and Configuration Manual





HEWLETT
PACKARD

OPERATING, PROGRAMMING AND CONFIGURATION MANUAL

MODEL 3421A DATA ACQUISITION/CONTROL UNIT

IMPORTANT NOTICE

Most -hp- service offices in the United States are NOT authorized to service and repair 3421A DA/C Unit. Notify your local -hp- sales office for specific information on where to send the instrument for repair.

Any changes made in instruments manufactured after this printing will be found in a "Manual Changes" supplement supplied with this manual. Be sure to examine this supplement, if one exists for this manual, for any changes which apply to your instrument and record these changes in the manual.

WARNING

The 3421A uses latching relays on the multiplexer assembly (option 020) and on the mainframe. The state of these relays can only be altered under program control. This is an advantage in the sense that, under most conditions of failure, the relays will remain in whatever state your program has set them. However, in case of power or equipment failure, any application requiring a failsafe method of insuring that the circuits under control are in a known state must be provided by the installer.


Manual Part No. 03421-90006

Microfiche Part No. 03421-90056

©Copyright Hewlett-Packard Company 1982
P.O. Box 301, Loveland, Colorado, 80537 U.S.A.

3421A Manual Reference

The following block diagram shows manuals that are included in the 3421A documentation scheme. Dotted line borders indicate those manuals available with specific options; solid borders indicate those manuals that are shipped with every 3421A system.

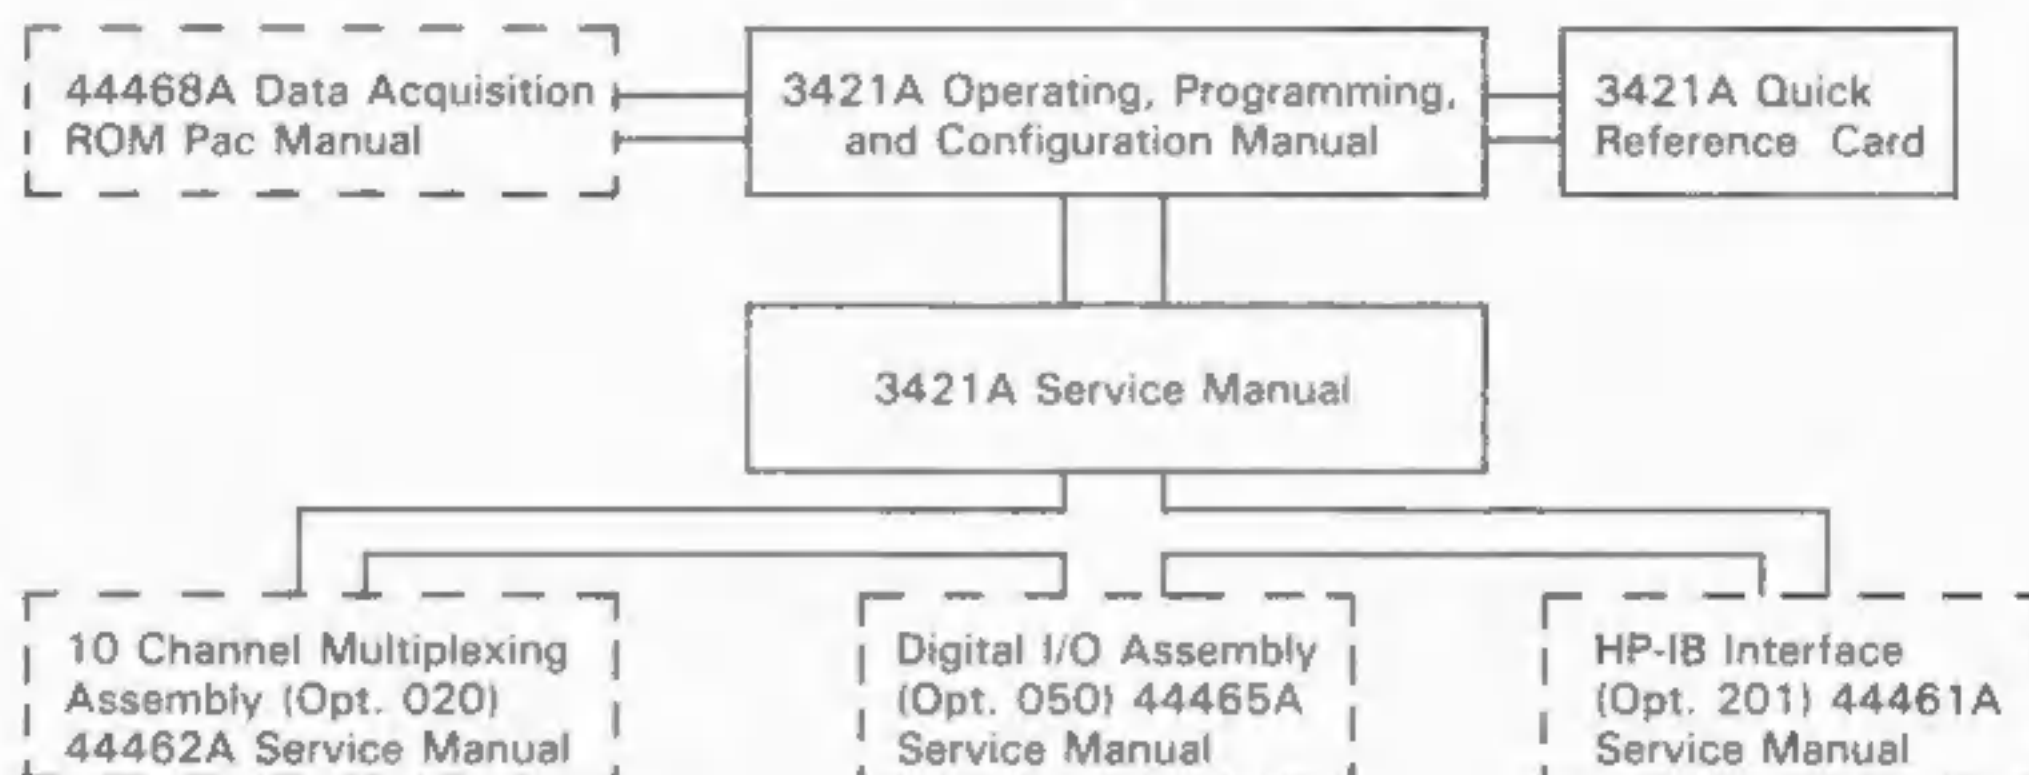

3421A Operating, Programming, and Configuration Manual (03421-90006) for all users. All features and options of the 3421A are discussed in this manual.

3421A Quick reference Card (03421-90002) for all users. This card is a quick reference to all of the 3421A commands.

3421A Service Manual (03421-90001) for the service technician. Theory of operating, calibration, and troubleshooting are discussed.

44462A Service Manual (44462-90000) for the service technician. This manual covers theory of operation and troubleshooting for the option assembly.

44465A Service Manual (44465-90000) for the service technician. This manual covers theory of operation and troubleshooting for the option assembly.

44461A HP-IB Interface Service Manual (44461-90000) for the service technician. This manual covers theory of operation and troubleshooting for the HP-IB option assembly.

units After
Serial # 2075
have HP-IB
UPDATE & will
work with
9816



MANUAL CHANGES

-hp- MODEL 3421A

DATA ACQUISITION AND CONTROL UNIT

Manual Part Number 03421-90010

CHANGE NO. 1. Applies to 44462As with ERC 2421 and Above.

Complete Manual. Change all the 10 Channel Multiplexer Option references in the manual to Multiplexer/Actuator Option.

Page 140, Heading: Channels. Change the third paragraph to the following:

All but the first two and last two channels can have attenuators built into the signal path. This will be discussed later in this chapter.

Page 145, Heading: Voltage Measurements. Change Channels ■ through 7 in the third sentence of the first paragraph to Channels 2 through 7.

Page 154, Heading: Attenuators. Change the second and third paragraphs to the following:

It was mentioned previously that channel 2 on each multiplexer assembly has a built-in 10:1 attenuator. This attenuator can be placed into the circuit by moving jumper J8 on the assembly to the 'IN' position. When the jumper is in this position, any voltage measured from channel 2 must be multiplied by 10 to obtain the correct value. The attenuator can be taken out of the circuit (no attenuation) by moving jumper J8 to the 'OUT' position.

Page 156, Heading: Attenuators. Change Channels 0, 1 and 3 through 7 in the first sentence of the first paragraph to Channels 3 through 7.

Page 2-18, Heading: Actuator/Multiplexer Jumpers. Change the first two paragraphs and the first sentence of the third paragraph to the following:

Channels 0 and 1 on each multiplexer assembly can be configured as either actuators or as multiplexers. Several jumpers are provided on each channel for this conversion. The photograph below shows the location of the jumpers on older assemblies using soldered-in jumpers. The jumpers on the present assemblies are in the same location, except they are flying lead jumpers.

The diagram below show which jumpers need to be in place for the channels to be configured as actuators or multiplexers. The diagram applies for older assemblies that had soldered-in jumpers. For the present assemblies that use flying lead jumpers, refer to the assembly itself. Connect both H0 and L0 to their corresponding 'MUX' point to configure channel 0 as a multiplexer, or connect to 'ACI' to configure the channel as an actuator. Use H1 and L1 to configure channel 1.

The following diagram and chart show which jumpers need to be in place for channels 0 and 1 to be configured as actuators and which jumpers need to be in place for channels 0 and 1 to be configured ■ multiplexers. The following diagram is for older assemblies. For the present assemblies, use the information on the assembly itself to determine the configuration (see previous paragraph).

Page 221, Heading: Attenuators. Change the first three paragraphs under the heading as follows:

Provisions are made on the 44462A circuit board for attenuators to be installed on channels 2 through 7. On board provisions ■■

not provided for attenuators on channels 0, 1, 8, and 9. An attenuator is composed of two resistors that act as ■ voltage divider. Consider the following diagram.

Channel 2 has a built-in, jumper selectable, 10:1 attenuator. This attenuator can be selected by moving jumper J8 from the 'OUT' to the 'IN' position. This attenuator has an input impedance of 1 Mohm ($R1 + R2$) to prevent loading of the signal source.

Channels ■ through 7 can all have attenuators built into their respective signal paths. An older 44462A assemblies, channels 0 and 1 also had provisions to install attenuators, if the channels are configured as multiplexers. The following diagram shows how to install the attenuators. A package of seven pairs of resistors (-hp- part number 44469A) is available for use ■ attenuators. These resistors are the same values ■ those used in channel 2.

CHANGE NO. 2. Applies to ■ Serial Numbers.

Page 186, Power Cords Figure. Change the -hp- part number of the NEMA 5-15P power cable (last cable in the figure) from "8120-1521" to "8120-1378".

CHANGE NO. 3. Applies to All Serial Numbers

Add the attached "DECLARATION" to the manual.

TABLE OF CONTENTS

Chapter	Page		Page
1. Meet the 3421A.....	1	Using T-Type Thermocouples to Measure Temperatures.....	38
Introduction.....	1	TEST/RESET.....	39
Introduction to Data Acquisition and Control.....	2	What it Does.....	39
How To Use This Manual.....	4	VOLTMETER.....	41
		The Internal Voltmeter.....	41
Section I. Operating and Programming.....	9	Autozero.....	41
		Calibration.....	42
Chapter	Page	Measurement Functions.....	42
2. Getting Started.....	11	DC Voltage Measurements.....	42
Introduction.....	11	AC Voltage Measurements.....	43
Operating Characteristics.....	11	Resistance Measurements.....	43
An Overview of the 3421A.....	13	Number of Digits of Resolution.....	43
The 3421A in Detail.....	15	Ranging.....	44
TURN-ON.....	17	Autoranging.....	44
What Happens at Turn-on.....	17	Autorange Hysteresis.....	44
BATTERY OPERATION.....	19	Manual Ranging.....	44
Low Battery.....	19	Valid 3421A Voltmeter Ranges.....	45
CALIBRATION.....	20	Triggering.....	45
What is Electronic Calibration.....	20		
Temperature Calibration.....	20	Chapter	Page
Calibration Enable.....	20	3. BASIC Language Programming.....	47
CHANNELS.....	21	Introduction.....	47
What is a Channel.....	21	Trying Out a Command.....	47
Channel Numbering and Addressing.....	21	HP-IL vs. HP-IB.....	49
COMMANDS.....	22	Addressing.....	51
Standard Commands.....	22	HP-IL Addressing.....	52
Advanced Commands.....	23	HP-IB Addressing.....	53
COUNTER.....	24	Sending Instructions to the 3421A.....	53
Frequency.....	24	Procedure.....	53
Totalize.....	25	Sample Problem.....	54
DISPLAY.....	27	Programming Hints.....	54
How It Is Used.....	27	Receiving Data From the 3421A.....	56
Turn-on/Reset.....	27	Output Format.....	57
Channel Display.....	28	Simple Programming.....	58
HP-IL POWER DOWN/POWER UP.....	29	3421A Interface Capabilities.....	59
Power Down.....	29	CLEAR.....	60
Power Up.....	29	Example.....	60
OPTIMIZING READING RATES.....	30	Comments.....	60
Why Optimize.....	30	LOCAL, LOCAL LOCKOUT, REMOTE.....	60
Your Signal Environment.....	30	Comments.....	60
Autozero.....	31	REQUIRE SERVICE (SRQ).....	61
The Fastest Reading Rate.....	31	Comments.....	61
REAR PANEL.....	33	How to use SRQ.....	62
What is on the Rear Panel.....	33	Status Register and Status Byte.....	62
The Reset Switch.....	34	Setting the SRQ mask.....	62
The Rear Panel Control Switches.....	34	SPOLL (Serial Poll).....	71
RESISTANCE MEASUREMENTS.....	35	Example.....	71
Measuring Resistance.....	35	Comments.....	71
2-Wire Resistance Measurements.....	36	TRIGGER.....	72
4-Wire Resistance Measurements.....	36	Example.....	72
TEMPERATURE MEASUREMENTS.....	37	Comments.....	72
Using Thermocouples to Measure Temperature.....	37	Topics in Advanced Programming.....	72
Measuring the Reference Temperature.....	38	TEMPERATURE MEASUREMENTS.....	73
		Thermistor.....	73
		Thermocouple.....	74

COMMAND DIRECTORY.....77

Chapter	Page
4. Programming With The -hp- Model	
41C/CV Calculator.....	97
Examples Format.....	98
Sending Instructions to the 3421A.....	98
Receiving Data From the 3421A.....	101
HP-IL Interface Control.....	102
SELECT.....	103
Example.....	103
Comments.....	103
OUTA.....	103
Example.....	103
Comments.....	103
IND.....	104
Example.....	104
Comments.....	104
INA.....	106
Example.....	106
Comments.....	106
TRIGGER.....	106
Example.....	106
Comments.....	106
INSTAT.....	107
Example.....	107
Comments.....	107
PWRDN (Power Down).....	114
Example.....	114
Comments.....	114
PWRUP (Power Up).....	115
Example.....	115
Comments.....	115
FINDID.....	116
Example.....	116
Comments.....	116
AUTOIO.....	117
Example.....	117
Comments.....	117
MANIO.....	117
Example.....	117
Comments.....	117
REMOTE.....	118
Example.....	118
Comments.....	118
LOCAL.....	118
Example.....	118
Comments.....	118
LISTEN.....	119
Example.....	119
Comments.....	119
Sample Application Programs.....	120
Writing Programs.....	120
Initialization.....	120
3421A Front Panel.....	123
Sample Programs.....	126

TEMPERATURE MEASUREMENTS	
(Using a Thermistor).....	127
TEMPERATURE MEASUREMENTS	
(Using Thermocouples).....	129
DATA LOGGER.....	132
Running the LOGGER Program.....	132
How the Programs Work.....	132
USING THE ADVANCED COMMANDS.....	136

Chapter	Page
5. 44462A 10 CHANNEL MULTIPLEXER	
OPTION.....	137
Introduction.....	137
CHANNELS.....	138
Channel Numbering and Addressing.....	139
Channel List.....	140
Measurements.....	141
Voltage Measurements.....	142
DCV[x,y,...z].....	142
ACV[x,y,...z].....	143
Resistance Measurements.....	144
TWO[x,y,...z].....	145
FWO[x,y,...z].....	146
Thermocouple Temperature	
Measurements.....	148
TEM[x,y,...z], REF[x].....	148
Counter Functions.....	149
FRQ[x,y,...z].....	150
TOT[x].....	150
Attenuators.....	151
Actuators.....	153
Power Down/Power Failure.....	154
Channel and Advanced Commands.....	154
Application Examples.....	157
Specifications.....	161

Chapter	Page
6. 44465A 8 Bit Digital I/O Option.....	163
Introduction.....	163
Input Port Overview.....	164
Standard Commands.....	164
Advanced Commands.....	167
Working With the Input Port.....	171
Output Port Overview.....	172
Standard Commands.....	172
Advanced Commands.....	174
Working With the Output Port.....	174
Specifications.....	176

Chapter	Page
7. OPERATOR MAINTENANCE.....	177
Introduction.....	177
Accessories.....	178
Preparation For Use.....	179

Unpacking Instruction.....	179
Initial Inspection.....	179
Power Requirements.....	180
Power Cords and Receptacles.....	180
Grounding Requirements.....	181
Power Line Fuse Replacement.....	181
Installation Considerations.....	181
Safety Considerations.....	182
Interface Connections.....	183
HP-IL.....	183
HP-IL Address Selection.....	184
HP-IB.....	184
HP-IB Address Selection.....	185
Warranty Information.....	185
Certification.....	185
Warranty.....	185
Limitation of Warranty.....	185
Exclusive Remedies.....	186
Assistance.....	186
Limitation of Warranty for Option 040.....	186
Specifications.....	187
Environmental Requirements.....	187
How To Obtain Repair Service.....	187
Serial Number.....	188
General Shipping Instructions.....	188
Further Considerations.....	188
Cleaning.....	188

Section II. Option Assembly Installation and Configuration.....	193
--	-----

Chapter.....	Page
8. INSTALLATION AND CONFIGURATION.....	195
Introduction.....	195
General Option Removal/Installation Procedures.....	195
Disassembly/Option Removal.....	196
3421A Disassembly.....	198
Installing the Option Assemblies.....	202
Strain Relief.....	207
HP-IB.....	208
HP-IB Switches.....	208
Installing the 44462A Multiplexer Assembly.....	209
Actuator/Multiplexer Jumpers.....	210
2- and 4-wire Ohms Measurements.....	212
Attenuators.....	212

The Terminal Block Edge Connector.....	214
Installing the 44465A Digital I/O Assembly.....	215
The Terminal Block Edge Connector.....	215
Cleaning.....	216

Chapter.....	Page
9. 44464A BREADBOARD OPTION OPTION 040.....	217
Introduction.....	217
Before You Begin.....	218
Voltmeter Input Connections.....	218
Parts Supplied.....	219
Parts Not Supplied.....	219
Power Supply Limitations.....	220
Power Supply Filtering.....	220
Thermal Gradients.....	220
Switching Inductive Loads.....	220
Radiated Noise.....	221
The Circuit Board.....	222
Voltage and Resistance Measurements.....	222
4-Wire Resistance Measurements.....	223
Counter and Totalize.....	224
The 8-Bit Input/Output Port.....	224
Loading The Components.....	224
Buffering the I/O Port Lines.....	225
Input Port Commands.....	225
REDi.....	225
BITx.....	225
Advanced Commands.....	226
MHx and MLx.....	226
MNI.....	227
Output Port Commands.....	228
CLS.....	228
WRT.....	229
Advanced Commands.....	229
DS.....	229
DC.....	229
Theory of Operation.....	229

APPENDICES.....	
A.....	235
B.....	241

LIST OF ILLUSTRATIONS

Figure	Page
5-1. Simplified Schematic.....	139
5-2. Voltage Measurements.....	143
5-3. 2-Wire vs. 4-Wire Resistance Measurements.....	144
5-4. 2-Wire Resistance Measurements.....	145
5-5. 4-Wire Resistance Measurements.....	147
5-6. Temperature Measurements.....	149
5-7. Frequency Measurements.....	150
5-8. Totalizing.....	151
5-9. Attenuators.....	152
5-10. Actuator.....	153
5-11. Single Ended Measurements.....	158
5-12. Shielding.....	159
5-13. Common Mode Noise.....	160
5-14. 4-20 mA Current Loop.....	161

Chapter 1

Meet The 3421A

Introduction

Welcome to the world of high performance, low cost data acquisition and control. Your new -hp- Model 3421A is a fully programmable unit combining precision measurement capability with process monitoring and control functions. When interfaced to an -hp- computer (such as the -hp- 85) or handheld calculator (such as the -hp-41C/CV), the 3421A forms a versatile, easy to use data acquisition and control system.

The standard 3421A consists of a mainframe, a built-in 5 1/2 digit voltmeter, a 10 KHz counter, and an HP-IL controller interface. Compensated temperature conversion using T-type thermocouples is also built in. The mainframe can hold up to three option assemblies. Available options include a 10 Channel Multiplexing Assembly, an 8-bit Digital I/O Assembly, and a Breadboard Assembly for custom circuit design. In addition, an optional HP-IB* interface is available.

Typically, at least one Multiplexing Assembly (44462A or option 020) is used in the 3421A. This assembly provides 10 channels for signal input. A temperature reference junction is built in to each assembly for thermocouple compensation. In addition, two of the channels can be configured as actuators for controlling motors, alarms, etc.

The 8-bit Digital I/O Assembly (44465A or option 050) provides an 8-bit input port and an 8-bit output port. Typical uses for this assembly include monitoring limit or position switches, and low voltage actuators. The 3421A command set provides for individual bit control as well as 8-bit word control.

If neither of these assemblies meet your needs, Option 040, the Breadboard Assembly is available. This option permits you to custom design and build your own measurement or control assembly.

All of the 3421A features are completely programmable. A powerful instruction set means that the 3421A is very easy to use in a wide variety of applications. The major features are:

- HP-IL interface for connecting to the -hp- 41C/CV calculator or computers such as the -hp- 85. An optional HP-IB interface is available for interfacing to other computers.

* HP-IB (Hewlett-Packard Interface Bus) is Hewlett-Packard's implementation of IEEE Standard 488-1978 and ANSI MC1.1.

- The 3421A may be combined with the -hp- 41C/CV handheld calculator, -hp- 82162A thermal printer/plotter, and -hp- 82161A digital cassette drive for a complete battery operated data acquisition system.
- Fully programmable 5½ digit voltmeter for measuring DC voltage, AC voltage, and 2- wire and 4- wire resistance measurements.
- Programmable power down, standby mode to conserve battery power in remote location usage.
- Memory storage for 30 readings allows fast data acquisition for later manipulation.
- Programmable counter for frequency measurements up to 10Khz or totalizing up to 65535 counts.
- Low thermal offset switching with built-in reference junction.
- Digital I/O for process control and monitoring.

Introduction to Data Acquisition and Control


As the core of a data acquisition and control system, the 3421A is capable of being used in many application areas where data received from various transducers needs processing.

For example, in the areas of production control, quality assurance, and final test, the 3421A provides uniform and precise measurements . Using the 3421A to test and monitor prototypes can mean better knowledge of the product and therefore shorter development times in the R&D lab. Battery operation and the 3421A's light weight allow you to transport the system to out-of-the-way locations.

All of this is made possible because of the 3421A's ability to perform several measurement tasks under computer control. Tests can easily be altered to fit other applications. Instrument cost and setup time is greatly reduced since the measurement system is contained in one package.

A simple solar heating demonstration will help you to visualize where the 3421A fits into a data acquisition/control system. This illustration shows the power and flexibility of the 3421A under computer control. In the following illustration, several parameters are to be measured including the temperature at different locations, fluid pressure on both sides of a pump, fluid flow and fluid level. Furthermore, the pump and two valves must be controlled, i.e., turned on or off.

The 3421A, under computer control, measures the various temperatures and transducer outputs and sends the data to the computer. The computer analyzes, records, and plots the data. But more than that, the computer makes certain decisions based upon the measured data and instructs the 3421A to actuate (turn on) the pump or valves. Several other functions may be included such as sounding an alarm if the pump pressure drops sharply or the liquid level in the tank is below normal.

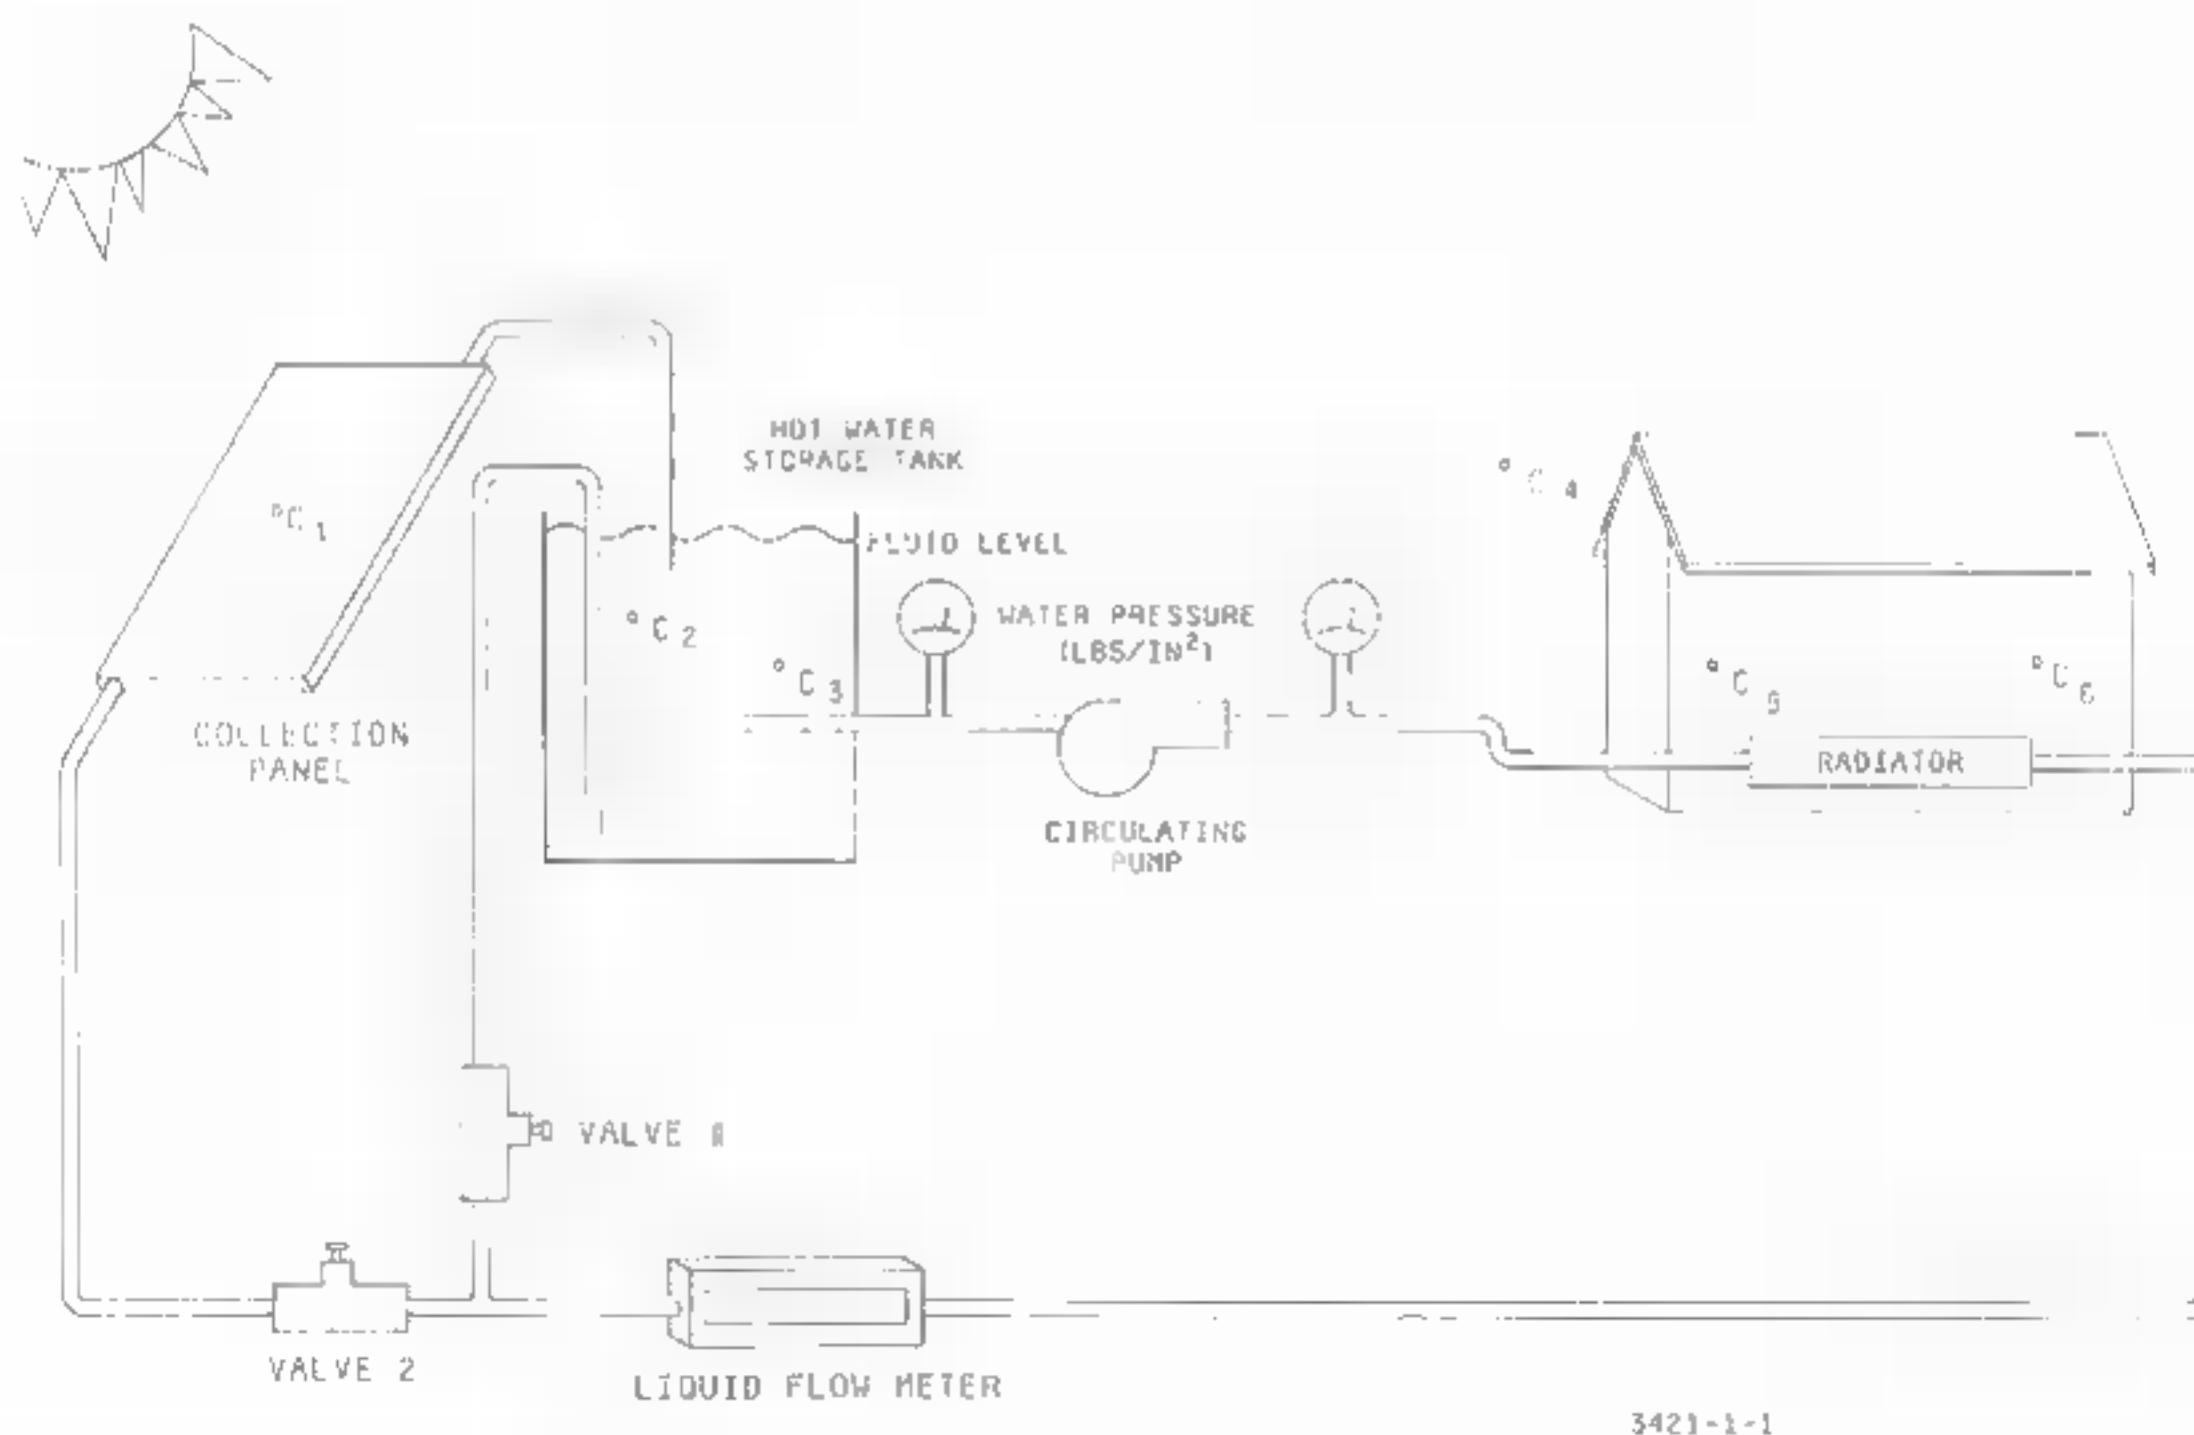

How To Use This Manual

This Operating, Programming, and Configuration Manual has been designed for you to serve as ■ complete reference document for using the 3421A. It covers both programming information and configuration/installation/connection information for the option assemblies. Information on Operator Maintenance, such as power requirements and specifications, are placed later in the manual, in Chapter 7. If you have just received your 3421A you will want to read this information. Chapters 8 and 9 discuss installing the option assemblies and the breadboard option (Opt. 040), respectively, and are intended for use only by qualified service trained personnel. A separate service manual for the 3421A contains information on calibration, performance testing and service.

Familiarize yourself with the 3421A by looking through this manual. The best way to feel at ease with the instrument is to sit down with this manual, the 3421A, and your calculator and perform the examples shown. It won't take long to become familiar with the instrument and its many features.


The following paragraphs will serve as ■ guide to direct you to the remaining chapters in this manual. Acquaint yourself with the manual by reading through these descriptions.

Section I, Operating and Programming

Getting Started

Chapter 2

Chapter 2 discusses each function and feature of the 3421A. Major sections are devoted to the voltmeter, counter, and temperature measurements. Other topics include the power-down "sleep" mode, battery operation, and optimizing reading rates. This chapter should be read before you begin programming the 3421A as it sets a foundation for the remainder of the manual.

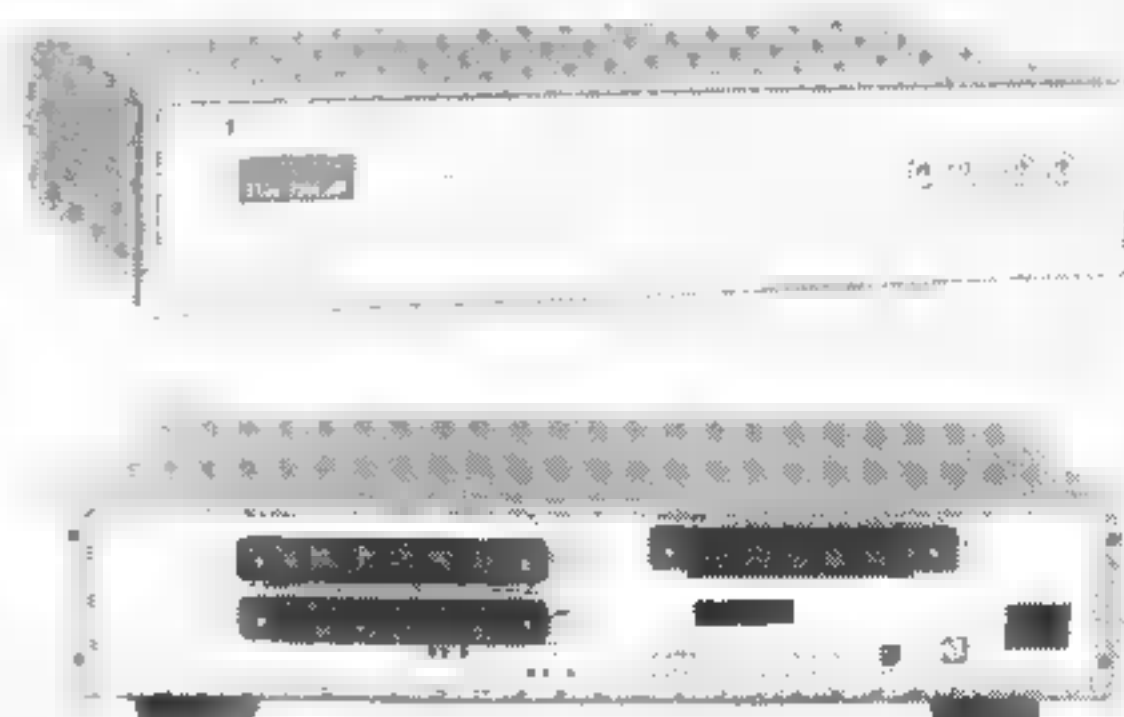


BASIC Language Programming Chapter 3

Desktop computers with HP-IL or HP-IB capability, such as the -hp- Model 85, may be used to program the 3421A. Chapter 3 covers this subject and provides examples to enhance the discussion. Several application programs are provided throughout the chapter. Immediately following this chapter are several blue pages called ■ Command Directory. This directory explains each command the 3421A responds to and provides simple program examples.


Programming With the -hp- Model 41C/CV Calculator Chapter 4

The -hp- Model 41C family of hand-held calculators can be used to program your 3421A. This chapter teaches you how to execute simple, one-line commands from the calculator and then shows you how to write simple programs for controlling the 3421A. At the end of the chapter are several application programs. Note that the assumption is made in this chapter that you do not have the -hp44468A Data Acquisition Pac ROM for the 41C/CV (option 541 for the 3421A). If you do have the 44468A, refer to its manual.

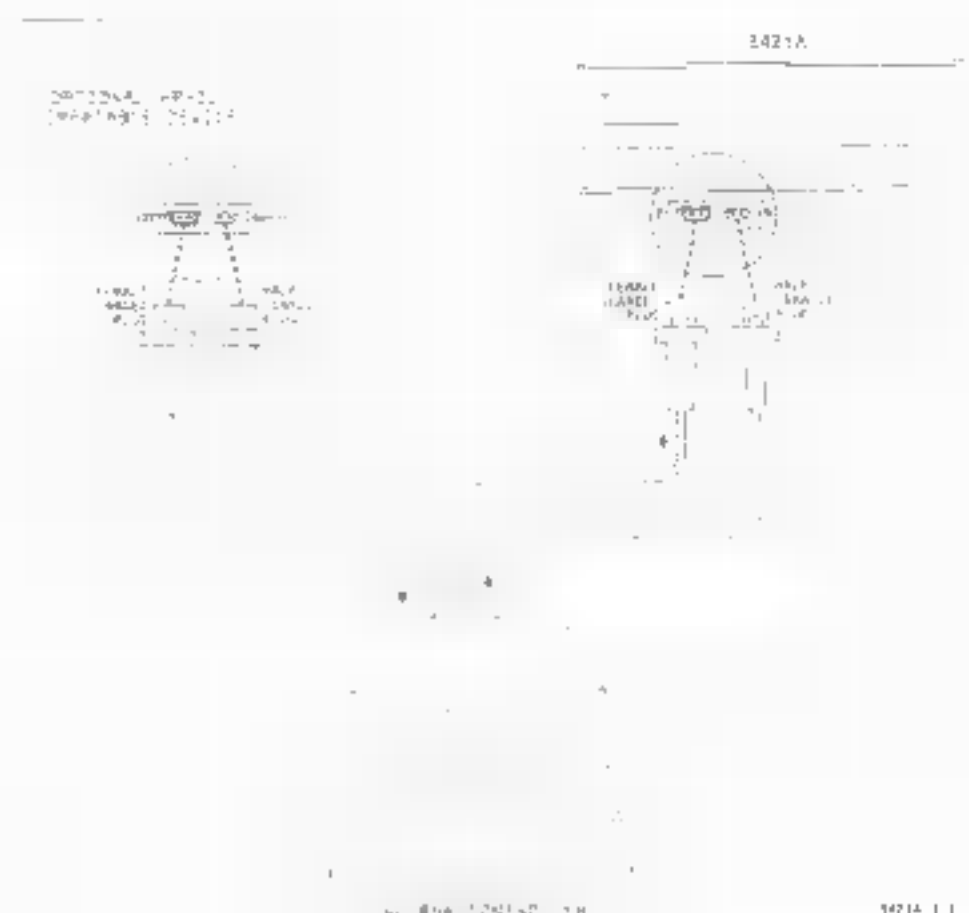


44462A 10 Channel Multiplexing Assembly Chapter 5

This chapter describes the features of the 44462A (opt. 020) assembly and the many ways it can be used. Topics include voltage measurements, resistance measurements (both 2- and 4- wire), temperature measurements, and actuators. Several examples are provided to aid you in understanding and using the assembly.

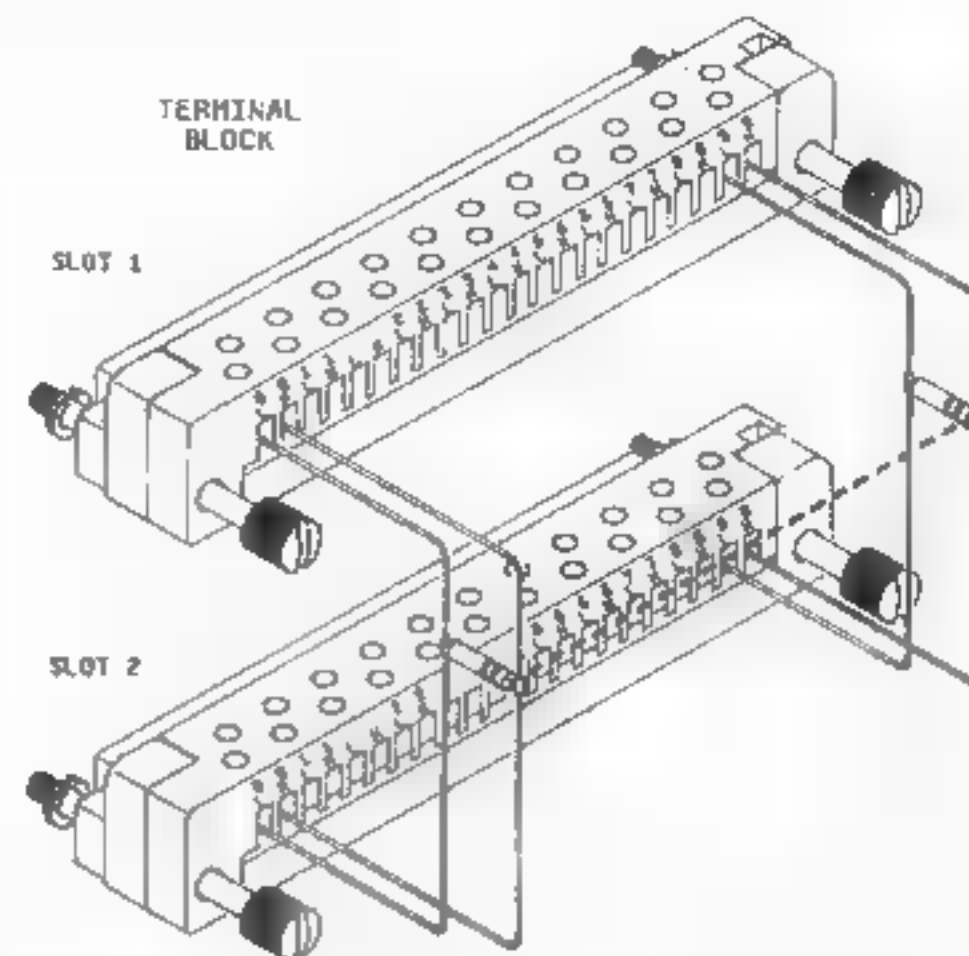


44465A 8-Bit Digital I/O Assembly Chapter 6

The 8-bit Digital I/O assembly (opt. 050) can be used in a wide variety of applications where on/off, present/not present, etc. conditions occur. This chapter shows how the assembly can be used to sense position or limit switches and control relays. Examples are scattered throughout the chapter.

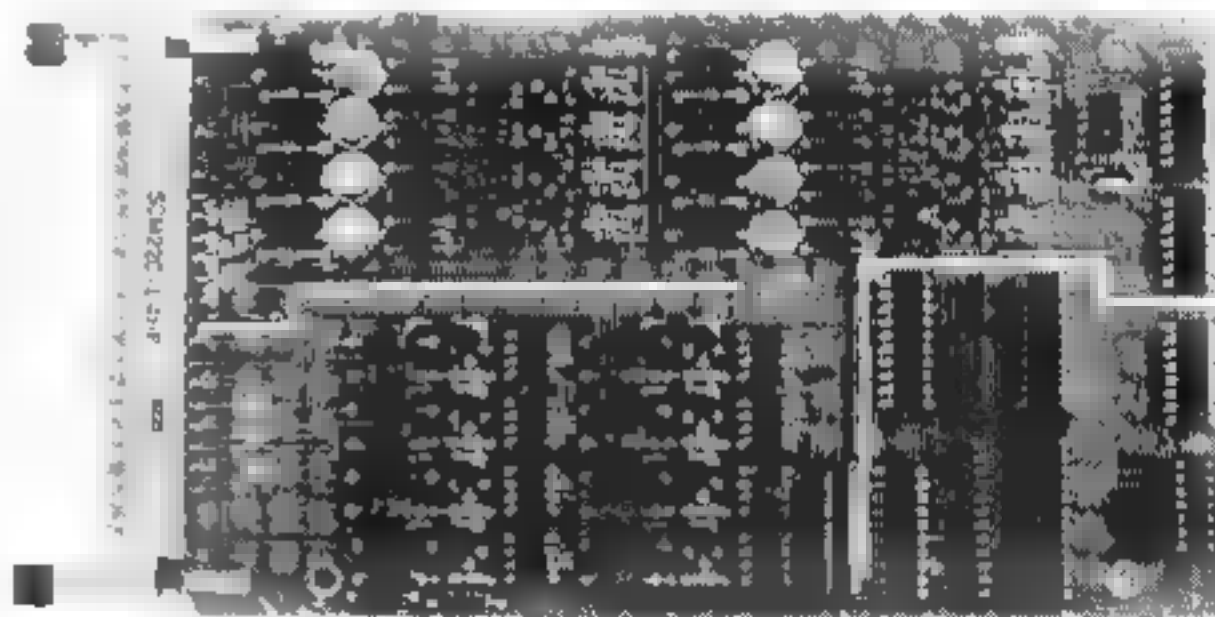

Operators Maintenance Chapter 7

This chapter addresses 3421A installation procedures (option installation is discussed in chapter 8). It also contains a complete table of specifications, what to do if you suspect a malfunction, and many other items of special interest to the operator.

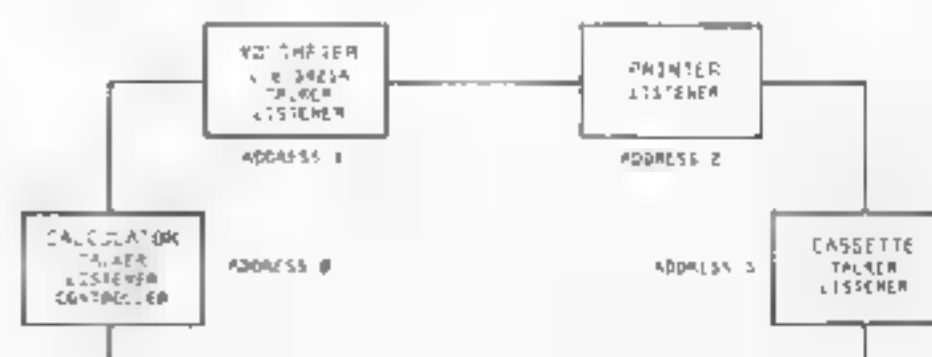

Section II, Option Assembly Installation and Configuration


CAUTION

Only service trained personnel with an understanding of electronic circuitry and the hazards involved should install or reconfigure the option assemblies. The two chapters described below contain installation and configuration information.

Installation


Chapter 8

This chapter details the installation procedures for the option assemblies. Also included are discussions of jumper configurations and connections to the device under test.

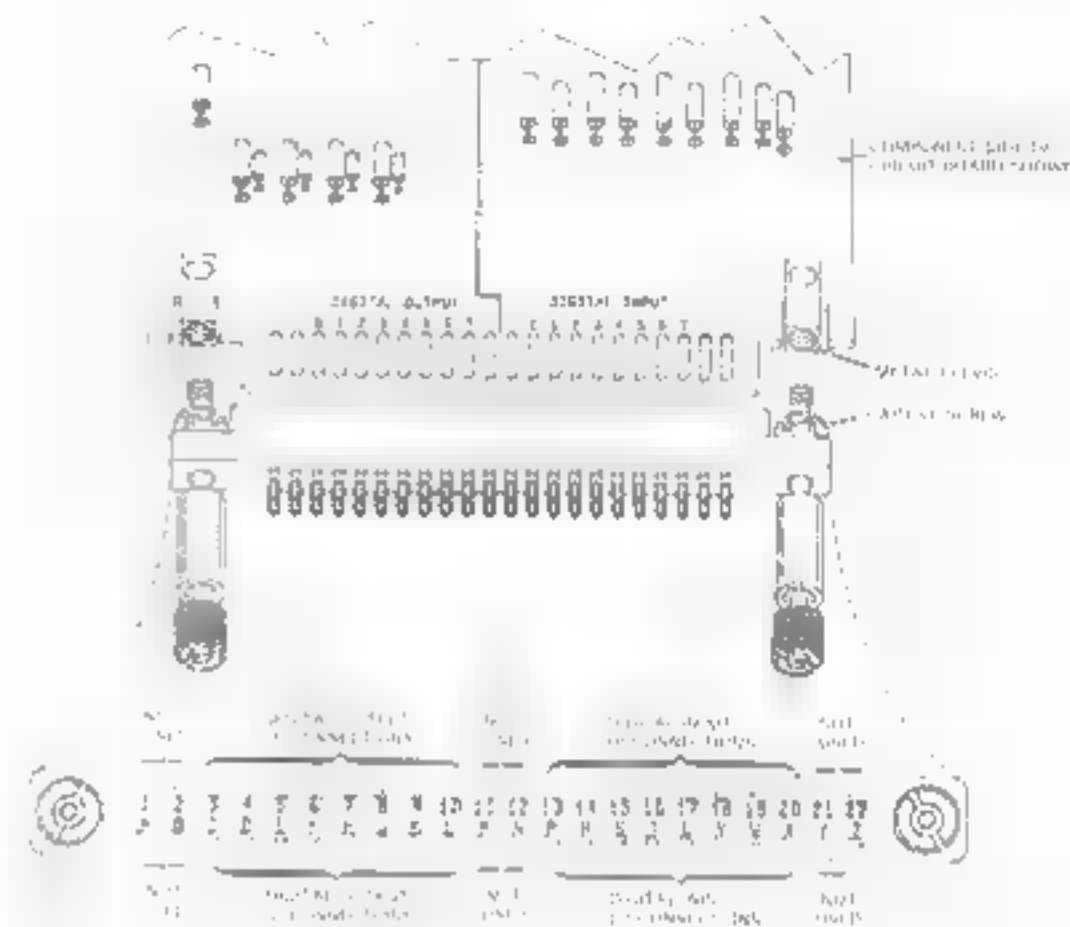

44464A
Breadboard Assembly
Chapter 9

The Breadboard option (opt. 040) is discussed in this chapter. Details are provided for using the assembly for custom designed circuits. Specifications include component height, power dissipation, and power supply requirements.

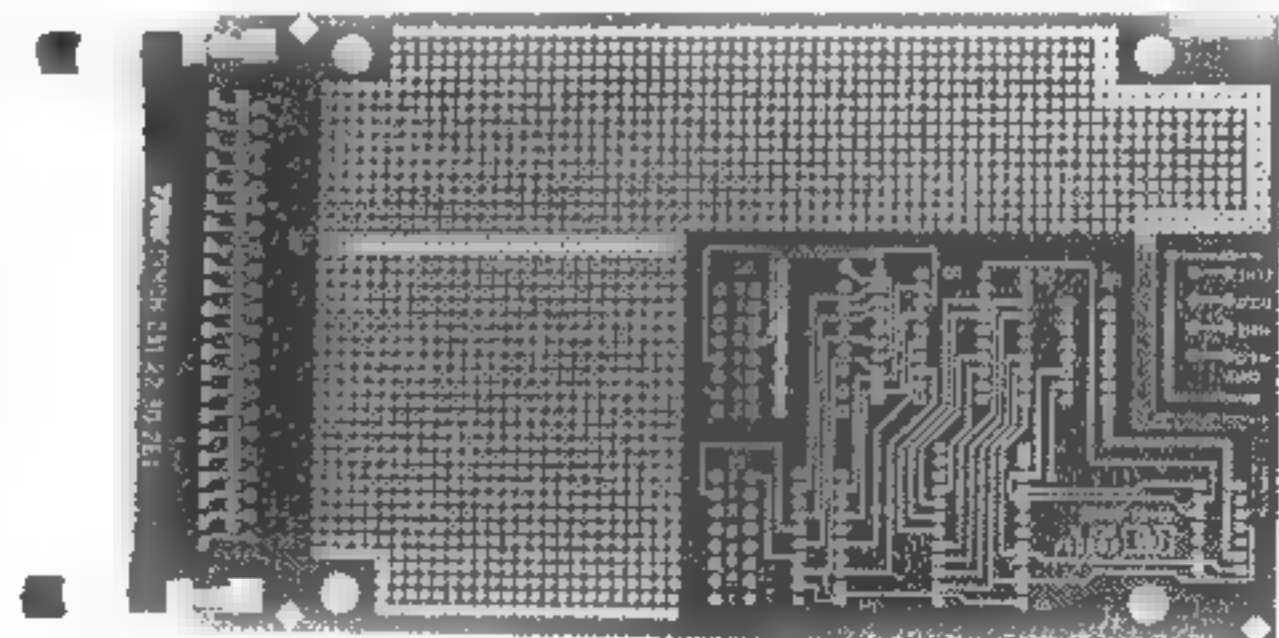

Documentation Worksheet Appendix A

All too often it is discovered that documentation has been totally forgotten until the hardware and setup work have been done. Frequently this results in considerable effort and in documentation that does not accurately reflect the work that has been done. This appendix helps to alleviate the problem by providing a simple worksheet which can be completed simultaneously with the hardware and programming tasks.

Spec File: *8/11/82* System Name: *Terminal* Test Area:

Step No.	Card	Channel	Type of Measurement	Function	Min	Typ	Max	Comments
1	3	3	Power	Power	0.00	0.00	0.00	Card location: 4.3
2	4	4	Power	Power	0.00	0.00	0.00	" " " " " "
3	5	5	Power	Power	0.00	0.00	0.00	" " " " " "
4	6	6	Power	Power	0.00	0.00	0.00	" " " " " "
5	7	7	Power	Power	0.00	0.00	0.00	" " " " " "
6	8	8	Power	Power	0.00	0.00	0.00	" " " " " "
7	9	9	Power	Power	0.00	0.00	0.00	" " " " " "
8	10	10	Power	Power	0.00	0.00	0.00	" " " " " "
9	11	11	Power	Power	0.00	0.00	0.00	" " " " " "
10	12	12	Power	Power	0.00	0.00	0.00	" " " " " "
11	13	13	Power	Power	0.00	0.00	0.00	" " " " " "
12	14	14	Power	Power	0.00	0.00	0.00	" " " " " "
13	15	15	Power	Power	0.00	0.00	0.00	" " " " " "
14	16	16	Power	Power	0.00	0.00	0.00	" " " " " "
15	17	17	Power	Power	0.00	0.00	0.00	" " " " " "
16	18	18	Power	Power	0.00	0.00	0.00	" " " " " "
17	19	19	Power	Power	0.00	0.00	0.00	" " " " " "
18	20	20	Power	Power	0.00	0.00	0.00	" " " " " "
19	21	21	Power	Power	0.00	0.00	0.00	" " " " " "
20	22	22	Power	Power	0.00	0.00	0.00	" " " " " "
21	23	23	Power	Power	0.00	0.00	0.00	" " " " " "
22	24	24	Power	Power	0.00	0.00	0.00	" " " " " "
23	25	25	Power	Power	0.00	0.00	0.00	" " " " " "
24	26	26	Power	Power	0.00	0.00	0.00	" " " " " "
25	27	27	Power	Power	0.00	0.00	0.00	" " " " " "
26	28	28	Power	Power	0.00	0.00	0.00	" " " " " "
27	29	29	Power	Power	0.00	0.00	0.00	" " " " " "
28	30	30	Power	Power	0.00	0.00	0.00	" " " " " "
29	31	31	Power	Power	0.00	0.00	0.00	" " " " " "
30	32	32	Power	Power	0.00	0.00	0.00	" " " " " "
31	33	33	Power	Power	0.00	0.00	0.00	" " " " " "
32	34	34	Power	Power	0.00	0.00	0.00	" " " " " "
33	35	35	Power	Power	0.00	0.00	0.00	" " " " " "
34	36	36	Power	Power	0.00	0.00	0.00	" " " " " "
35	37	37	Power	Power	0.00	0.00	0.00	" " " " " "
36	38	38	Power	Power	0.00	0.00	0.00	" " " " " "
37	39	39	Power	Power	0.00	0.00	0.00	" " " " " "
38	40	40	Power	Power	0.00	0.00	0.00	" " " " " "
39	41	41	Power	Power	0.00	0.00	0.00	" " " " " "
40	42	42	Power	Power	0.00	0.00	0.00	" " " " " "
41	43	43	Power	Power	0.00	0.00	0.00	" " " " " "
42	44	44	Power	Power	0.00	0.00	0.00	" " " " " "
43	45	45	Power	Power	0.00	0.00	0.00	" " " " " "
44	46	46	Power	Power	0.00	0.00	0.00	" " " " " "
45	47	47	Power	Power	0.00	0.00	0.00	" " " " " "
46	48	48	Power	Power	0.00	0.00	0.00	" " " " " "
47	49	49	Power	Power	0.00	0.00	0.00	" " " " " "
48	50	50	Power	Power	0.00	0.00	0.00	" " " " " "
49	51	51	Power	Power	0.00	0.00	0.00	" " " " " "
50	52	52	Power	Power	0.00	0.00	0.00	" " " " " "
51	53	53	Power	Power	0.00	0.00	0.00	" " " " " "
52	54	54	Power	Power	0.00	0.00	0.00	" " " " " "
53	55	55	Power	Power	0.00	0.00	0.00	" " " " " "
54	56	56	Power	Power	0.00	0.00	0.00	" " " " " "
55	57	57	Power	Power	0.00	0.00	0.00	" " " " " "
56	58	58	Power	Power	0.00	0.00	0.00	" " " " " "
57	59	59	Power	Power	0.00	0.00	0.00	" " " " " "
58	60	60	Power	Power	0.00	0.00	0.00	" " " " " "
59	61	61	Power	Power	0.00	0.00	0.00	" " " " " "
60	62	62	Power	Power	0.00	0.00	0.00	" " " " " "
61	63	63	Power	Power	0.00	0.00	0.00	" " " " " "
62	64	64	Power	Power	0.00	0.00	0.00	" " " " " "
63	65	65	Power	Power	0.00	0.00	0.00	" " " " " "
64	66	66	Power	Power	0.00	0.00	0.00	" " " " " "
65	67	67	Power	Power	0.00	0.00	0.00	" " " " " "
66	68	68	Power	Power	0.00	0.00	0.00	" " " " " "
67	69	69	Power	Power	0.00	0.00	0.00	" " " " " "
68	70	70	Power	Power	0.00	0.00	0.00	" " " " " "
69	71	71	Power	Power	0.00	0.00	0.00	" " " " " "
70	72	72	Power	Power	0.00	0.00	0.00	" " " " " "
71	73	73	Power	Power	0.00	0.00	0.00	" " " " " "
72	74	74	Power	Power	0.00	0.00	0.00	" " " " " "
73	75	75	Power	Power	0.00	0.00	0.00	" " " " " "
74	76	76	Power	Power	0.00	0.00	0.00	" " " " " "
75	77	77	Power	Power	0.00	0.00	0.00	" " " " " "
76	78	78	Power	Power	0.00	0.00	0.00	" " " " " "
77	79	79	Power	Power	0.00	0.00	0.00	" " " " " "
78	80	80	Power	Power	0.00	0.00	0.00	" " " " " "
79	81	81	Power	Power	0.00	0.00	0.00	" " " " " "
80	82	82	Power	Power	0.00	0.00	0.00	" " " " " "
81	83	83	Power	Power	0.00	0.00	0.00	" " " " " "
82	84	84	Power	Power	0.00	0.00	0.00	" " " " " "
83	85	85	Power	Power	0.00	0.00	0.00	" " " " " "
84	86	86	Power	Power	0.00	0.00	0.00	" " " " " "
85	87	87	Power	Power	0.00	0.00	0.00	" " " " " "
86	88	88	Power	Power	0.00	0.00	0.00	" " " " " "
87	89	89	Power	Power	0.00	0.00	0.00	" " " " " "
88	90	90	Power	Power	0.00	0.00	0.00	" " " " " "
89	91	91	Power	Power	0.00	0.00	0.00	" " " " " "
90	92	92	Power	Power	0.00	0.00	0.00	" " " " " "
91	93	93	Power	Power	0.00	0.00	0.00	" " " " " "
92	94	94	Power	Power	0.00	0.00	0.00	" " " " " "
93	95	95	Power	Power	0.00	0.00	0.00	" " " " " "
94	96	96	Power	Power	0.00	0.00	0.00	" " " " " "
95	97	97	Power	Power	0.00	0.00	0.00	" " " " " "
96	98	98	Power	Power	0.00	0.00	0.00	" " " " " "
97	99	99	Power	Power	0.00	0.00	0.00	" " " " " "
98	100	100	Power	Power	0.00	0.00	0.00	" " " " " "
99	101	101	Power	Power	0.00	0.00	0.00	" " " " " "
100	102	102	Power	Power	0.00	0.00	0.00	" " " " " "
101	103	103	Power	Power	0.00	0.00	0.00	" " " " " "
102	104	104	Power	Power	0.00	0.00	0.00	" " " " " "
103	105	105	Power	Power	0.00	0.00	0.00	" " " " " "
104	106	106	Power	Power	0.00	0.00	0.00	" " " " " "
105	107	107	Power	Power	0.00	0.00	0.00	" " " " " "
106	108	108	Power	Power	0.00	0.00	0.00	" " " " " "
107	109	109	Power	Power	0.00	0.00	0.00	" " " " " "
108	110	110	Power	Power	0.00	0.00	0.00	" " " " " "
109	111	111	Power	Power	0.00	0.00	0.00	" " " " " "
110	112	112	Power	Power	0.00	0.00	0.00	" " " " " "
111	113	113	Power	Power	0.00	0.00	0.00	" " " " " "
112	114	114	Power	Power	0.00	0.00	0.00	" " " " " "
113	115	115	Power	Power	0.00	0.00	0.00	" " " " " "
114	116	116	Power	Power	0.00	0.00	0.00	" " " " " "
115	117	117	Power	Power	0.00	0.00	0.00	" " " " " "
116	118	118	Power	Power	0.00	0.00	0.00	" " " " " "
117	119	119	Power	Power	0.00	0.00	0.00	" " " " " "
118	120	120	Power	Power	0.00	0.00	0.00	" " " " " "
119	121	121	Power	Power	0.00	0.00	0.00	" " " " " "
120	122	122	Power	Power	0.00	0.00	0.00	" " " " " "
121	123	123	Power	Power	0.00	0.00	0.00	" " " " " "
122	124	124	Power	Power	0.00	0.00	0.00	" " " " " "
123	125	125	Power	Power	0.00	0.00	0.00	" " " " " "
124	126	126	Power	Power	0.00	0.00	0.00	" " " " " "
125	127	127	Power	Power	0.00	0.00	0.00	" " " " " "
126	128	128	Power	Power	0.00	0.00	0.00	" " " " " "
127	129	129	Power	Power	0.00	0.00	0.00	" " " " " "
128	130	130	Power	Power	0.00	0.00	0.00	" " " " " "
129	131	131	Power	Power	0.00	0.00	0.00	" " " " " "
130	132	132	Power	Power	0.00	0.00	0.00	" " " " " "
131	133	133	Power	Power	0.00	0.00	0.00	" " " " " "
132	134	134	Power	Power	0.00	0.00	0.00	" " " " " "
133	135	135	Power	Power	0.00	0.00	0.00	" " " " " "
134	136	136	Power	Power	0.00	0.00	0.00	" " " " " "
135	137	137	Power	Power	0.00	0.00	0.00	" " " " " "
136	138	138	Power	Power	0.00	0.00	0.00	" " " " " "
137	139	139	Power	Power	0.00	0.00	0.00	" " " " " "
138	140	140	Power	Power	0.00	0.00	0.00	" " " " " "
139	141	141	Power	Power	0.00	0.00	0.00	" " " " " "
140	142	142	Power	Power	0.00	0.00	0.00	" " " " " "
141	143	143	Power	Power	0.00	0.00	0.00	" " " "

Section I

Operating and Programming

WARNING

The 3421A uses latching relays on the multiplexer assembly (option 020) and on the mainframe. The state of these relays can only be altered under program control. This is an advantage in the sense that , under most conditions of failure, the relays will remain in whatever state your program has set them. However, in case of power or equipment failure, any application requiring a failsafe method of insuring that the circuits under control are in a known state must be provided by the installer.

Chapter 2

Getting Started

Introduction

As a data acquisition/control unit, the -hp- model 3421A is a self contained measurement system. A computer and of course your transducers are the only other devices required for data gathering and analysis. In the first chapter you saw the very basics of a data acquisition system. With this chapter you will begin learning how the features of the 3421A can solve many of your measurement needs. The information in this chapter represents a comprehensive description of the 3421A and its many features. For information on the three option assemblies, refer to Chapters 5, 6, and 9. Chapter 5 covers the 44462A 10 Channel Multiplexing Assembly and Chapter 6 covers the 44465A Digital I/O Assembly. The option 44463A Breadboard Assembly is discussed in detail in Chapter 9.

Operating Characteristics

The main operating characteristics of the 3421A are detailed in the table below. This table is an abbreviated set of 3421A specifications. You will probably find that this table answers most of your questions about the capabilities of the 3421A without laboring over several pages of specifications. The complete Table of Specifications for the 3421A can be found in Chapter 7 of this manual.

DC Volts:

1 μ V sensitivity (.3V range) to 300V full scale
R_{in}: >10¹⁰ Ω , .3 and 3 V ranges
10M Ω \pm 1%, 30 and 300V ranges

■ Volts:

100 μ V sensitivity (3V range) to 30V full scale
Bandwidth: 30 Hz to 2kHz
Average responding converter

Resistance:

1m Ω sensitivity (300 Ω range) to 30M Ω full scale
Maximum open circuit voltage: 6.5 volts
Current through unknown resistance:

300,3k Ω ranges	— 1 mA
30k Ω range	— 100 μ A
300k Ω range	— 10 μ A
3M Ω range	— 1 μ A
30M Ω range	— 0.1 μ A

Counter:

Frequency response—1Hz to 10kHz (\times 1.5ms risetime)
Sensitivity: 600mVp-p
Minimum pulse width: 50 μ S
Input impedance: 10M Ω +1,-10%

Totalize:

Maximum count = 65535
Minimum pulse width (5V) = 50 μ S
Minimum pulse period = 100 μ S


Temperature (Type T thermocouple):


Temperature Range = -200°C to +400°C

Internal reference junction for software compensation.


Front Panel

Display

A 30 digit display is used on the 3421A to indicate which channels are closed. During turn-on, they are also used to indicate the self test failures and the HP-IB address (if appropriate). Small "trees"  used to indicate when power is on or when an error exists.

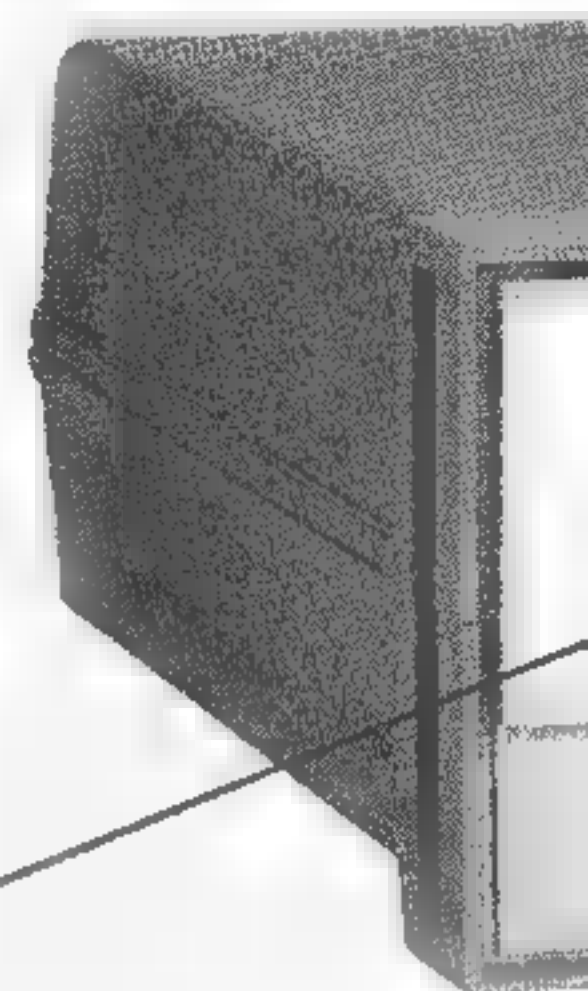

Model and Serial Number Plate

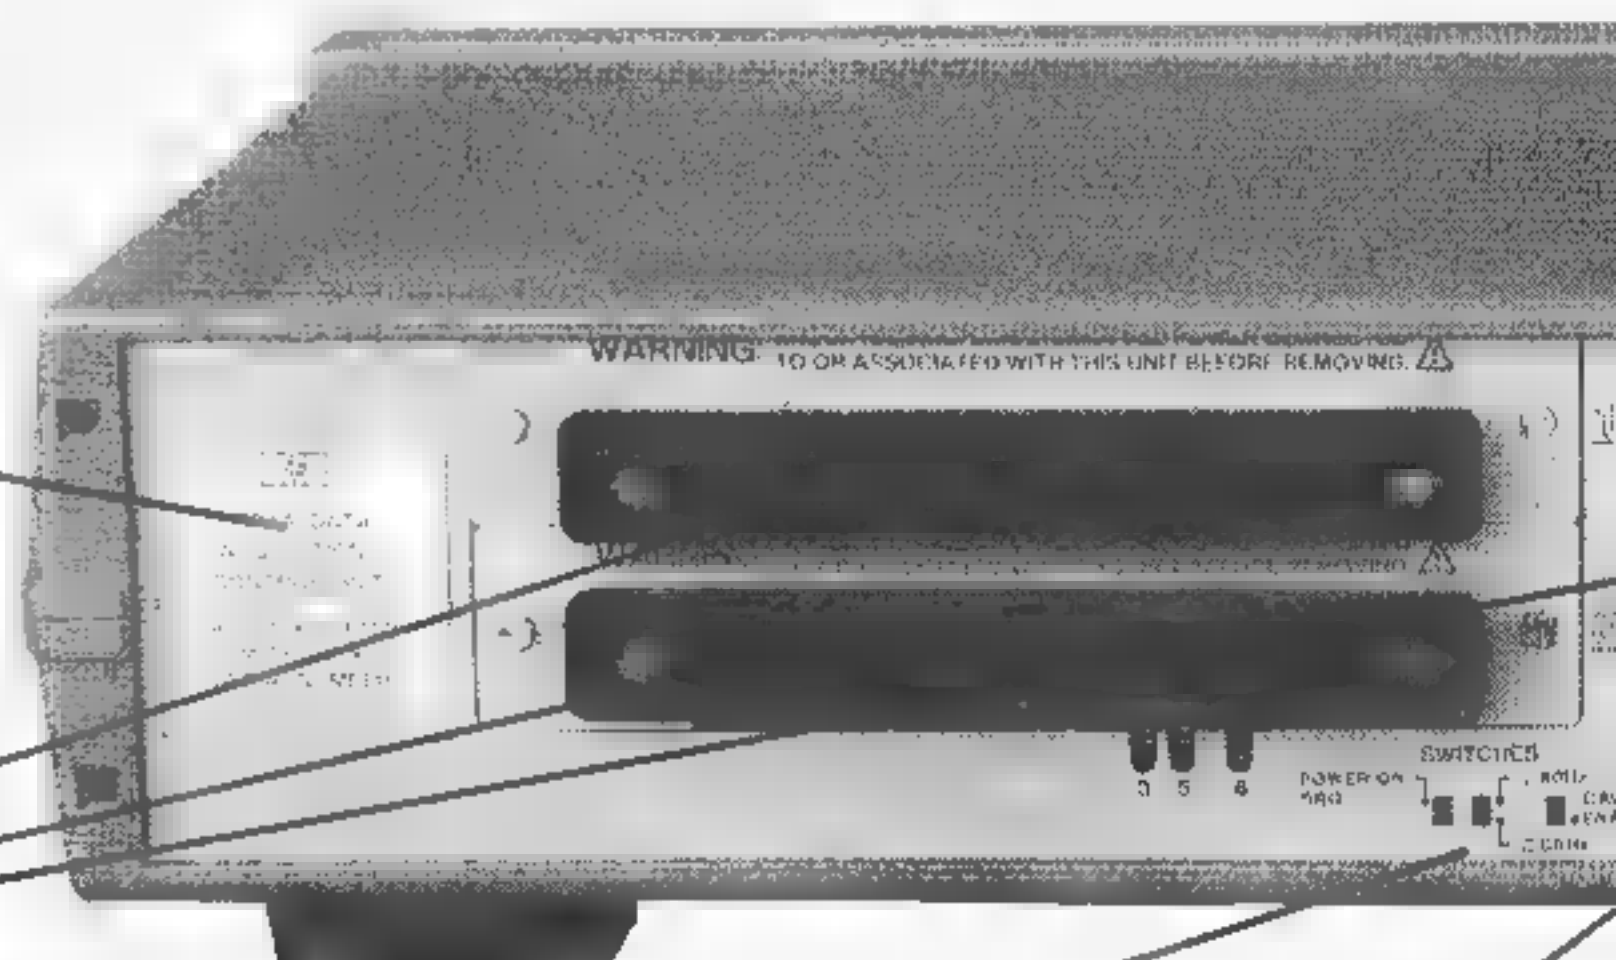


Option Slots

There are three slots for optional assemblies in the 3421A. Strain relief is provided for transducer wires.

Rear Panel Control Switches

HP-IL C

AN OVERVIEW OF THE 3421A

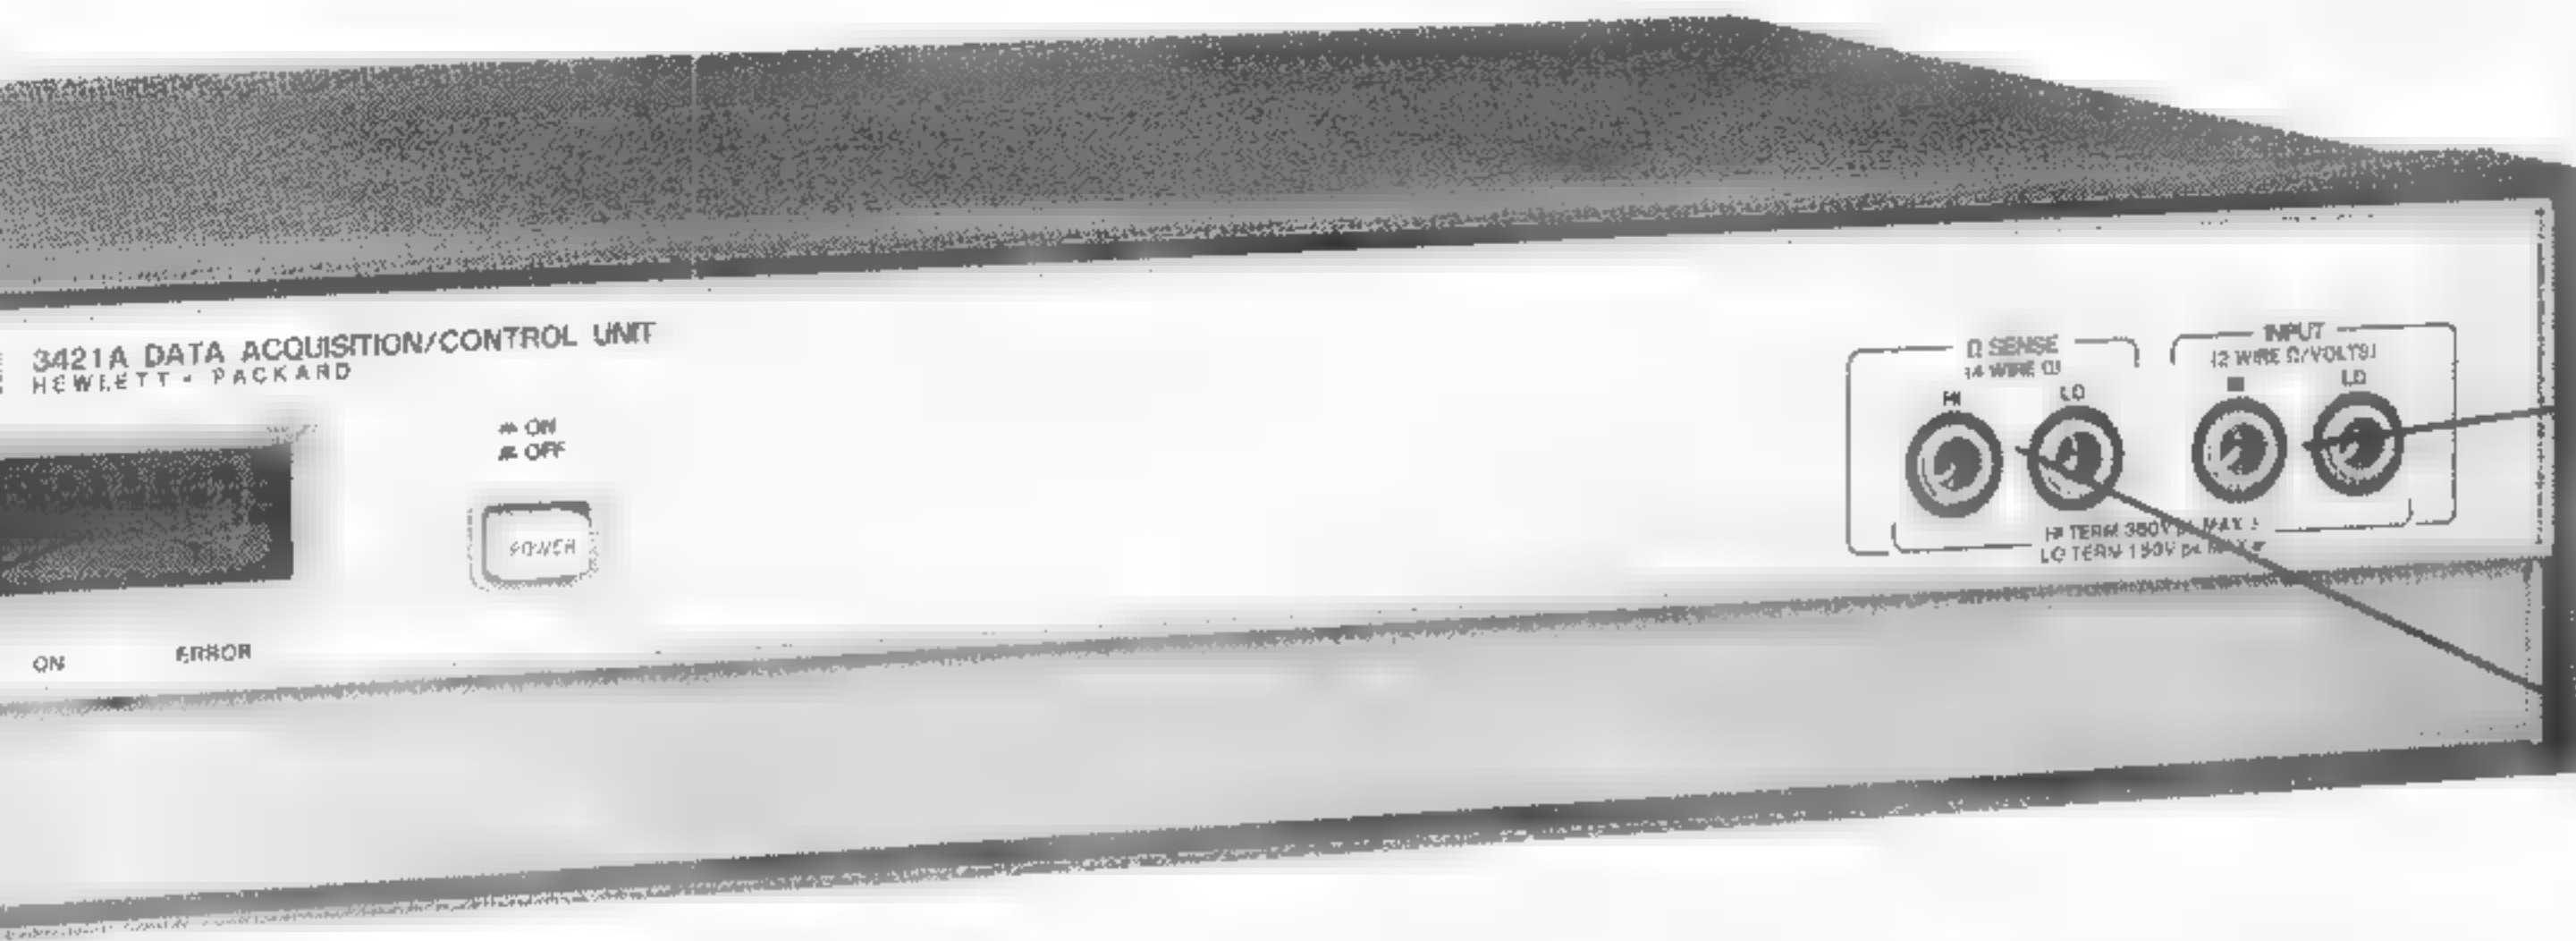

These are
input termi

Ω Sense

These terminals are used for
voltmeter sense leads when
4-wire ohms measurements.

Rear Panel




AC Line Cord and Fuse


Reset Switch

This reset switch is provided to com-
pletely remove operating power (as long
as the switch is held in) from the
3421A. This is to be used only in case
of failure.

HP-IL

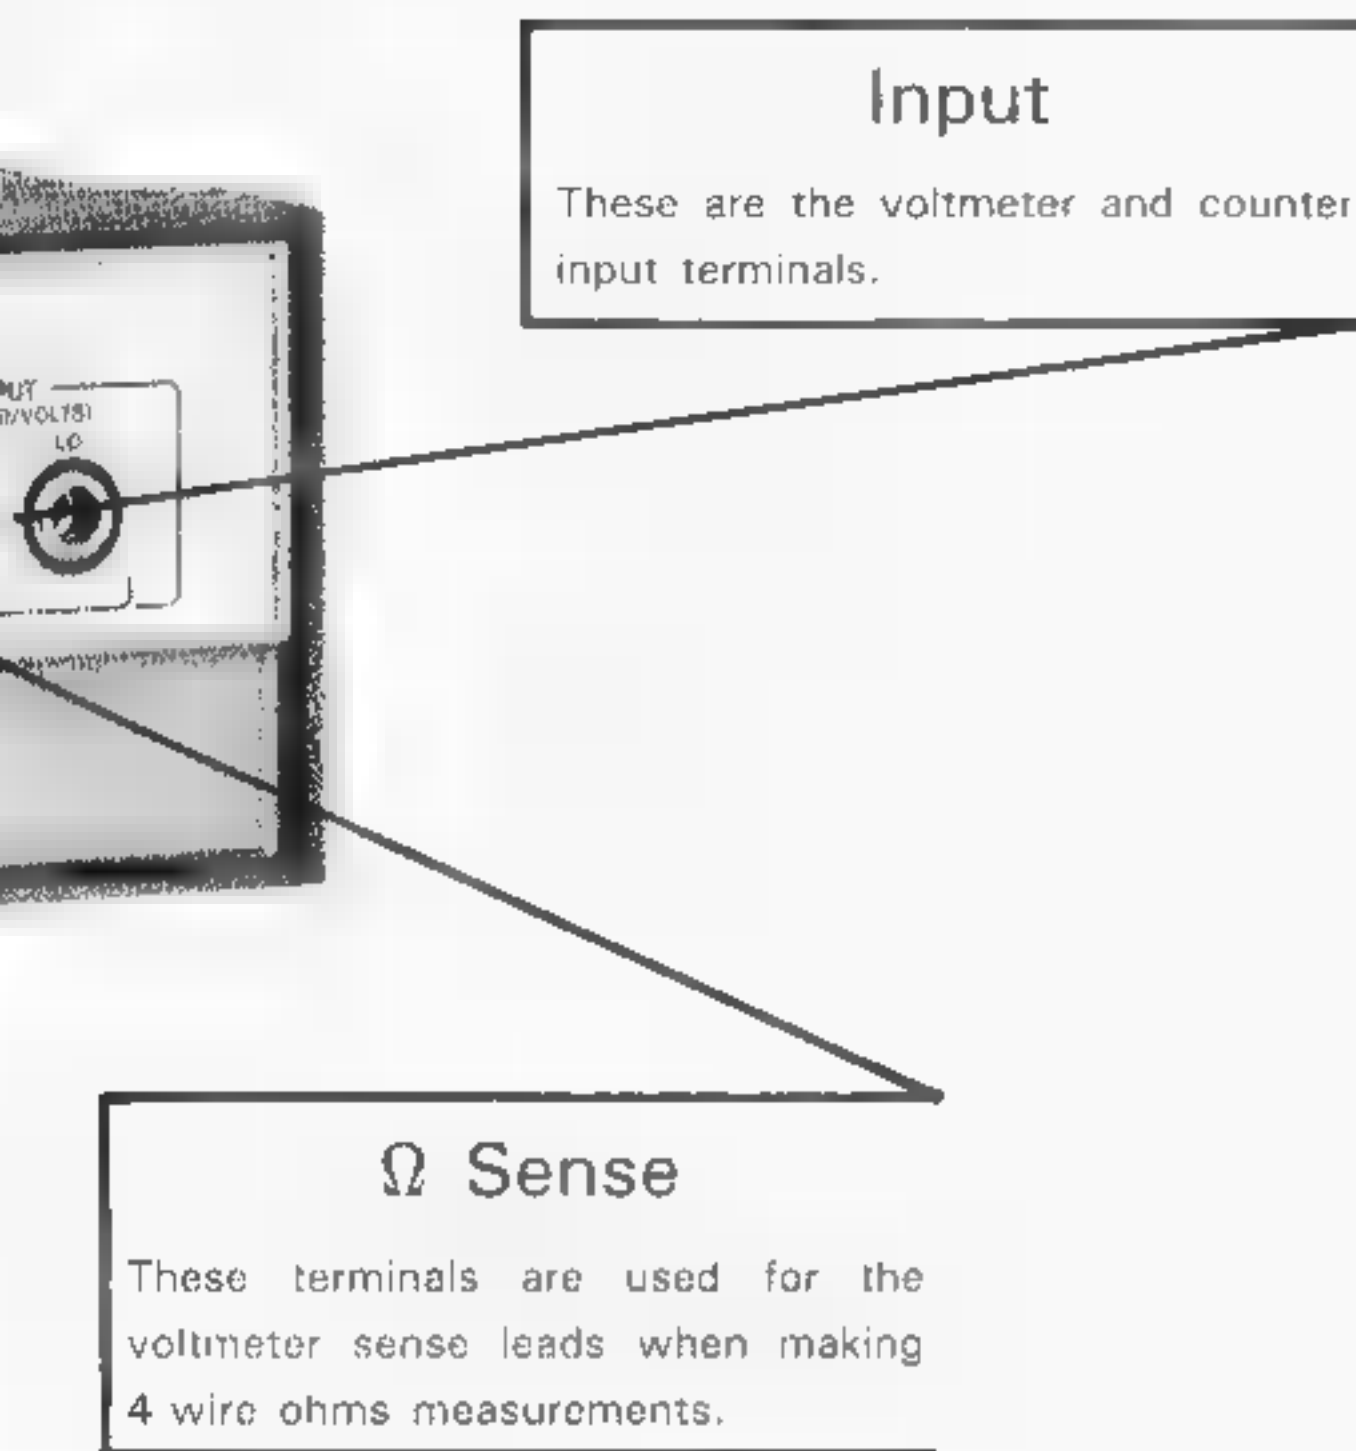

HP-IB Option

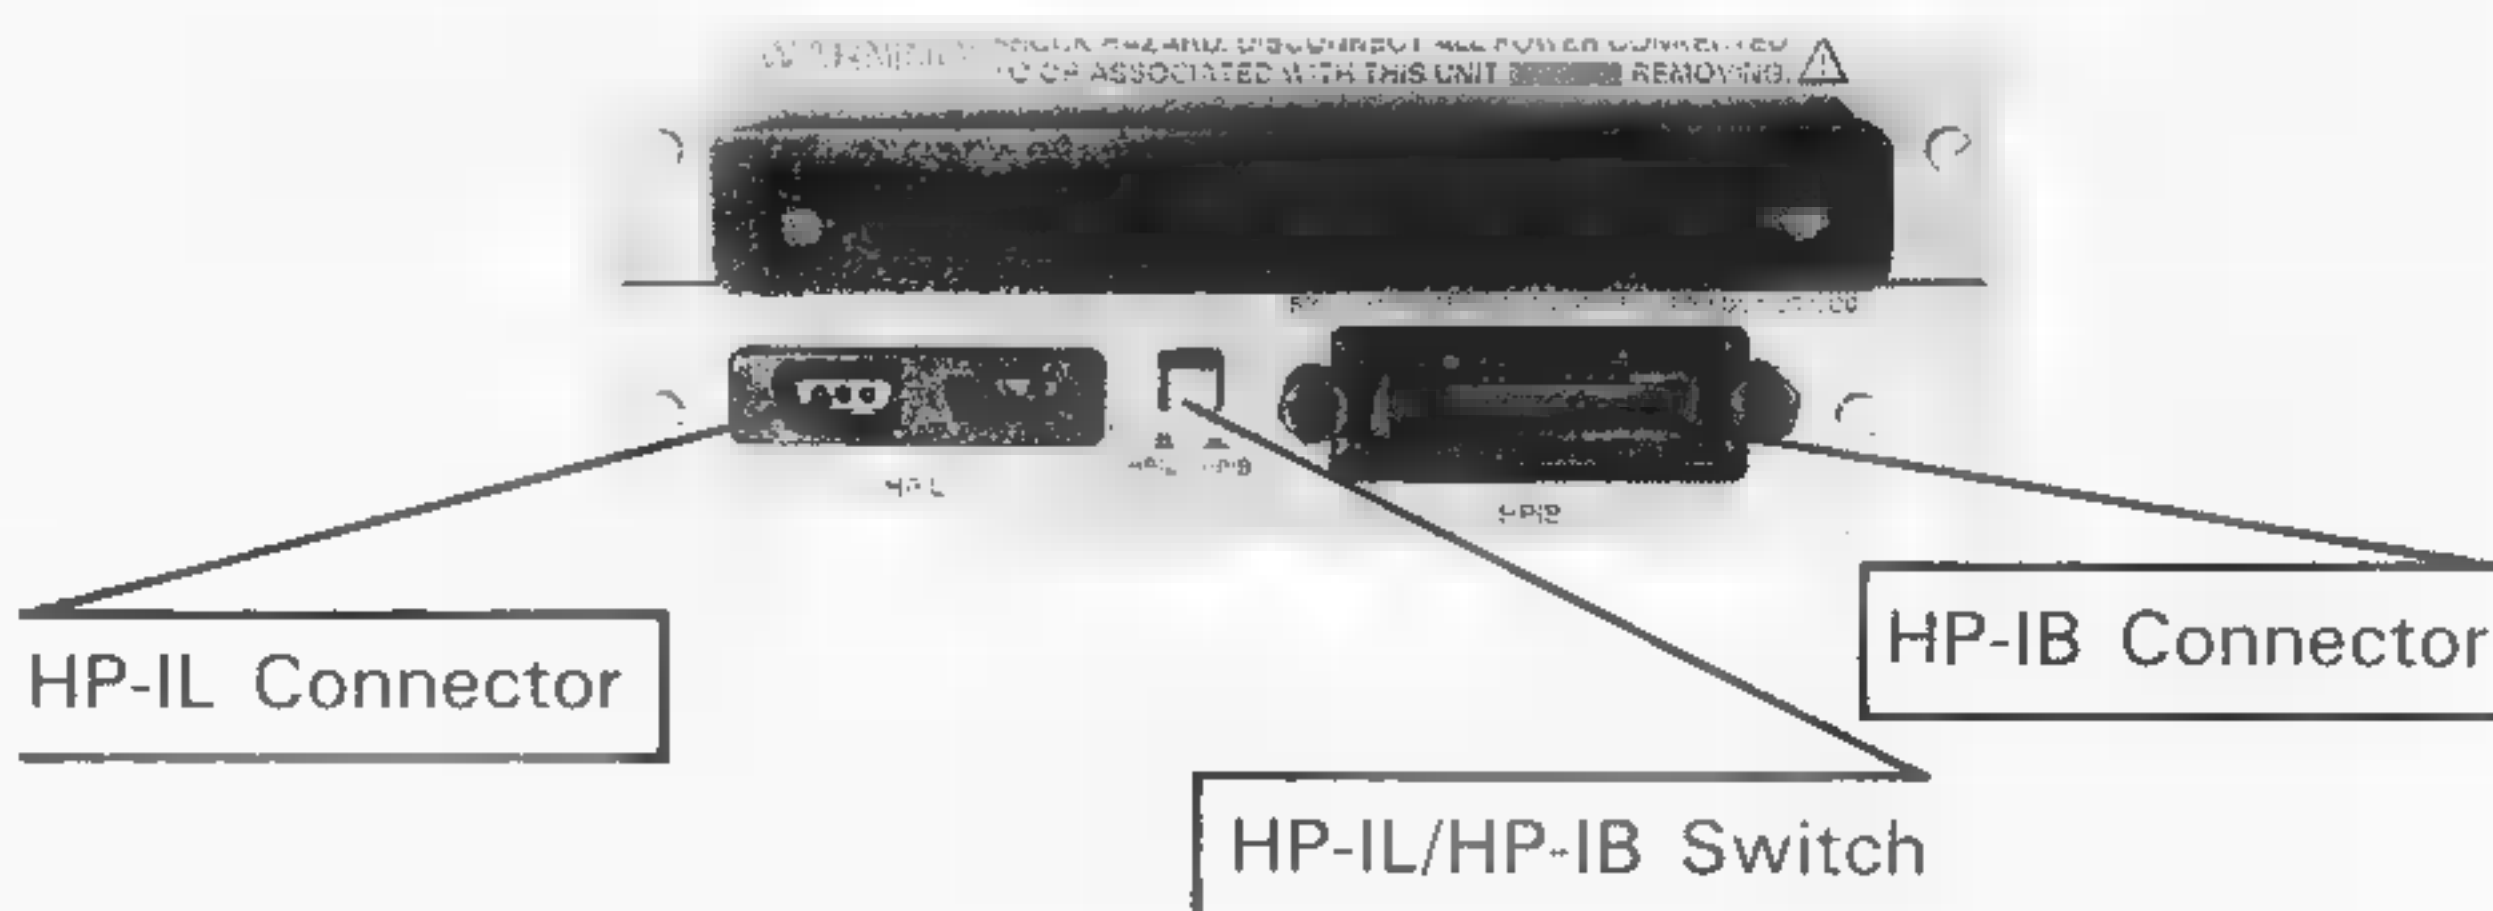

The 3421A in Detail

Because the goal of this chapter is to provide the most comprehensive description of the 3421A and its features, this chapter is divided into 14 major subject headings. Each subject details a particular feature or function of the 3421A. At the end of most subjects will be a short list of Standard programming commands relating to that subject. The subject headings are:

Subject	Page
Turn-on	17
Battery Operation	19
Calibration	20
Channels	21
Commands	22
Counter	24
Display	27
HP-IL Power Down/Power Up	29
Optimizing Reading Rates	30
Rear Panel	33
Resistance Measurements	35
Temperature Measurements	37
Test/Reset	39
Voltmeter	41

TURN-ON

Before applying AC Power to the 3421A, check the rear panel line voltage option label to be certain the instrument is set for the nominal line voltage in your area. If necessary, refer to the installation information in Chapter 7 of this manual. As you press the POWER switch, very carefully watch the display as the 3421A goes through its turn-on sequence and self test.

What Happens at Turn-on

At turn-on, the 3421A performs a series of 8 internal self tests. If any of them fail, the ERROR indicator is turned on in the display and the 3421A attempts to interrupt the computer (see SPOLL in chapter 3). A complete description of the self test will be given later in this chapter.

Next, you will hear a relay 'click' inside of the 3421A as all numbers in the display light up (see photo). These numbers will be on for about 1 second. Afterwards, if a failure is detected by any of the self tests, one or more numbers will light up in the display (for 1 second) indicating which test(s) failed. These numbers are assigned as follows.



TURN ON (Cont'd)

Number lit	Self Test Failed
0*	Calibration RAM checksum error
1	ROM 1 bad
2	ROM 2 bad
3	A/D Slope error
4	Microprocessor RAM bad
5	Internal RAM 1 bad
6	Internal RAM 2 bad
7**	Failed 10 Mohm test (not within $\pm 10\%$)
27	Low Battery. See section on Battery Operation.

* Error #0 will also occur if an option 44462A 10 channel multiplexer is added or moved to a different slot after the 3421A was calibrated. This is because the temperature reference was not calibrated.

** Error #7 will also occur if there is anything connected to the front panel input terminals during the self test.

After the self test, you will hear the relay 'click' again. At this time, if the HP-IB add-on option is installed (option 201) and if the HP-IB/HP-IL switch is 'in' (for HP-IB), the 3421A will indicate the HP-IB address. This address will be displayed for about 1 second. After this, the 3421A will go to the following states:

- All 44462A option board(s) relays are open.
- All 44465A Digital output bits are cleared (high impedance state).
- DC Volts function, Autorange on, Autozero on, 5 1/2 digits of resolution asserted.
- Counter set to 1 second gate time.
- Monitors rear panel switches and responds accordingly.
- The channel list (see chapters 3—6) set to all available multiplexer channels from lowest channel number to highest channel number.
- Request service from the computer if self test failed or Power-on SRQ enabled (rear panel switch).

The entire turn-on sequence takes only 2 to 3 seconds to complete.

BATTERY OPERATION

Before operating the 3421A from its internal battery, ensure that the battery is fully charged. Connect the instrument to an appropriate AC power source and allow 16 hours for ■ full recharge with the POWER switch OFF (out). A fully charged battery will provide a minimum operating time of 12 hours. Operating the 3421A with the proper AC power source and the POWER switch ON (in) will provide a complete battery recharge in 21 hours. If the HP-IB option is being used, operating time is reduced to 6 hours.

Low Battery

CASE 1. If the battery becomes discharged (low battery) while the 3421A is in operation, the error indicator will light and the 3421A will require service from the computer (see REQUIRE SERVICE in Chapter 3). After 3 minutes, all relays, including those on the 44462A Multiplexer Assemblies, will be opened and the 3421A will power down. This is done to prevent the battery from becoming discharged. The HP-IL wakeup (see PWRUP in Chapter 4) is disabled when low battery occurs and will not be re-enabled until the battery is charged (or AC power applied) and the 3421A front panel POWER switch is cycled on and off.

During the three minute period after low battery occurs, most 3421A commands (i.e. DCV, FRQ, etc., see the blue pages at the end of Chapter 3.) as well as interface commands (i.e. TRIGGER, CLEAR, etc.) can be executed. This includes the loop power down (see PWRDN in Chapter 4) but remember that the 3421A cannot wake up (loop power up) until the battery is recharged or AC power connected to the rear panel. The 3421A commands that cannot be executed during this three minute period are: ML, MN, TOT, and DT.

Any commands executed during this three minute period will reduce the time before the 3421A powers down.

If a CLEAR, Reset (RS), SPOLL, etc. is executed, the 3421A will cease to require service from the computer but will still power down after the three minute period.

CASE 2. If ■ low battery is detected as the 3421A is turned on, the number 27 will appear in the display. The 3421A waits 3 seconds and then powers down. It will not go through self test or respond to any commands.

NOTE

If a low battery occurs, connect the 3421A to an AC power source and cycle the front panel LINE switch. If this is not done, the HP-IL wake-up circuitry will not work properly.

CALIBRATION

What is Electronic Calibration?

One of the many features of the 3421A is electronic calibration. Although it is beyond the scope of this manual to present the entire calibration procedure, there are some points of interest the operator should be aware of. For complete calibration information, refer to the 3421A Service Manual.

Briefly, electronic calibration is performed by applying a known stimulus (voltage, resistance, etc.) to the 3421A. The 3421A is then told the exact value of that stimulus. Ten readings are taken by the 3421A and the average is compared to the exact value sent to the 3421A. A "CALIBRATION CONSTANT" is calculated to correct the averaged value to the known value. This Calibration constant is stored in the 3421A's calibration memory. Calibration constants are generated for each measurement function and range of the instrument. All subsequent measurements are corrected by the calibration constants. The calibration constant memory is backed-up by a long life battery to maintain the constants even when power is turned off.

Temperature Calibration

If you are using thermocouples with the 3421A to measure temperature, each 44462A Multiplexing Assembly must have its reference junction calibrated. This is to be done with a special fixture supplied by Hewlett-Packard. Refer to the 3421A Service Manual. Ideally, temperature calibration should be done with the 3421A in the same physical position as it will be used. This is to eliminate any thermal gradients inside the case. Furthermore, 44462A assemblies must not be moved around inside the case, or plugged into a different slot, after calibration has been performed. If you send the 3421A to an -hp- service center for calibration, leave all option assemblies installed in the instrument case.

Calibration Enable

On the rear panel of the 3421A is a bank of eight small switches. Three of the eight switches are accessible without opening the 3421A case. Switch number 8, the rightmost switch, is the CALibration Enable switch and when set to the down position enables the 3421A to be calibrated. This switch should not be set (down position) except when qualified service trained personnel are to perform the calibration procedures. Enabling the CAL switch may result in loss of calibration if proper procedures are not followed.

3421A COMMANDS

Cx—Calibrate to value "x"
(see the 3421A and Service Manual)

CHANNELS

What is a Channel?

Throughout this chapter, and indeed this manual, the words 'channel' and 'channel address' will be used. The word channel is used two ways. First, it represents one relay on a 44462A multiplexer assembly. In other words, since the multiplexer assembly has 10 relays, we can refer to it as a 10 channel multiplexing assembly. Therefore, when we speak of channel 5 we are talking about relay number 5 on a specific 44462A assembly.

The second way the word channel is used is when we are referring to either an output bit or an input bit on an option 44465A Digital I/O Assembly. Generally though, the word "switch" will be used to indicate a digital output channel and the word "bit" to indicate an input channel.

Channel Numbering and Addressing

Channel numbers are repeated on each 44462A (numbers 0-9) and 44465A (numbers 0-7) assemblies. Channel addresses, however, are determined by which slot the option assembly is plugged into plus the channel number. For an assembly in slot 1, channel 7 would be addressed as channel 17. The first digit stands for the slot number, and the second digit is the channel number. Channel 7 for an assembly in slot 2 would be addressed as 27. The following table shows the addressing scheme for the three different slots.

Channel Number*	Channel Address if Assembly is in Slot #:		
	Slot 0	Slot 1	Slot 2
0	00	10	20
1	01	11	21
2	02	12	22
3	03	13	23
4	04	14	24
5	05	15	25
6	06	16	26
7	07	17	27
8	08	18	28
9	09	19	29

* The digital I/O assembly uses only channel numbers 0 through 7.

COMMANDS

The blue pages at the end of Chapter 3 list all of the commands the 3421A acknowledges. These commands are of two types: Standard and Advanced. The Standard commands provide the simplest method of programming the 3421A. Each command performs a complete measurement task. An example of a Standard command is DCV2-17. This command sets up a channel list of channels 2 through 17, takes a DC voltage measurement from each channel, and stores the readings for future use.

Standard Commands

The Standard commands are broken down into 5 groups: Voltmeter, Temperature, Counter, Channel, and Digital. Many of the commands allow you to specify one or more channels to make the measurement(s) from. This is called a channel list. In the following discussion, brackets—[]—are used to indicate the optional channel list. Letters x, y, and z represent the channel addresses. If a command shows the letter 'x' without brackets, it means that a channel must be specified with the command or an error will result. When the letter 'i' is used, it indicates a slot number; 0, 1, or 2.

■ Voltmeter Standard Commands ([x,y,...z] is optional channel list)

- DCV[x,y,...z] — DC Voltage measurements on optional channel list.
- ACV[x,y,...z] — AC Voltage measurements on optional channel list.
- TWO[x,y,...z] — 2-Wire Ohms measurements on optional channel list.
- FWO[x,y,...z] — 4-Wire Ohms measurements on optional channel list.

■ Temperature Standard Commands

- TEM[x,y,...z] — Temperature Measurements (for T-type thermocouples only) on optional channel list.
- REF[x] — A temperature measurement on the 44462A reference junction.

● Counter Standard Commands

- FRQ[x,y,...z] — Frequency measurements on optional channel list.
- TOT[x] — Totalize events from optional channel.

COMMANDS (Cont'd)

■ Channel (multiplexer, actuator, or digital) Standard Commands

- CLSx — Close specified channel, whether multiplexer, actuator or digital output switch.
- CLPx — Close pairs (x and x+10 or if $x \neq 20$ then x and x-20)
- OPN[x] — Open channel x, or if x is not sent then open all channels.

■ Digital Standard Commands

- REDi — Read the digital inputs from slot 'i'.
- WRTi,abc — Write the decimal value [abc] to digital outputs in slot 'i'.
- BIT x[y,...z] — Read the digital input bit values from bits x,y,... and z.

Advanced Commands

The Advanced Commands provide more programming flexibility than the Standard Commands but they do not perform a complete measurement task. The Advanced Commands are generally used in groups to complete the task. For example, F1RA1Z1N5LS2-17;T3 would be used to perform the same task as the DCV2-17 Standard Command. Though too numerous to list here, the Advanced Commands are discussed in detail in the blue pages at the end of Chapter 3.

COUNTER


The 3421A internal counter is used to measure frequency to 10kHz or totalize events to 65535 counts. Signal inputs to the counter are through the 44462A multiplexer assembly or via the front panel INPUT terminals. Since the counter inputs are multiplexed through the same circuitry as voltage inputs, no other measurements can be made while the 3421A is measuring frequency or totalizing events. Once the measurement is complete, the 3421A is free to make other measurements.

Frequency

The operation of the frequency counter is best understood by describing how the counter takes a measurement. If 'n' is the number of cycles of a signal that occurs during a known time period 't', then the frequency 'f' is determined by:

$$f = \frac{n}{t}$$

The counter measures the frequency of a signal by counting the number of complete cycles, n, that occur during a specified time period t. This is demonstrated in the following figure.

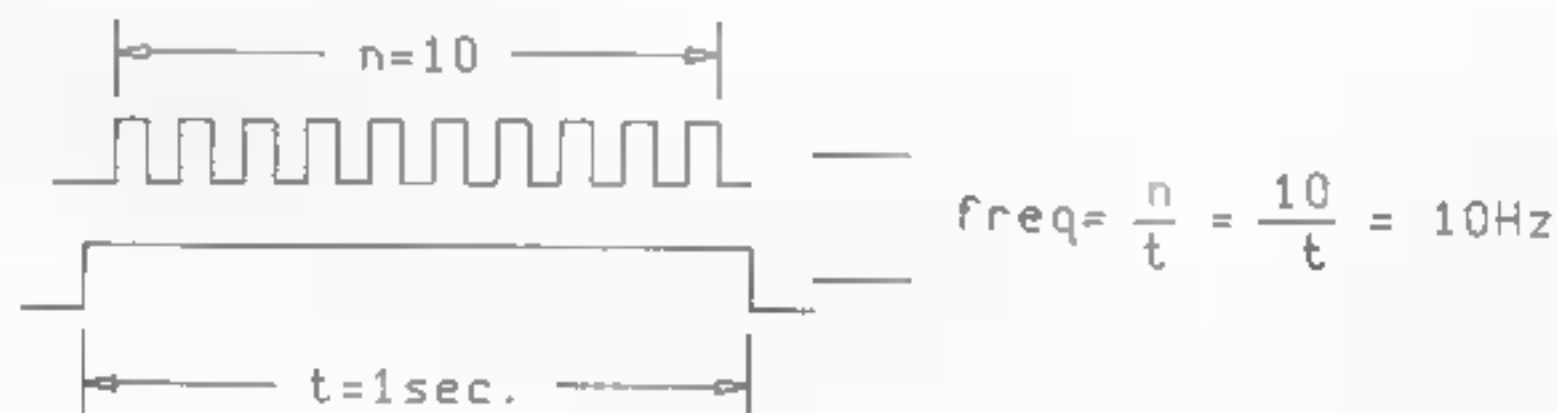

The time period 't' is known as the Gate time. It represents the time period that the counter spends counting the input signal. The longer the gate time, the greater the resolution of the measurement. Three gate times are available with the 3421A Advanced commands. These three gate times and their respective resolution are shown in the following chart.

Advanced Command	Gate Time	Resolution (5 digits)
G-1	.1 Sec	10 Hz
G0	1 Sec	1 Hz
G1	10 Sec	.1 Hz

COUNTER (Cont'd)

As a general rule, use the shortest gate time, G-1, for the highest frequencies. Use the longest gate time, G1, for the lowest frequencies.

The Standard command FRQ sets the 3421A to the frequency mode (F7) and 1 second gate time (G0). As with most Standard commands, the FRQ command can be associated with a Channel List, for example: FRQ[x,y,...z]. If a channel list is sent, the 3421A makes the measurements on the channels specified and stores the readings. All the readings will be sent to the computer in the order the readings were made.

If no channel list is sent, no channels will change and only one measurement will be made. If no channel relays are closed, the signal can be input through the 3421A front panel.

3421A COMMANDS:

Standard	Advanced
FRQ[x,y,...z]	F7 Frequency G-1 .1 Sec. Gate Time G0 1 Sec. Gate Time G1 10 Sec. Gate Time

Totalize

The totalize mode is used to simply count events. Each event is represented by a pulse sent to the 3421A. The maximum number of events that the 3421A can count is 65,535. The Standard command TOT is used to set the 3421A to the TOTALize mode.

Upon receipt of TOT, the 3421A clears its counter and begin counting. Keep in mind that once the 3421A is in the TOTALize mode, it will continue to count until the 3421A receives another command. If a TRIGGER command is sent to the 3421A, the TOTALize mode will be aborted and the 3421A will take a frequency measurement. While the 3421A is TOTALizing, the 3421A can be addressed to talk (see ENTER statement in chapter 3 or IND in Chapter 4) and it will send the current subtotal without resetting the counter.

The 44462A Multiplexing Assembly (option 020) is used to connect the signal to the Counter. Only one channel can be specified with the TOTx command. If 'x' is sent, and that channel is not a multiplexer channel, an error will be generated. Chan-

COUNTER (Cont'd)

net 'x' will remain closed until another command opens it.

3421A COMMANDS

Standard

TOT[x]

Advanced

DISPLAY

How It Is Used

The 3421A display serves two main functions. First, at turn-on or reset (RS command) the display provides the result of the internal Self Test and the HP-IB address (if the HP-IB option is present and switched in). Second, the display is used to indicate any channels or digital output switches that are closed.

Turn-on/Reset

At turn-on you will hear an internal relay 'click' as the all numbers in the 3421A turn on. This display will be on for about 1 second. Then, if any of the self tests fail, a number will light up in the display for about 1 second and the error indicator will turn on. Following this, a second relay 'click' is heard indicating that the self test has finished. If the HP-IB option (option 201) is installed and the HP-IB switch is 'in', the HP-IB address will be displayed next. After all of this, the 3421A will go to its turn-on state. The following chart shows the possible self test failures and the display number lit:

Number Lit	Self Test Failed
0*	Calibration RAM Checksum Error
1	ROM 1 Bad
2	ROM 2 Bad
3	A/D Slope Error
4	MicroprocessorRAM Bad
5	Internal RAM 1 Bad
6	Internal RAM 2 Bad
7**	Failed 10M Ω test (not within $\pm 10\%$)
27	Low Battery, the 3421A will shut itself off in three seconds.

* Error 0 will occur if an option 44462A, 10 channel multiplexer is added or moved to a different slot after the 3421A was calibrated. This is because the temperature reference was not calibrated.

** Error 7 will occur if there is anything connected to the front panel input terminals during self test.

DISPLAY (Cont'd)

When the 3421A is reset by the RS command, it goes through its self test routine just as if it were turned on. The display will light up all numbers for one second, followed by an error indication if any self test failed. The HP-IB address will not be displayed.

Do This:

Simulate an error by shorting the front panel input terminals on the 3421A and either cycling the LINE switch off and on or sending the RS command.



After all numbers light up on the display, the number 7 should appear for one second and the error indication should light.

3421A COMMANDS:

Standard

Advanced

RS Reset

Channel Display

Aside from the display being used to indicate errors during the self test, the display is used to indicate channel closures. The numbers lit on the display indicate channels or digital output switches that are closed. For example, if a 44465A Digital I/O Assembly is located in slot 01 and has output switches 2, 5, and 7 closed, the numbers 2, 5, and 7 will appear on the display. Furthermore, if a 44462A Multiplexer Assembly is located in slot 1, and DCV19 is executed, then channel numbers 2, 5, 7, and 19 will be displayed. This is because all these channels are closed.

3421A COMMANDS:

Standard

Advanced

All but REF, OPN, and REDi

DN, UC, SI1, SI0

HP-IL POWER DOWN/POWER UP

Power Down

HP-IL Power Down can only be executed from the -hp- 41C/CV handheld calculator. Power down is used to put the 3421A in a low power standby mode. When the power down command is received by the 3421A, the complete status of the instrument is stored away in internal memory. The multiplexer and actuator (but not digital output switches) are left in the same state they were in previous to the command. In other words, a channel that was closed prior to Power Down will remain closed after Power Down. Digital Output Switches go to a high impedance (open) state.

Power Up

When any information is sent through the HP-IL loop, the 3421A will power back up, assuming that a low battery condition did not occur. If any Multiplexer or Digital I/O assemblies are changed or reconfigured, or if the data stored is no longer valid, the 3421A goes through its turn-on routine. If nothing has changed since the 3421A powered down, it remains in the same state except for:

1. TOT, if it was on, will now be off.
2. All digital output channels will be cleared (high impedance).

OPTIMIZING READING RATES

Why Optimize

There are several reasons why you may want to optimize the rate at which readings are taken by the 3421A. Perhaps your system is being used to monitor a large number of points where a faster reading rate means a better picture of what is happening at a single point in time. Maybe you need to read quickly and not waste valuable computer time waiting for a measurement result. Whatever your reason for optimizing reading rates, the 3421A can solve many measurement requirements.

The maximum reading rate with the 3421A is influenced by many factors. These include the signal environment (line related and broadband noise, thermal gradients, etc.), the desired accuracy, and the type of measurement to be made. AC voltage measurements have a built-in 600mS settling delay. Resistance measurements can be made as fast as DC voltage measurements except on the 3 Mohm and 30 Mohm ranges where a settling time (20mS and 200mS respectively) is built in.

The speed and timing of the measurement process is dependent upon a number of factors. These include the number of digits of resolution selected (N commands), whether or not the autozero feature is enabled (Z command), and the selected function—DC volts, resistance, etc.

Your Signal Environment

The signal that you are attempting to measure may be subject to power line frequency related noise and broadband noise which can interfere with your measurement. The 3421A works to minimize or reject this kind of noise by using a form of Analog-to-Digital (A/D) conversion called integration. Integration is a process where line related noise is averaged to zero over the time period of an integer number of power line cycles.

The measure of the ability of the voltmeter to measure a DC voltage in the presence of AC voltages (at power line frequencies) is called Normal Mode Rejection (NMR). The NMR of the 3421A is dependent upon the number of digits of resolution selected (N3, N4, N5). Greatest NMR (80db) is provided with 5½ digits of resolution but this also has the slowest reading rate. The 4½ digit mode provides 59 db of NMR while the 3½ digit mode provides virtually no noise rejection. Another important part of this process is to make certain that the 50/60 Hz switch on the rear panel is set properly: down for 50 Hz line frequency and up for 60 Hz.

OPTIMIZING READING RATES (Cont'd)

Autozero

The thermal stability of the measurement environment is also a very important consideration. If the 3421A is in a stable temperature environment, disabling the autozero function substantially increases the reading rate. There is very little loss of accuracy. Any range or function change results in an automatic autozero update which removes any accumulated offsets.

The Fastest Reading Rate

The maximum possible reading rate on one channel occurs when 3½ digits of resolution is selected (N3), autozero off (Z0), any DC voltage function (F1, F3, or F4), 60Hz line frequency set on the rear panel switch, manual ranging (not autoranging), and a positive voltage measured. This assumes that the channel list is loaded with that one channel; for example: LS5-5.

The following tables show the 3421A reading speeds assuming the readings are stored in internal memory.

OPTIMIZING READING RATES (Cont'd)

READINGS/SECOND

Repeat on one channel:

	Z1F1	Z0F1	Z1F2*	Z0F2*	Z1F3/F4**	Z0F3/F4**	F6
N5	2.26	4.08	---	---	2.26	4.12	1.05
N4	15.85	23.92	0.4	0.4	15.85	24.31	1.05
N3	30.96	38.56	0.4	0.4	30.93	38.31	1.05

Random Channel

	Z1F1	Z0F1	Z1F2*	Z0F2*	Z1F3/F4**	Z0F3/F4**	F6
N5	2.19	3.98	---	---	2.19	3.99	.98
N4	13.18	18.34	0.4	0.4	13.20	18.61	.98
N3	22.22	25.99	0.4	0.4	22.19	26.01	.98

N5, N4, N3 = 5½, 4½, 3½ digit mode (respectively)

Z0, Z1 = Autozero off, on

F1 = DC Volts, F2 = AC Volts, F3 = 2-Wire Ohms, F4 = 4-Wire Ohms,

F6 = Temperature Measurements.



* There is a 1.8 second delay between AC voltage readings. Consequently, the reading rate can be stated as 2.5 seconds per reading.

** Because of internal delays, the 3 MΩ and 30 MΩ ranges have reading rates of 2.1 Readings/Sec. and 1.5 readings/Sec., respectively.

REAR PANEL

What is on the Rear Panel?

The photo below is of the 3421A rear panel. The insert shows the 3421A with the optional HP-IB interface. Notice especially the line voltage option sticker, the HP-IL and/or HP-IB connector, and the rear panel control switches. Before plugging the 3421A into an AC power source, make certain that the option marked on the label coincides with the nominal line voltage in your area. The line voltage option for the 3421A may be changed only by qualified service trained personnel.

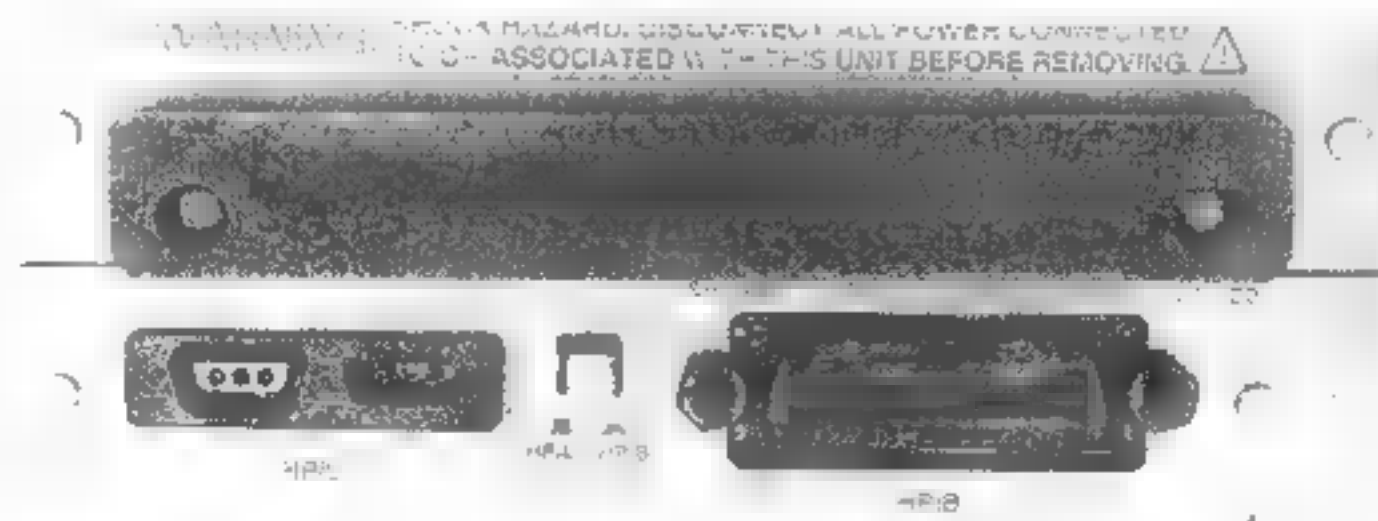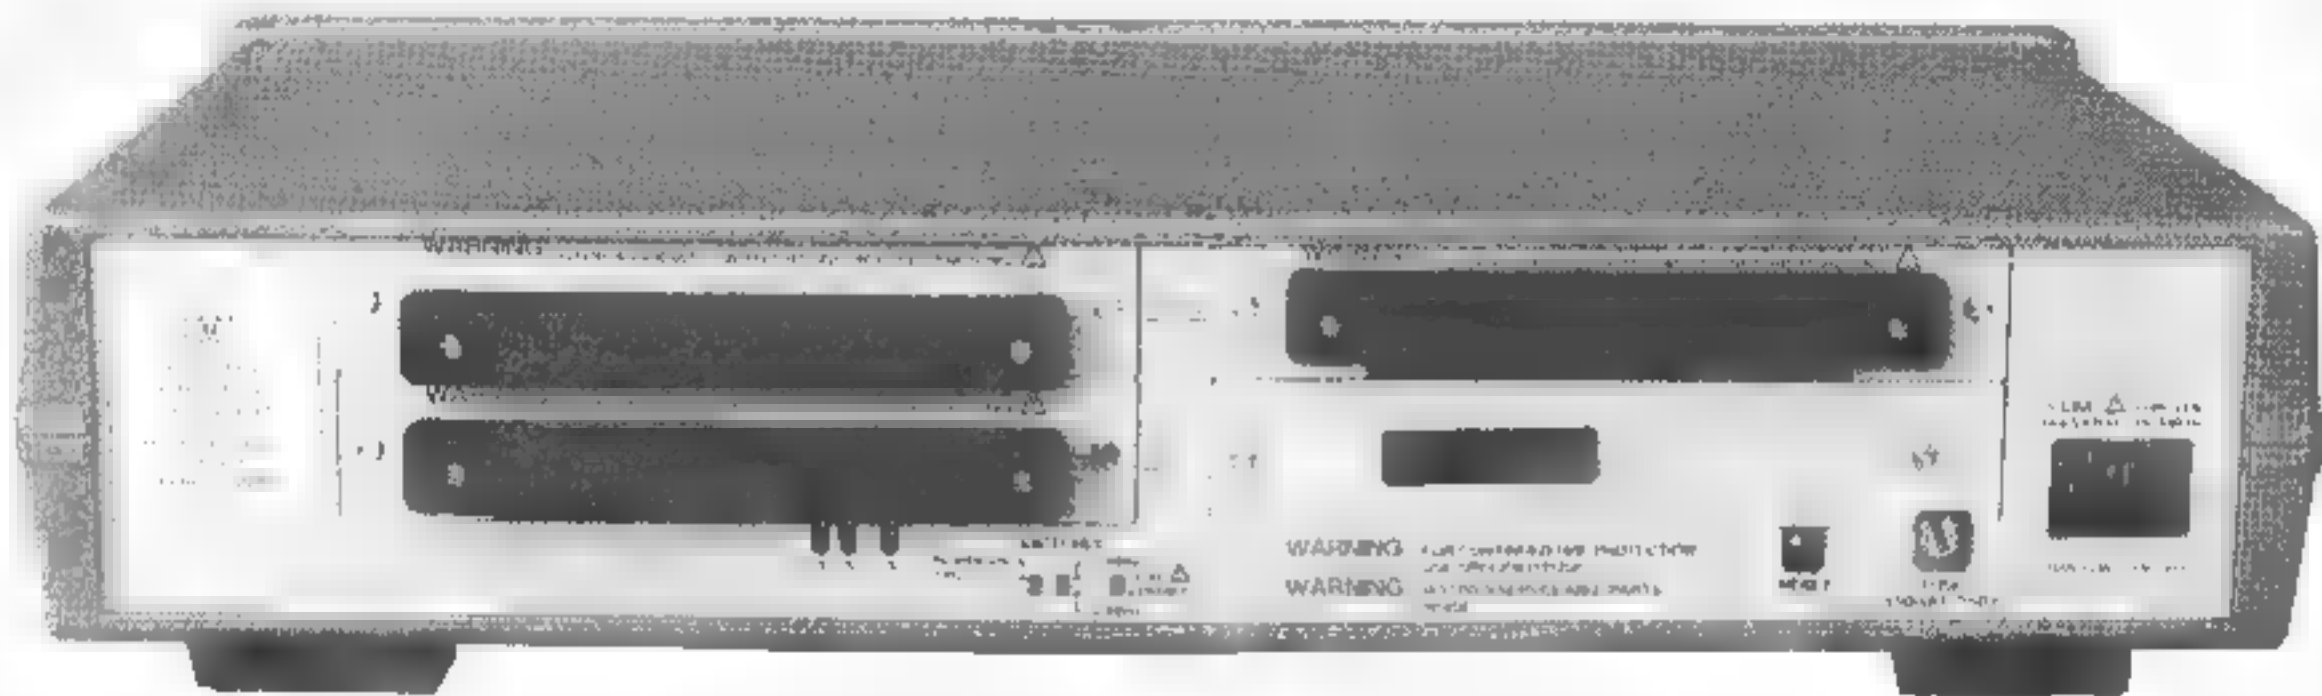

REAR PANEL (Cont'd)

The Reset Switch

The Reset switch on the rear panel is used to completely reset the 3421A. In the event of a failure where the front panel POWER switch cannot turn the instrument off, this reset switch is used to remove all power to the instrument for as long as you hold in the switch. As soon as you release the switch, power will be reapplied to the instrument.

The Rear Panel Control Switches

Of the eight rear panel switches, three are accessible from the rear panel. These switches are described below. Two of the switches that are not accessible are used for troubleshooting and the remaining three are not used. The switches are numbered from left to right.

Switches 2, 4, and 7 are not used.

Switch 3 is used to set the Power-on SRQ feature. When this feature is enabled, i.e. the switch is up, the 3421A will generate a service request to the system computer when the front panel LINE switch or rear panel Reset switch is cycled. Refer to REQUIRE SERVICE and SPOLL in Chapter 3 for more information.

Switches 1 and 6, at turn-on, forces the 3421A into Digital Signature Analysis routines for troubleshooting. Refer to 3421A Service Manual for troubleshooting procedures. These switches are not accessible from the rear panel.

Switch 5 is the 50/60Hz line frequency switch. This switch should be in the down position if a power line with 50Hz frequency is being used. The switch should be up for 60Hz line frequency. This switch changes the integration period (see optimizing reading rates) of the A/D convertor so as to obtain the greatest NMR. The reading rate is slightly lower (~ 17%) when 50Hz is selected.

Switch 8 is the Calibration Enable switch. When placed in the down position, calibration is enabled. Enabling the Calibration may result the loss of calibration of the 3421A. This switch should remain in the up position except when the 3421A is being calibrated by qualified service personnel.

NOTE

On instruments with a serial number prefix of 2247A or lower, switches 1, 2, and 7 are not used and switches 4 and 6 are used for Digital Signature Analysis.

RESISTANCE MEASUREMENTS

Measuring Resistance

The 3421A is capable of measuring resistances from 1 milli-ohm to 30 Mohms in six ranges. Resistance measurements may be made in either 2- or 4- wire ohms configuration. The illustrations below show how resistance measurements are made. A known current is supplied by the 3421A and flows through the unknown resistance. The DC voltmeter measures the resulting voltage across the resistor and calculates the resistance. The table shows the nominal current through the unknown resistance for the individual resistance ranges.

Range	Current Through Unknown Resistance	Maximum Open Circuit Voltage
300 Ω	1 mA	6.5 V
3 k Ω	1 mA	6.5 V
30 k Ω	100 μ A	6.5 V
300 k Ω	10 μ A	5.5 V
3 M Ω	1 μ A	4.5 V
30 M Ω	0.1 μ A	4.5 V

Nominal Current Through Unknown Resistance


The 3421A is factory calibrated in the 4-Wire ohms mode. If most or all of your resistance measurements will be made in the 2-Wire ohms mode, the 3421A can be recalibrated for best accuracy in the 2-Wire mode. See the 3421A Service Manual.

There are two situations in which the 3421A may indicate a negative resistance: either a small voltage exists on the circuit under test or the 4-Wire SENSE and the INPUT leads are inverted from each other in the 4-Wire ohms mode.

RESISTANCE MEASUREMENTS (Cont'd)

2-Wire Resistance Measurements

The 2-wire resistance (or ohms) mode is used most commonly when the resistance of the test leads is not critical. Inaccurate results may occur, however, when using the 2-wire ohms mode if the resistance of the test leads is quite large. Suppose you are making temperature measurements using a thermistor—2.252 kOhms @ 25°C. This thermistor is 40 feet away from the 3421A. At 20°C, the thermistor will have a resistance of 2814 ohms. However, at 20°C, 40 feet of #24 A.W.G. copper wire has a resistance of 1.02 ohms. Two wires, each 40 feet long would produce an error of 2.04 ohms. Using a 2-wire ohms measurement would result in a 1% resistance error. In addition, the 3421A has a 2-wire ohms offset of up to 4 ohms adding another 1.5% error. See the following figure.

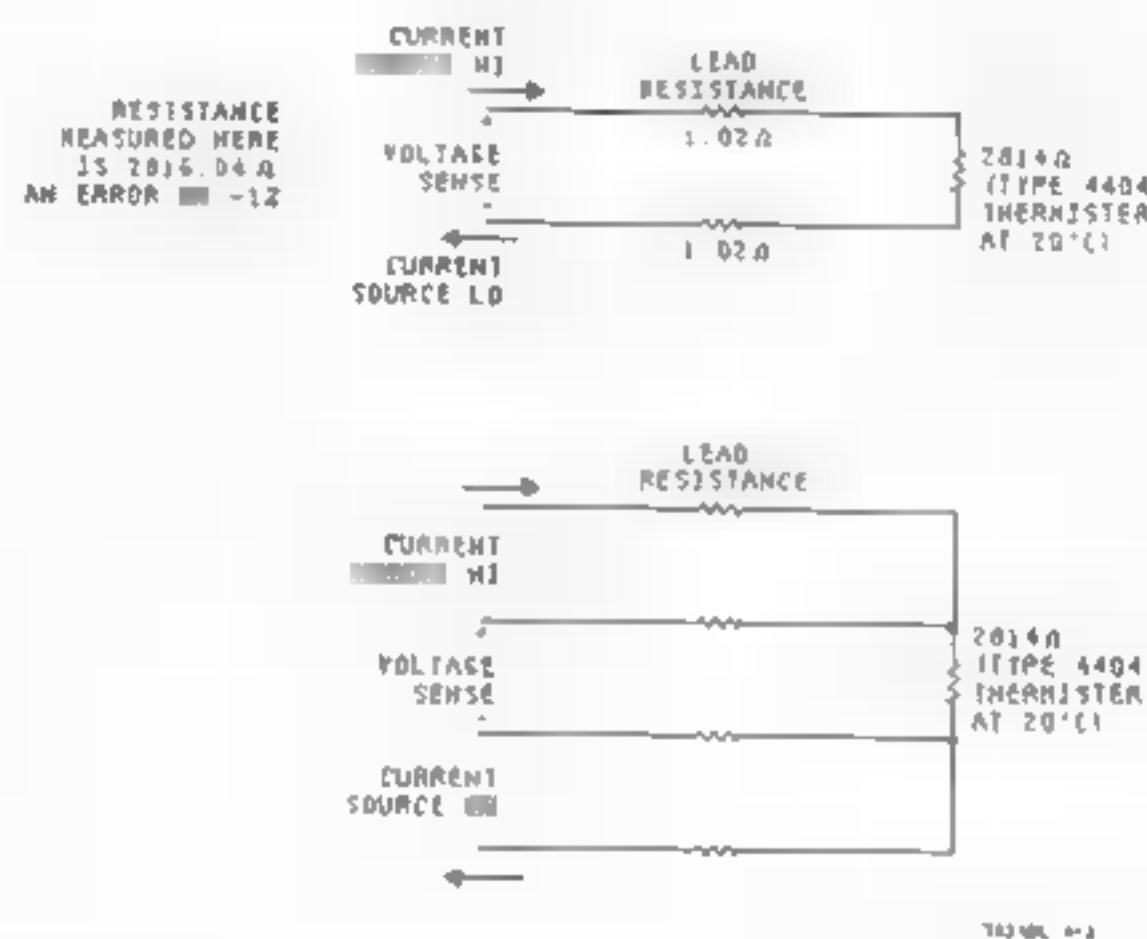

4-Wire Resistance Measurements

The use of 4-wire ohms measurements virtually eliminates the error caused by the test lead resistance. The current through the unknown resistance is the same regardless of the lead resistance but the voltmeter measures only the voltage across the resistance, not across the combined test lead and resistance. The 4-wire ohms mode is essential when the highest accuracy is desired.

3421A COMMANDS:

Standard

TWO[x,y,...z] — for 2-wire ohms — F3 (use LS for channel list)
FWO[x,y,...z] — for 4-wire ohms — F4 (use LP for channel list)

Advanced

TEMPERATURE MEASUREMENTS

Using Thermocouples to Measure Temperature

Because thermocouples are useful over a wider range of temperatures than RTD's or thermistors, they are frequently used in temperature measurements. The 3421A and its 44462A multiplexer option assembly are ideally suited for temperature measurement using thermocouples.

Supplied with this manual is -hp- Application Note 290 on Practical Temperature Measurements. Even if you are familiar with using thermocouples, you may want to read this Application Note. Read very carefully the section on the Reference Circuit as software compensation must be used with the 3421A. This will provide a basis for the following discussion. The Application Note also provides excellent suggestions for increasing the integrity of thermocouple measurements.

The 44462A multiplexer assembly for the 3421A utilizes an integrated circuit temperature sensor to determine the temperature of the isothermal terminal block. In performing a software compensated thermocouple measurement, the following steps must occur:

1. The voltage from the temperature sensor on the multiplexer assembly is measured. This voltage is used to compute the temperature of the terminal block which is known as the Reference Temperature. This step is performed automatically by the REF command.
2. Convert the terminal block temperature to a thermocouple Reference Voltage. The actual implementation of this step will depend on the type of thermocouple being compensated. It allows the use of several types of thermocouples to be used on the same 44462A assembly.
3. Measure the voltage produced by the thermocouple.
4. Add the Reference Voltage (computed in step 2) to the voltage produced by the thermocouple (step 3). This step produces the icepoint compensation.
5. Convert the sum voltage (step 4) to a temperature.

Although these five steps may seem cumbersome they are actually very easy to perform under computer control. Complete examples, including conversion coefficients for all thermocouples, are provided in Chapters 3 and 4.

TEMPERATURE MEASUREMENTS (Cont'd)

To simplify the matter even further, the 3421A was designed to automatically perform all of these steps for a T-type thermocouple. The answer returned will be in degrees C. With other thermocouple types, the 3421A can perform steps 1 and 3 but the system computer must do steps 2, 4, and 5.

Measuring the Reference Temperature

The Reference Temperature can be measured with the REF command. A single channel should be specified with the REF command. For example, if you will be measuring the thermocouple voltage from channel 5, you will need to also execute the command REF5. This will give the Reference temperature of the terminal block in slot 0 which is where channel 5 is located. If no channel is specified, then the REF command will simply default to the 44462A assembly where a multiplexer channel is closed. If there are no multiplexer channels closed, the REF command defaults to the 44462A assembly with the lowest slot number. If there are no 44462A assemblies in the 3421A, an error will be generated. See Require Service in Chapter 3 for error information.

Using T-type Thermocouples to Measure Temperatures

The TEM command is used to automatically perform a software reference junction compensated conversion for T-type thermocouples. As with most Standard commands, TEM can be used with a channel list. The TEM command makes use of the REF command to obtain the Reference Temperature. The Reference temperature will be taken on the same option board as the specified channel, if a channel is given with TEM. If no channels are specified, then the Reference Temperature measurement will be made on the 44462A multiplexer assembly where a multiplexer channel is already closed. If no multiplexer channels are closed, the Reference measurement will be made on the 44462A assembly in the lowest numbered slot. If there are no 44462A assemblies, an error will be generated.

3421A COMMANDS:

	Standard	Advanced
Temperature	TEM[x,y,...z]	F6
Reference	REF[x]	

TEST/RESET

What it Does

At power on or Reset (RS command), the 3421A performs a series of 8 checks on the digital logic and A/D converter. If any of these checks fail, the ERROR indicator will turn on in the display and the 3421A will attempt to interrupt the computer (see Require Service in chapter 3). The sequence of self tests are as follows:

1. Microprocessor internal RAM check. The microprocessor has internal Random Access Memory that is tested.
2. ROM Checksum. Both ROM's (Read Only Memory) are tested for proper checksums.
3. Calibration RAM Checksum*. The calibration RAM is tested for proper checksums.
4. Analog-to-Digital (A/D) Slope test. This test is for the A/D converter.
5. External RAM Tests. The two RAMs, external to the microprocessor, are tested.
6. 10 M Ω Test. This checks the 100:1 divider inside of the A/D input hybrid.

After the self tests have been performed, the 3421A will light all channel numbers in the display for about 1 second. After this, if any failures occurred during the self tests, a number will light up to indicate the failed self test. These numbers are as follows:

Number lit	Self Test Failed
0*	Calibration RAM checksum error. The calibration of the 3421A is suspect.
1	ROM 1 bad.
2	ROM 2 bad
3	A/D Slope error. This would indicate some error in the A/D converter circuitry.
4	Microprocessor RAM bad. Replace the microprocessor.
5	External RAM 1 is bad. This is one of the RAM's external to the microprocessor.
6	External RAM 2 is bad. This is the second RAM external to the microprocessor.
7**	Failed the 10 M Ω self test (it is not within \pm 10%)

* Error #0 will occur if an option 44462A 10 channel multiplexer assembly is added or moved to another slot after the 3421A was calibrated. This is because the temperature reference was not calibrated for that slot.

** Error #7 will occur if there is anything connected to the front panel input terminals during the self test.

TEST/RESET (Cont'd)

After the self test, the 3421A will go to the following states:

- All 44462A option board relays are open.
- All 44465A digital output bits are cleared (high impedance state).
- DC volts function, Autorange on, Autozero on, 5½ digits of resolution.
- Counter set to 1 second gate time.
- The 3421A monitors the rear panel switches and acts accordingly.
- The channel list is set to all available multiplexer channels from the lowest number to the highest number.
- Request service from the computer if self test failed or Power-on SRQ enabled (rear panel switch).

3421A COMMANDS:

	Standard	Advanced
Reset		RS

VOLTMETER

The Internal Voltmeter

The 3421A internal voltmeter provides many features not commonly found in a data acquisition voltmeter. The voltmeter provides $3\frac{1}{2}$ to $5\frac{1}{2}$ digit resolution for measuring AC and DC voltage, and 2- or 4- wire resistance measurements. Of course the voltmeter is used in making temperature measurements. The voltmeter offers DC voltage measuring performance of 1uV sensitivity to 300 volts maximum. AC voltage measurements can be made from 10uV to 30 volts with a bandwidth of 30Hz to 1kHz. Optional divider resistors are available for measuring AC voltages up to 300 volts peak. Resistance measurements are from 1m Ω sensitivity to 30M Ω (full scale).

By selecting the number of digits of resolution and using the autozero feature (discussed later), the voltmeter allows you great flexibility in measurement speed and accuracy. Up to 30 readings per second (one channel only) can be made with the voltmeter in the $3\frac{1}{2}$ digit mode. The autorange feature of the voltmeter allows fast measurements over a wide dynamic range.

To lower your cost of ownership, the voltmeter is calibrated electronically. There are no internal adjustments and the calibration of all functions is accomplished without removing any covers. The self test function verifies most of the internal circuitry of the 3421A indicating proper operation of the voltmeter.

Autozero

Autozero is a function that allows you to enable or disable the internal zero-correction circuitry of the voltmeter. Autozero on, which is the default condition, insures that any offset errors generated internal to the voltmeter are continuously nulled with each reading. This renders the most accuracy. Turning autozero off will substantially increase the reading rate but with a tradeoff of long term stability and accuracy.

With the autozero function enabled, the voltmeter takes two measurements per reading: a "zero" measurement and a measurement of the input signal. The internal processor takes the algebraic difference of the two readings and this is the value that is sent to the computer. The voltmeter makes the zero measurement by disconnecting the input relay and then shorting the internal input circuitry to circuit common. It then switches back for the input signal measurement.

With autozero turned off, whenever a new function or range is selected, the voltmeter immediately takes one zero measurement and stores the result in internal memory. Subsequent measurements of the input signal use this stored zero reading for correction. Since only the input signal is measured, the reading rate nearly doubles.

VOLTMETER (Cont'd)

There are some applications where disabling autozero is advantageous. With autozero off, the reading rate increases. This would be important in applications where measurement speed is critical. Furthermore, the voltmeter input circuitry remains in a completely static state with autozero off. This is useful when making measurements in extremely high impedance circuitry where the internal switching of the voltmeter might affect the reading accuracy.

Since the input circuitry for AC voltage measurements is capacitor coupled, it is not necessary to correct for DC offsets. Therefore, the autozero function is only used to null offsets in the A/D converter. Turning the autozero off for AC volts eliminates the zero reading of the A/D converter and results in ■ faster reading rate.

Calibration

It is beyond the scope of this section to provide the complete calibration procedures for the 3421A. Refer to the 3421A Service Manual for detailed information.

Briefly, Calibration is accomplished by simply applying ■ stimulus, i.e., voltage, resistance, etc., and informing the 3421A of the absolute value of that stimulus. Let's call this known value "A". The 3421A then takes ten readings of the input and averages them together. The average is subsequently compared to "A". The 3421A then computes a "Calibration Constant" which is stored in its internal memory. This "Calibration Constant" is used to correct all subsequent readings.

Measurement Functions

The 3421A internal voltmeter is capable of measuring DC voltages, AC voltages, and resistances in either 2- or 4- wire mode. If you have special requirements in making voltage or resistance measurements, be sure to read the sections elsewhere in this chapter on Optimizing Reading Rates, Autozero, Number of Digits of Resolution, and Triggering Modes.

DC Voltage Measurements

DC Voltage measurements with the 3421A internal voltmeter are simple and straightforward. The Standard Command "DCV" can be used to take DC voltage measurements from the front panel if no channel relays are closed. With the optional channel list, DC voltage measurements can be made from the specified channels.

Of course the Advanced command F1 with associated ranging and triggering commands can also be used. When using the Advanced commands, you can have more

VOLTMETER (Cont'd)

flexibility in your measurements. For example, you can turn autozero off to increase the reading rate. Similarly, you can select the number of digits of resolution ($3\frac{1}{2}$, $4\frac{1}{2}$, or $5\frac{1}{2}$). Read the section in this chapter on Optimizing Reading rates before attempting to use the Advanced commands.

AC Voltage Measurements

Like DC voltage measurements, AC voltage measurements are straightforward. Use the ACV Standard Command with the optional channel list. The Advanced Command for AC voltage is F2.

The 3421A uses an Average responding AC to DC converter for AC voltage measurements. This means that the voltmeter measures the average value of the positive portion of the input and returns it as an RMS equivalent for ■ pure sine wave. Inputs that are non-sinusoidal, such as rectangular waves, will result in measurement errors.

Resistance Measurements

An entire section is devoted to resistance measurements earlier in this chapter. Please refer to it for information on resistance measurements.

Number of Digits Of Resolution

With the 3421A internal voltmeter you have ■ choice in the number of digits of resolution. This choice provides several alternatives and tradeoffs. For example, $3\frac{1}{2}$ digits of resolution provides the fastest reading rate but it also has the least amount of noise rejection. At $5\frac{1}{2}$ digits of resolution, the noise rejection is the greatest but the reading rate is much slower.

Changing the number of digits of resolution actually changes the "Integration Time" which determines the reading rate. Integration is a method of Analog-to-Digital (A/D) conversion where the effects of power line related noise averaged to zero over a period of an integral number of power line cycles (PLC's). The integration time is not the same as the time required for one measurement. Rather, the integration time is the time, in PLC's during which the input signal is sampled by the voltmeter. For DC Voltage measurements at $4\frac{1}{2}$ digits of resolution, the time required for one integration cycle is one PLC: 16.66 mS at 60Hz line frequency or 20 mS at 50Hz. In the $3\frac{1}{2}$ digit mode, the integration time is 0.1 PLC.

Normal Mode Rejection (NMR) is the measure of the ability of a voltmeter to ac-

VOLTMETER (Cont'd)

curately measure DC voltages in the presence of AC voltages at power line frequencies. The 3421A voltmeter has much better NMR at 4½ digits of resolution than it does at 3½ digits (59db vs. 0dB). The greatest amount of NMR is available with 5½ digits of resolution: 80 dB. In this mode, ten (10) readings are taken at 1 PLC integration time and averaged together.

Ranging

Selecting the proper range on the 3421A voltmeter may be done either automatically - called autoranging - or manually. All of the Standard Commands utilize autoranging. The fast autoranging in the voltmeter means that signals with a wide dynamic range, such as from channel to channel, are made quickly.

Autoranging

Autoranging in the 3421A voltmeter is done by taking readings in the 4½ digit mode. Measurements are made on successive ranges until one range is found where the reading is between full scale (30100 counts) and approximately 9% of full scale (02700 counts).

Autorange Hysteresis

In the autorange mode, the voltmeter will uprange (go to the next higher range) when the reading exceeds (\pm) 30100 counts. Conversely, it will downrange (go to the next lower range) if the reading decreases below (\pm) 02700 counts. These figures assume a 5½ digit mode. These numerical autorange points are irrespective of decimal point placement. The difference between the two points is called the autorange hysteresis. This is illustrated in the figure below for DC volts. Autorange hysteresis for other functions is similar.

Manual Ranging

The 3421A is placed in the manual range mode by executing any of the manual range commands or the RAO command. It can be returned to autorange with the RA1 command.

VOLTMETER (Cont'd)

Valid 3421A Voltmeter Ranges

The following chart shows the various ranges available in the voltmeter.

Function	Ranges	Programming Code For Manual Ranging
DC Volts	.3V,3V,30V,300V	R-1,R0,R1,R2 (respectively)
AC Volts	3V,30V	R0,R1
Resistance	300 Ω ,3k Ω ,30k Ω 300k Ω ,3M Ω ,30M Ω	R2,R3,R4,R5,R6,R7

If the voltmeter is in the manual range mode, the result returned to the computer will be +9.99999E+9 (5 1/2 digit mode) when the input is greater than the particular range can measure.

Triggering

To trigger the voltmeter simply means that you instruct it to take a measurement. Of course, this assumes that you have previously set up the voltmeter for the type of measurement with other commands. There are several methods of triggering the 3421A voltmeter. The Standard Commands trigger the voltmeter automatically. However, the advanced commands allow you to trigger the voltmeter in four (4) different ways. These are explained below.

Standard Commands

The Standard Commands DCV, ACV, TWO, FWO, TEM, REF, FRQ, and TOT program the respective measurements and then execute a software trigger (see T3 under Advanced commands). The software trigger causes the voltmeter or counter to take one reading from each channel specified in the channel list. If no channel list is sent with the command, one reading will be taken from a previously closed channel. If no channels are closed, the command can be used to make measurements from the front panel input terminals.

VOLTMETER (Cont'd)

Advanced Commands

The set of Advanced Trigger Commands include: T0, T1, T2, T3, DTia.

- T0 — T0 is for hold (don't trigger) but enable the channel list scan and reading storage. In other words, when T0 is asserted, the voltmeter will not take any readings but will prepare the 3421A for readings from the channel list. To initiate the measurements, execute an interface TRIGGER command (see Chapters 3 and 4).
- T1 — T1 sets the voltmeter for internal trigger. This means that the voltmeter will trigger any time you ask for a reading, such as using the ENTER command (see Chapter 3) or IND command (see Chapter 4). T1 will not open or close any relays.
- T2 — T2 is a software trigger and causes the 3421A voltmeter to take one measurement only. T2 will not open or close any channels.
- T3 — Trigger command T3 is used to initiate the measurements on the channel list and store those readings. Note that if F0 (no measurement function) is asserted when T3 is executed, an error will occur since the 3421A was not told what type of measurement was to be made.
- DTix — The Digital Trigger command is used to implement an external trigger. DT will cause a T3 trigger when bit 'x' on the digital I/O option assembly in slot 'i' goes LOW.

Chapter 3

BASIC Language Programming

Introduction

The speed and data handling capabilities of today's desktop computers support the 3421A in a Data Acquisition/Control system. In this chapter you will learn how to use those powerful desktop computers to program and control the 3421A. Be sure that you have read through Chapter 2 of this manual before starting this chapter. You will need to understand the operating characteristics of the 3421A before you begin programming it.

Scope

The descriptions presented in this chapter are in general terms to optimize the flow of information regardless of the type of computer you are using. This means that both the inexperienced user as well as the experienced programmer will be programming the 3421A efficiently and productively with minimum instruction time. There are, however, many example programs given to enhance the discussion, all of which are given in the enhanced BASIC programming language such as the -hp- Model 85 Desktop computer uses.

Trying Out a Command

Before we actually begin the programming discussion, let's look at some simple examples that demonstrate how easy it is to program the 3421A. First, make certain that your 3421A is connected to a computer through either the HP-IL interface or the HP-IB interface. Chapter 7 of this manual gives interface connection instructions. Don't forget to turn on both the 3421A and the computer.

If you don't have one of the computers specified in the following example, read through this section anyway as it provides a basis for later discussions. Consult the I/O programming manual for the computer you are using for information on sending and receiving information through the interface.

Now, have the 3421A display a number. Using the chart below as a guide, enter the command exactly as shown, replacing "x" with a number from 0 to 29 (i.e., DN5). After you execute the command, the number should appear on the 3421A's display.

Interface/Computer	Type the Message	Press
HP-IL, -hp- 85	OUTPUT 901;"DNx"	[END LINE]
HP-IB, -hp- 85, 9845, 9826 (BASIC)	OUTPUT 709;"DNx"	[EXECUTE] (on the -hp- 85 press, [END LINE])

In the OUTPUT statements, the letters DN are called a command code and represent the message: **D**isplay **N**umber x. The numbers in the 3421A display represent channel numbers. We will learn more about this later. At the end of this chapter are several blue pages that describe each of the command codes the 3421A will respond to, and how they are used. The following program will sequentially display each number from 0 to 29.

```


10 ! -HP- 85 version
20 ! HP-IL Example
30 ! 3421A at address 901
40 FOR X=0 TO 29 STEP 1 ! This line sets up the loop counter
50 OUTPUT 901 ;"DN";X ! 'DN' is sent followed by value 'X'
60 WAIT 500 ! Wait to see the number
70 NEXT X
80 END

```

Let's try another example. Connect ■ battery to the 3421A front panel INPUT terminals. Since a battery is a DC voltage, tell the 3421A to make a DC voltage measurement. This is done with a DCV command:

Interface/Computer	Type the Message	Press
HP-IL, -hp- 85	OUTPUT 901;"DCV"	[END LINE]
	ENTER 901; A	[END LINE]
	DISP A	[END LINE]
HP-IB, -hp- 85, 9845, 9826 (BASIC)	OUTPUT 709;"DCV"	[EXECUTE] or [END LINE]
	ENTER 709; A	[EXECUTE] or [END LINE]
	DISP A	[EXECUTE] or [END LINE]

Note. In the examples above, the 901 and 709 are the HP-IL address and HP-IB address, respectively. Addresses will be discussed in detail later. For now, simply perform the exercise.

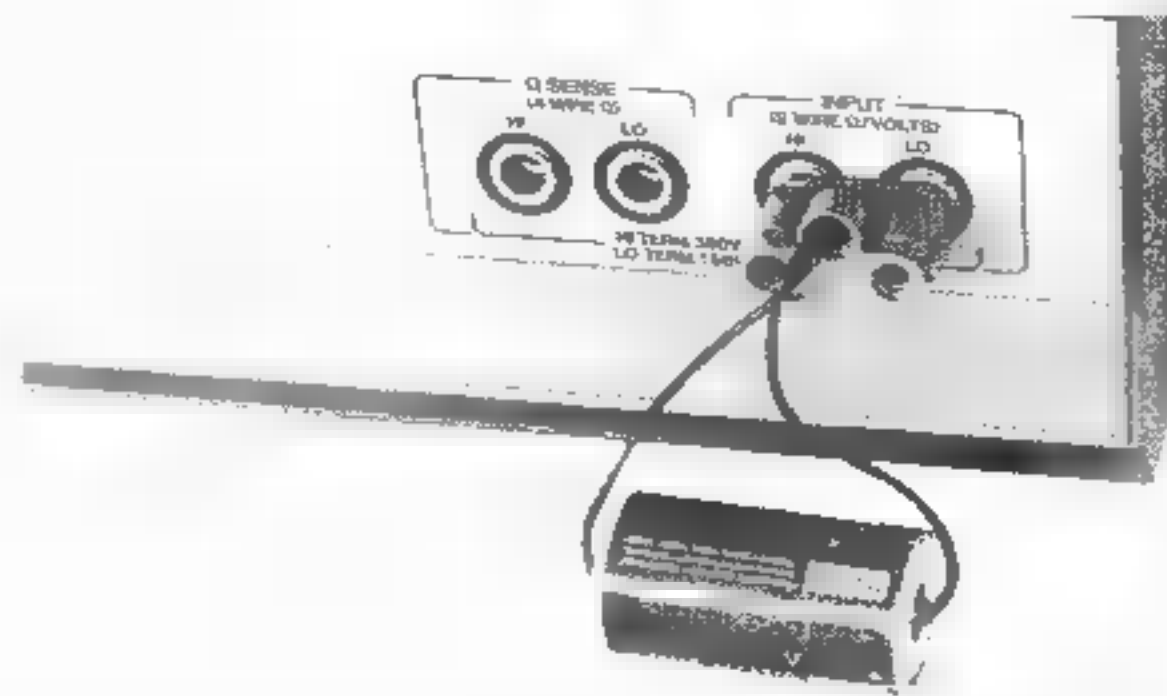

The value displayed is the measured battery voltage. The command DCV is called ■ Standard Command and performs a specific measurement task.

HP-IL vs. HP-IB

With the 3421A you have a choice of computer interfaces. The Hewlett-Packard Interface Loop (HP-IL) is standard with the 3421A and is ideal in low cost, low power, and medium distance applications. An optional HP-IB* interface is also available for the 3421A. From the programmers viewpoint these two interfaces are very similar and differ mainly in the instrument addressing.

Appendix B in this manual gives ■ brief description of the HP-IL and HP-IB interfaces. Chapter 7 of this manual gives interface connection instructions.

When the computer tells a particular instrument to send data over the interface, we say that the instrument has been "Addressed to Talk". Likewise, when the computer tells an instrument to receive data or instructions, the instrument is said to be "Addressed to Listen". The 3421A is capable of both "Talking" and "Listening". These terms are used throughout this chapter to describe various operations. There can be only one instrument addressed to talk at any one time.

Information Transfer

When operating with the HP-IL interface, most 3421A commands will "Hold-up" the computer until all readings have been taken. This feature makes Data Ready SRQ unnecessary for most measurements (Data Ready SRQ is described later in this chapter). In other words, suppose you have a 3421A, with three 44462A 10 channel multiplexer assemblies, programmed to take 30 readings; one reading from each channel. With a reading rate of approximately 2 readings per second, 15 seconds

*HP-IB (Hewlett-Packard Interface Bus) is Hewlett-Packard's implementation of IEEE Standard 488-1975 and ANSI MC1.1.

are required to take all 30 readings. The computer will not be able to perform ANY task during this 15 second period while the 3421A is making the measurements. This is demonstrated in the following program.

```
10 ! EXAMPLE
20 OUTPUT 901 : "DCV0-29"
30 FOR I=0 TO 29
40 ENTER A(I)
50 DISP A(I)
60 NEXT I
70 END
```

After line 20 is executed, the 3421A will hold-up the computer while it takes the 30 readings.

The 3421A commands that do not hold-up the computer are: digital monitor commands MN, MH, and ML; TOTAlize function; and Digital Trigger (DT). An example will be given later in this chapter demonstrating the DT command and interrupting the computer.

The advantage of this feature comes when you are using other devices with the 3421A. For example, let's say you are using the 3421A as a scanner - not using the internal voltmeter - with some measuring device such as a power meter. You would first close a channel on the 3421A and then trigger the power meter. Triggering cannot occur though, until the 3421A has closed the channel and freed the computer. In other words, the power meter is prevented from triggering until the 3421A relay is known to be closed, thus preventing false measurements.

With the HP-IB option and HP-IB selected, this computer hold-up feature is switch selectable. Access to the switch, however, is gained by removing the HP-IB option cover and should be done by service trained personnel only. With Buffered Transfer disabled (switch up, normal position) the 3421A acts much the same as the HP-IL interface, holding up the computer until all measurements are taken. Buffered transfer disabled (switch up) is the factory setting of this switch. With the switch in the DOWN position (buffered transfer enabled) the computer is released while the 3421A takes its measurements. This mode provides the fastest transfer of information between the computer and the 3421A.

You should be aware however, that if any of the digital monitor modes (MN, MH, ML, or DT) are in effect in the 3421A, any communication through the interface will cause the mode to be aborted. That is to say, if the 3421A is waiting for a Digital Trigger (DT) and the computer or another instrument sends any commands or data through the interface, the 3421A will abort the Digital Monitor and will no longer respond. It will need to be reprogrammed for that mode.

Moreover, when you have the HP-IB option in the 3421A and are using the 3421A in one of the Digital Monitor modes, i.e., MH, ML, MN or DT, the 3421A MUST be set to unlisten. This is in order for the 3421A to interrupt the computer via the SRQ interrupt. For the -hp- 85 and 9826A (BASIC) this would take the form:


SEND 7 : UNL

Other computers will use a different command syntax. Two examples using this command are shown in the Require Service section later in this chapter.

Addressing


Each instrument that you connect to the interface, whether it be HP-IL or HP-IB, has a unique "address". The address provides a convenient way for the computer to send or receive data from a particular instrument even when there are several connected together.

In earlier examples, an instruction such as OUTPUT 901 (HP-IL) or OUTPUT 709 (HP-IB) was used to send a message to the 3421A. The three digit number, 901 or 709, is used to specify the address of the 3421A. The first digit (9 or 7) is called the interface select code (isc). The isc for the HP-IB interface is 7; for the HP-IL interface it is 9. The remaining two digits, called the instrument address, are used to specify the 3421A - or any other instrument - connected to the same computer interface.

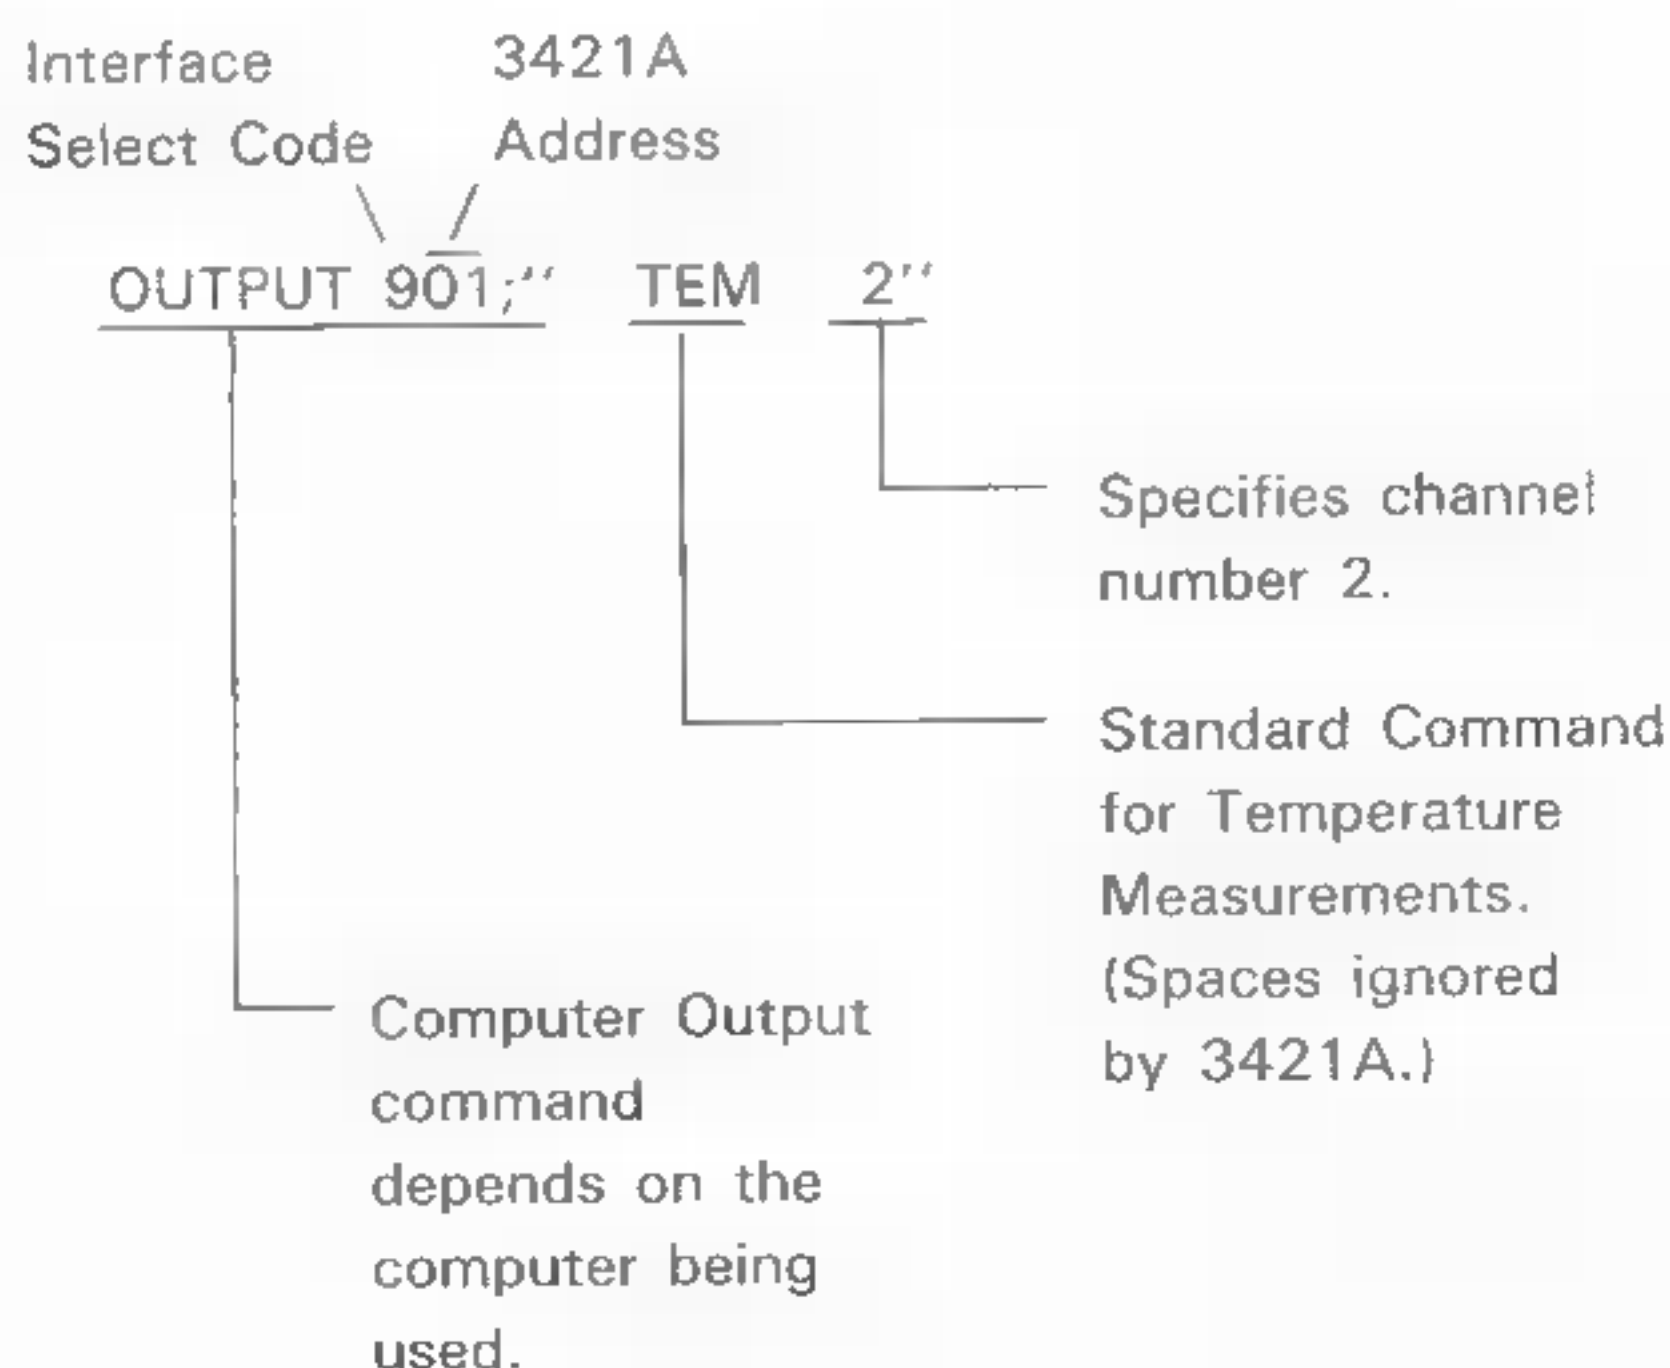

HP-IL Addressing

The computer automatically reassigns addresses to each instrument connected in the loop. This is called "Autoaddressing". Addresses are assigned sequentially to instruments in the loop in the direction of information flow. Refer to the HP-IL diagram below. The first device in the loop after the controller has an address of "1". The second device will have an address of "2", the third device an address of "3", and so on through the loop. A maximum of 30 devices, including the computer, may be connected in the loop. The 3421A may be connected anywhere in the loop and will be autoaddressed accordingly.

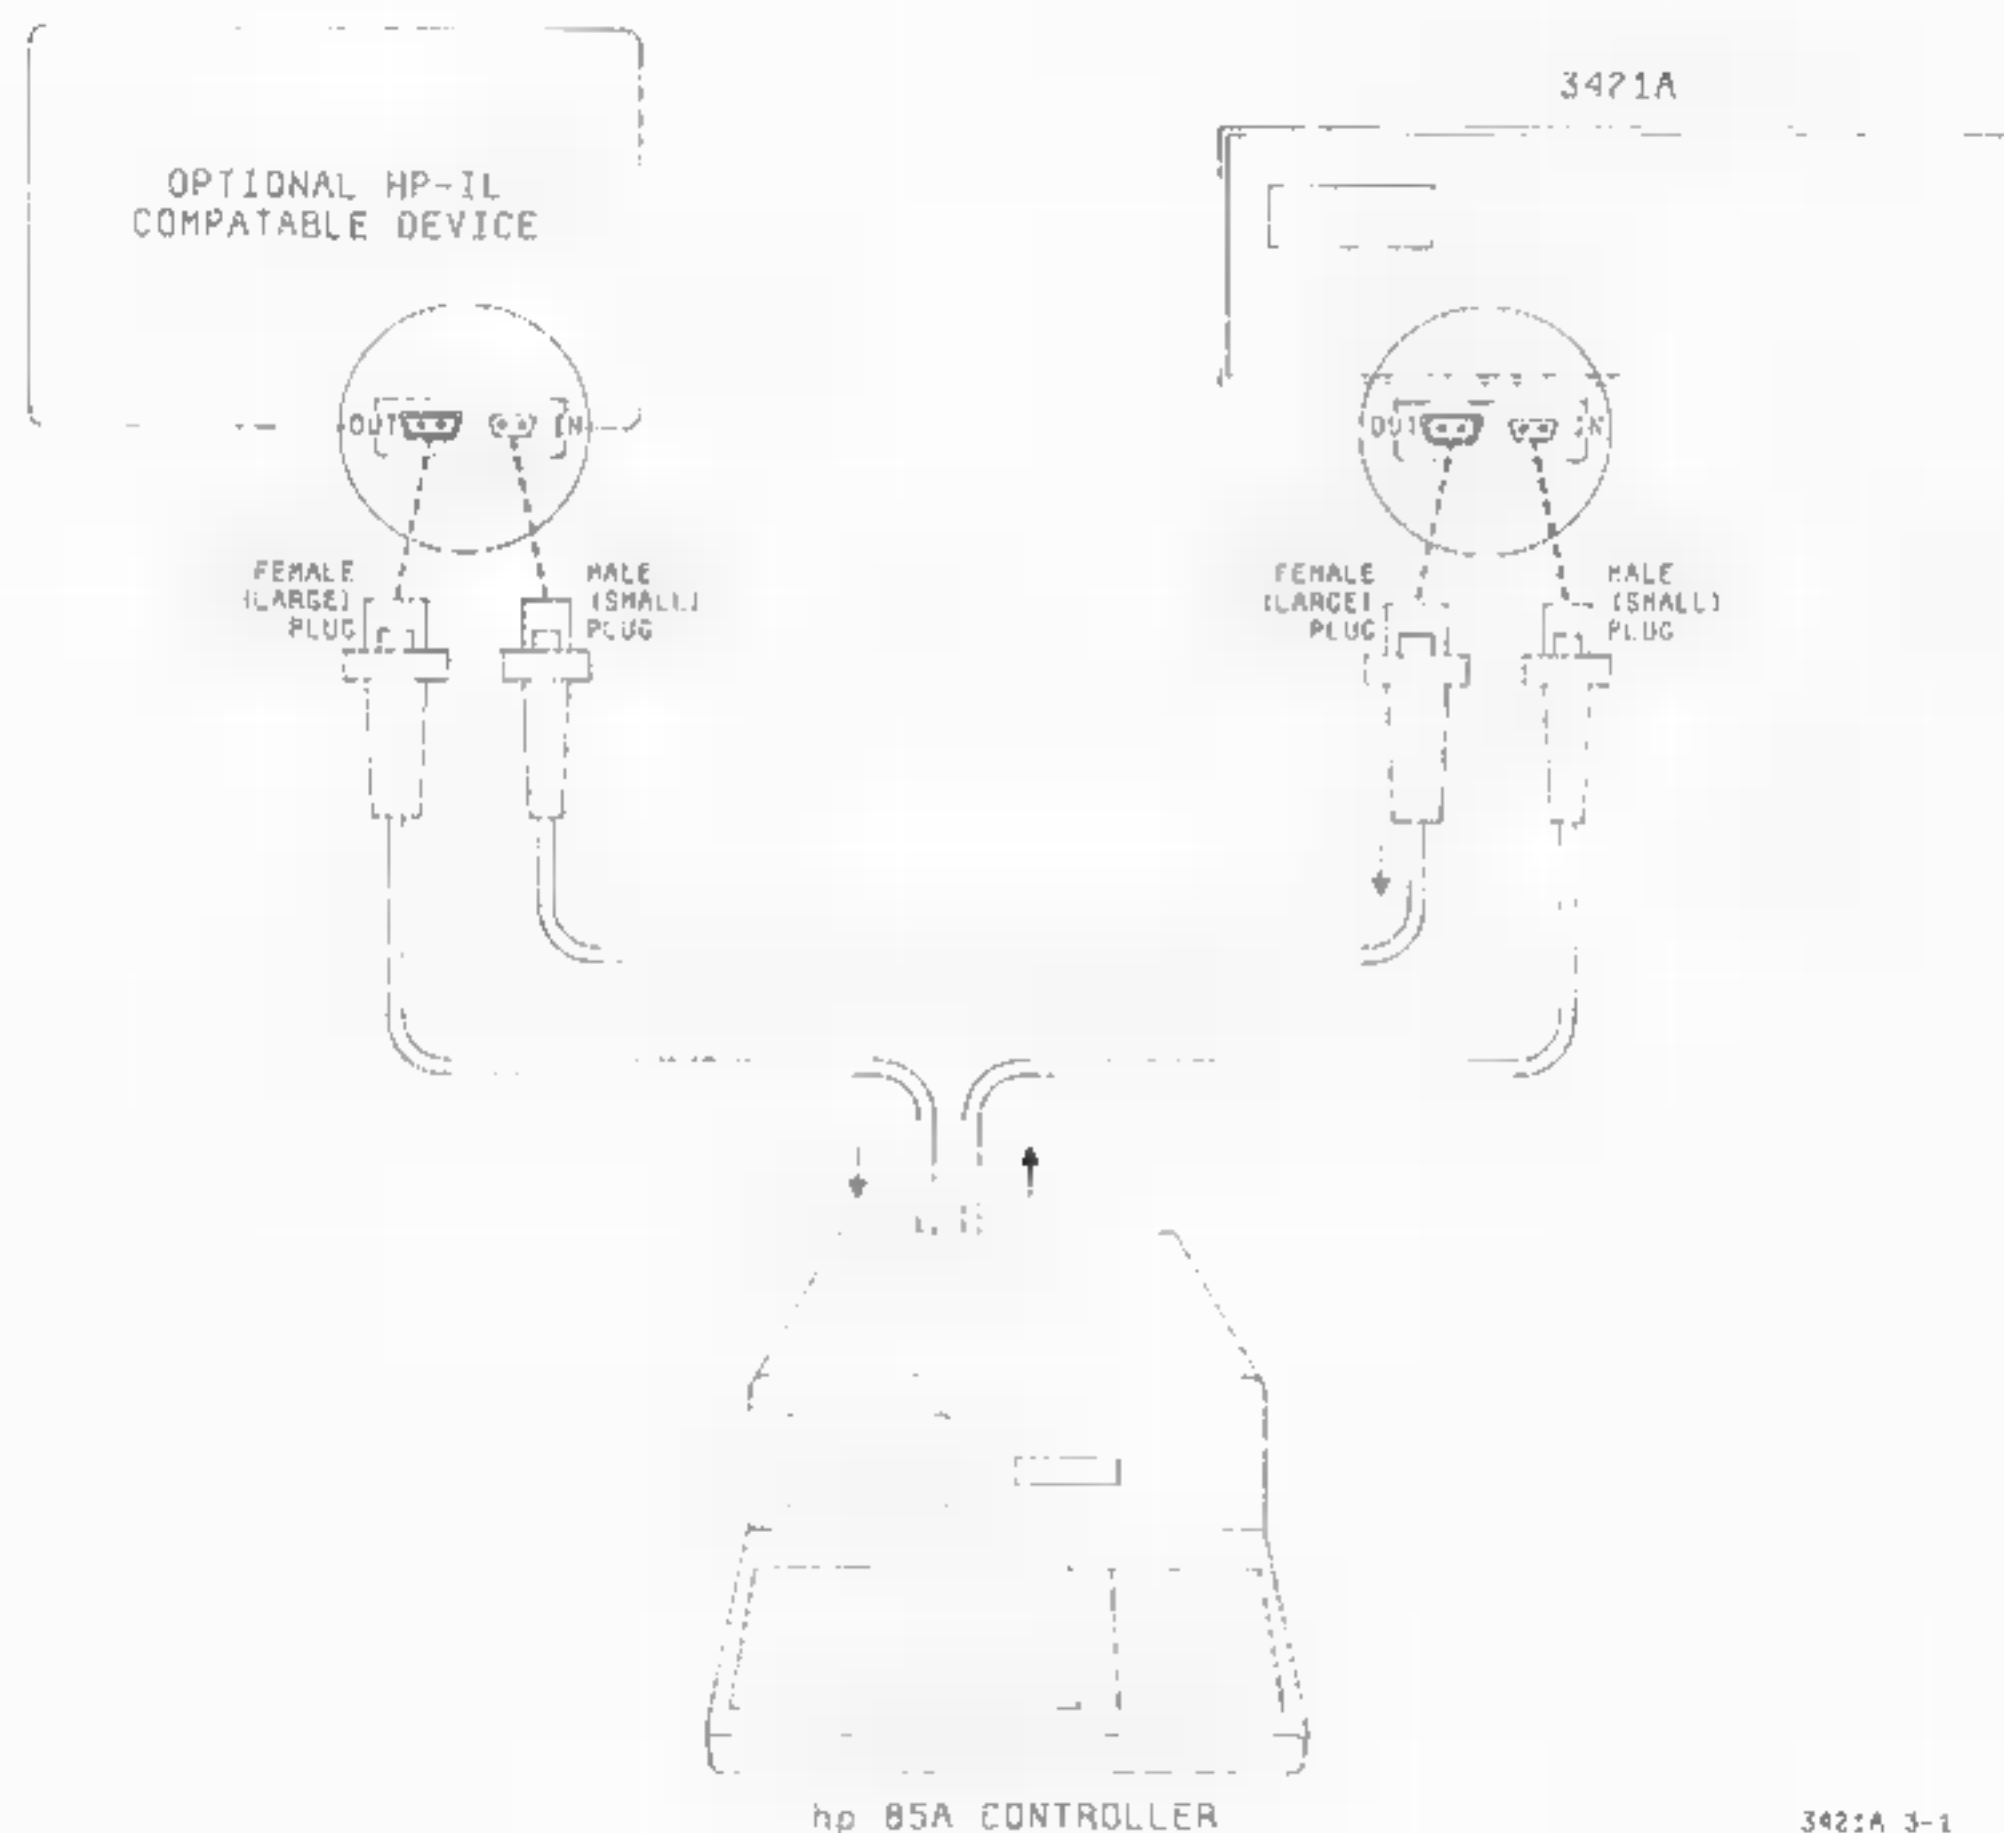

All examples in this chapter assume the 3421A is the only device connected to the computer HP-IL interface. Therefore, when autoaddressed, the 3421A will have an address of 1. Also, the -hp- 85 desktop computer with an 82938A HP-IL interface is assumed to be the computer used in the examples. The 82938A HP-IL interface has an interface select code of "9", therefore, the 3421A will be addressed at 901.

HP-IB Addressing

The 3421A with HP-IB option (Option 201) has a switch selectable HP-IB/HP-IL interface.

The HP-IB address for the 3421A is determined by switch settings on the HP-IB option board. The 3421A has a factory preset address of 09. If the address needs to be changed, a qualified service trained technician will find the necessary information in Chapter 8 of this manual. In the examples where HP-IB addressing is demonstrated, the address will be 709. This refers to the computer HP-IB interface select code "7" and the 3421A address of 09. Note however, that if the rear panel switch is set for HP-IL, the addressing will follow the Autoaddressing constraints of HP-IL and will ignore the setting of the HP-IB address switches.

Sending Instructions to the 3421A

Command codes are used to instruct the 3421A to perform a specific measurement or task. At the end of this chapter are several blue pages that provide a description of all of the commands the 3421A recognizes and responds to. Two categories of commands are provided,

A. Standard Commands set up the 3421A and then complete a measurement task. For example, the command DCV2,7-9 causes the 3421A to take DC Voltage measurements on channels 2, 7, 8, and 9, and store the readings in its internal memory. One command causes ■ complete measurement task to be performed. The Standard Commands make programming easy.

B. Advanced Commands provide more flexibility than the Standard commands but they do not perform a complete measurement task. Individual commands are used to perform only one aspect of a measurement.

The Standard Commands are conveniently provided for the 3421A to ease the task of programming. As ■ result, most of the examples in this chapter will use the Standard Commands. The Advanced Commands are available to those users who wish to tailor their system for particular requirements.

Procedure

Decide what task or measurement you want the 3421A to perform and determine the appropriate command. For example, if you are making temperature measurements (using T-type thermocouples) use the TEM command. If the thermocouple is connected to channel 2 in the 3421A, execute the command TEM2. The following message would be sent:

```
OUTPUT 901;"TEM2"
```

Sample Problem

The previous illustration shows how to send the command to take a temperature measurement from channel 2. Suppose though, as will probably be the case, you have more than one measurement to make. They don't have to be temperature measurements, they could be voltage, resistance, or frequency measurements. The 3421A Standard Commands allow you to specify a group of channels, called a channel list, for the command.

To illustrate, assume you have T-type thermocouples connected to channels 2 through 8 and channel 14. The one command:

```
TEM2-8,14
```

will cause the 3421A to take temperature measurements from those eight channels and store the measurements internally. The complete command, along with the OUTPUT statement is:

```
OUTPUT 901;"TEM2-8,14"
```

Later in this chapter, you will learn to read back those eight temperature readings. For now, just remember that they are stored in the 3421A's internal memory. Up to 30 readings could be stored in this manner.

Programming Hints

Make certain that you have read the paragraphs under HP-IL vs. HP-IB. Those paragraphs deal with addressing and certain practices and exceptions that you will need to understand when programming.

- When using the channel list the measurements are taken sequentially and stored. In other words, as in the previous example, channel 2 is measured first and the reading stored. Next, channel 3 is measured and its reading stored. This pattern continues for each channel until finally, channel 14 is measured and that reading stored.

Later, when you want to read back those measurements, the temperature from channel 2 will be returned first, followed by the temperature from channel 3, then 4,... and finally 14.

The series of channels specified in ■ channel list must follow these rules.

a. The default channel list (asserted at power on or reset) consists of all multiplexer channels in numerical sequence. The channel list can be loaded with multiplexer channels by the DCV, ACV, TWO, FWO, TEM, FRQ, LS or LP commands. It can also be loaded with digital input bit numbers by the BIT command. See chapters 5 and 6 for more information on the channel list.

b. Channel addresses are separated by commas. However, a dash may be used to signify a contiguous set of channels. When using Advanced Commands, any command that specifies a channel must be separated from subsequent commands by either a colon (:) or a semicolon (;) but not a comma. For example: F1RA1Z1N5LS5-9;T3. If the last character in the command string is ■ comma, an error will be generated.

c. No more than 30 channels are accepted into the channel list. Legal channel numbers are 00 through 29.

d. The mnemonic determines what type of channel can be loaded into the channel list. In other words, if channel 1 is configured as an actuator channel, it should not be specified for any type of measurement (i.e., DCV1 or BIT1). If an attempt is made to load the channel list with an improper type of channel, a syntax error is generated (see SPOLL) and the command is aborted. If channels x-y are received and some channels in between and including x and y are the wrong type of channels for the command, they are not loaded into the list and the error message is not sent. The remainder of the channels are loaded into the list.

e. Leading zeros are ignored, that is, DCV00019 means DCV19.

f. All syntax following a decimal point is ignored except for commas, dash, semicolon, colon, Carriage Return (cr), or Line Feed (lf). DCV2.3 means DCV2.

g. Exponents are not allowed and cause a syntax error. The command is aborted.

h. All lower case letters are interpreted as upper case. Blanks and the plus (+) sign are ignored. Commas (,), colons (:), and semicolons (;) are used as terminators. All other punctuation give a syntax error. In other words, Dc V 21 is the same as DCV21.

i. Terminators are required after any command (Standard or Advanced) that either specifies a channel or a decimal value, when that command is to be followed by another command. For example, the 'Mx' command is used to set the SRQ mask. This command can have a decimal value 'x' of between 0 and 255. Therefore, this command must be followed by a terminator if another command is to follow it; e.g.,

OUTPUT 901; "M1;T0". Valid terminators are ■ colon (:), a semicolon (;), a Carriage Return or Line Feed; but not a comma (,).

Receiving Data From The 3421A

The 3421A has the ability to talk to the computer or other instruments, giving the results of measurements or status information. The computer must tell or "address" the 3421A to talk in order for it to send information.

Example. In the last section we saw how to send ■ command for a temperature measurement on channel 2. Now we want to read back the measured temperature. The ENTER statement is used.

```
10 OUTPUT 901 ;"TEM2" ! From a previous section
20 ENTER 901 ; A
30 DISP A
40 END
```

The 3421A is addressed to talk by the ENTER 901 command. The measured temperature is stored in the variable A and displayed on the computer's display. Remember that the actual computer syntax used (i.e. ENTER, OUTPUT, DISP, etc.) is dependent on the computer you are using and may be different than the the examples given in this manual. You should refer to your computer's I/O manual for specific information.

You also learned in the last section how measurements could be made on several channels using the channel list with a command. To read back those measurements, you will need one variable for each channel. Two sample programs are provided to illustrate how that can be done.

```
10 OUTPUT 901 ;"TEM2-8,14" ! From previous section
20 ENTER 901 ; A,B,C,D,E,F,G,H
30 DISP A,B,C,D,E,F,G,H
40 END
```

OR

```
10 OUTPUT 901 ;"TEM2-8,14" ! From previous section
20 FOR I=1 TO 8
30 ENTER 901 ; B(I)
40 DISP B(I)
50 NEXT I
60 END
```

In the first example, each reading is stored in a separate variable. An array is used to store the readings in the second example. Remember that in some computers you

may have to dimension the array.

Output Format

Measurement data is sent by the 3421A as 13 bytes in the following format (5 ½ digit mode):

Measurement:	$\pm d.dddddE \pm d$ CR LF
Error:	-8.88888E+8 CR LF
Overload:	+9.99999E+9 CR LF

Digital data is sent as:

Digital:	ddd CR LF (where $0 \leq ddd \leq 255$ decimal)
Digital Error:	888 CR LF

The character "d" represents a single digit. CR and LF are Carriage Return and Line Feed, respectively.

Readings Output Format

Readings are sent as indicated above. The exponent is the same as the voltmeter range (unless the measurement is temperature or frequency). In other words, the reading +1.23456E-1 means the measurement was taken on range R-1 (.3 volt) and the measured value is .123456 volts. If the measurement is entered into a numeric variable the measurement will be adjusted to eliminate the exponent. Refer to the Advanced Commands for more information on range codes. The number of digits following the decimal point is the same as the number of digits of resolution asserted. This means that if you have 3 digits of resolution asserted (N3), the reading will be output as: $\pm d.dddE \pm d$. This change of output digits is also true for errors.

Error Format. The -8.88888E+8 indicates an error and will be sent in place of the first reading after the error occurs. Bit 5 of the Status Register will also be set, see SPOLL later in this chapter. Conditions which will cause the error message are:

1. Hardware error
2. Calibration error
3. Command syntax not understood
4. Can't execute command
5. Low battery
6. Self Test failed

The error message will not be sent if the status byte is read (SPOLL or SR commands) before the 3421A is addressed to talk. In this case the reading, if available,

will be sent. This is shown in the following two examples. The first example shows the typical command and data read sequence. The second example shows how to read the status byte prior to requesting data.

```
10 OUTPUT 901 : "DCV3-7"  
20 FOR I=1 TO 5  
30 ENTER 901 : A(I)  
40 NEXT I  
50 END
```

OR

```
10 OUTPUT 901 : "DCV3-7"  
20 P=SPOLL(901)  
30 FOR I=1 TO 5  
40 ENTER 901 : A(I)  
50 NEXT I  
60 END
```

If an error exists, the first program would return the error message instead of the first reading for A(1). In the second program the actual measurement, if it were possible to make the measurement, would be returned to A(1) instead of the error message.

The reading will not be available if;

1. No measurement has been taken.
2. Function FO is asserted and the 3421A is triggered.
3. If the channel list is empty and the 3421A is triggered by T3, DT, or TRIGGER.

If an error occurred during a digital read, the error message is: 888.

Overload Format. Three conditions will cause the overload message (+9.99999E+9) to be sent. These are:

1. Voltmeter overload
2. Counter overflowed in TOTAlize mode (greater than 65535 counts).
3. REFerence temperature out of range. That is, the REFerence junction temperature is not between 0 and 60 degrees C or the measured thermocouple voltage is not between 6 and 20 mV.

Simple Programming

We have seen how to send simple commands to the 3421A and how to get measurements from it. Now lets go one step further and look at a simple program. This program takes DC voltage measurements on channels 1, 2, and 3 and

temperature measurements on channels 4 through 9. It is important to notice that the DC voltage readings are read back to the computer (lines 30-50) before the temperature measurements were made. This is because the TEM4-9 command sets up a new channel list and the temperature measurements would over write the DC voltage measurements in the 3421A reading storage.

```
10 ! Sample program
20 OUTPUT 901 ;"DCV1-3"
30 FOR I=1 TO 3
40 ENTER 901 ; B(I)
50 NEXT I
60 OUTPUT 901 ;"TEM4-9"
70 FOR I=4 TO 9
80 ENTER 901 ; B(I)
90 NEXT I
100 FOR I=1 TO 9
110 DISP B(I)
120 NEXT I
130 END
```

3421A Interface Capabilities

The following topics, arranged in alphabetical order, deal with HP-IL and HP-IB interface commands and the way the 3421A responds to them. Refer to the I/O programming section of your computer's I/O programming manual for specific information on syntax and actions taken by the interface when sending the message. The examples given apply to the -hp- 80 series desktop computers for HP-IL and HP-IB and the -hp- 9845, and 9826 (BASIC) for HP-IB.

CLEAR

Example

HP-IL		HP-IB
CLEAR 9	(device clear)	CLEAR 7
CLEAR 901	(selected device clear)	CLEAR 709

Comments

Upon receiving the CLEAR message, the 3421A goes through its power-on/reset routine. The power-on/reset routine includes:

1. Self Test.
2. Opens all multiplexer and actuator channels.
3. Clears bits of the digital output ports (high impedance state).
4. Voltmeter set to: DC Volts, autorange on, autozero on, 5 ½ digit resolution, internal trigger on.
5. Counter set to 1 second gate time.
6. HP-IL address is not changed.
7. Checks rear panel switches (50/60 Hz, Power-on SRQ, etc.).
8. Channel list set to all available multiplexer channels, addressed sequentially
9. Request Service (SRQ) if self test failed.
10. Reading storage is cleared.

LOCAL LOCAL LOCKOUT REMOTE

Comments

The 3421A does not respond to these commands. This is because the 3421A has no front panel and must be controlled by a computer through an interface. The 3421A is always in remote state.

REQUIRE SERVICE (SRQ)

Comments

One important feature of the 3421A is its ability to interrupt the computer when certain conditions occur. Of course the computer must be programmed to respond to the interrupt. The Require Service message (SRQ) is used to implement this and is independent of all other activity. The 3421A **MUST BE PROGRAMMED** for the interrupt before the interrupt will take place. Several examples are included in this section to explain the interrupt programming.

There are many conditions which can be programmed to cause the interrupt. The following is a list of those conditions.

1. Power-on/Reset. The 3421A will interrupt the computer when the 3421A power was turned on, it received a Device CLEAR or Selected Device CLEAR, or the 3421A was reset via the rear panel reset switch. The 3421A rear panel switch number 3 must be set to the up position for this interrupt to occur.

2. Data Ready. The 3421A would interrupt the computer after each completed measurement or, if a channel list is measured, the interrupt will occur after all readings are taken. An example of this, using the DT command, will be shown later in this section.

3. Self Test Error. If any of the eight self tests fail, an interrupt will occur.

4. Event Occurred. The 3421A can monitor the digital input ports and if a specified bit or 8-bit word occurs, it will interrupt the controller. This provides flexibility in timing events. An example of this will be shown later in this section.

5. Low Battery. If the 3421A is being powered by its internal battery, it will generate an interrupt when the battery voltage drops too low. After approximately three minutes, it will open all channels and power down. The following instructions cannot be executed after a low battery is detected: TOT, MH, ML, MN, DT.

6. Abnormal Condition. Abnormal conditions include:

- a. Hardware error
- b. Calibration error - calibration is suspect
- c. Command from computer not understood - i.e. FR3 is not a legitimate 3421A command
- d. Can't execute command - i.e., ■ command to close channel 25 with no multiplexer assembly in slot 2
- e. Low battery
- f. Self test failed

SRQ (Cont'd)

How to use SRQ

When the Require Service message (SRQ) is sent, the computer must first determine which instrument, if more than one is connected to the interface, is requesting service. This is done by conducting a SERIAL POLL (SPOLL) of every device connected to the interface which is capable of requesting service. When an instrument is polled, it responds by sending its "STATUS BYTE" which indicates whether or not it requested service. If it has, bit 6 will be set along with one or more bits to indicate the nature of the request. If the Status Byte for the instrument polled indicates that it was not requesting service, the computer would continue to poll the other instruments until the proper one is located. All of this assumes that the computer has been programmed to respond to the SRQ interrupt. This is shown in the examples given later.

Status Register and Status Byte

The Status Register is used to monitor several different conditions within the 3421A. It is possible for one or more of the conditions to be true without the 3421A causing an interrupt. The interrupt will only occur when the SRQ mask is set for particular conditions. Note however, that two bits are not maskable and will always send the interrupt message. If the SRQ mask is set for a certain condition(s) and that condition occurs, bit 6 of the status register will go true (true being a "1") and the SRQ interrupt message will be sent to the computer. The computer must be programmed to respond to the interrupt.

The Status Byte is an 8-bit byte that is sent from the 3421A to the computer in response to the SPOLL message. The Status Byte comes from the Status Register and is used to determine the current status of the 3421A.

Bit 7 N/A (always zero)	Bit 6 Require Service (no mask)	Bit 5 Abnormal Condition (see earlier)	Bit 4 Low Batt. (not maskable)	Bit 3 Event Occurred	Bit 2 Self Test Error (not maskable)	Bit 1 Power-on Reset Occurred (switch mask only)	Bit 0 Data Ready
----------------------------------	--	--	---	----------------------------	---	---	------------------------


Status Register

Setting the SRQ Mask

Think of the SRQ mask as a cover hiding three bits of the Status Register. To "set" the mask you effectively poke holes in the cover. First, determine which conditions

SRQ (Cont'd)

you want to interrupt the computer, e.g., data ready, abnormal conditions, etc. Refer to the figure below. Add together the decimal values for the bits that you want to interrupt the controller. Then, output the "M" command followed by the decimal value, that is, "Mx" where x is the decimal value. The following diagram shows the Status Register and the SRQ mask.

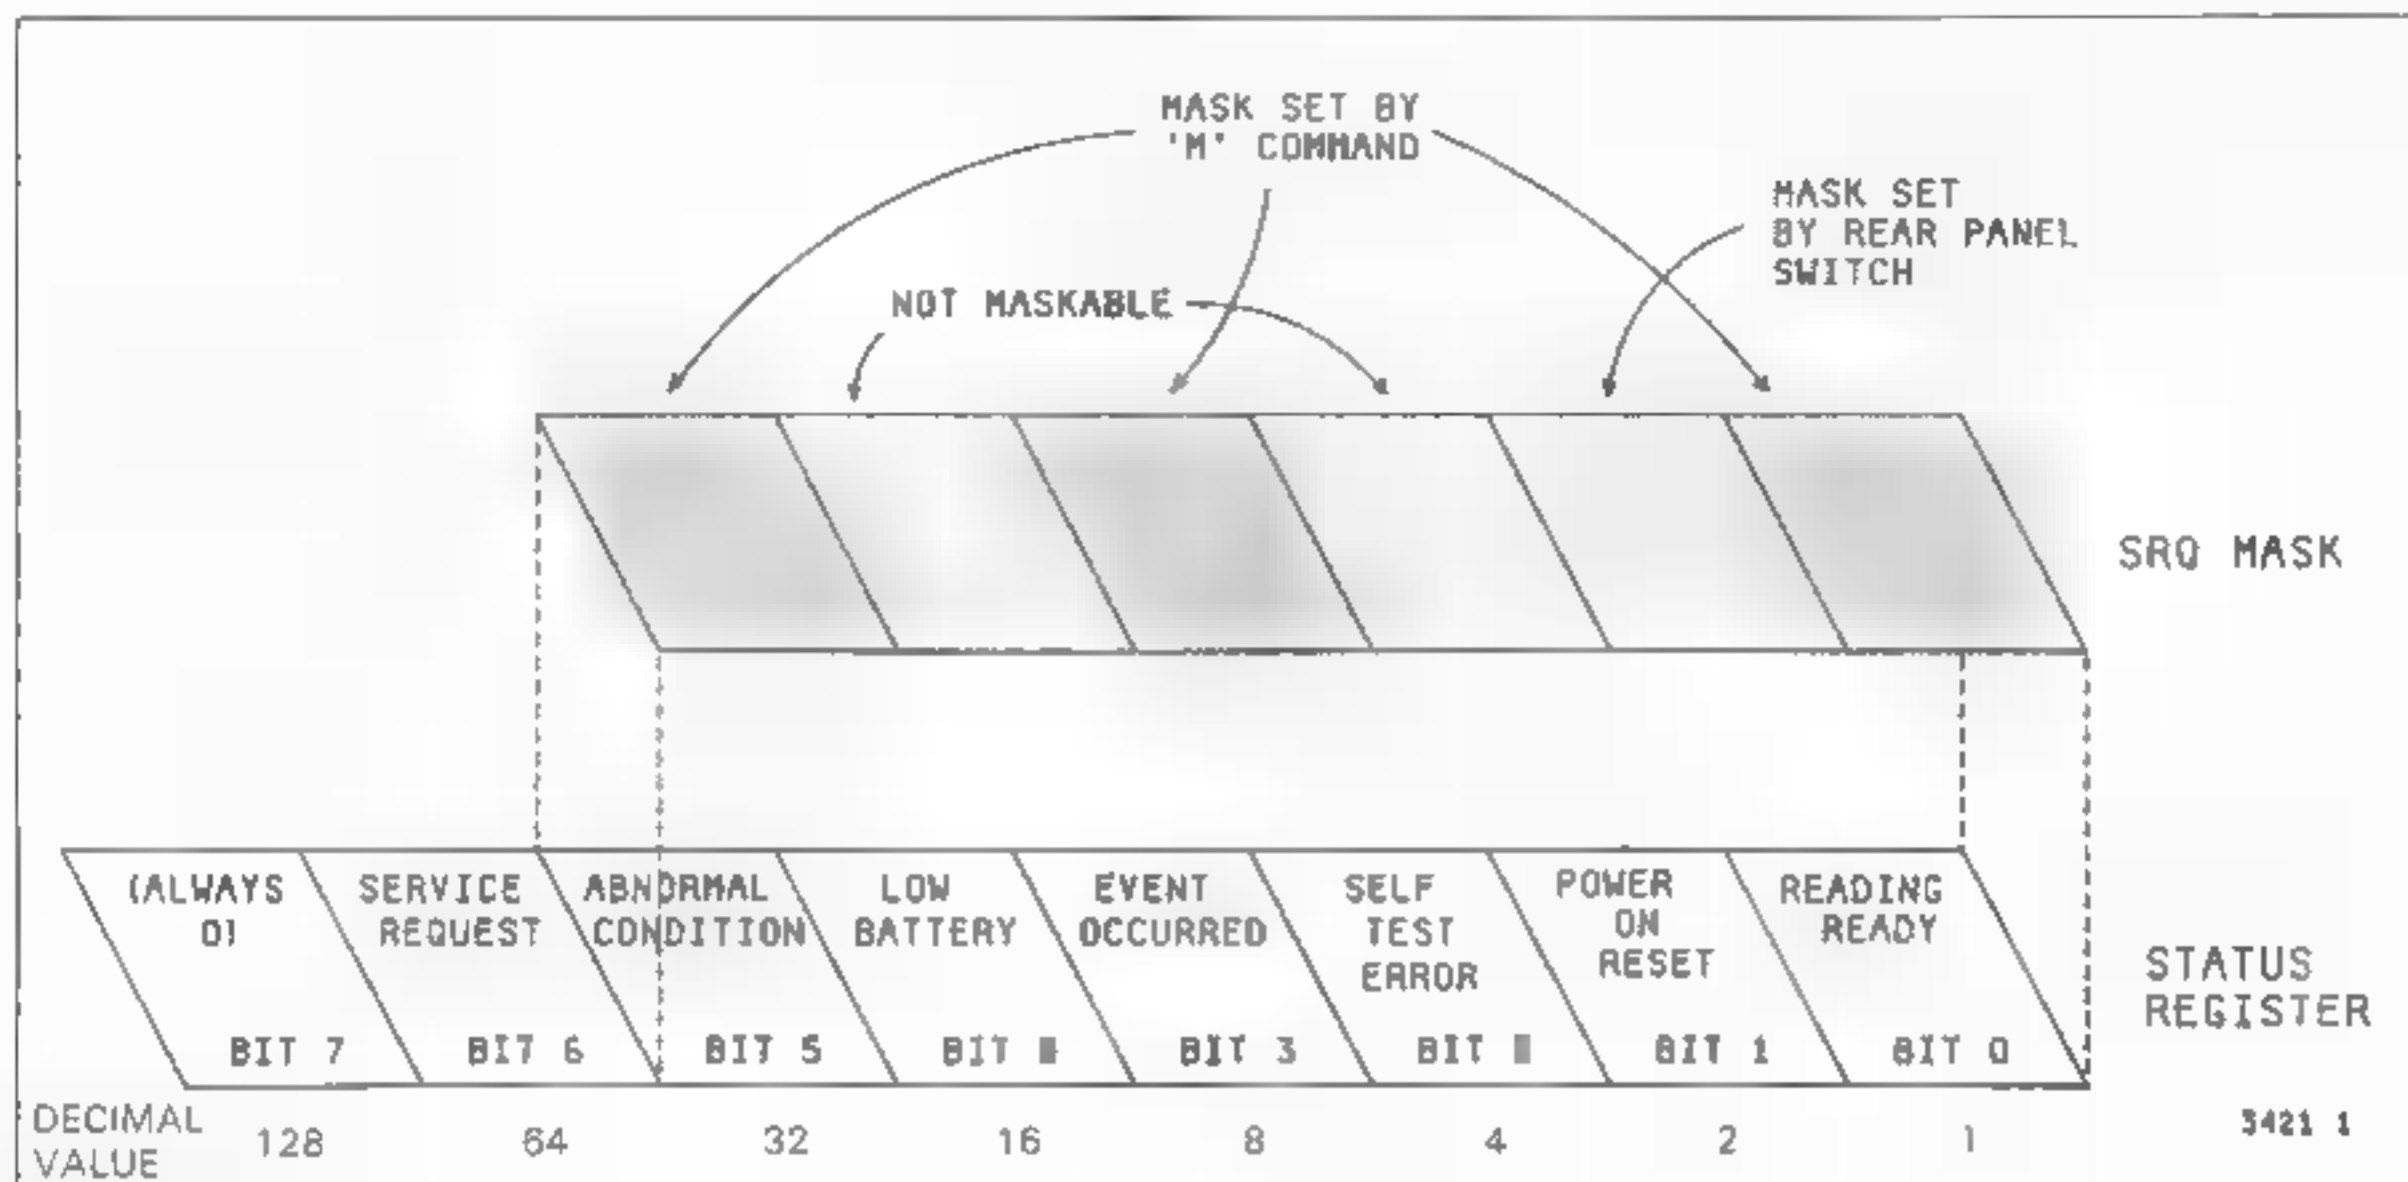

To set the SRQ mask for Event Occurred, for example, execute the command: OUTPUT 701;"M8". For either Event Occurred or Data Ready to interrupt the computer, execute: OUTPUT 701;"M9".

NOTE

When you are doing interrupt programming; especially with the digital monitor commands MN, MH, ML, and DT, the end of line sequence should be suppressed. With most -hp- desktop computers this is done with the OUTPUT USING "#,K" command. The last character in the command string must be either a colon (:), a semicolon (;), a carriage return, or a linefeed. The following program examples show how this is done.


If you are using the 3421A with its HP-IB interface, the 3421A must be placed in an 'UNLISTEN' mode before it can interrupt the controller. With most -hp- desktop computers, this is done with the SEND 7,UNL command. These lines are shown in the following examples and may be deleted if you are using the HP-IL interface.

SRQ (Cont'd)

Example 1. Event Occurred

This is a simple example that demonstrates the usefulness of the SRQ interrupt. In this example, we will use Event Occurred to monitor one bit, bit 17, of a 44465A Digital I/O assembly. When that bit goes low, the 3421A will signal the computer that the event has occurred. Event occurred, as in this example, might be used to monitor limit or position switches.

The associated illustration shows the external connections that will need to be made. Remember that the Digital I/O assembly must be slot 1 for the program to work. Type in the program and run it. After the computer displays "READY", close the switch. Notice that the program jumps down to the interrupt subroutine.

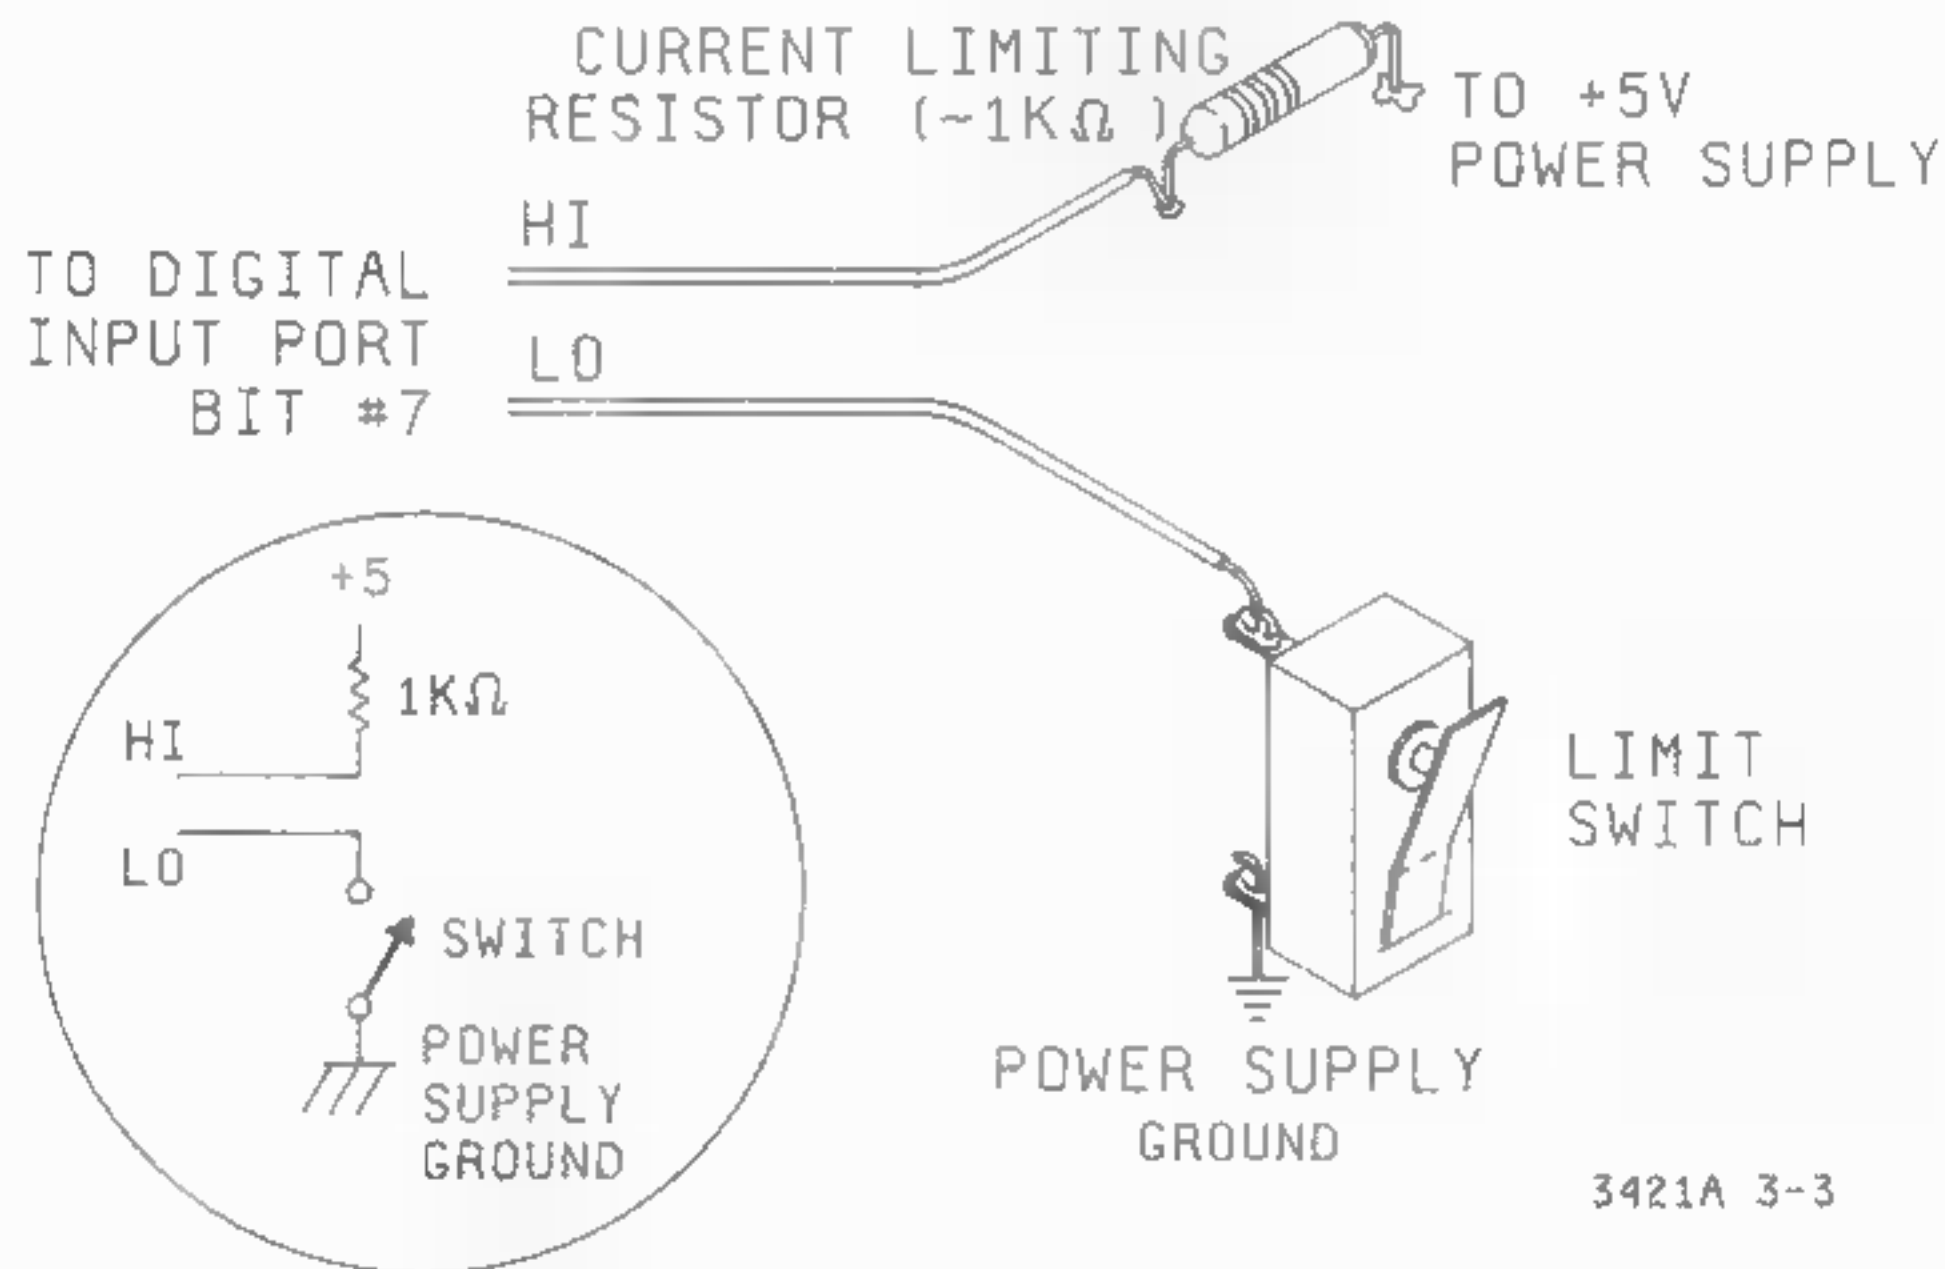

SRQ (Cont'd)

```

10 ! Event occurred example
20 ! -HP- 85 version
30 ! 3421A at address 901
40 CLEAR
50 OUTPUT 901 ; "M8:ML17"
60 SEND 7 ; UNL
70 ON INTR 9 GOTO 1000
80 ENABLE INTR 9;8
90 DISP "READY"
100 ! Mainline program goes here
980 GOTO 100
990 END
1000 ! Serial poll subroutine
1010 P=SPOLL(901)
1020 IF P=73 THEN DISP "EVENT OCCURRED"
1030 RETURN

```

Line	Description
40	Clears the display.
50	Line 50 sets the 3421A for SRQ when event occurs (M8) and for monitor when bit 17 goes low (ML17).
60	The UNListen command permits the 3421A to interrupt the computer. Note, this line is not necessary if you are using HP-IL.
70	This line tells the computer where to go when the interrupt occurs (line 1000).
80	ENABLE INTR 7;8 enables the computer to respond to the interrupt.
90-990	The main body of the program goes here.
1000	This is the start of the interrupt subroutine.
1010	SPOLL returns the value of the Status Register (the Status Byte) to variable P. It also resets bit 6 of the Status Register.
1020	P is tested to determine what caused the interrupt. Bit 6 of the Status Register should be set since an interrupt occurred. This bit has a value of 64. Bit 3 should also be set for Event Occurred. This bit has a value of 8. Also, bit 0 will be set, it has a value of 1. Together, these bits have a value of 73.
030	End of subroutine.

SRQ (Cont'd)

Example 2. Digital Trigger and Reading (Data) Ready

Data Ready is a feature of the 3421A that allows it to interrupt the controller after each completed measurement or, when used with a channel list, each group of measurements. In general, the Data Ready feature is used only with the Digital Trigger command. Digital Triggering allows the voltmeter to begin taking readings when a specified event occurs. Use the same setup as the previous example for this example.

To enable the Data Ready feature on the 3421A, you must set bit 0 in the SRQ mask. Remember that bit 0 in the status register will be true (a "1") anytime data is ready but the 3421A will not interrupt the computer unless the SRQ mask is set. The pattern for the mask would look like:

Bit #:	7	6	5	4	3	2	1	0	
Value:	0	0	0	0	0	0	0	1	sum = 1

Therefore, use the command "M1" to set the SRQ mask for data ready:

Now, whenever the 3421A has completed its measurement task it will interrupt the computer via the SRQ interrupt. Looking at it from another perspective, the computer will only be interrupted if bit 0 in the Status Register is true, meaning that data is ready. Bits 1, 3, and 5 cannot cause the interrupt because the mask was not set for those bits.

The following example demonstrates the use of the Data Ready SRQ feature.

SRQ (Cont'd)

	Line	Description
	50	This line sets up the 3421A for the measurements. Refer to the Advanced Commands at the end of this chapter for a description of the commands.
	60	This command enables the 3421A to send SRQ interrupt to the computer. Note, this line is not needed if you are using HP-IL interface.
10 ! Burst readings, digital trigger, data ready example	70	Line 70 instructs the computer where to go (line 1000) when the interrupt occurs.
20 ! -HP- 85 version		
30 ! 3421A at address 901		
40 DIM B(30)		
50 OUTPUT 901 ; "M1F1R0Z0N3LS17-17;DT7"	80	ENABLE INTR 9;8 actually enables the computer to respond to the interrupt. SRQ interrupt is octal code 8 in the -hp- 85 control register.
60 SEND 9 ; UNL		
70 ON INTR 9 GOTO 1000		
80 ENABLE INTR 9;8		
90 ! Mainline program goes here		
980 GOTO 90		
990 END	90-990	These lines are used in this example to replace the main body of your program. They should be changed accordingly.
1000 P=SPOLL(901)		
1010 IF P=65 THEN DISP "DATA READY SRQ"		
1020 FOR I=0 TO 29 STEP 1		
1030 ENTER 9901 ; B(I)		
1040 DISP "READING NO. ";I;"READING: " ;B(I)	1000	This is the start of the interrupt subroutine. SPOLL returns the value of the 3421A Status register to variable P. It also resets Bit 6 of the 3421A Status Register.
1050 NEXT I		
1060 RETURN	1010	The value of the Status Register should be 65. The only two bits that are set are bits 6 and 1 (values 64 and 1, respectively).
	1020-1050	These lines enter and display the measured DC voltages.
	1060	End of the subprogram.

SRQ (Cont'd)

One other way the program could be used is to take a burst of 30 readings from one channel. To do this, alter line 50 to read: `OUTPUT 901; "LS0-0;F1RA1Z0N3M1;DT17"`. The readings will be taken from channel 0 in this example.

Example 3. Abnormal Condition

There are several conditions which can cause bit 5 in the Status Register (abnormal condition) to be set. These are:

1. Hardware Error
2. Calibration Error
3. Command not understood; e.g., the command FR3 is not a legitimate 3421A command.
4. Can't execute the command; e.g. the command DCV25 is sent but channel 25 is a digital channel
5. Self Test failed
6. Low battery

The question arises then as to which one actually caused the interrupt. The following example shows a program which will allow you to determine the exact nature of the "Abnormal Condition." The program makes use of the SR command. This command sends 24 bytes which can tell you the exact status of the 3421A. However, we are only interested in the first 4 bytes ■ they contain the error information. The remaining 20 bytes are described in the blue pages at the end of this chapter.

SRQ (Cont'd)

	Line	Description
	40	This line outputs the SRQ mask for abnormal condition.
	50	Line 50 is used to tell the computer where to go when an interrupt occurs (line 1000).
	60	ENABLE INTR 9;8 enables the computer to respond to interrupts.
10 ! Abnormal condition example 20 ! -hp- 85 version 30 ! 3421A at address 901 40 OUTPUT 901 ;"M32" 50 ON INTR 9 GOSUB 1000 60 ENABLE INTR 9;8 70 OUTPUT 901 ;"DCV" 80 GOTO 80 90 END 1000 OUTPUT 901 ;"SR" 1010 ENTER 901 ; A,B,C,D 1020 DISP "STATUS REGISTER VALUE: ";A 1030 DISP "ERROR BYTE VALUE: ";B 1040 DISP "HARDWARE ERROR BYTE: ";C 1050 DISP "CALIBRATION ERROR VALUE: ";D 1060 RETURN	70	DCV is a legitimate 3421A command. Therefore there will be no interrupt. Replace this command with FR3 and rerun the program.
	80-90	The body of the program goes here.
	1000	This is the first line of the interrupt subprogram. The "SR" command is used to tell the 3421A to send it status information.
	1010	The values of the first 4 registers are entered into the computer and stored into variables A, B, C, D.
	1020-1050	The values for the registers are displayed along with the register name.
	1060	This line causes the program control to return to where it was interrupted.

Line 70 in the program contains the command "DCV". This is a legitimate 3421A command. Therefore, since there is no abnormal condition the interrupt will not occur. Now replace the DCV command with the command "FR3" and rerun the program. FR is not a legitimate command so an abnormal condition will exist. However, the 3421A will assume the R3 range. Compare the 4 values returned by the program to the charts below. Remember that the value returned is the sum of the values of the individual bits that are set.

SRQ (Cont'd)

The four registers will be cleared after all four have been read by the ENTER command. The following chart shows the meaning of each bit in the registers and its value. Remember that the decimal value returned is the sum of the values of the individual bits that are set within that register. There are actually 24 registers that can be read with the SR command, the remaining 20 are 3421A status registers. These can be used to report what option assemblies are available in the 3421A, which channels are closed, the setting of the SRQ, XOR, and AND masks, etc. Refer to the blue pages at the end of this chapter.

Register	Number							
	7	6	5	4	3	2	1	0
1 Status Register	Always 0	SRQ	Abnormal Condition	Low Battery	Event Occurred	Self Test Error	Power-on Reset	Data Ready
2 Error Register	Undef- ined. May be 1 or 0	Tried to load channel list with more than 30 channels	Channel list is empty but tried to execute a T3	Battery is low but tried to do TOT,MN, MH, ML	Wrong type of option for com- mand	Invalid Syntax	No Data ready but Ad- dressed to talk	Func. F0 asserted but trig- gered
3 Hardware Error	10 MΩ test error	RAM Error	RAM Error	μP RAM Error	A/D Error	ROM 0 Error	ROM 1 Error	Cal. RAM Check- sum Error
4 Cal Error	Undef- ined. may be 1 or 0	A/D Error	CAL RAM Bad	CAL at- tempted but not enabled	Invalid CAL Zero	Invalid CAL Signal	Invalid CAL Number	Invalid CAL Function or Range
Bit Value	128	64	32	16	8	4	2	1

SPOLL (Serial POLL)

Example

HP-IL	HP-IB	
P = SPOLL (901)	P = SPOLL (709)	(-hp- 85,9826A)
	STATUS 709;P	(-hp- 9835,9845A/B)

Comments

Serial Poll allows you to determine the current status of the 3421A. When the 3421A receives the Serial Poll message, it returns its Status Byte (from the Status Register). The value returned is the sum of the individual bits that are set. For example, if bits 6 and 1 are set the value would be 66 ($64 + 2 = 66$). The 8 bits of the Status Byte and their respective values are shown in the following figure. All of these bits were described in the previous section, Require Service.

	Bit 7 N/A Always 0	Bit 6 SRQ	Bit 5 Abnormal Condition	Bit 4 Low Battery	Bit 3 Event Occurred	Bit 2 Self Test Error	Bit 1 Power/on Reset	Bit 0 Data Ready
Decimal Value	128	64	32	16	8	4	2	1

Status Byte (Register)

All Status Register bits are reset by a Device Clear message. Bits 1, 2, 3, and 5 are cleared by a SPOLL if bit 6 was set. If bit 6 was a 0, indicating that the 3421A was not generating the interrupt, no bits are changed. Bit 4 is cleared only by turning the line switch off and back on again. Bit 1 is cleared by entering the current reading to the computer.

TRIGGER

Example

HP-IL	HP-IB
TRIGGER 9	TRIGGER 7
TRIGGER 901	TRIGGER 709

Comments

If the 3421A is an addressed listener, the TRIGGER statement will cause the voltmeter to take one or more readings. For example, if scan trigger (T3) or hold/enable scan trigger (T0) is asserted, the TRIGGER command will initiate measurements sequentially from the channel list.

If internal trigger T1 is asserted, no measurements will be taken by the voltmeter until either the TRIGGER command is executed, a reading is asked for (i.e., ENTER901;A) or T2 is asserted.

The software trigger T2 will cause one reading to be taken. Subsequent readings can be initiated by either TRIGGER or sending T2.

Neither T1 or T2 will open or close ■ channel before taking the reading.

Topics In Advance Programming

The following two programs illustrate the flexibility and measurement power of the 3421A. The programs include temperature measurements using either thermistors or thermocouples. Although the programs were developed on an -hp- 85 desktop computer with an HP-IL interface, they can easily be modified to run on other computers. In some cases, suggestions are made for modifying the programs to suit your individual needs.

TEMPERATURE MEASUREMENTS

Thermistor

This first program computes the temperature, in °C, corresponding to the resistance of a thermistor. The program is designed to work with thermistors exhibiting a resistance of 5.000 kOhms at 25 °C, such as a type 44007 (-hp- part number 0837-0164) or equivalent.

The program gives you the option of selecting either 2- or 4-wire ohms measurements to be made on the thermistor. As it stands, the program sets the 3421A for a 2-wire measurement. This will give suitable results if the thermistor is used at a temperature where its resistance is much greater than the resistance of the connecting leads. For greatest accuracy from a thermistor, ■ 4-wire measurement should be used. To convert the program to ■ 4-wire measurement, delete the exclamation mark from line 80 and make line 70 a comment statement.

The program will prompt for a channel number (lines 60 and 70), type in one channel number and press [END LINE]. The program will continually make measurements on that one channel, convert the reading to °C and display the temperature.

```
10 ! Temperature measurements
20 ! with a type 44007 thermistor
30 ! -HP- 85 version
40 ! 3421A at address 901
50 DISP "CHANNEL NUMBER?"
60 INPUT C
70 OUTPUT 901 ; "TWO"; C
80 ! OUTPUT 901 ; "FOUR"; C
90 Q3=.0000000941
100 Q2=.00023595
110 Q1=.001286
120 ENTER 901 ; B
130 Q4=LOG(B)
140 P=1/(Q1+Q4*(Q2+Q4*Q4*Q3))-273.15
150 DISP P
160 GOTO 70
170 END
```

Lines	Description
50-60	These two lines get the channel number.
70-80	Line 70 sets the 3421A up for a 2-wire resistance measurement on the thermistor. Line 80 can be used for 4-wire resistance measurements.
90-110	These three lines contain the conversion coefficients for the 44007 thermistor.
120	Line 120 enters the measured resistance from the 3421A.
130-140	These two lines convert the measured resistance to the corresponding temperature.
150	The calculated temperature is displayed.
160	The GOTO 70 statement returns the program to line 70 for another measurement.

TEMPERATURE MEASUREMENTS (Cont'd)

Thermocouple

The TEM command can be used for temperature measurements as long as you use T-type thermocouples. But what if you want to use other types of thermocouples? This next program example demonstrates the procedure for making thermocouple temperature measurements. Although the program was written specifically for J-type thermocouples, it can easily be adapted for other types simply by changing the conversion coefficients. A chart is provided listing the coefficients for several thermocouples. In this example program, the J-type thermocouple is connected to channel 17.

There are five steps that must be performed in making accurate temperature measurements from thermocouples. The following explanation of these steps are referenced to line numbers in the program.

1. Lines 190 and 200. Measure the temperature of the 44462A assembly terminal block. This is done with the REF command and is known as the REFERENCE Temperature. The Reference Temperature is used to effect icepoint compensation of the thermocouple measurement.

2. Line 210. Convert the Reference Temperature to ■ thermocouple reference voltage. The coefficients used in this step are determined by the type of thermocouple being compensated. The equation used is: $V = R0 + (Tref * R1) + (Tref^2 * R2)$. In this equation, Tref is the Reference temperature and R0, R1, and R2 are the conversion coefficients. Later in this section, a chart is provided listing the coefficients for various thermocouples.

3. Lines 230 and 240. Measure the thermocouple voltage.

4. Line 250. Add the Reference voltage to the measured thermocouple voltage.

5. Line 260. Convert the sum voltage (step 4) to its corresponding temperature (Degrees C). Line 270 is used to round the computed temperature to 2 decimal places. The equation used in line 260 is:

$$\text{Temperature} = P0 + (V * P1) + V^2 * P2 + (V^3 * P3) + (V^4 * P4) + \dots + (V^9 * P9)$$

In this equation, V is the voltage computed in step 4. The coefficients P0 through P9 are listed in the chart for various thermocouples.

TEMPERATURE MEASUREMENTS (Cont'd)

```

10 ! J-type thermocouple program
20 ! -HP- 85 version
30 ! 3421A at address 901
40 ! conversion coefficients
50 R0=-.00000075
60 R1=.00005053
70 R2=.000000023
80 P0=-.36
90 P1=19750.9
100 P2=-175117
110 P3=182119297
120 P4=-2831128000
130 P5=271508380000
140 P6=-1.38014121E13
150 P7=3.79243843E14
160 P8=-5.3719255E15
170 P9=3.0840254E16
180 ! Measure and convert reference
190 OUTPUT 901 ;"REF17"
200 ENTER 901 ; R
210 V1=R0+R*(R1+R*R2)
220 ! Measure and convert thermocouple voltage
230 OUTPUT 901 ;"DCV17"
240 ENTER 901 ; V
250 V=V+V1
260 T1=P0+V*(P1+V*(P2+V*(P3+V*(P4+V*(P5+V*(P6+V*(P7+V*(P8+V*P9))))))
270 T=INT(T1*100+.5)/100
280 DISP "TEMPERATURE = ";T
290 GOTO 190
300 END


```

Thermocouple Type

Line Number	J	E	R	I	S
50	-7.5E-7	1.2E-7	-2.1E-7	-8.2E-7	-2.0E-7
70	2.3E-8	4.5E-8	1.2E-8	1.6E-8	1.1E-8
60	5.053E-5	5.866E-5	5.334E-6	3.964E-5	5.442E-6
170	3.0840254E16	1.2777466E15	1.9280744E19	1.3828514E16	8.2663728E18
160	-5.3719255E15	-4.1055295E14	-2.9235505E18	-3.3991028E15	-2.8874849E18
150	3.79243843E14	5.3981272E13	1.7414495E17	3.4782347E14	2.0689294E17
140	-1.38014121E13	-3.7221944E12	-5.4842602E15	-1.9109E13	-6.79267949E15
130	2.7150838E11	1.4284958E11	1.01396299E12	6.0392855E11	1.2361123E14
120	2.831128E9	-2.9690242E9	-1.13982593E12	-1.0820624E10	-1.327040E12
110	1.821297E7	3.049432E7	7.787787E9	9.9661057E7	8.477335E9
100	-1.75117E5	-2.05411E5	-3.27669E7	-3.82662E5	-3.26257E7
90	1.97509E4	1.61299E4	1.726456E5	2.48503E4	1.73545E5
80	-3.6E1	2.1E-1	-1.5E0	-5.1E-2	-1.4E0

COMMAND DIRECTORY

This command table for the 3421A is divided into two groups, first the Standard Commands and second the Advanced Commands. The Standard Commands are arranged by command group: VOLTMETER, TEMPERATURE, COUNTER, DIGITAL, and CHANNEL. Refer to chapters 5 and 6 in this manual for more information on channel addressing, etc. The Advanced Commands are also arranged by function: A/D (voltmeter, counter), DIGITAL, CHANNEL, and INSTRUMENT. The following format is used to describe the commands.

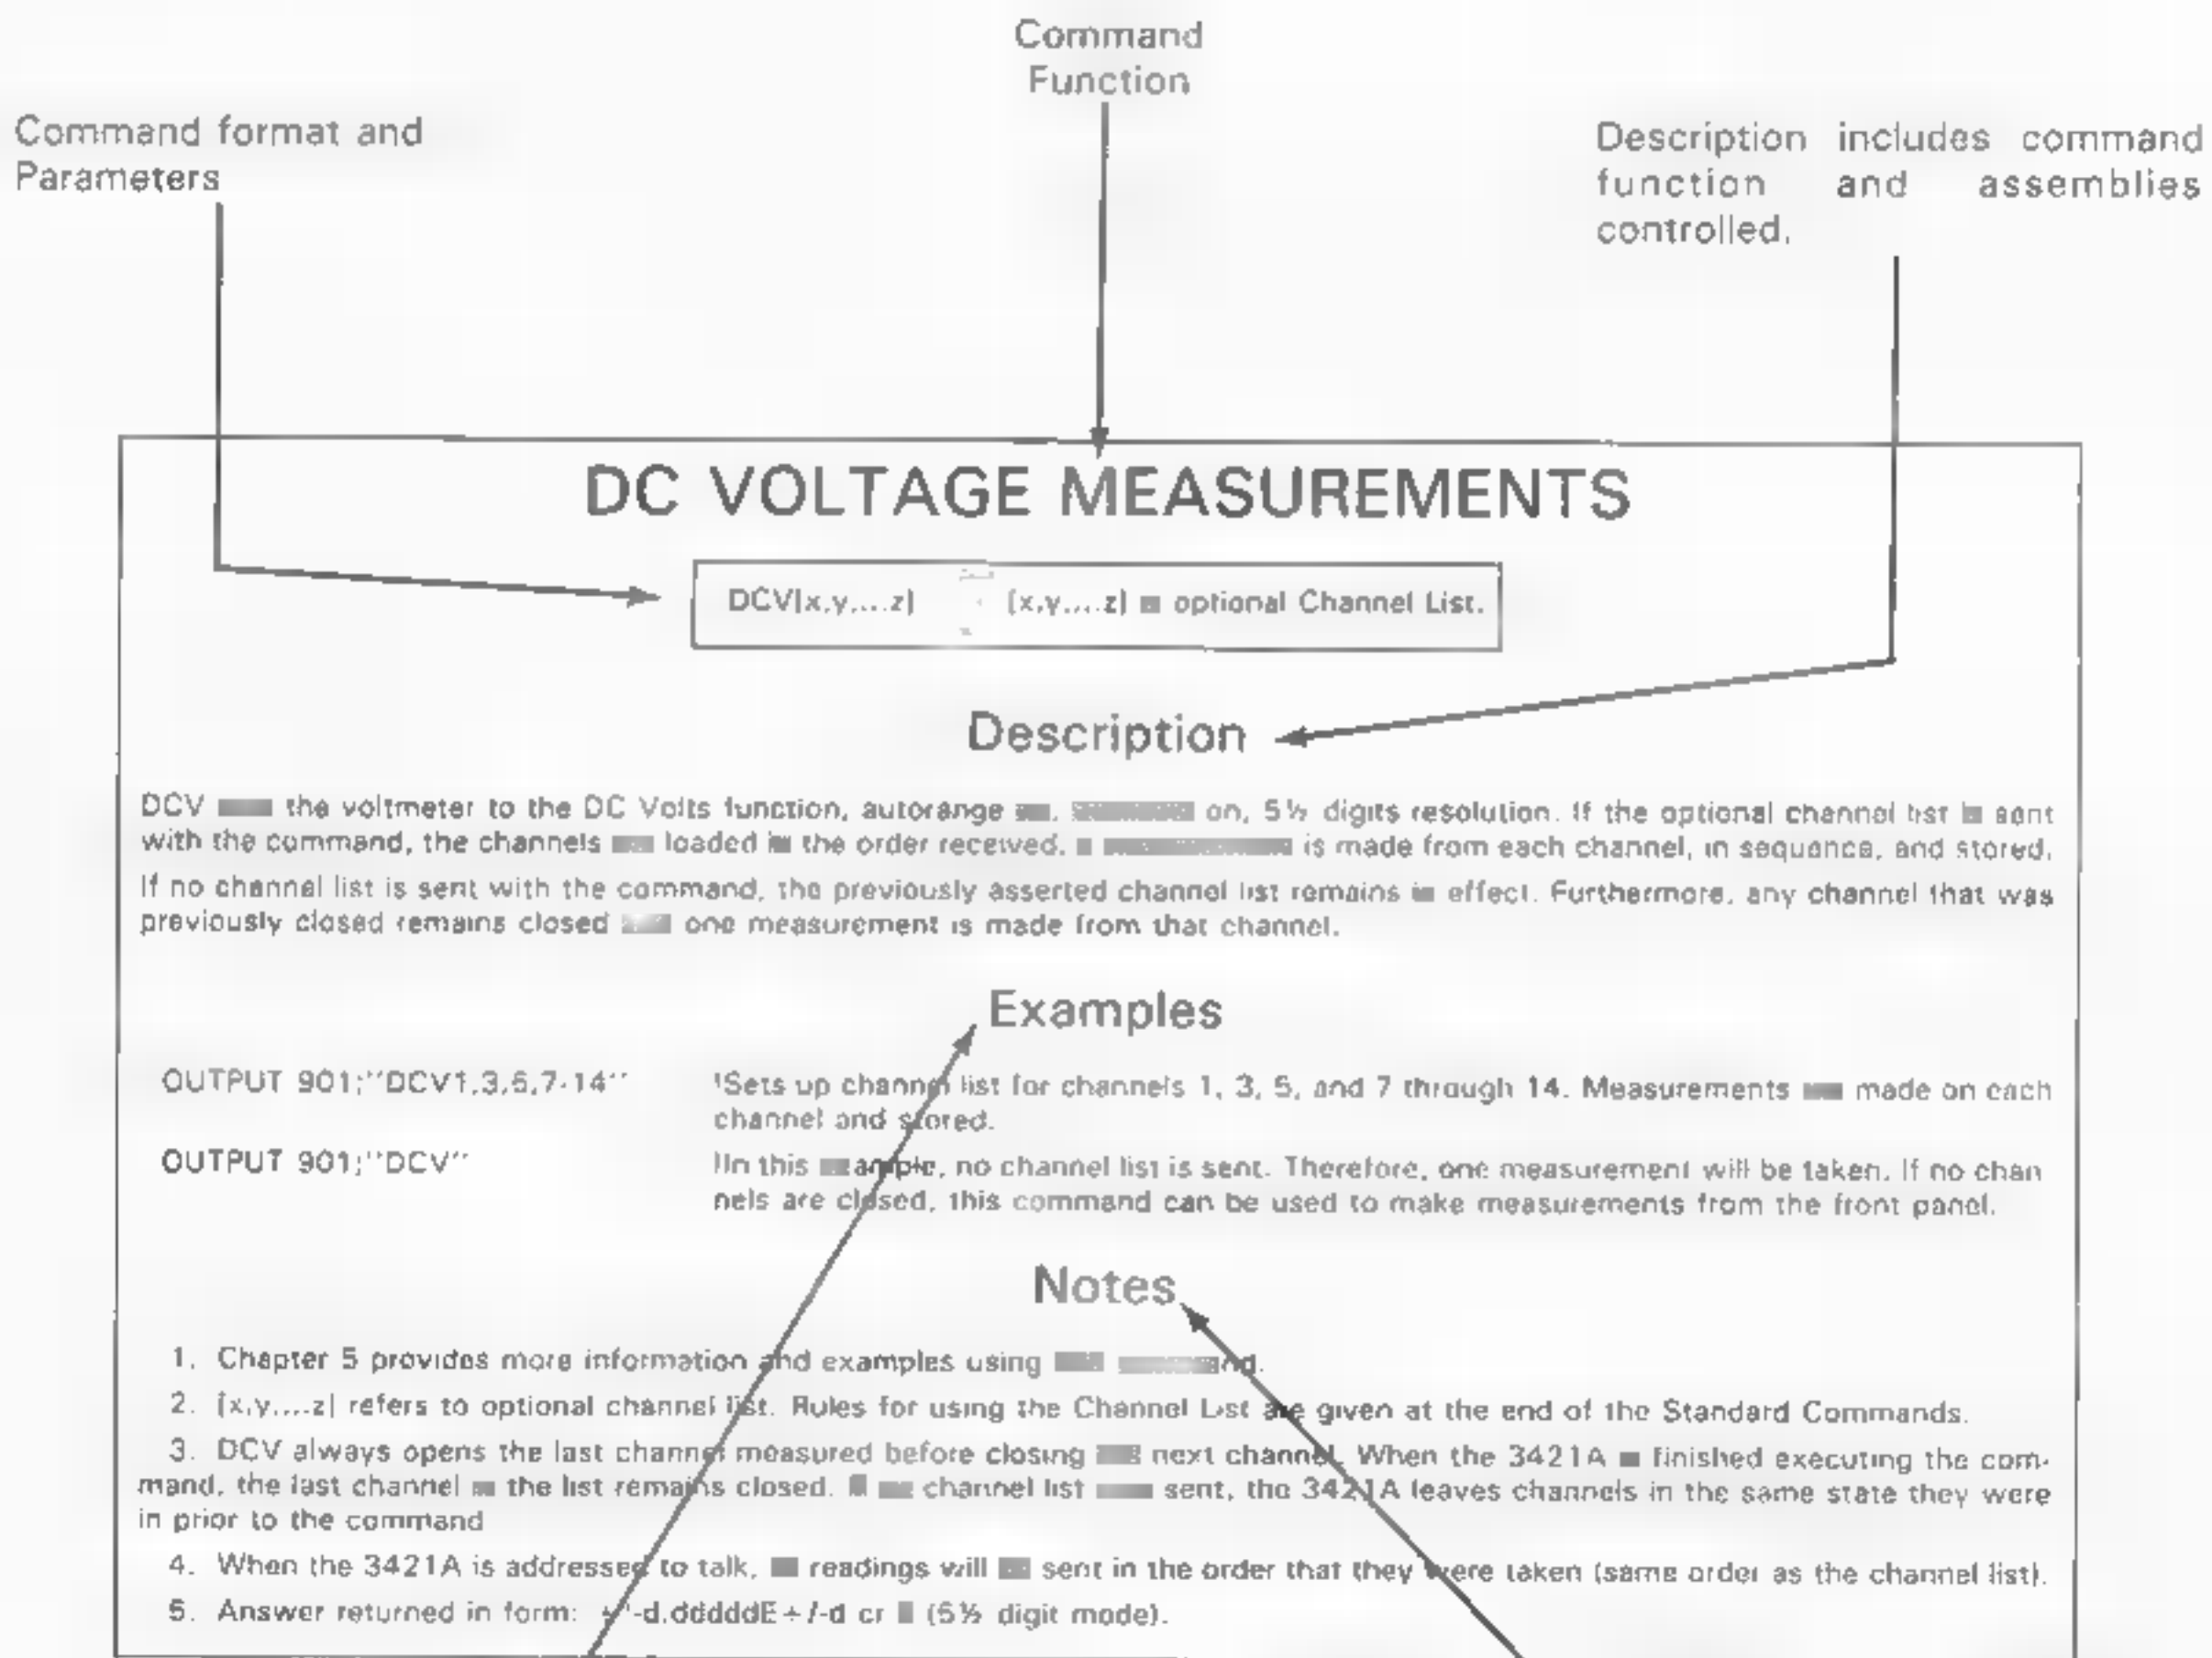

Examples are typical BASIC language statements with 3421A at HP-IL address 901.

Notes include power-on state, where to look for more information, and special operating notes.

DC VOLTAGE MEASUREMENTS

DCV[x,y,...z] [x,y,...z] is optional Channel List.

Description

DCV sets the voltmeter to the DC Volts function, autorange on, autozero on, 5½ digits resolution. If the optional channel list is sent with the command, the channels are loaded in the order received, a measurement is made from each channel, in sequence, and stored. If no channel list is sent with the command, the previously asserted channel list remains in effect. Furthermore, any channel that was previously closed remains closed and one measurement is made from that channel.

Examples

OUTPUT 901;"DCV1,3,5,7-14" !Sets up channel list for channels 1, 3, 5, and 7 through 14. Measurements are made on each channel and stored.

OUTPUT 901;"DCV" !In this example, no channel list is sent. Therefore, one measurement will be taken. If no channels are closed, this command can be used to make measurements from the front panel.

Notes

1. Chapter 5 provides more information and examples using this command.
2. [x,y,...z] refers to optional channel list. Rules for using the Channel List are given at the end of the Standard Commands.
3. DCV always opens the last channel measured before closing the next channel. When the 3421A is finished executing the command, the last channel in the list remains closed. If no channel list was sent, the 3421A leaves channels in the same state they were in prior to the command.
4. When the 3421A is addressed to talk, all readings will be sent in the order that they were taken (same order as the channel list).
5. Answer returned in form: +/-d.dddddE +/-d cr lf (5½ digit mode).

AC VOLTAGE MEASUREMENTS

ACV[x,y,...z] [x,y,...z] is optional channel list.

Description

ACV sets the voltmeter to the AC Volts function, autorange on, autozero on, 4½ digits resolution. If the optional channel list is sent with the command, the channels are loaded in the order received, a measurement is made from each channel, in sequence, and stored. If no channel list is sent with the command, the previously asserted channel list remains in effect. Furthermore, any channel that was previously closed remains closed and one measurement is made from that channel.

Examples

OUTPUT 901;"ACV5,1-3,21,22" !Sets up channel list as: 5, 1, 2, 3, 21, and 22. Measurements are made on each channel and stored.

OUTPUT 901;"ACV" !In this example, no channel list is sent. Therefore, one measurement will be taken. If no channels are closed, this command can be used to make measurements from the front panel.

Notes

1. Chapter 5 provides more information and examples using this command.
2. [x,y,...z] refers to optional channel list. Rules for using the Channel List are given at the end of the Standard Commands.
3. ACV always opens the last channel measured before closing the next channel. When the 3421A is finished executing the command, the last channel in the list remains closed. If no channel list was sent, the 3421A leaves channels in the same state they were in prior to the command.
4. When the 3421A is addressed to talk, all readings will be sent in the order that they were taken (same order as the channel list).
5. Answer returned in form: +/-d.dddddE +/-d cr lf

2-WIRE RESISTANCE MEASUREMENTS

TWO[x,y,...z] [x,y,...z] is optional channel list.

Description

TWO sets the voltmeter to the 2-wire resistance function, autorange on, autozero on, 5 1/2 digits resolution. If the optional channel list is sent with the command, the channels are loaded in the order received, a measurement is made from each channel, in sequence, and stored. Refer to T3 in Advanced Commands.

If no channel list is sent with the command, the previously asserted channel list remains in effect. Furthermore, any channel that was previously closed remains closed and one measurement is made from that channel. Refer to T2 in the Advanced commands.

Examples

OUTPUT 901;"TWO1,3,5,7-14" !Sets up channel list for channels 1, 3, 5, and 7 through 14. Measurements are made on each channel and stored.

OUTPUT 901;"TWO" !In this example, no channel list is sent. Therefore, one measurement will be taken. If no channels are closed, this command can be used to make measurements from the front panel.

Notes

1. Refer to Chapter 5 for more information and examples.
2. [x,y,...z] refers to optional channel list. Rules for using the Channel List are given at the end of the Standard Commands.
3. TWO always opens the last channel measured before closing the next channel. When the 3421A is finished executing the command, the last channel in the list remains closed. If no channel list was sent, the 3421A leaves channels in the same state they were in prior to the command.
4. When the 3421A is addressed to talk, all readings will be sent in the order that they were taken (same order as the channel list).
5. Answer returned in form: +/-d.dddddE +/-d or If

4-WIRE RESISTANCE MEASUREMENTS

FWO[x,y,...z] [x,y,...z] is optional channel list.

Description

FWO sets the voltmeter to the 4-wire resistance function, autorange on, autozero on, 5 1/2 digits resolution. If the optional channel list is sent with the command, the channels are loaded in the order received, a measurement is made from each channel, in sequence, and stored.

If no channel list is sent with the command, the previously asserted channel list remains in effect. Furthermore, any channel that was previously closed remains closed and one measurement is made from that channel.

Examples

OUTPUT 901;"FWO0-9" !Sets up channel list of channels 0 through 9. Channels 10 through 19 will also be used. Measurements are made in channel pairs and stored.

OUTPUT 901;"FWO" !In this example no channel list is sent. Therefore, one measurement will be taken. If no channels are closed, this command can be used to make measurements from the front panel.

Notes

1. Refer to Chapter 5 for more information and examples.
2. [x,y,...z] refers to optional channel list. Rules for using the Channel List are given at the end of the Standard Commands.
3. Ideally [x,y,...z] should be on the same slot; i.e. addresses 0-9, 10-19, or 20-29. Each channel in the channel list is automatically paired with [x + 10, y + 10, ..., z + 10] unless [x,y,...z] are between 20 and 29. In this case they are paired with [x-20,y-20,...z-20]. Channel pairs are closed simultaneously. Use caution therefore and know which channels you will be closing.
4. FWO always opens the last channel or pair of channels measured before closing the next two channels. When the 3421A is finished executing the command, the last channel in the list remains closed. If no channel list was sent, the 3421A leaves channels in the same state they were in prior to the command.
5. When the 3421A is addressed to talk, all readings will be sent in the order that they were taken (same order as the channel list).
6. Answer returned in form: +/-d.dddddE +/-d or If

TEMPERATURE MEASUREMENTS

TEM[x,y,...z] [x,y,...z] is optional channel list.

Description

TEM is used to take temperature measurements from T-type thermocouples only. A software reference junction compensated conversion is made. The answer returned to the calculator is in degrees C with 5½ digit resolution.

If no channel list is sent with the command, the previously asserted channel list remains in effect. Furthermore, any channel that was previously closed remains closed and one measurement is made from that channel.

Examples

OUTPUT 901;"TEM1,3,5,7-14"

!Sets up channel list for channels 1, 3, 5, and 7 through 14. Measurements are made on each channel and stored.

OUTPUT 901;"TEM"

!In this example, no channel number is sent. Therefore, the measurement will be made from whatever multiplexer channel is closed. If no channels are closed, the command can be used to make measurements from the front panel.

Notes

1. Refer to Chapter 5 for more information and examples.
2. [x,y,...z] refers to optional channel list. Rules for using the Channel List are given at the end of the Standard Commands.
3. The REFERENCE temperature will be taken on the **REF** option board as the channel specified. If no channels are specified, the REFERENCE temperature measurement will be made on the 44462A assembly that has a multiplexer channel closed. If there are no multiplexer channels closed, the REF measurement will be made from the 44462A assembly in the lowest numbered slot. If there are no 44462A assemblies, an error will be generated.
4. TEM always opens the last channel measured before closing the next channel. When the 3421A is finished executing the command, the last channel in the list remains closed. If no channel list was sent, the 3421A leaves channels in the same state they were in prior to the command.
5. When the 3421A is addressed to talk, all readings will be sent in the order that they were taken (same order as channel list).
- . Answer in degrees C is returned in form: +/-d.dddddE +/-d or If

REFERENCE MEASUREMENT

REF[x] [x] ■ optional channel number.

Description

REF is used to determine the temperature of the reference junction ■ the 44462A assembly where channel [x] is located. If channel [x] is not sent, the measurement will be taken from any 44462A assembly where a multiplexer channel is closed. If there are no 44462A assemblies with a closed channel, the REF measurement will be made from the 44462A assembly with the lowest slot number. If there are no 44462A assemblies, an error will result. The answer returned by REF is in degrees C. Refer to chapter 5 for more information.

Examples

10 OUTPUT 901;"REF1"

!Makes a reference junction temperature measurement on 44462A assembly in slot 0.

20 ENTER 901;A

!Answer returned is ■ degrees C.

Notes

1. Refer to Chapter 5 for more information on REFERENCE and TEMPERATURE measurements. Also, there are examples in Chapters 3 and 4 using the REF command for thermocouple measurements.
2. [x] is an optional channel number.
3. The state of the 3421A changes to REFERENCE function (F5), autozero on, software trigger (T2) and 4½ digit resolution.

FREQUENCY MEASUREMENTS

FRQ[x,y,...z] [x,y,...z] is optional channel list.

Description

FRQ is used to set the 3421A for frequency measurements with a 1 second gate time and 5 digit resolution. If the optional channel list is sent, the channels are loaded in the order received, a measurement is made on each channel in sequence, and stored.

If no channel list is sent with the command, the previously asserted channel list remains in effect. Furthermore, any channel that was previously closed remains closed and one measurement is made from that channel.

Examples

OUTPUT 901;"FRQ1,3,5,7-14" !Sets up channel list for channels 1, 3, 5, and 7 through 14. Measurements are made on each channel and stored.

OUTPUT 901;"FRQ" !In this example, no channel list is sent. Therefore, the measurement will be made from any multiplexer channel that is closed. If no channels are closed, the command can be used to make measurements from the front panel.

Notes

1. Refer to chapter 5 for more information and examples.
2. [x,y,...z] refers to optional channel list. Rules for using the Channel List are given at the end of the Standard Commands.
3. FRQ always opens the last channel measured before closing the next channel. When the 3421A is finished executing the command, the last channel in the list remains closed. If no channel list was sent, the 3421A leaves channels in the same state they were in prior to the command.
4. When the 3421A is addressed to talk, all readings will be sent in the order that they were taken (same order as the channel list).

TOTALIZE COUNTER

TOT[x] [x] is optional channel number.

Description

The TOTAlize function is used to count events (totalize). If a channel is sent, the 3421A opens all other multiplexer channels, closes the specified channel, zeros the counter and starts counting. Maximum count is 65,535. If a channel is not specified, then no channels are changed. If the 3421A is addressed to talk, it will send the current subtotal without interrupting the totalizer. IMPORTANT: The TOT command remains in effect until another command is received by the 3421A causing it to change states.

Example

10 OUTPUT 901;"TOT3" ! The TOTAlize function is commenced on channel 3.
20 WAIT 1000
30 ENTER 901,A ! The current subtotal is entered into variable A.

Notes

1. Refer to Chapter 5 for more information and examples.
2. [x] is an optional channel number, if no channel is specified, the TOT function is executed with no channels changing state.
3. If [x] is not a multiplexer channel, an error will occur.

READ DIGITAL INPUTS (8-bit word)

REDi "i" specifies the slot number to read from.

Description

REDi is used to read the digital input word (8-bits) from the 44465A Digital I/O assembly in slot "i". The answer returned by the 3421A is a decimal number (0 to 255) which is equal to the sum of the values of the individual bits that are set. Refer to the bit value chart and to Chapter 6.

Bit #	7	6	5	4	3	2	1	0
Value	128	64	32	16	8	4	2	1

Bit Value Chart

Examples

OUTPUT 901;"RED1" ! Read the digital word from the 44465A assembly in slot number 1.
ENTER 901;A ! The value A is the sum of the values of the set bits.

For example, if A = 173 then bits 7, 5, 3, 2, and 0 were set ($128 + 32 + 16 + 4 + 1 = 173$). This means that the input port looks like:

1 0 1 0 1 1 0 1

Notes

1. Refer to Chapter 6 for more information and examples.

DIGITAL WRITE

WRTi,abc "i" specifies the slot number to write to. abc is a decimal value (0 to 255) to be sent to board.

Description

The WRT command is used to write a digital word ([abc]) to the 44465A Digital I/O assembly output port in slot "i". The value [abc] is the sum of the values of the bits to be set. Refer to the bit value chart.

Bit #	7	6	5	4	3	2	1	0
Value	128	64	32	16	8	4	2	1

Bit Value Chart

Examples

OUTPUT 901;"WRT0,7" ! This command would result in turning on switches 0, 1, and 2 on the 44465A assembly in slot 0.

Notes

1. Refer to Chapter 6 for more information and examples.

READ DIGITAL INPUT BIT

BITx[,y,...z] x is a mandatory bit, [,y,...z] is optional bit list.

Description

The BITx command reads the digital input bit specified by x. The 3421A will return a value of +0.000E+0 if the bit value is low, or a +1.000E+0 if the bit value is high. A bit list, similar to a channel list can be set up. Refer to Chapter 6 for more information.

Example

OUTPUT 901;"BIT15" ! The 6th bit in slot 1 is read. Bits are numbered from 0 to 7.
ENTER 901;A ! The variable A contains the value the bit, either 0 or 1.

Notes

1. Digital bits are numbered: 0-7, 10-17, 20-27. Numbers 08, 09, 18, 19, 28, and 29 are not valid digital bit numbers.
2. Refer to Chapter 6 for more information and examples.
3. Errors are sent as: -8.888E+8
4. Do not use T1 or T2 with the BIT command.

CLOSE SINGLE CHANNEL, RELAY, OR BIT

CLSx x is mandatory

Description

Upon receipt of the CLSx command, the 3421A will determine the type of channel located at address "x". The following chart describes what will transpire, depending on the type of channel at the specified address:

Actuator—Closes actuator relay at address "x". Legal actuator channel numbers are (if so configured): 00, 01, 10, 11, 20, and 21.

Multiplexer—Opens all multiplexer channels then closes channel "x".

Digital—Sets bit "x". Legal Bit addresses are: 00-07, 10-17, and 20-27.

Non-existent—Cannot comply error asserted (see SPOLL) and no channels change.

Example

OUTPUT 901;"CLS05"

!This command would close channel or set bit 5 depending on what type of option assembly is plugged into slot 0.

Notes

1. Refer to Chapter 5 and 6 for more information and examples.
2. CLS5 is the same as CLS05.

CLOSE CHANNEL PAIRS

CLPx x is a mandatory value.

Description

The CLPx command first causes all multiplexer channels to be opened and then closes channels x and x + 10. If channel x is between 20 and 29, then channels x and x-20 will be closed. If either x or its pair is not a multiplexer channel, the cannot comply error will be asserted (see SPOLL) and no channels change state.

Example

OUTPUT 901;"CLP3"

! Channels 3 and 13 will be closed.

OUTPUT 901;"CLP23"

! Channels 23 and 3 will be closed.

Notes

1. Refer to Chapter 5 for more information and examples.

OPEN CHANNEL

OPN[x] x is an optional value.

Description

Upon receipt of the OPN command, the 3421A first determines what type of channel is specified by "x" and then performs the following:

"x" not sent—All channels (multiplexer, actuator, switches (see UC command) opened and all digital output bits cleared.

Actuator—opens relay.

Multiplexer—Opens channel. If that channel had been closed with a pair (CLP command) its pair would also be opened. For example, if you sent CLP3, then channels 3 and 13 would be closed. If you then sent OPN 3 or OPN 13 then both channels 3 and 13 would be opened.

Digital—Clears bit "x".

Switch—(those relays closed by the UC command), opens relay "x".

"x" non-existent—No channels change, cannot comply error asserted (see SPOLL).

Example

OUTPUT 901;"OPN3"

! Opens channels 3 (or clears bit 3) If Channel 3 was closed with a pair (either channel 13 or 23), that channel would also be opened.

Notes

1. Refer to Chapters 5 and 6 for more information and examples.

CHANNEL LIST

The series of channels specified in a channel list must follow these rules:

1. The default channel list (asserted at power on or reset) is all multiplexer channels in numerical sequence. The channel list can be loaded with multiplexer channels by the DCV, ACV, TWO, FWO, TEM, FRQ, LS or LP commands. It can also be loaded with digital input bit numbers by the BIT command. See chapters 5 and 6 for more information.

2. Channel numbers are separated by commas. However, a dash may be used to signify a contiguous set of channels (i.e., DCV2-9). Any command that specifies a channel must be separated from subsequent commands by either a colon (:), a semicolon (;), or a Carriage Return/Line Feed but not a comma. If the last character in the command string is a comma, an error will be generated.

3. To take a burst of 30 readings on one channel, load the channel list with the channel number. For example, DCV5-5 will take 30 DC Voltage readings on channel 5.

4. The mnemonic determines what type of channel can be loaded into the channel list. In other words, if channel 1 is configured as an actuator channel, it should not be specified for any type of measurement (i.e., DCV1 or BIT1). If an attempt is made to load the channel list with an improper type of channel, a syntax error is generated (see SPOLL) and the command is aborted. If channels x-y is received and some channels between and including x and y are the wrong type of channels for the command, they are not loaded into the list and the error message is not generated. The remainder of the channels are loaded into the list.

5. Leading zeros are ignored, that is, DCV00019 means DCV19.

6. All syntax following a decimal point is ignored except for commas, dash, semicolon, colon, Carriage Return (cr), or Line Feed (lf). DCV2.3 means DCV2.

7. Exponents are not allowed and cause a syntax error. The command is aborted.

8. No more than 30 channels are accepted into the channel list. Legal channel numbers are 00 through 29.

9. All lower case letters are interpreted as upper case. ASCII characters, other than " , ; " result in an error. In other words, Dc V 21 is the same as DCV21.

Advanced Commands

A/D (Voltmeter, Counter)

Function, Command	Range Codes								
	R-1	R0	R1	R2	R3	R4	R5	R6	R7
All functions off, F0	*	*	*	*	*	*	*	*	*
DC Volts, F1	.3V	3V	30V	300V	*	*	*	*	*
AC Volts, F2	*	3V	30V	*	*	*	*	*	*
2-Wire Ohms, F3	*	*	*	300Ω	3KΩ	30KΩ	300KΩ	3MΩ	30MΩ
4-Wire Ohms, F4	*	*	*	300Ω	3KΩ	30KΩ	300KΩ	3MΩ	30MΩ
REFerence, F5 (See Standard command REF)	The Range is automatically set by the REF command								
TEMperature, F6 (Using T type Thermocouples. See Standard Command TEM.)	The Range is automatically set by the TEM command								
Frequency, F7	Gate Times: G-1 = .1 sec., G0 = 1 sec., G1 = 10 secs.								

* Indicates an invalid combination of function and range codes

Voltmeter Autozero:

Z0 = Auto zero OFF
Z1 = Auto zero ON

Number of Digits of Resolution:

N3 = 3½ digits
N4 = 4½ digits
N5 = 5½ digits

Trigger:

T0 = Enable channel list measurements and reading storage but do not take readings. Will trigger on either T2, T3, DT, or HP-IB/HP-IL TRIGGER command.

T1 = Internal trigger for readings initiated by a read command, i.e., ENTER 901. (Triggers only on read)

T2 = Software trigger. Takes one measurement on current channel.

T3 = Triggers (makes measurements) with channel list and reading storage.

Note: if F0 is asserted and the 3421A receives either T1, T2 or T3, an error will be generated and -8.88888E+8 will be sent.

DTix = Executes T3 if bit "x" on Digital Input port (slot) "i" goes low.

Example

To set the 3421A to AC Volts function, 3½ digit resolution, trigger hold, execute the following command:

OUTPUT 901;"F2N3T0"

Digital Control Commands

Monitor High (bit)

MHx	(x = digital bit address)
-----	---------------------------

Description

Sets bit 3 (event occurred) in Status Register when the specified bit equals ■ "1" (high). Therefore, an SRQ interrupt will be sent to the computer. When the 3421A is addressed to talk, it will send the status of the digital input word (8-bits) at the time the bit went high.

Example

```
OUTPUT 901;"M8"           ! Set SRQ Mask for EVENT OCCURRED.
OUTPUT 901 USING "#,K" ; "MH15" ! This command monitors bit 5 in slot 1 (Digital I/O)
```

Notes

1. After setting the 3421A for the monitor command, no further communication should be allowed on the interface (HP-IL or HP-IB). The monitor command may be aborted if any communication occurs.
2. If you are using the 3421A with the HP-IB interface, you will need to execute the command: SEND 7; UNL (or its equivalent) to "unlisten" the 3421A. If this is not done, the 3421A will not interrupt the computer.

Monitor Low (bit)

MLx	(x = digital bit address)
-----	---------------------------

Description

Sets bit 3 (event occurred) in Status Register when the specified bit equals ■ "0" (low). Therefore, an SRQ interrupt will be sent to the computer. When the 3421A is addressed to talk, it will send the status of the digital input word (8-bits) at the time the bit went low.

Example

```
OUTPUT 901;"M8"           ! Set SRQ mask for EVENT OCCURRED.
OUTPUT 901 USING "#,K" ; "ML02" ! Monitor bit 2 on slot 0 (Digital I/O)
```

Notes

1. After setting the 3421A for the monitor command, no further communication should be allowed on the interface (HP-IL or HP-IB). The monitor command may be aborted if any communication occurs.
2. If you are using the 3421A with the HP-IB interface, you will need to execute the command: SEND 7; UNL (or its equivalent) to "unlisten" the 3421A. If this is not done, the 3421A will not interrupt the computer.

Monitor Slot (word)

MNi	Monitor Slot "i"
-----	------------------

Description

This instruction reads digital input port on slot "i", Exclusive-OR's ■ with the XOR mask (see XR[abc] command), ANDS the result with the AND mask (see AN[abc]) and if the final result equals zero it sets bit 3 in the Status Register. This command does not automatically set the SRQ Mask. An SRQ interrupt will be generated if bit 3 in the SRQ Mask is set, see "M" in the Advanced Commands.

Example

```
OUTPUT 901;"M8"           ! Set SRQ mask for EVENT OCCURRED.
OUTPUT 901 USING "#,K" ; "MN2" ! Monitor slot 2
```

Notes

1. After setting the 3421A for the monitor command, no further communication should be allowed on the interface (HP-IL or HP-IB). The monitor command may be aborted if any communication occurs.
2. If you are using the 3421A with the HP-IB interface, you will need to execute the command: SEND 7; UNL (or its equivalent) to "unlisten" the 3421A. If this is not done, the 3421A will not interrupt the computer.

Exclusive OR Mask (for MN command)

XR[abc]	Exclusive OR mask, [abc] represents a decimal number 0-255.
---------	---

Description

The value [abc] is the sum of the values of the individual bits you want set in the mask. As a general rule, the XR mask is set to the bits you want to interrupt on when they go true (1). If no number is received, the mask is set to all zeros. See Bit value chart in chapter 6.

Example

```
OUTPUT 901;"XR53"      !Sets the Exclusive-OR mask to bits 5, 4, 2, and 0. (32 + 16 + 4 + 1 = 53)
```

AND Mask (for MN command)

AN[abc]	AND Mask, [abc] represents ■ decimal number 0-255.
---------	--

Description

The value [abc] is the sum of the values of the bit you want to set in the mask. As ■ general rule, the AN mask is set to the bits you want to monitor to cause the interrupt. If no number is received with the AN command, the mask is set to all zeros. See bit value chart in Chapter 6.

Example

```
OUTPUT 901;"AN135"     ! Set the AND mask to bits 7, 2, 1, and 0. (128 + 4 + 2 + 1 = 135)
```

Digital Set (word)

DSi,[abc]	"i" is the slot number for the Digital I/O option [abc] is a decimal value you wish to set the word to.
-----------	---

Description

This command "sets" the digital output port switches of the option card in slot "i" to the value [abc]. All switches not specified by [abc] remain unchanged. [abc] is the sum of the values of the individual bits you want set.

Example

```
10 OUTPUT 901;"DS1,53"      ! Set the word "53" (bits 5, 4, 2, and 0) in slot 1.
```

DIGITAL CLEAR

DCi,[abc]	"i" is the slot number for the Digital I/O option, [abc] is the decimal value you want to set the word to.
-----------	--

Description

This command "clears" the digital output port switches of the option card in slot "i" to the value [abc]. All switches not specified by [abc] remain unchanged. [abc] is the sum of the values of the individual bits you want cleared.

Example

```
10 OUTPUT 901;"DC2,17"      ! Clear bits 5 and 0 in slot 2.
```

Channel Control Commands

READ CHANNEL LIST

RL	Read channel List
----	-------------------

Description

This command allows you to read back to the computer the current channel list of the 3421A. The channel list is read back in the same order it was assigned. If a place in the list is empty, the place will be marked by "99".

Example

```
10 OUTPUT 901;"LS1-7"      !Set up channels 1 through 7 as channel list
20 OUTPUT 901;"RL"         ! Read channel list
30 FOR I = 1 TO 30
40 ENTER A(I)              ! Enter and display the channel list.
50 DISP A(I)
60 NEXT I
```

The Channel List would be read back as: 1, 2, 3, 4, 5, 6, 7, 99, 99, 99, ... until 30 numbers are read back.

LOAD SINGLE CHANNELS (into channel list)

LS(x,y,...z)	Load channels [x,y,...z] into the channel list
--------------	--

Description

Use the LS command to load the channel list with single channels (see also LP command). If the voltmeter or counter is also set up, the T3 command will open all multiplexer channels, close the first channel in the list, and initiate readings on the channel list and store them. The channels may be in any order.

Example

```
10 OUTPUT 901;"LS1-5,7"    ! Load channels 1,2,3 4,5, and 7 into the channel list.
```

LOAD CHANNEL PAIRS (into channel list)

LP(x,y,...z)	Load channels [x,x+10,y,y+10, ...z,z+10] into channel list.
--------------	---

Description

Use the LP command to load the channel list with channel pairs. Channels x and x + 10 are closed simultaneously. If a channel number (e.g., x = 24) is greater than 20, then its paired channel will be x-20 (e.g., 4).

Example

```
10 OUTPUT 901;"LP12-15"    ! Channel pairs 12&22, 13&23, 14&24, 15&25 are loaded into the channel list.
```

CHANNEL LIST POINTER

SI1 = Scanner increment

Description

Opens the currently closed multiplexer channel and closes the next channel in the list. No measurements are taken.

SI0 = Reset Pointer

Description

Resets channel list pointer to beginning of channel list. No channels are opened or closed and no measurements are taken.

Example

```
10 OUTPUT 901;"SI1"      ! Increments multiplexer
```

UNCONDITIONALLY CLOSE CHANNEL

UCx = Unconditionally Close channel x.

Description

The channel specified by "x" is closed without opening any other channels. Also, if "x" is a digital output bit, the bit will be set.

WARNING

USE EXTREME CARE WITH THIS COMMAND. IT IS POSSIBLE TO HAVE TWO OR MORE CHANNELS CLOSED SIMULTANEOUSLY WITH THIS COMMAND. DAMAGE TO THE INSTRUMENT OR CUSTOMER TRANSDUCERS OR OTHER INSTRUMENTATION MAY OCCUR.

Example

```
10 OUTPUT 901;"UC12"      ! close channel 12 regardless of what type it is.
```

Instrument Control Commands

RESET

RS	Reset
----	-------

Description

This command is used to reset the 3421A. The 3421A goes through its internal self test and goes to the following states:

1. All multiplexer and actuator channels are opened.
2. All digital output bits are cleared.
3. Voltmeter is set to: DC Volts, Autorange on, Autozero on, 5½ digits resolution, internal trigger.
4. Counter is set to 1 second gate time.
5. Reads rear panel switches and responds accordingly.
6. Channel list is initialized to all available multiplexer channels from lowest number to highest number.
7. SRQ interrupt generated if self test failed.
8. The HP-IL address is not changed.
9. Reading storage buffer is empty.

Example

10 OUTPUT 901;"RS" ! Reset the 3421A

DISPLAY NUMBER

DNx	x is optional numbers 0-29
-----	----------------------------

Description

The number "x" (0 to 29) will be displayed on the 3421A display. No channels  changed and no measurements will be made. However, any channel numbers previously displayed will disappear.

Example

10 OUTPUT 901;"DN5" ! This will display the number  on the 3421A display.


Notes

1. Sending DN without x returns the 3421A to normal display mode.

SET SRQ MASK

M n	Set SRQ Mask to value "n"
-----	---------------------------

Description

This command is used to set the SRQ mask inside the 3421A. Only bits 0, 3, and 5 can be masked. Bit 1 is masked by the Power-on SRQ switch on the rear panel of the 3421A. The value "n" is a decimal value equal to the sum of the values of the bits you want to set. When  1-to-1 correspondence of set bits in the Status Register and set bits in the SRQ mask occurs, an SRQ interrupt will be sent to the computer.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
N/A	SRQ	Abnormal Condition	Low Batt	Event Occurred	Self Test Error	PWR-on Reset	Data Ready

Example

10 OUTPUT 901;"M1" !Sets SRQ mask for Data Ready

READ STATE REGISTERS

SR read State Registers

Description

When the 3421A receives this command, 24 decimal numbers will be sent to the computer. Each decimal number (0 to 255) represents one state register. The state registers are used to determine the exact status of the 3421A. The first four registers are error registers and are used to determine the exact nature of errors. These error registers are cleared after all four are read. The remaining registers are used to determine the current state of the 3421A, i.e., which option assemblies are available in the 3421A, the current measurement function (whether DC Volts, ohms, etc.), measurement range, which multiplexer and actuator channels are closed, and the setting of the various masks. These registers are not cleared after reading. If the 3421A receives another command before it has sent all of the 24 registers, it will stop sending them.

Example

```
10 DIM A(24)
20 OUTPUT 901; "SR"      ! This line sends the Status Register command.
30 FOR I=1 TO 24
40 ENTER 901; A(I)        ! These three lines read back the 24 registers.
50 DISP A(I)
60 NEXT I
```

The following describes each of the registers. The value returned from each register is the sum of the values of the bits that are set. Chapter 3 has a short BASIC language program that will read all 24 registers and decode them on a bit-by-bit basis.

Register 1: Status Register (see SPOLL, Chapter 3)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Always zero	SRQ	Abnormal Condition	Low Battery	Event Occured (MN,ML, MH)	Self Test Error	Power-on Reset	Data Ready

Register 2: Error

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Defined	Tried to load channel list with more than 30 channels	Can't do T3 since channel list is empty	Can't do TOT,MH, ML,MN, DT while Battery is low	Option specified in command does not exist in that slot	invalid syntax.	Addressed to talk but no data ready	Triggered but F0 asserted

Register 3: Hardware Error (see 3421A Service Manual)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
10 MΩ test failed	RAM U503 failed	RAM U504 failed	μP RAM failed	A/D Slope Error	ROM 0 checksum error	ROM 1 checksum error	Cal RAM checksum error

Register 4: Calibration error (see 3421A Service Manual)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Defined	A/D error	Cal RAM bad	Cal attempted Cal RAM not enabled	Invalid CAL zero	Invalid Cal signal	Invalid Cal number	Invalid Cal function or range

NOTE. Those bits specified as Not Defined may be either a "1" or a "0".

Register 5: Status of the SRQ Mask (see SPOLL in Chapter 3)

Bit 7	Bit 6*	Bit 5	Bit 4*	Bit 3	Bit 2*	Bit 1**	Bit 0
Not Defined	SRQ (always 1)	1 = SRQ if abnormal condition occurs	Low battery (always 1)	1 = SRQ if event occurs (MN,ML,MH)	Self Test failed (always 1)	1 = SRQ if Power-on reset occurs	1 = SRQ if data ready

* The bits labeled as "always 1" are not maskable. When the event occurs, the SRQ interrupt message will be sent to the controller.

** This bit or feature is enabled/disabled by the POWER-ON SRQ switch on the rear panel of the 3421A.

Register 6: Option Boards Available

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Defined	Slot 2 is digital option	Slot 1 is Digital option	Slot 0 is Digital option	always zero	Slot 2 is mux option	Slot 1 is mux option	Slot 0 is mux option

Register 7: Actuator Channels Available

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Defined	Not Defined	1 = actuator channel 21	1 = channel 20	1 = channel 11	1 = channel 10	1 = channel 1	1 = channel 0

Register 8: Not Defined

Registers 9 and 10: Register 9 contains the channel address when a multiplexer channel is closed. If channel pairs were closed, Register 10 contains the paired channel.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Not Defined								
	Slot 0:	0	0	0	0	0	0	:Channel 0
	Slot 1:	0	1	0	0	0	1	:Channel 1
	Slot 2:	1	0	0	0	1	0	:Channel 2
				0	0	1	1	:Channel 3
				0	1	0	0	:Channel 4
				0	1	0	1	:Channel 5
				0	1	1	0	:Channel 6
				0	1	1	1	:Channel 7
				1	0	0	0	:Channel 8
				1	0	0	0	:Channel 9
		X	X	1	1	1	1	:no channel closed

Bit definition for Registers 9 and 10 are the same.

NOTE: Those bits specified as Not Defined may be either a "1" or a "0".

Registers 11 through 16: Indicates which relay channels were closed by the UC command.

Register 11

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Def- ined	Not Def- ined	Not Def- ined	1 = Chan 4 closed	1 = chan 3 closed	1 = chan 2 closed	1 = chan 1 closed	1 = chan 0 closed

Register 12

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Def- ined	Not Def- ined	Not Def- ined	1 = chan 9 closed	1 = chan 8 closed	1 = chan 7 closed	1 = chan 6 closed	1 = chan 5 closed

Register 13

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Def- ined	Not Def- ined	Not Def- ined	1 = chan 14 closed	1 = chan 13 closed	1 = chan 12 closed	1 = chan 11 closed	1 = chan 10 closed

Register 14

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Def- ined	Not Def- ined	Not Def- ined	1 = chan 19 closed	1 = chan 18 closed	1 = chan 17 closed	1 = chan 16 closed	1 = chan 15 closed

Register 15

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Def- ined	Not Def- ined	Not Def- ined	1 = chan 24 closed	1 = chan 23 closed	1 = chan 22 closed	1 = chan 21 closed	1 = chan 20 closed

Register 16

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Def- ined	Not Def- ined	Not Def- ined	1 = chan 29 closed	1 = chan 28 closed	1 = chan 27 closed	1 = chan 26 closed	1 = chan 25 closed

Register 17: Functions

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Def- ined	Not Def- ined	Not Def- ined	Not Def- ined	Not Def- ined			
No functions asserted:						0	0
DC Volts:						0	1
AC Volts:						1	0
2-Wire Ohms:						1	1
4-Wire Ohms:						0	0
Reference Temperature:						0	1
Temperature (T-type thermocouple):						1	0
Frequency:						1	1

NOTE. Those bits specified as Not Defined may be either a "1" or a "0".

Register 18: Ranges

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Not Def- ned	Not Def- ined							
Counter	.1 Second	0	0	0	0	0	0	- NOT USED
Gate Time	1 Second	0	0	0	0	0	1	- R-1
Codes	10 Second	1	1	0	0	1	0	- R0
				0	0	1	1	- R1
				0	1	0	0	- R2
				0	1	0	1	- R3
				0	1	1	0	- R4
				0	1	1	1	- R5
				1	0	0	0	- R6
				1	0	0	1	- R7

Voltmeter
Rnge
Codes

Register 19: Voltmeter status

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1 = Cal enabled	Not Def- ined			1 = 50Hz 0 = 60Hz integration time	1 = auto zero on 0 = auto zero off	1 = auto- range on 0 = auto range off	1 = internal trigger
		0	0 - T0 (Trigger hold)				
		0	1 - T1				
		1	0 - T2				
		1	1 - T3				

Register 20: Number of Digits of Resoltion

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Def- ined	Not Def- ined	Not Def- ined	Not Def- ined	Not Def- ined	Not Def- ined		
						invalid:	0
						5 1/2 digit res.:	0
						4 1/2 digit res.:	1
						3 1/2 digit res.:	1

Register 21: Channel List

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1 = channel list is digital bits. 0 = channel list is mux channels	Not Def- ined	Not Def- ined	Not Def- ined	Not Def- ined	1 = TOT function on.	Not Def- ined	Not Def- ined

Register 22: Display Mode

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not Def- ined	Not Def- ined	Not Def- ined	Not Def- ined	Not Def- ined	1 = DN mode on. 0 = DN mode off.	Not Def- ined	Not Def- ined

Register 23: AND mask (set by AN[abc] command)

Register 24: Exclusive-OR Mask (set by XR[abc] command)

NOTE. Those bits specified as Not Defined may be either a "1" or a "0".

CHAPTER 4

Programming With the -hp Model 41C/CV Calculator

Introduction

Your -hp- Model 3421A was designed to interface with a wide variety of calculators and computers over the Hewlett-Packard Interface Loop (HP-IL). In the last chapter we saw how to use the 3421A with BASIC language controllers. This chapter discusses the remote operation and programming of the 3421A from the -hp- 41C/41CV family of handheld calculators. The many features of the 3421A combined with the computational power of the 41C/CV calculator provides for a low cost, flexible measurement and control system. In addition, plotter/printers, cassette mass storage drives and other HP-IL instruments can easily be added to the loop.

This chapter shows you how to execute simple, one command instructions from the calculator to control the 3421A and then read the measurement data back. Later in the chapter, we'll discuss interface control and the development of powerful programs to solve your measurement needs. Last, you'll look at several application programs including a simple data logger with a printer and cassette drive.

Before beginning this chapter you will want to have read Chapters 1 and 2 of this manual. Those chapters will familiarize you with the many features of the 3421A and its command set. You will also find it helpful to read the -hp- Model 41C/41CV Owners Handbook and Programming Guide (-hp- part number 00041-90313) and the -hp- Model 82160A HP-IL Module Owners Manual (-hp- part number 82160-90001).

Special Note. The Data Acquisition Control Pac ROM (-hp- part number 44468A) for the 41C/CV provides friendliness for controlling the 3421A not afforded by the calculator alone. Therefore, if you have the DA/C Pac it may not be necessary to read this chapter. Read the manual provided with the ROM Pac instead. If you decide to write your own custom programs using the subprograms provided with the ROM Pac, this chapter provides a basis for program writing.

Examples Format

The many examples in this chapter are designed to enhance your understanding of programming the 41C/CV to control the 3421A. The examples show the keystrokes used in entering a command or program line from the calculator keyboard. Also shown is the calculator display for each line as it has been entered. Enter the programs as shown. If you make a mistake when entering a command you can generally use the correction key (back arrow) to edit the line. If you are entering a program line, use the Back Step key [BST] or the Single Step key [SST]. Refer to the Owner's Handbook and Programming Guide for more operating and programming information for the 41C/CV.


Sending Instructions to the 3421A.

Using a programmable calculator to control the 3421A allows for greater flexibility and control than afforded by a front panel. The calculator effectively becomes the 3421A's front panel. Of course this involves both sending instructions to the 3421A and receiving data from it. Let's begin by seeing how a simple instruction is sent .

Do This *

Connect only the 3421A in the loop with the 41C/CV.

Keystrokes	Comments	41C/CV Display
[ALPHA] DN5 [ALPHA]	You can replace '5' with any number between 0 and 29, e.g., DN27. Note that the shift key is required to enter numbers into the Alpha Register.	DN5
[XEQ] [ALPHA] OUTA [ALPHA]		OUTA

* If this example doesn't work, turn off both the 3421A and the calculator. Make certain that the HP-IL connections have been made. Turn the 3421A  first and wait until the display clears then turn the 41C/CV on. Try running the initialization program shown later in this chapter.

Let's take a closer look at what you did. First, the message DN5 was stored into the alpha register. DN (Display Number) is called a command code and tells the 3421A to display the number 5. Second, the command OUTA (OUTput Alpha register) was executed (XEQ). Since the 3421A is the only device in the loop, it received the instruction and displayed the number. Try the command again using a different number.

You should now execute the DN command without a number to clear the 3421A from the display number (DN) mode. That is:

ALPHA DN **ALPHA**

XEQ **ALPHA** OUTA **ALPHA**

There are several command codes that the 3421A recognizes. The blue pages at the end of the previous chapter describe the codes and give a brief example of how they are used.

Sample Problem

Suppose you need to make an AC voltage measurement from channel 12. The easiest way to do this would be to use the Standard command, ACV12. The sequence would look like:

ALPHA ACV12 **ALPHA**

XEQ **ALPHA** OUTA **ALPHA**

The command ACV12 means that an **AC Voltage** measurement is to be taken on channel 12. OUTA (**OUT**put **Al**pha register) is an instruction causing the contents of the Alpha register, in this case ACV12, to be sent through the interface to the 3421A. When the 3421A receives the command, the measurement is made.

Programming Hints

If the same type of measurement is to be made on several channels, all the channels can be specified in one command. In other words, ACV12,13,15-19 specifies an AC Voltage measurement on channels 12, 13, 15, 16, 17, 18, and 19. Channel 12 is measured first and the measured value is stored in the 3421A's reading storage. Then channel 13 is measured and the measured value stored. Finally, channel 19 is measured and that value is stored.

Later, when you want to read back the measured voltages (see the IND command later in this chapter), the voltage from channel 12 will be read back first, then from channel 13, and so on until the voltage from channel 19 is read back.

Instructions for the 3421A are sent as a series of 7-bit ASCII characters. If more than one instruction or piece of data is sent at one time, they must be separated

by a colon (:). Characters that are ignored are blanks and plus (+). All other punctuation and character sequences that are not recognized by the 3421A will result in a syntax error. In other words, Dc V 21 is interpreted exactly the same as DCV21.

The series of channels specified in this way defines a "Channel List". The following rules apply to the channel list:

a. The default channel list (asserted at power on or reset) becomes all available multiplexer channels in numerical sequence. The DCV, ACV, TWO, FWO, TEM, FRQ, LS and LP commands can be used to alter or load the channel list. It can also be loaded with digital input bit numbers by the BIT command. See chapters 5 and 6 for more information.

b. Channel numbers are separated by commas. If the last character sent is a comma an error will be generated. A dash may be used to signify a contiguous set of channels (i.e. x-y). When using the Advanced Commands, any command that specifies a channel must be separated from subsequent command by a colon (:). For example, F1RA1LS5-9;T3. If the last character in any command string is a comma, an error will be generated.

c. No more than 30 channels are accepted. Valid channel numbers are 0 through 29.

d. To take a burst of 30 readings from one channel, load the channel list with that one channel number. For example, to take DC voltage readings from channel 5, execute: DCV5-5.

e. The mnemonic determines what type of channels are loaded into the list. In other words, if channel 1 is configured as an actuator channel, it should not be specified for any type of measurement (i.e. DC Voltage or bit 1, etc.). If an attempt is made to load the list with an improper type of channel, a syntax error is sent (see INSTAT) and the command is aborted. If x-y is received where channels between and including x and y are of the wrong type, they are not loaded into the channel list and the error message is not sent. The remainder of the channels are loaded into the list.

f. Leading zeros and spaces are ignored; i.e., 00019 is channel 19.

g. Generally, all syntax following a decimal point is ignored except for comma, dash, semicolon, colon, Carriage Return (cr), and Line Feed (lf). i.e. LS2.345 loads channel 2.

h. Exponents are not allowed and cause a syntax error; i.e., DCV2.345E+1 would cause an error and no channel list is accepted.

Receiving Data From the 3421A

Not only can the 3421A be controlled by the 41C/CV calculator, but it can also talk to the calculator. The 3421A can send measurement data and status information about the mainframe and the digital option cards. The calculator can then process the measurement data or status information as necessary.

From the last section we saw how to program the 3421A to take an AC voltage measurement from channel 12. Now let's see how to transfer the measurement data from the 3421A to the calculator.

Keystrokes	Comments	41C/CV Display
[ALPHA] ACV12 [ALPHA]	AC Voltage measurement on channel 12.	ACV12
[XEQ] [ALPHA] OUTA [ALPHA]	OUTput Alpha Register.	OUTA
[XEQ] [ALPHA] IND [ALPHA]	INput Decimal number.	IND
		(Measured Value)

IND (INput Decimal) is an instruction that causes the 3421A to talk to the calculator, giving measurement or status information. The measurement will appear in the calculator's display as well as in the X-register. Since the reading is in the X-register it is ready to be operated on by the calculator. For example, you could take the log of the reading by simply pressing the **LOG** key.

If a channel list were sent out with the command, e.g. ACV12,13,15-19, the reading from the first channel is sent the first time IND is executed. The second execution of IND causes the reading from the second channel to be sent. Subsequent executions of IND cause the readings from the remaining channels to be sent to the calculator. The error message, -8.88888E+8, will be sent if an error occurs—such as if IND is executed after the last channel has been read.

Looking closely at what we have done so far, we can see the beginnings of a very simple program. A program instructs the 3421A to do something (either make a measurement or read the status, etc.) and then enter the result into the calculator.

The program will need to be completed by adding a label and an **END** statement. Look at the program listing below and compare it to the earlier example for reading the AC voltage on channel 12.

01 LBL "ACVOLTS"	— Label
02 "ACV12"	— Load the command into the Alpha register
03 XEQ "OUTA"	— OUTput Alpha register command
04 XEQ "IND"	— INput Decimal value from channel 12
05 END	— END of program

HP-IL Interface Control

Before pursuing further the subject of program writing, let's look at some special HP-IL commands. In the examples we've looked at so far, commands like IND, OUTA, and INA have been used. These commands are called Interface Control commands. Now, you'll learn what these and other commands mean and how they are used. The control commands allow you to directly specify a device to perform a function, send or receive information, or control the interface loop. These control commands also allow you to use more than one 3421A in the interface loop.

The eleven Interface Control Commands are listed below with a very brief explanation of what they do. After the list, we'll look at each one individually to see how it is used and to see more of what it does. You may also want to read the -hp-Model 82160A HP-IL Module Owners Manual.

SELECT	Select a particular device or instrument
OUTA	Output the Alpha register to the selected device
IND	Input decimal number from selected device
INA	Input from selected device to Alpha register
TRIGGER	Triggers all devices previously set to Listen mode plus the selected device
INSTAT	Input the status byte from selected device
PWRDN	The Power-Down command sets all devices to the standby power condition
PWRUP	The Power-Up command returns all devices to full operating power conditions
FINDID	Find the HP-IL address of a particular device
AUTOIO	Set the HP-IL interface to the Auto mode (default)
MANIO	Set the HP-IL interface to the Manual mode
REMOTE	Set the selected device to Remote mode (Not needed for 3421A, it is always in remote)
LOCAL	Set selected device to Local mode (Local not implemented on the 3421A)
LISTEN	Set selected device to Listen mode

SELECT

Example

```
[XEQ] [ALPHA] SELECT [ALPHA]
```

Comments

The SELECT command is used to determine which HP-IL device will receive commands from the calculator—that is, become the “selected” device. You must put the HP-IL address of the device into the X-register prior to executing the SELECT command.

OUTA

Example

```
[ALPHA] DCV12,13,15-19 [ALPHA]  
[XEQ] [ALPHA] OUTA [ALPHA]
```

Comments

The command OUTA (**OUT**put **A**lpha register) causes the contents of the Alpha register to be output to the selected device. In the example shown above, the alpha register is loaded with the command string: ACV12,13,15-19.

IND

Example

XEQ **ALPHA** **IND** **ALPHA**

Comments

The IND (INput Decimal) command retrieves an ASCII-coded numeric value from the selected device and places it into the X-register of the calculator. If the 3421A has been given a measurement command (such as DCV) and then receives the IND command, the 3421A becomes a talker and outputs one measurement value in the form:

+/-d.dddddE +/-d CR LF (5½ digit mode)

where d represents a single digit. The calculator automatically places the decimal point to remove the exponent. If the 3421A is in the 4½ digit mode, only the 4½ digits will be sent, i.e., +/-d.ddddE +/-d CR LF. In the 3½ digit mode, only the 3½ digits will be sent. CR is Carriage Return and LF is Line Feed. CR LF is a standard end-of-line terminator and does not show in the display.

The message: +9.99999E+9 (5½ digit mode) indicates one of the following conditions:

- a. Voltmeter overload
- b. Counter overflowed in TOT mode
- c. Temperature out of range, i.e., reference not between 0 and 60 degrees C or thermocouple voltage not between 6 and 20 millivolts.

Error conditions caused by the voltmeter, channel list, etc. are indicated by: -8.88888E+8 (5½ digit mode) The error message for digital I/O errors is: 888. Essentially there are 10 error conditions:

- a. Function F0 is asserted and the 3421A received a trigger command.
- b. A hardware error such as the calibration RAM checksum error or A/D slope error.
- c. The 3421A is addressed to talk but it has nothing to send (i.e., it was not told to take a measurement).
- d. A syntax error occurred.

IND (Cont'd)

- e. A command was given but the appropriate option board does not exist in the slot specified.
- f. An attempt was made to load the channel list with more than 30 channels.
- g. An attempt is made to increment the channel list and take a reading (T3) but the channel list is empty.
- h. The 3421A internal battery is low but an attempt was made to execute TOT, MH, ML, or MN.
- i. A calibration error (see the 3421A Installation and Service manual).
- j. Failed Self Test.

An example is given with the INSTAT command on using the SR command to read the status bytes to determine which condition caused the error.

INA

Example

XEQ **ALPHA** INA **ALPHA**

Comments

The INA (INput Alpha register) command inputs data from the selected device and stores the data in the calculator's Alpha register but not in the X register.

TRIGGER

Example

XEQ **ALPHA** TRIGGER **ALPHA**

Comments

The TRIGGER command will frequently be used in conjunction with the T0 Advanced Command. Consider the following program:

```
01+LBL "TRIG"  
02 "LS0-9:F1T0"  
03 PSE  
04 TRIGGER  
05+LBL "ENTER"  
06 IND  
07 PSE  
08 GTO "ENTER"  
09 END
```

Line 02 sets-up the 3421A with a channel list of channels 0 through 9, and for DC voltage measurements (F1). The T0 command prevents the 3421A from triggering but enables the scan through the channel list and reading storage. Therefore, when the TRIGGER command is executed, the 3421A reads each channel and stores the measurement results. The readings are input to the calculator in line 06.

If software trigger (T2) is asserted in the 3421A, then TRIGGER will initiate only one reading. That reading will be from the channel (if any) that was closed at the time of the TRIGGER command. If scan trigger (T3) is asserted, then the voltmeter takes readings sequentially as indicated by the channel list. If internal trigger T1 is asserted, TRIGGER will cause one reading to be taken. Subsequent readings can be initiated by the IND command. All readings, separated by Carriage Return/Line Feed are sent when the 3421A is when addressed to talk.

INSTAT

Example

XEQ ALPHA INSTAT ALPHA

Comments

The INSTAT (**IN**put **STAT**us) command causes the 3421A (or selected device) to output its 8-bit Status Byte. The entire eight bits are transferred to 41C/CV user flags 00 through 07. Status Byte bit 0 is placed in flag 00, bit 01 is placed in flag 01, etc. This allows testing of individual bits (flags). Also, a decimal value is placed into the X-register of the calculator. This decimal value is equal to the sum of the values of the least significant six bits that are set (a '1' or logic high).

Status Register

The Status Register in the 3421A is used to continuously monitor six conditions within the instrument. The Status Byte is an 8-bit byte sent from the Status Register in response to the INSTAT command. The figure below illustrates the Status Register and defines each bit. The bits are set (logic 1) when the indicated condition occurs and will be cleared when the INSTAT message is received, except as noted.

	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
	Always Zero	Require Service (RQS)	Abnormal Condition See Below	Low Battery	Event Occurred	Self Test Failed	Power-on Reset Occurred	Reading Ready
Bit Value:	128	64	32	16	8	4	2	1

Bit 6 Bit 6 of the register will be set (a "1") when there is any one-to-one correspondence of bits in the Service Request (SRQ) Mask and the lower 6 bits of the Status Register. The bit will be cleared (a "0") when the one-to-one correspondence no longer exists or, in the case of bits 0, 1, 2, 3, and 5, with the execution of INSTAT.

Although the Require Service Message will be sent by the 3421A to the calculator when this bit is set, the 41C/CV is not capable of responding to the message. For this reason, the SRQ Mask and the Require Service Message will not be discussed further in this chapter. BASIC language controllers, see Chapter 3, are capable of responding and the SRQ mask is discussed under the topic of SPOLL. This means that the digital monitor commands MN, MH, and ML cannot be used to interrupt the 41C/CV.

INSTAT (Cont'd)

- Bit 5 This bit will be set if any one of the following conditions are met. This bit will be cleared by the INSTAT command.
1. Hardware Error, such as an A/D converter error.
 2. Calibration Error. This generally means a bad checksum was found in the calibration RAM. The calibration of the instrument is suspect.
 3. Syntax Not Understood. An invalid command code was sent to the 3421A.
 4. Can't Execute Syntax, e.g., the 3421A doesn't have an option board in slot 2 but was told to close a channel in that slot.
 5. Low battery condition exists but an attempt was made to execute TOT, MH, ML, or MN.
 6. An attempt was made to load the channel list with more than 30 channels.
 7. An attempt was made to increment the channel list and trigger (T3) but the channel list was empty.
 8. The 3421A was told to send its latest reading, but no reading was available.
 9. The internal voltmeter received a trigger command but function F0 was asserted.
 10. Self test failed.
- Bit 4 This bit indicates a low battery condition. The bit will be cleared only when the 3421A is switched off and back on. This bit is not maskable with the SRQ mask.
- Bit 3 Bit 3 indicates that an event has occurred as sensed by either of the three monitor functions; MN, ML, MH. Bit 3 is automatically enabled by the MH and MI commands and is cleared by the INSTAT command. The MN, ML, and MH commands are described in chapter 6.
- Bit 2 This bit indicates a failure in the 3421A self test. Note that it is not maskable (see the M command). Refer to Chapter 2 for more information on Self Test.
- Bit 1 Bit 1 will be set whenever a power-on reset has occurred. The bit will be cleared when the INSTAT command is sent to the 3421A. Although this bit may be true, an SRQ is not generated unless it is enabled by the Power ON SRQ switch on the rear panel.

INSTAT (Cont'd)

Bit 0 When set to a "1", this bit shows that the 3421A has taken a reading (voltmeter, counter, BIT, etc.) and is waiting to output it to the calculator. The bit will be cleared when one of three things happens: the reading is sent to the calculator (IND command), a program command is sent that changes the state of the voltmeter (e.g., function change), or a trigger command is received. Bit 0 will be cleared by the INSTAT command.

Let's look at two examples of how INSTAT may be used. The first of these examples will be used in later programs.

Example 1. Data Ready

The data ready bit (bit 0 in the Status Register) of the 3421A allows the calculator to determine when new measurement data is ready. Since the data ready bit is bit 0, it will be placed into the calculator's Flag 00 when the INSTAT command is executed. Therefore, we can test Flag 00 to see if data is ready.

INSTAT (Cont'd)

Keystrokes	Comments	41C/CV Display
ALPHA DCV12 ALPHA	Instructions for a DC voltage reading on channel 12	DCV12
XEQ ALPHA OUTA ALPHA	Output the instruction to the 3421A.	
XEQ ALPHA INSTAT ALPHA	Bit 0 is set indicating data is ready. The value of this bit is '1'.	1.0000
FS? 00	The test to see if Flag 00 is set returns a YES answer.	YES
XEQ ALPHA IND ALPHA	The display will show the 3421A reading.	(measured reading)
XEQ ALPHA INSTAT ALPHA	The data is no longer available. It was read into the calculator by IND. Bit 0 is cleared and INSTAT returns a '0'.	0.0000
FS? 00	The Flag 00 test now shows that bit 0 in the Status Register is clear.	NO

The DCV12 command caused the 3421A to take one reading. When the first INSTAT command was executed, the calculator display showed ■ "1". This is because bit 0 in the Status Register was set due to the reading being ready. When Flag 00 was tested (FS? 00), it was set and the calculator displayed "YES".

With the IND command, the measurement was sent to the calculator and no new measurements were taken. Therefore, no new readings became available and bit 0 in the Status Register is clear. This is evident by the second INSTAT command returning a "0" and the Flag 00 test answering NO.

INSTAT (Cont'd)

The FS? and FC? tests may be used in programs to branch to subroutines if data is or is not ready.

Please note that the value returned after the first INSTAT command may be 3. This would indicate that a power-on reset of the 3421A has occurred; see Bit 2 in the Status Register. This bit will be cleared with the INSTAT command. Therefore, running through the example again should produce the results shown.

Example 2. Abnormal Condition

As stated earlier, there are several things that can cause an error. One example of an error condition is when the 3421A receives a command that it doesn't understand or cannot comply with. The following program shows how the INSTAT command and flag tests may be used in a program to detect errors.

```
01*LBL "FLAG"  
02*LBL 01  
03 *DCV12*  
04 OUTA  
05 INSTAT  
06 FS? 05  
07 TONE 5  
08 FS? 00  
09 IND  
10 GTO 01  
11 END
```

Line 3 should be changed to reflect some channel that you do have in your 3421A. If an error does occur, bit 5 in the Status Register will be true. When Flag 05 is tested the tone will sound. If the bit were not true (no error), the program would skip over the TONE 5 instruction. Try it by replacing line 3 with the command DCV35. This would cause a syntax error.

To find out exactly what caused the error, execute the SR command followed by four IND commands. SR is the command to send the Status Byte plus the three error registers. Execute the following instructions.

INSTAT (Cont'd)

Keystrokes	Comments	41C/CV Display
ALPHA DCV35 ALPHA	A DC Voltage measurement on channel 35 is illegal. An error will occur.	
XEQ ALPHA OUTA ALPHA	Output the command DCV35	
ALPHA SR ALPHA	SR is the Status Register command.	
XEQ ALPHA OUTA ALPHA	Output the command SR	
XEQ ALPHA IND ALPHA	Input the first register which is the same as the Status Byte. The Status Byte will be cleared after this. The value 32 (bit 5) means an abnormal condition.	32
XEQ ALPHA IND ALPHA	Input the second Register which is the error register. The value 4 (bit 2) means invalid syntax.	4
XEQ ALPHA IND ALPHA	Input the third Register which is the hardware error register. The value 0 indicates no hardware error.	0
XEQ ALPHA IND ALPHA	Input the fourth Register which is the calibration error register. The value 0 means no calibration error.	0

INSTAT (Cont'd)

The four error registers will be cleared after all four have been read by the IND command. The following chart shows the meaning of each bit in the registers and its value. Remember that the decimal value returned is the sum of the values of the individual bits that are set within that register. There are actually 24 registers that can be read with the SR command, the remaining 20 are 3421A status registers. These can be used to report what option assemblies are available in the 3421A, which channels are closed, the setting of the SRQ, XOR, and AND masks, etc. Refer to the blue pages at the end of the preceeding chapter.

Register	Number							
	7	■	5	■	3	2	1	0
1 Status Register	Always 0	SRQ	Abnormal Condition	Low Battery	Event Occurred	Self Test Error	Power-on Reset	Data Ready
2 Error Register	*	Tried to load channel list with more than 30 channels	Channel list is empty but tried to execute a T3	Battery is low but tried to do TOT,MN, MH, ML	Wrong type of option for com- mand	Invalid Syntax	No Data ready but Ad- dressed to talk	Func. FO as- serted but trig- gered
3 Hardware Error	10 MΩ test failed	RAM Error	RAM Error	uP RAM Error	A/D Error	ROM 0 Error	ROM 1 Error	Cal. RAM Check- sum Error
4 Cal Error	*	A/D Error	CAL RAM Bad	CAL at- tempted but not enabled	Invalid CAL Zero	Invalid CAL Signal	Invalid CAL Number	Invalid CAL Func- tion or Range
Bit Value	128	64	32	16	8	4	2	1

* These bits are undefined and may be either a 1 or ■ 0.

PWRDN (POWER-DOWN)

Example

XEQ **ALPHA** PWRDN **ALPHA**

Comments

The Power-down command is used to put the 3421A and all other devices capable of power-down into their lowest, standby power condition. When the 3421A receives this command, it first stores its channel status in RAM before powering down. All multiplexer and actuator channels remain in the state they were in before the PWRDN command was received. All digital output ports are returned to a high impedance (switch opened) state. Also, the totalize mode is turned off.

The channel status information that is stored in RAM is used to remember which slots had 44462A multiplexer assemblies or 44465A Digital I/O assemblies. The status information also remembers which channels were actuators and which were multiplexers. During power-up, the 3421A will check to determine if any of this information has changed. If not, the 3421A will go to its turn on conditions. If something has changed, such as reconfiguring an actuator to a multiplexer channel, etc., the 3421A will go through its self test and reset state.

The 3421A will return to its full power-on state when there is any communication through the HP-IL interface. Refer to the PWRUP command for more information on power-up.

SPECIAL NOTE ON LOW BATTERY. Since the 3421A is a battery powered instrument, certain safeguards have been included to prolong the life of the battery. When the battery voltage drops below a predetermined point, the 3421A sets bits 6, 5, and 4 in the Status Byte (see INSTAT). The error indicator also lights up on the display. After approximately three minutes the 3421A will open all relays and power down. The Power-up (PWRUP) command will not cause the 3421A to power-up. The 3421A LINE switch must be cycled and the battery must be charged.

SPECIAL NOTE TO OPTION 040, 44464A ASSEMBLY USERS. During power down, the breadboard assembly will lose all power supplies. Therefore, you may want to use latching relays if you need a relay closed during power-down.

PWRUP (POWER-UP)

Example

```
[XEQ] [ALPHA] PWRUP [ALPHA]
```

Comments

The PWRUP command is used to return all powered-down instruments to their full operating power conditions. Actually, the 3421A will return to normal operation when there is any communication through the HP-IL interface. When the 3421A powers-up, it first checks its status to see if any multiplexer boards were changed. If any changes have been made, the 3421A will go through its normal power-on reset and self test routine. If nothing has been changed, the 3421A remains in the same state that it was in prior to power-down. That is to say that all multiplexer or actuator relays that were closed prior to power-down will remain closed after power-up. Note that the power up command has no effect on instruments manually turned off.

FINDID

Example

ALPHA HP3421A **ALPHA**

XEQ **ALPHA** FINDID **ALPHA**

Comments

The FINDID (**FIND ID**entity) command searches for a device with a specific identity and returns with the HP-IL address of that device. The device identity must be placed in the Alpha register of the calculator before FINDID is executed. The identity of the 3421A is: HP3421A. The address is returned to the X-register of the calculator.

In the AUTOIO mode the calculator searches the entire loop starting at the "selected" device. In the MANIO mode, the calculator checks only the "selected" device for the identity.

What happens if there are two or more 3421A's in the loop? If the interface is in the AUTOIO mode when FINDID is executed, the address of the first 3421A (starting with the selected device) is returned and the search ends. If we then "select" the device after the first 3421A (next address) and execute FINDID again. The calculator will return the address of the second 3421A. By selecting the device after the 3421A, we can find the address of the next 3421A.

AUTOIO

Example

XEQ **ALPHA** AUTOIO **ALPHA**

Comments

The 82160A HP-IL interface module for the calculator controls the interface loop according to the module's operating mode—either Auto or Manual. The AUTOIO mode is the easiest to use with all HP-IL devices including the 3421A. This is especially true if you have a printer and/or cassette drive in the loop.

In the AUTOIO (**AUTO I/O**) mode, when you execute a printer or cassette drive operation, the interface automatically searches through the loop for the proper device to carry out the operation. Hence the name AUTOIO. For example, if you execute the PRA (P**R**int Alpha register) command when the 3421A is the selected device, the printer in the loop automatically performs the operation. In the Manual mode, the printer would have to be selected before the PRA command could be executed.

MANIO

Example

XEQ **ALPHA** MANIO **ALPHA**

Comments

The MANIO (**MAN**ual I/O) mode, means that device such as printers and cassette drives, must be "selected" before used. When MANIO is asserted, flag 32 is set in the 41C/CV calculator showing that the interface is in the MANIO mode.

REMOTE

Example

XEQ **ALPHA** REMOTE **ALPHA**

Comments

The REMOTE command is used to cause the selected device to switch from local front panel control to remote program control. The remote mode of the 3421A is always asserted since it does not have a keyboard front panel. For this reason, it is not necessary to execute the REMOTE command if the 3421A is the only device in the loop. The 3421A ignores the REMOTE command.

LOCAL

Example

XEQ **ALPHA** LOCAL **ALPHA**

Comments

The LOCAL command is used to clear the selected device from the Remote mode and restore front panel operation. Since the 3421A does not have a front panel keyboard for control and must remain in the Remote mode, the LOCAL command is ignored.

LISTEN

Example

XEQ **ALPHA** LISTEN **ALPHA**

Comments

The LISTEN command makes the selected device a dedicated listener, that is, the device is enabled to receive information. A number must be placed into the X-register, representing the address of the selected device, prior to executing the LISTEN command. The address in the X-register should be between 1 and 30. However, if the number is 31 and the LISTEN command is executed, all devices in the loop are removed from the Listen mode.

This command allows more than one listener to be setup by executing the LISTEN command for each device. For example, suppose you have two 3421A's in the loop. You need them to trigger simultaneously. Individually, both instruments should be made listeners. When the TRIGGER command is executed, both voltmeters are triggered almost simultaneously. The time differential is the time required for the TRIGGER message to travel from one device to the next. The alternative is to select and trigger each voltmeter individually.

SAMPLE APPLICATION PROGRAMS

Writing Programs

Earlier in this chapter we looked at a simple ac voltage measurement and developed a simple program for the 41C/CV calculator. That program illustrates the essentials of programming, namely; 1. a Label, 2. setting up the 3421A for the particular measurement(s), 3. triggering or executing the command, and 4. inputting the results. Of course, the program must also have an END statement. For more specific information on programming the 41C/CV, refer to the Owner's Handbook and Programming Guide.

Initialization

The following program locates the 3421A in the HP-IL loop (finds its address) and selects it to receive information. This is especially important if more than one device is in the loop. This program is used by the rest of the example programs in this chapter. The initialization program should be run before any other command or program is executed. This program need only be executed once unless an instrument is turned off or the loop is broken to remove or insert an instrument. The 82160A HP-IL Module should be inserted in the calculator before entering the program.

SAMPLE APPLICATION PROGRAMS (Cont'd)

Initialization Program

Keystrokes	Comments	Display
PRGM		
GTO . .		
LBL ALPHA INI3421 ALPHA	INI3421 is the program name.	01 LBL INI3421
XEQ ALPHA AUTOIO ALPHA	Sets interface to AUTO mode.	02 AUTOIO
CF 17	Specifies normal end-of-line operation.	03 CF17
ALPHA HP3421A ALPHA	3421A identity.	04 HP3421A
XEQ ALPHA FINDID ALPHA	Searches for HP3421A.	05 FINDID
XEQ ALPHA SELECT ALPHA	Selects 3421A	06 SELECT
RTN	Returns to mainline program.	07 RTN
GTO . .		PACKING
PRGM		

The initialization program has now been entered. If you have not yet connected your 3421A into the loop, do so now. Remember to turn the calculator off before connecting any instrument to the loop. The initialization program will not be lost in the calculator with power turned off.

SAMPLE APPLICATION PROGRAMS (Cont'd)

Running the Program

To run the initialization program, execute the following command:

XEQ **ALPHA** INI3421A **ALPHA**

The calculator will return with the HP-IL address of the 3421A. Now, let's go one step further and assign this program to the calculator **TAN** key. This will make execution easier in the future.

■ **ASN** **ALPHA** INI3421 **ALPHA** **TAN**

Now, when you want to execute the program, put the calculator in the USER mode and press the **TAN** key. The following is the -hp-Model 82153A Wand bar code for the initialization program.

```
01*LBL "INI3421"
02 AUTOIO
03 CF 17
04 "HP3421A"
05 FINDID
06 SELECT
07 RTN
08 .END.
```

INITIALIZE

PROGRAM REGISTERS NEEDED: 5

ROW 1 (1 : 2)



~ ROW 2 (3 : 6)



ROW 3 (5 : 8)



GTO



SAMPLE APPLICATION PROGRAMS (Cont'd)

3421A Front Panel

This 41C/CV program allows the calculator to serve as a remote front panel for the 3421A. The top two rows of keys and the shifted keys of the top row are defined by the program as the 15 main functions of the 3421A. The key assignments are shown in the keyboard overlay below. The functions are automatically assigned 41C/CV Local Labels A through J and ■ through e (shifted A through E). This is an excellent program when used to setup and test your system.

Operation of the program is simple. Load the program, either manually by the keyboard or using the -hp- 82153A Wand and Bar Code, and assign "FP" to the shifted R/S key. Make sure that all key assignments from the top two rows of keys are cleared. Put the calculator into the USER mode and press shift R/S to start the program. Remember to duplicate the keyboard overlay because many of the keys in the following examples are from the overlay.

Now if you want to make a DC Voltage measurement on channel 5, simply press: 5

DCV

To read the temperature on channel 9, press: 9

TEM

To write the value 32 to the digital I/O card in slot 1, press:

32

ENTER

1

WRT
RED

To reset the 3421A, press:

R/S

There are a few things to keep in mind when using this program. First, only one channel can be specified, no channel lists. Second, entries are only accepted while the 41C/CV is PAUSED. This means that the first key entry in the sequence may need to be held down until the calculator responds by displaying the key pressed. Other things to be aware of are:

1. Make certain that the INI3421 program is in the calculator.
2. Display format is fixed at ENG 5.
3. If "-----" is displayed, it means no readings are available yet.
4. Repeated readings are made by the program on the channel specified. Flag 19 is used in the program to indicate repeated sending of the command and reading of data.

SAMPLE APPLICATION PROGRAMS (Cont'd)

01+LBL *FP* 02 XEQ *INI3421* 03 INSTAT 04 CF 19 05 GTO 01 06+LBL A 07 *DCY* 08 XEQ *AX* 09 SF 19 10 GTO 02 11+LBL I 12 *TEM* 13 XEQ *AX* 14 SF 19 15 GTO 02 16+LBL C 17 *TWO* 18 XEQ *AX* 19 SF 19 20 GTO 02 21+LBL D 22 *FRQ* 23 XEQ *AX* 24 SF 19 25 GTO 02 26+LBL E 27 *RED* 28 XEQ *AX* 29 SF 19	30 GTO 02 31+LBL F 32 *CLS* 33 XEQ *AX* 34 CF 19 35 GTO 02 36+LBL G 37 *CLP* 38 XEQ *AX* 39 CF 19 40 GTO 02 41+LBL H 42 *OPN* 43 XEQ *AX* 44 CF 19 45 GTO 02 46+LBL I 47 *BIT* 48 XEQ *AX* 49 SF 19 50 GTO ■ 51+LBL J 52 *RS* 53 OUTA 54 CF 19 55 GTO 02 56+LBL a 57 *ACV* 58 XEQ *AX*	59 SF 19 60 GTO 02 61+LBL b 62 *REF* 63 XEQ *AX* 64 SF 19 65 GTO 02 66+LBL c 67 *FNO* 68 XEQ *AX* 69 SF 19 70 GTO 02 71+LBL d 72 *TOT* 73 XEQ *AX* 74 CF 19 75 GTO 02 76+LBL e 77 *WRT* 78 XEQ *AY* 79 CF 19 ■ GTO 02. 81+LBL 01 82 "-----" 83 AVIEW 84 SF 28 85 SF 29 86+LBL 02 87 ENG 5	88 PSE 89 INSTAT 90 FS? 05 91 TONE 5 92 FC? 00 93 GTO 02 94 IND 95 VIEW X 96 FS? 19 97 TRIGGER 98 GTO 02 99+LBL *AX* 100 FIX ■ 101 CF 28 102 CF 29 103 FS?C 22 104 ARCL X 105 OUTA 106 RTN 107+LBL *AY* 108 FIX ■ 109 CF 28 110 CF 29 111 ARCL ■ 112 *+* 113 ARCL Y 114 OUTA 115 RTN 116 .END.
--	--	---	--


FRONT PANEL

PROGRAM REGISTERS NEEDED: 45

ROW 1 (1 : 2)



ROW 2 (2 : 7)

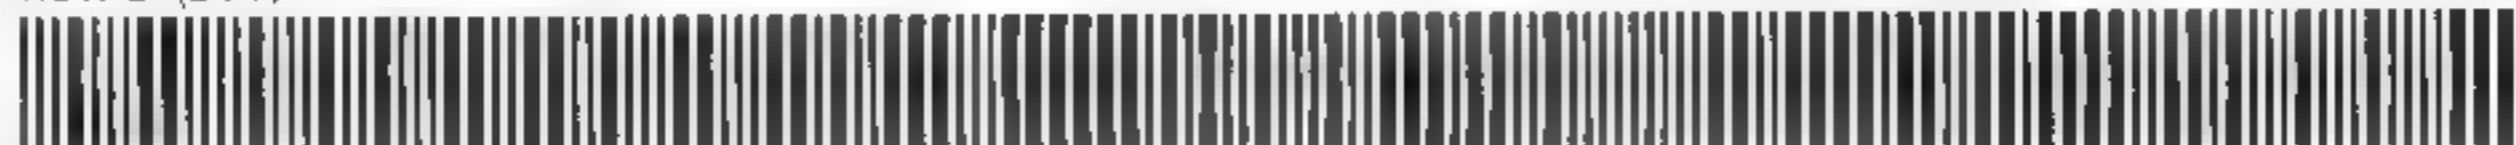

ROW 3 (7 : 12)



ROW 4 (12 : 17)



ROW 5 (17 : 21)



ROW 6 (22 : 26)



SAMPLE APPLICATION PROGRAMS (Cont'd)

FRONT PANEL

ROW 7 (26 : 30)



ROW 8 (31 : 35)



ROW 9 (35 : 39)



ROW 10 (40 : 44)



ROW 11 (44 : 48)



ROW 12 (49 : 54)



ROW 13 (55 : 59)



ROW 14 (59 : 63)



ROW 15 (64 : 68)



ROW 16 (68 : 73)




ROW 17 (73 : 78)




ROW 18 (78 : 82)



ROW 19 (82 : 89)

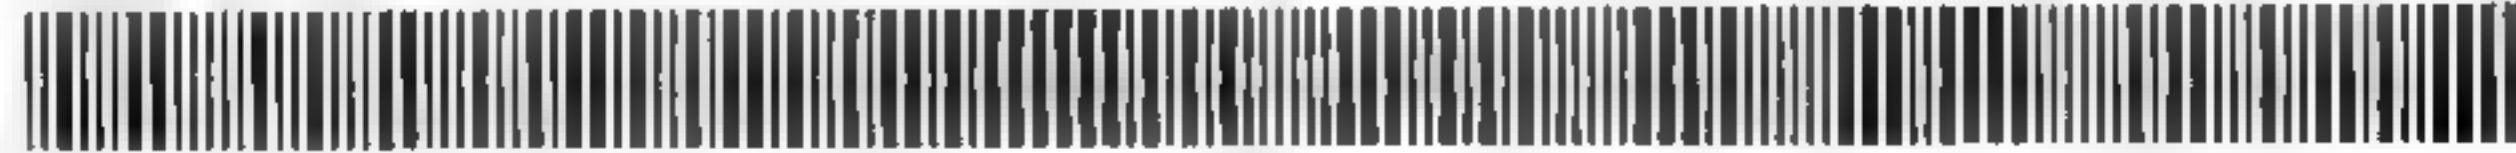

ROW 20 (89 : 95)

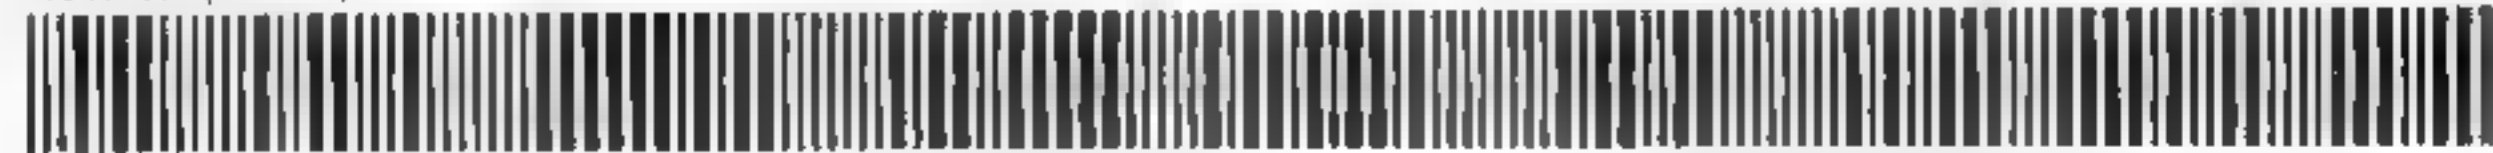

ROW 21 (96 : 100)



ROW 22 (100 : 107)



ROW 23 (107 : 111)




ROW 24 (112 : 116)



GTO



SAMPLE APPLICATION PROGRAMS (Cont'd)

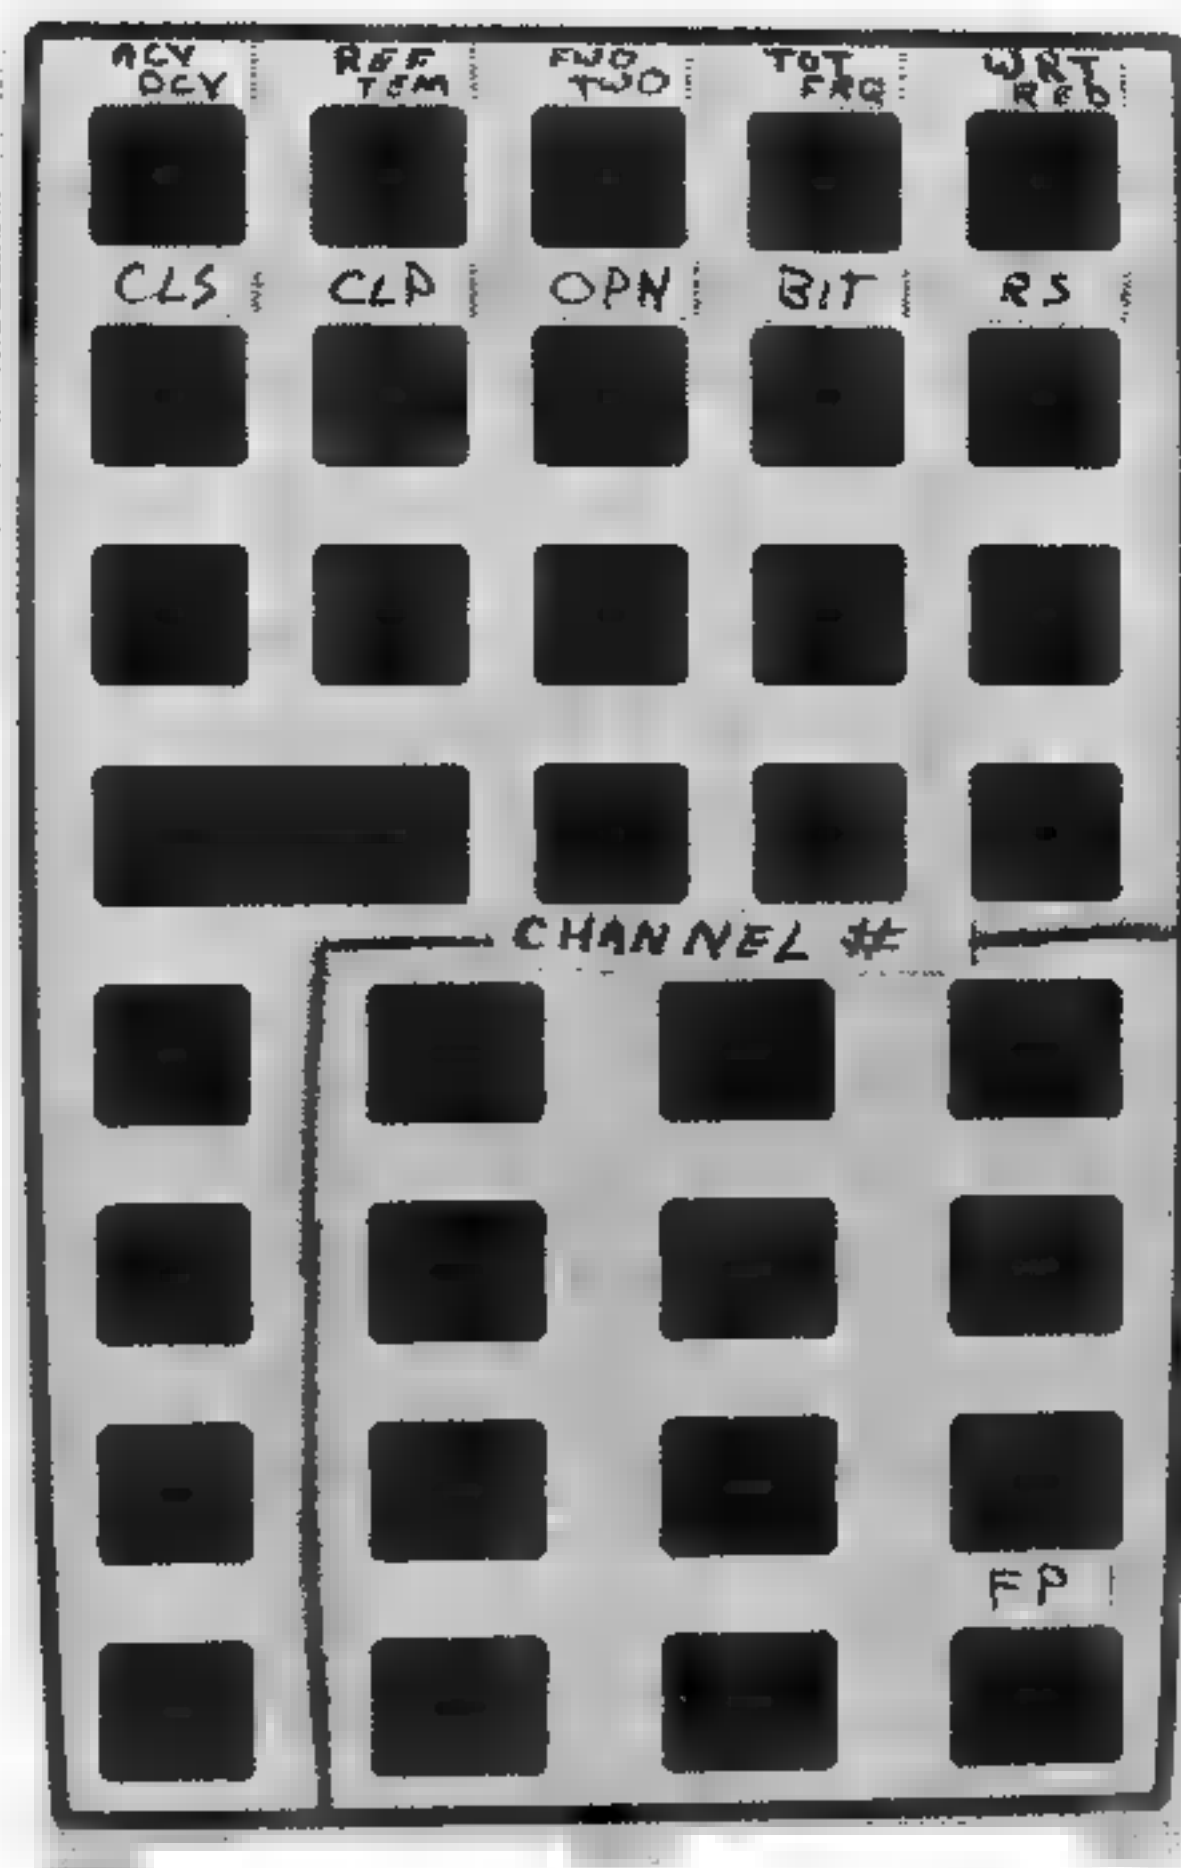

Sample Programs

The following three examples illustrate program writing with the -hp- 41C/CV. They also demonstrate the flexibility and programming power of the 3421A and 41C/CV combination. All three programs use the Initialization Program to set up the 3421A. In addition to the program listings, bar codes are also provided for use with the -hp- 82153A Wand.

Remember that these programs, or any programs, can be assigned to individual keys in the calculator. Also, with simple modifications, the programs can be incorporated as subprograms into other mainline programs.

TEMPERATURE MEASUREMENTS

(using a thermistor)

The thermistor temperature program computes the temperature, in degrees C, corresponding to the resistance of a thermistor. The program has been designed to work with thermistors exhibiting a 5.000 kOhm resistance at 25°C, such as a type 44007 (-hp- part number 0837-0164) or equivalent.

The program was written for a 2-wire resistance measurement on the specified channel. This will provide accurate results in most cases. For greater accuracy at high temperatures, a 4-wire resistance measurement should be made. Change line 06 to read: "FWO". This program is useful over a range of -80°C to +150°C.

The equation used to convert the measured resistance to a temperature is:

$$\text{Temperature} = \frac{1}{A + B(\text{LOG}(R)) + C(\text{LOG}(R))^3} - 273.15$$

where R is the measured resistance and A, B, and C are the conversion coefficients found in lines 24, 20, and 15, respectively. To use this program with a 2252 Ohm thermistor (25°C) change the coefficients to: 1.4709 E-3 (line 24), 2.3779 E-4 (line 20), and 1.0326 E-7 (line 15).


01♦LBL "THERMIS"	19 *
02 XEQ "INI3421"	20 2.361 E-4
03 "CHANNEL ?"	21 RCL 00
04 PROMPT	22 *
05 FIX 0	23 +
06 "TWO"	24 1.2855 E-3
07 "†"	25 +
08 ARCL X	26 1/X
09 OUTA	27 273.15
10♦LBL "MEAS"	28 -
11 TRIGGER	29 FIX 2
12 IND	30 CLA
13 LN	31 ARCL X
14 STO 00	32 "† DEG C"
15 9.3244 E-8	33 RVIEW
16 RCL 00	34 GTO "MEAS"
17 3	35 .END.
18 Y↑X	

TEMPERATURE MEASUREMENTS (Cont'd)

THERMISTOR

PROGRAM REGISTERS NEEDED: 18

ROW 1 (1 : 2)

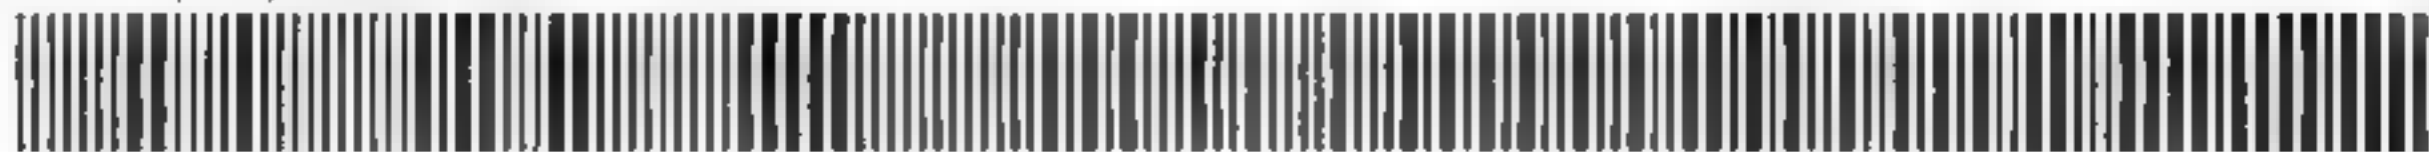

ROW 2 (2 : 3)



ROW 3 (3 : 7)



ROW 4 (8 : 11)



ROW 5 (11 : 15)



ROW 6 (15 : 20)



ROW 7 (21 : 25)



ROW 8 (26 : 31)



ROW 9 (32 : 34)



ROW 10 (34 : 35)



GTO



TEMPERATURE MEASUREMENTS

(using thermocouples)

There are two versions of the thermocouple temperature program. The first assumes that only type T thermocouples are used. Since the 3421A already has the conversion coefficients designed into it for type T thermocouples, this makes the programming task much easier.

The program is labeled TTEMP. It will prompt you for a channel number and then proceed to measure the thermocouple and display the temperature (in degrees C) on the calculator display.

The second version allows type J, E, K, R and S thermocouples. The program, THERMO, was written for J type thermocouples. If you will be using other types of thermocouples, the coefficients in lines 17, 19, 27, 29, 32, 35, 38, 41, 44, 47, 50, and 53 must be changed as per the table below.

Lines 11 through 23 provide the software compensation for the reference junction temperature. The equation for this compensation is: $V = P0 + T * (P1 + (T * P2))$. In this equation, T is the measured reference temperature and V is the compensated voltage. This voltage is added to the measured thermocouple voltage (line 23) to compensate for the reference junction. Lines 24 through 54 in the program convert this compensated voltage to a temperature, degrees C. The equation used is a ninth order polynomial of the form:

$$\text{Temperature} = P0 + VP1 + V^2P2 + V^3P3 + \dots + V^9P9.$$

Here, V is the compensated voltage and P0 through P9 are the conversion coefficients.

Thermocouple Type

Line Number	J	E	R	K	S
17	2.3E-8	4.5E-8	1.2E-8	1.6E-8	1.1E-8
19	5.053E-5	5.866E-5	5.334E-6	3.964E-5	5.442E-6
27	3.0840254E16	1.2777466E15	1.9280744E19	1.3828514E16	8.2663728E18
29	-5.3719255E15	-4.1055295E14	-2.9235505E18	-3.3991028E15	-2.8874849E18
32	3.79243843E14	5.3981272E13	1.7414495E17	3.4782347E14	2.0689294E17
35	-1.38014121E13	-3.7221944E12	-5.4842602E15	-1.9109E13	-6.79267949E15
38	2.7150838E11	1.4284958E11	1.01396299E12	6.0392855E11	1.2361123E14
41	-2.831128E9	-2.9690242E9	-1.13982593E12	-1.0820624E10	-1.327040E12
44	1.821297E7	3.049432E7	7.787787E9	9.9661057E7	8.477335E9
47	-1.75117E5	-2.05411E5	-3.27669E7	-3.82662E5	-3.26257E7
50	1.97509E4	1.61299E4	1.726456E5	2.48503E4	1.73545E5
53	-3.6E1	2.1E-1	-1.5E0	-5.1E-2	-1.4E0

TEMPERATURE MEASUREMENTS (Cont'd)

01*LBL "TTEMP"	10*LBL 01
02 XEQ "INI3421"	11 TRIGGER
03 "CHANNEL ?"	12 IND
04 PROMPT	13 CLA
05 "TEM"	14 ARCL X
06 "°"	15 "° DEG C"
07 ARCL X	16 RVIEW
08 OUTA	17 GTO 01
09 FIX 2	18 .END.

TTEMP

PROGRAM REGISTERS NEEDED: 9

ROW 1 (1 : 2)



ROW 2 (2 : 3)



ROW 3 (3 : 8)



ROW 4 (9 : 15)



ROW 5 (15 : 18)



01*LBL "THERMO"	16 ENTER↑	31 *	46 ■
02 XEQ "INI3421"	17 2.3 E-8	32 3.79243843 E14	47 -1.75117 E5
03 "CHANNEL?"	18 *	33 +	48 +
04 PROMPT	19 5.053 E-5	34 *	49 *
05 "DCV"	20 +	35 -1.38014121 E13	50 1.97509 E4
06 "°"	21 *	36 +	51 +
07 ARCL X	22 RCL 01	37 *	52 *
08 OUTA	23 +	38 2.7150838 E11	53 -3.6 E-1
09 IND	24 ENTER↑	39 +	54 +
10 STO 01	25 ENTER↑	40 *	55 ARCL X
11 "REF"	26 ENTER↑	41 -2.831128 E9	56 "° DEG C"
12 OUTA	27 3.0840254 E16	42 +	57 RVIEW
13 IND	28 *	43 *	58 .END.
14 CLA	29 -5.3719255 E15	44 1.821297 E7	
15 ENTER↑	30 +	45 +	

THERMO COUPLE

PROGRAM REGISTERS NEEDED: 32

ROW 1 (1 : 2)



ROW 2 (2 : 3)



ROW 3 (3 : 8)



ROW 4 (9 : 15)



ROW 5 (16 : 19)



ROW 6 (19 : 27)



ROW 7 (27 : 29)



ROW 8 (29 : 32)



ROW 9 (32 : 33)



ROW 10 (34 : 35)



ROW 11 (35 : 38)



ROW 12 (38 : 41)



ROW 13 (41 : 44)



ROW 14 (44 : 47)



ROW 15 (47 : 51)



ROW 16 (52 : 56)



ROW 17 (56 : 58)



GTO



DATA LOGGER

The following data logger program (LOGGER) illustrates the power and flexibility of the 3421A and 41C/CV combination. The program takes ten sets of DC voltage measurements from ten consecutive channels of the 3421A, for a total of 100 readings. The readings are stored on a cassette tape for future reference. Channel numbers measured are 10 through 19.

The second program, READ, demonstrates how easily data can be read from the cassette and listed on a printer. Again, there are several ways to enhance this program. For example, you could add a routine to plot the data on the printer instead of simply listing it. Of course, the LOGGER and READ could be combined to print or plot the data as it is being recorded.

Running The LOGGER Program

Make certain that the interface loop connections have been made between the 3421A, 41C/CV calculator, 82161A Digital Cassette Drive, and the 82162A Printer. Turn all of the devices on.

Before any data can be stored on the cassette tape, the tape must be initialized. This is done by executing the NEWM command (NEW Medium). Refer to the -hp- 82160A HP-IL Module Owners Manual.

When all connections have been made to the device under test and you are ready to begin, type:

[XEQ] **[ALPHA]** **LOGGER** **[ALPHA]**

How the Programs Work

Logger

Space for storing 100 readings must be allocated on the cassette tape. This space (or file) is created and given the name DATA. This is done in lines 03 through 05. Lines 06 and 07 are used to return to the beginning of the DATA file on the cassette prior to storing the measured data.

Register 00 is used as a loop counter to take ten sets of readings. The value 1.010 is stored in register 00 (lines 08, 09) and is incremented and tested in line 25.

DATA LOGGER (Cont'd)

Register 01 acts as a channel counter to specify which channel is to be measured. The value 10.019, representing channels 10 through 19, is stored in register 01 (lines 11 and 12). Registers 10 through 19 are temporary storage registers for the measurements taken. Line 20 stores the data in the register pointed to by register 01. Register 01 is incremented after each reading to point to the next empty register and channel to be measured by line 21.

Remember that program line 11 specified register 19 as the last register to store readings. If register 01 points to register 20 then the program prepares to store the ten readings on the cassette. Line 23 calls out registers 10 through 19 as data storage registers. The WRTRX command (line 24) writes the data, register by register, onto the cassette tape.

Register 00 is tested in line 25 to see if ten sets of ten readings have been made. If not, the program loops back (line 26) to label 00 (line 10). When ten sets of readings have been made the program ends.

Read

Lines 2, 3, and 4 are used to locate the beginning of the DATA file on the cassette tape. Register 00 is used to count the ten 'sets' of readings. The value 1.010 is stored in register 00 (lines 05 and 06) and is tested in line 12.

Lines 08 and 09 are used to read the measured values into registers 10 through 19. Note that these are the same registers used in the logger program to specify the channels to be measured. These particular registers are used in this program so that when the values are printed, lines 10 and 11, the printout will show the channel number along with the reading from that channel.


DATA LOGGER (Cont'd)

01*LBL "LOGGER"	15 FIX 2
02 XEQ "INI3421"	16 "DCV"
03 "DATA"	17 ARCL X
04 100	18 OUTA
05 CREATE	19 IND
06 0	20 STO IND 01
07 SEEKR	21 ISG 01
08 1.010	22 GTO 01
09 STO 00	23 10.019
10*LBL ■	24 WRTX
11 10.019	25 ISG 00
12 STO 01	26 GTO 00
13*LBL 01	27 .END.
14 RCL 01	

LOGGER

PROGRAM REGISTERS NEEDED: 12

ROW 1 (1 : 2)

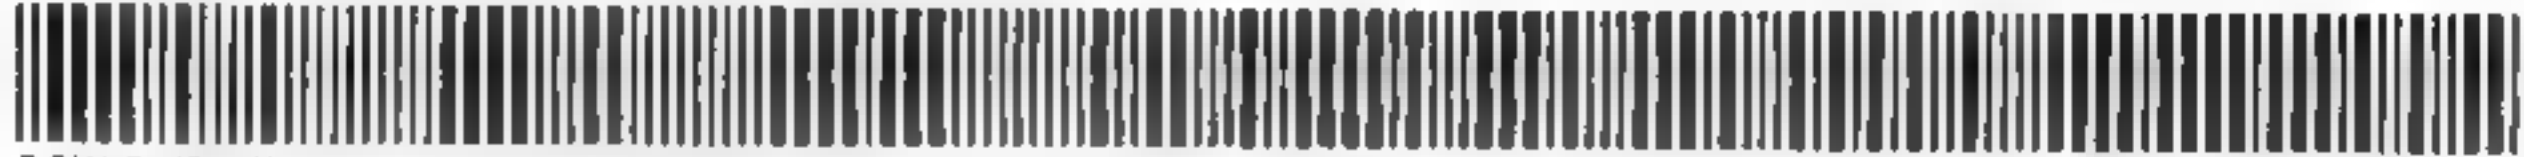

ROW 2 (2 : 4)



ROW 3 (4 : 10)



ROW 4 (11 : 16)



ROW 5 (16 : 22)



ROW 6 (22 : 26)



ROW 7 (27 : 27)



GTO




DATA LOGGER (Cont'd)

```
01*LBL "READ"  
02 "DATA"  
03 0  
04 SEEKR  
05 1.010  
06 STO ■  
07*LBL ■  
08 10.019  
■ READRX  
10 10.019  
11 PRREGX  
12 ISG 20  
13 GTO 01  
14 .END.
```

READ

PROGRAM REGISTERS NEEDED: 7

ROW 1 (1 : 2)

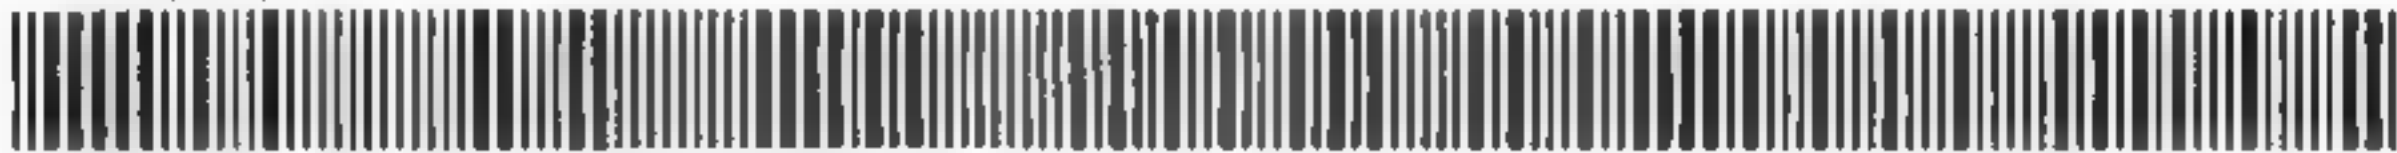

ROW 2 (3 : 8)



ROW 3 (8 : 11)



ROW 4 (12 : 14)



GTO



•



•

USING THE ADVANCED COMMANDS

The Advanced Commands given in the Command Table (the blue pages at the end of the previous chapter) can also be executed from the 41C/CV. They follow the same constraints as the Standard Commands. Refer to the section on Programming Hints earlier in this chapter.

When more than one command is sent to the 3421A, such as 'F1RAZ1', the commands are executed as they arrive. This is especially important to understand with trigger commands. For example, if you sent 'T1T3', the T1 command would be asserted only momentarily until the T3 command arrived. For this reason, it is best to make the trigger command the last statement in the command string. In this way, the 3421A will be set up for the measurement before the internal voltmeter is triggered for the measurement.

When a multicharacter command is received by the 3421A, and one character does not fit into the syntax of the command, a syntax error will result. For example, if you send 'FR2'; the 3421A does not recognize 'FR' as a legitimate command. Therefore there will be a syntax error. However, the 3421A will attempt to execute any command it can, and since it recognizes 'R2' it will go to the R2 range.

A terminator may have to be added between some commands to act as dividers. Suitable terminators are colons(:) and semicolons (;). For example, when specifying a channel list followed by other commands, a terminator must be used: 'LS0-9:F1RAZ1'.

CHAPTER 5


44462A

10 Channel Multiplexer Option (Option 020)

Introduction

Each 44462A assembly provides 10 channels to switch signals to the 3421A voltmeter, counter or to external instruments. Each relay consists of two sets of low thermal offset contacts; one set for the HIGH terminal and one for the LOW terminal. The relays exhibit low thermal offset characteristics making them ideal for precision low level measurements of thermocouples, etc. In addition, two of the relays may be configured as actuators for controlling motors, alarms, etc.

With two 44462A assemblies in the 3421A, 4-wire resistance measurements may be made. This is because the 3421A allows channel pairs (1 per relay assembly) to be closed simultaneously. This is important when measuring RTD's or other resistive transducers.

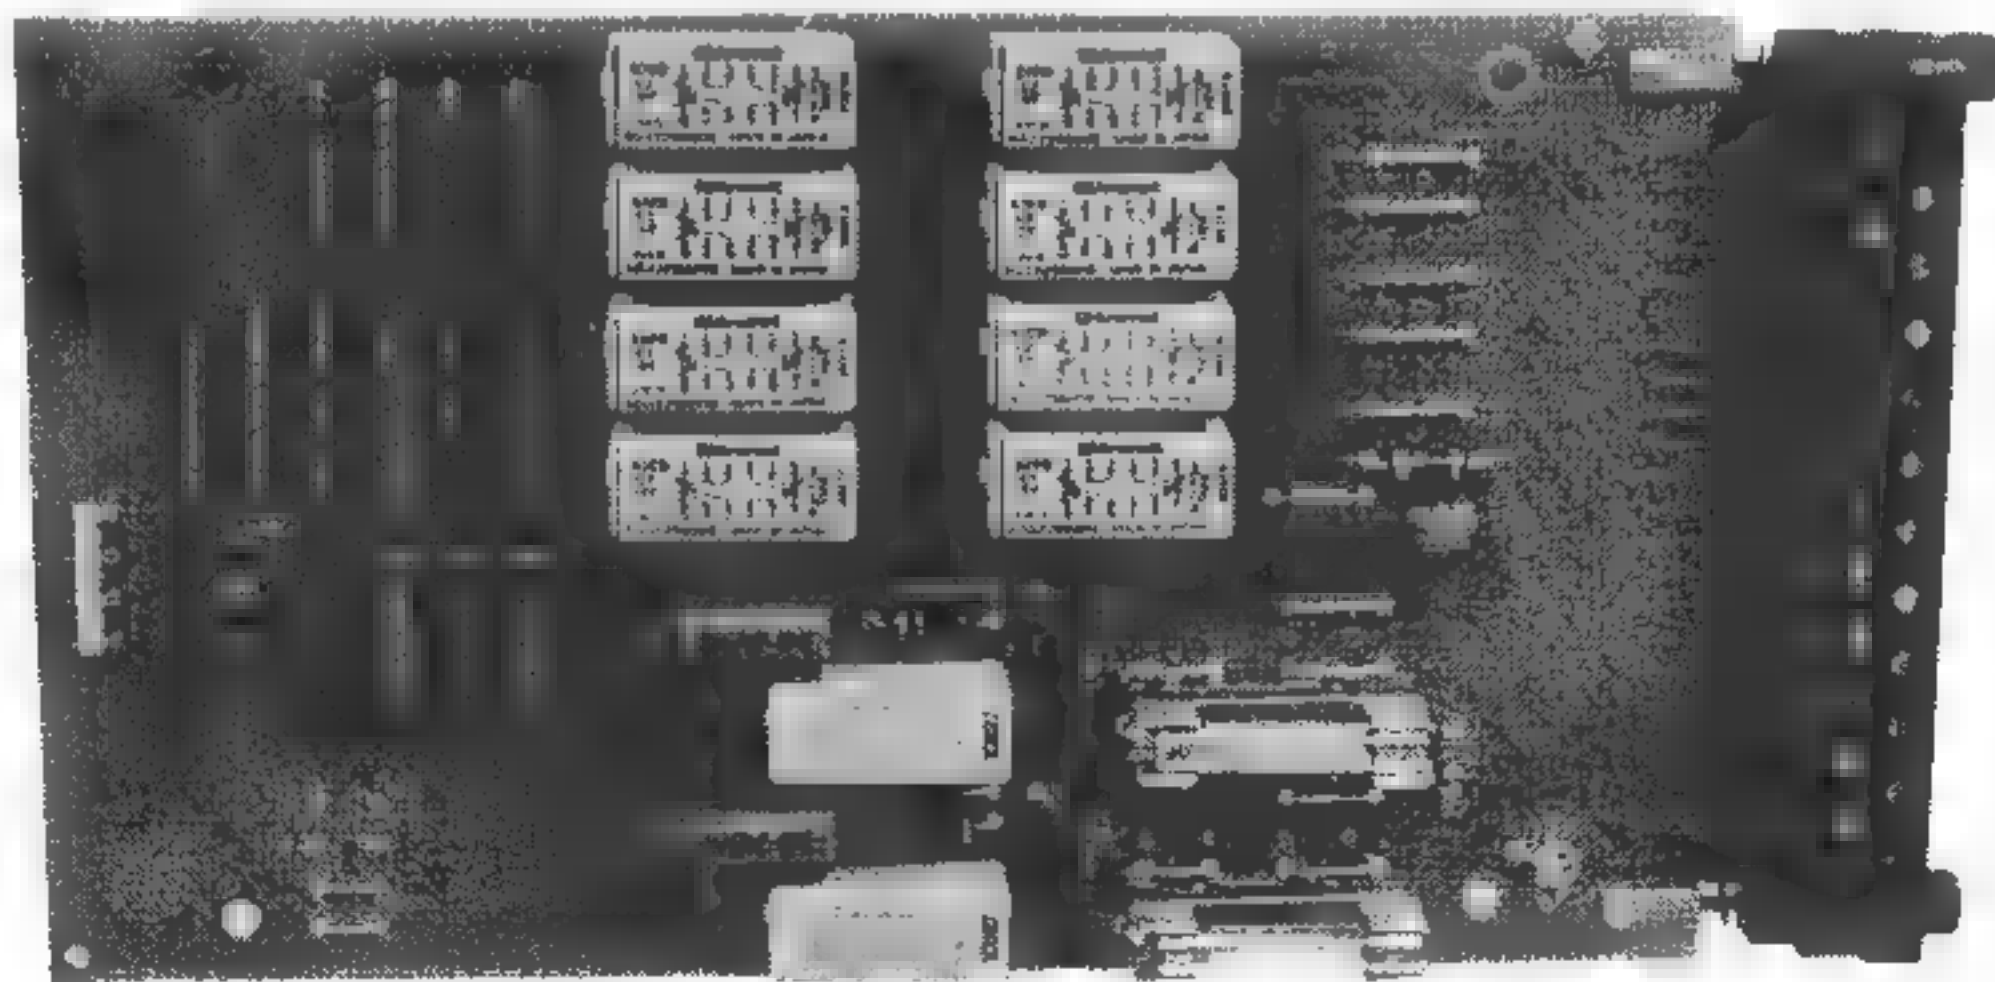

In this chapter you will learn how to employ the 44462A 10 Channel Multiplexing Assembly for various types of analog signal measurements and actuating. The powerful 3421A instruction set makes the option easy to use. Typical uses include voltage, temperature, 2- and 4-wire resistance, and frequency measurements. Most examples are accompanied by a BASIC language program (such as used by the -hp- 85) to demonstrate the instruction. You'll also see many application examples such as using attenuators and 4-20mA current loop transducers.

Channels

A channel, as used in this chapter, refers to an individual relay on a 44462A assembly. Therefore, when we speak of closing ■ channel, we are referring to closing a relay. Channel addresses are used to indicate a specific relay in a specific slot in the 3421A. In other words, channel address 12 means channel number 2 in slot 1. We will see more on channel numbering later.

Most of the channels on the 44462A can be configured in different ways to satisfy particular requirements. For example, the first two channels on each assembly can be configured either as actuators (a simple switch closure to turn on or off) or as multiplexers (to connect analog signals to the voltmeter or counter). When properly configured, the 3421A is able to sense which channels are configured as actuators and which channels are multiplexers.

All but the last two channels on each assembly can have attenuators built into the signal path. This will be discussed later in this chapter.

IMPORTANT NOTICE ON CHANNEL CONFIGURATION

The 44462A assembly is shipped from the factory with the following channel configuration:

Channels	Configuration
0-1	Actuators
2	Multiplexing with a 10:1 divider
3-9	Multiplexing

This configuration may need to be changed to fit your application. Jumper and channel configuration information for the service technician is provided in Chapter 8 of this manual. The simplified schematic in Figure 5-1 shows the factory configuration.

WARNING

Only qualified personnel with a knowledge of electronic circuitry should install or reconfigure the option boards. Installation and configuration information for this option board is provided in Chapter 8.

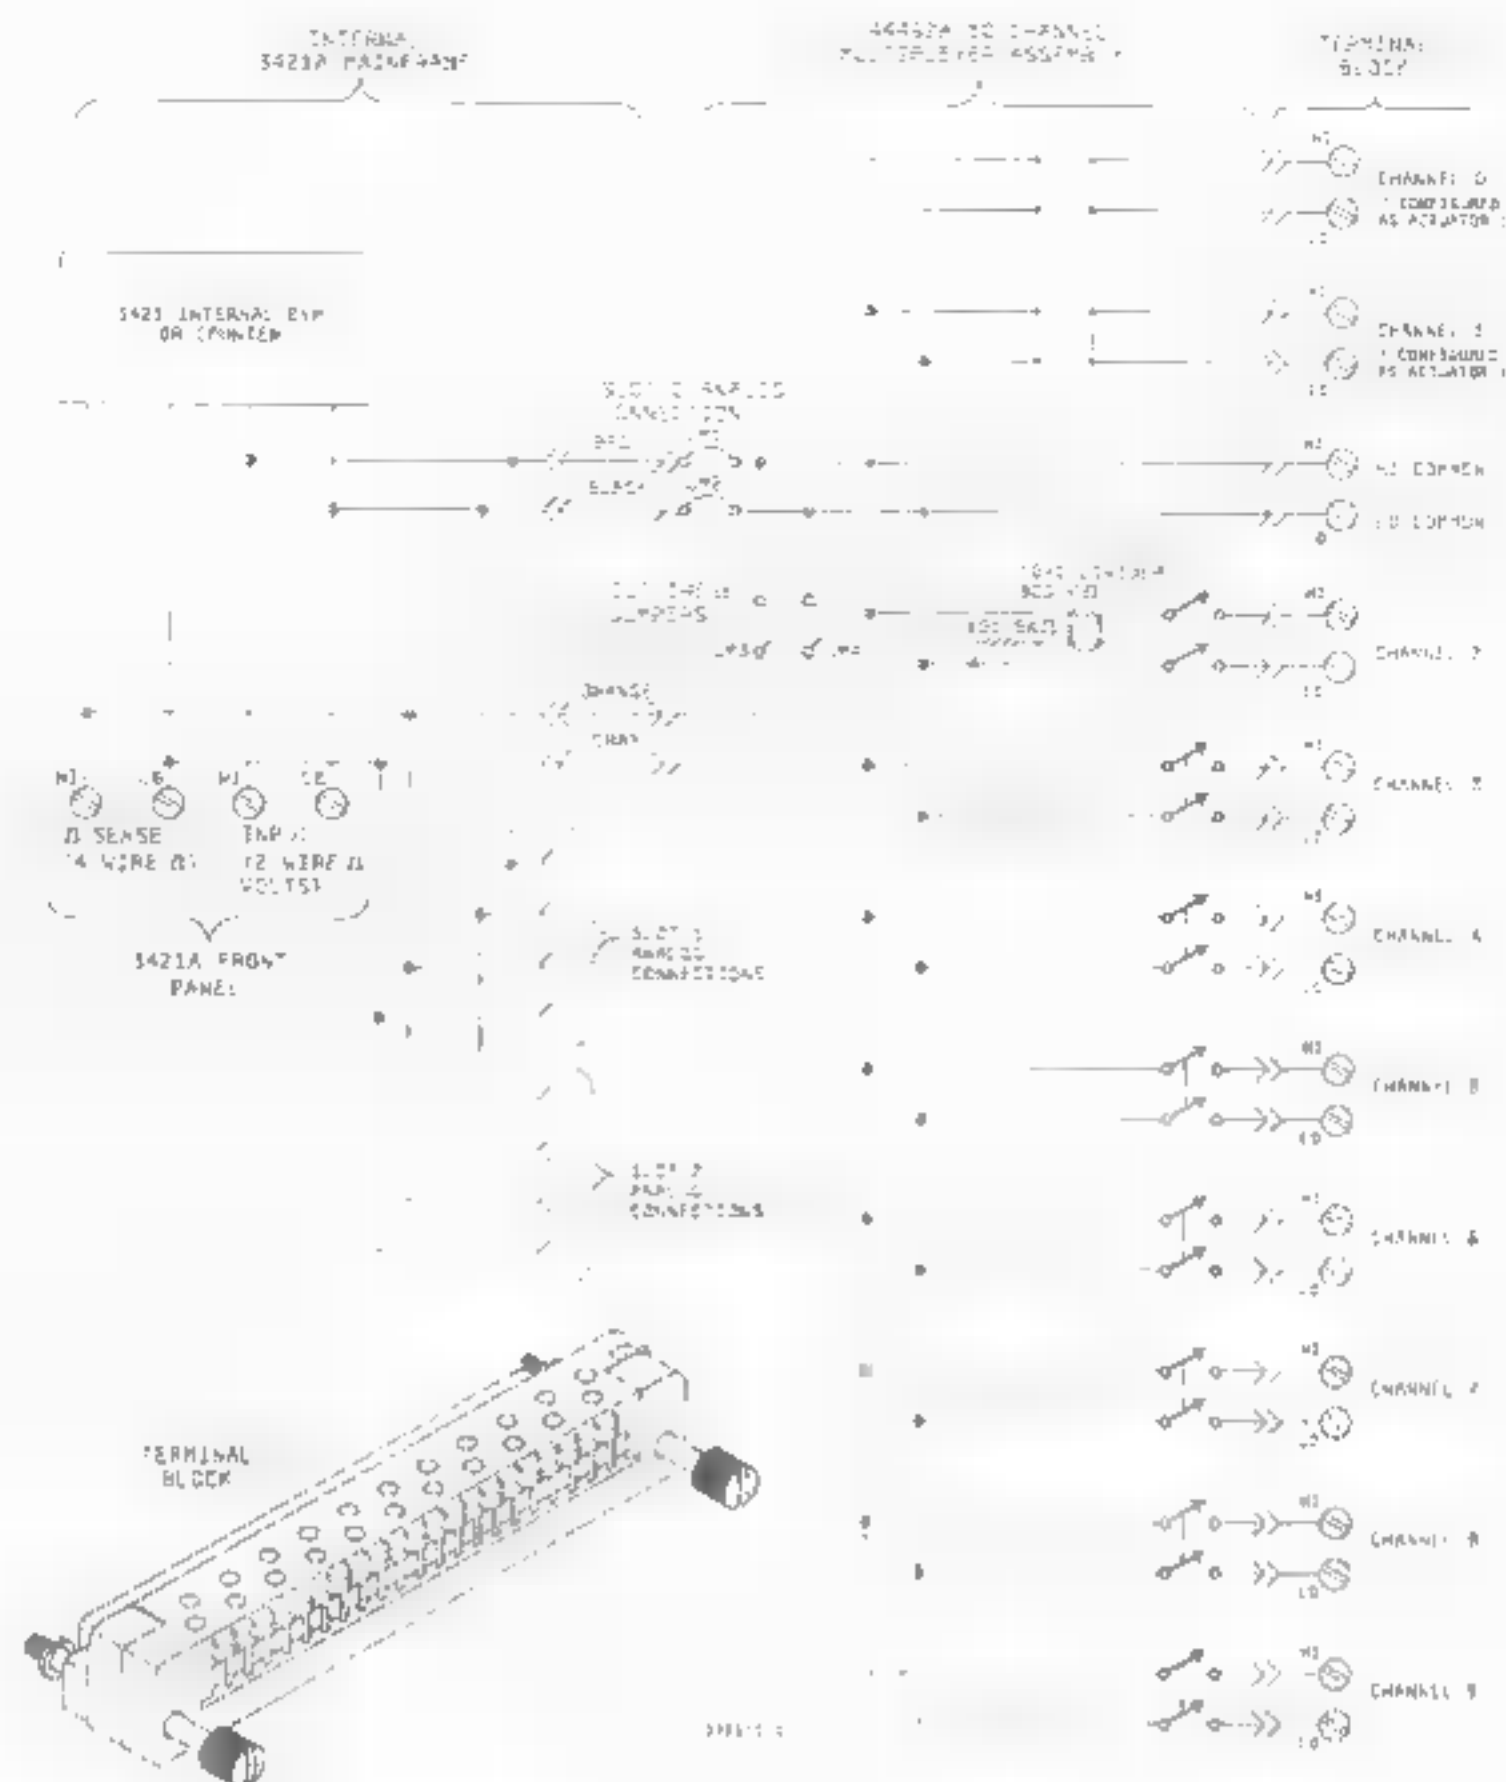


Figure 5-1. Simplified Schematic

Channel Numbering and Addressing

Channel numbers are repeated on each 44462A assembly. This is shown by the numbering on the terminal block edge connector. Channel addresses, however, are determined by which slot the 44462A assembly is in. For a 44462A assembly in slot 1, for example, channel number 7 would be addressed as 17. The following table shows the channel addressing scheme for the three different slots.

Channel # as shown on the terminal block	Channel address if assembly is in slot #:		
	Slot 0	Slot 1	Slot 2
0	00	10	20
1	01	11	21
2	02	12	22
3	03	13	23
4	04	14	24
5	05	15	25
6	06	16	26
7	07	17	27
8	08	18	28
9	09	19	29

Channel List

Many of the commands described in this chapter use an optional "Channel List." The channel list is a convenient method of grouping several channels under one type of measurement. If you need to measure the DC Voltage from several channels, you could use the command `DCV[x,y,...z]`. Where `[x,y,...z]` represents a list of channel addresses. The channel list can be loaded with a maximum of 30 channel addresses.

The channel list must follow a set of guidelines:

1. The default channel list (asserted at power on or reset) is all multiplexer addresses in numerical sequence. The channel list can be loaded with multiplexer channels by the `DCV`, `ACV`, `TWO`, `FWO`, `TEM`, `FRQ`, `LS`, or `LP` commands. It can also be loaded with digital input bit numbers by the `BIT` command.

2. Channel addresses are separated by commas (i.e., `DCV2,3,4,5`). However, a dash may be used to specify a contiguous set of channels (i.e., `DCV2-5`). When using the Advanced Commands, any command that specifies a channel must be separated from subsequent commands by either a colon (:) or a semicolon (;). For example, `F1RA1LS5-9;T3`. Do not use a comma.

3. To take burst readings on one channel, load the channel list with the channel number. For example, to take a burst of 30 DC voltage readings from channel 5, execute `DCV5-5`. If the last character in the command string is a comma, an error will be generated.

4. The command mnemonic determines what type of channel can be loaded into the channel list. In other words, if channel 1 is configured as an actuator, it should not be specified for any type of measurement (i.e., DCV1 or BIT1). If an attempt is made to load the channel list with an improper type of channel, ■ syntax error will be generated and the command aborted. One possible exception would be if a contiguous set of channels is specified, such as x-y, and some channels within that range (inclusive of x and y) are the wrong type of channels for the command. In such a list, the improper channels will not be loaded into the list, but the properly configured channels will be loaded. No error will be generated.

5. Leading zeros are ignored, that is, DCV00019 is the same as DCV19.

6. All syntax following a decimal point is ignored except for comma, dash, semicolon, Carriage Return (cr) or Line Feed (lf). DCV2.345 means DCV2.

7. Exponents are not allowed and cause a syntax error. The command will be aborted.

8. No more than 30 channels are accepted into the channel list. Legal numbers are 00 through 29.

9. All lower case letters are interpreted as upper case. In other words, Dc V 21 is interpreted the same as DCV21.

Measurements

Multiplexing (also known as switching or scanning) involves simply switching various inputs through the relays on the 44462A assembly to either the internal voltmeter or counter. The type of command (DCV for DC Volts, FRQ for frequency, etc.) determines where the signal is measured. Note also that signals can be input through the front panel terminals. This should only be done though if no relays are closed. Conversely, signal input through the relays can be output through the front panel terminals to an external voltmeter, counter, etc.

WARNING

All power sources being measured by the 3421A must be limited to 150VA maximum.

WARNING (Cont'd)

Damage to the 3421A or external devices may result if voltage inputs are made through the front panel terminals and the relay inputs simultaneously. Therefore, under no circumstances should ■ voltage be input through the front panel terminals while at the same time a voltage is being input through the relay assembly.

The following examples of using the 44462A multiplexer assembly are broken down into four measurement types: Voltage, Resistance, Temperature (using thermocouples), and Counter functions. Succeeding these is a brief discussion on attenuators. The 3421A Commands associated with each of these areas are also discussed. Actuators will be discussed later in this chapter. All program examples are for ■ BASIC language controller, specifically the -hp- 85.

Voltage Measurements

Voltage measurements, whether AC or DC, are easily made with the 44462A assembly. Each channel on the assembly is provided with independent HIGH and LOW connections on the terminal block. Furthermore, Channels 0 through 7 may be configured with ■ divider network to attenuate voltages. In fact, Channel 2 is provided with ■ jumper selectable 10:1 divider built-in. Later in this chapter you will see how attenuators are used. Information for the service technician to install the attenuators is provided in Chapter 8.

WARNING

In the power down mode, all relays on the 44462A Assemblies remain in their pre-power down state. In other words, if a relay (actuator or voltage input, etc.) was closed before power down, it will remain closed after power down.

DCV[x,y,...z]

The DCV command sets the voltmeter to DC volts function, autorange, autozero on, and 5½ digits resolution. The parameter [x,y,...z] sets up an optional channel list. A reading is taken from each channel and stored in the sequence of the channel list. When the 3421A is addressed to talk, the readings are sent in the order they were taken, i.e., the channel list order. The DCV command always opens the last channel before closing the next channel in the list. When the last channel has been measured, that channel stays closed. This is true unless no channel list is received. In that case, channels remain in the same state and one reading is taken.

$$ACV[x, y, \dots, z]$$

The ACV command acts just the same as the DCV command except that the AC volts function and 4½ digit resolution are selected.

An example of using the 44462A assembly to measure an AC voltage on channel 2 and DC voltages on channels 3 through 9 is demonstrated in the following figure. Remember that the relay assembly is in slot 0 of the 3421A.

Notice in Figure 5-2 that the 10:1 divider is used for the AC voltage measurement. Therefore, the measurement taken on channel 12 must be multiplied by 10 to get the actual voltage. The program shown beside the illustration shows how easy it is to make the measurements and return the results to the calculator.

The use of a 4-wire ohms measurement eliminates the error caused by the test lead resistance. The current through the thermistor is the same regardless of the lead resistance but the voltmeter measures only the voltage drop across the thermistor, not across the combined lead resistance. The 4-wire measurement is essential where

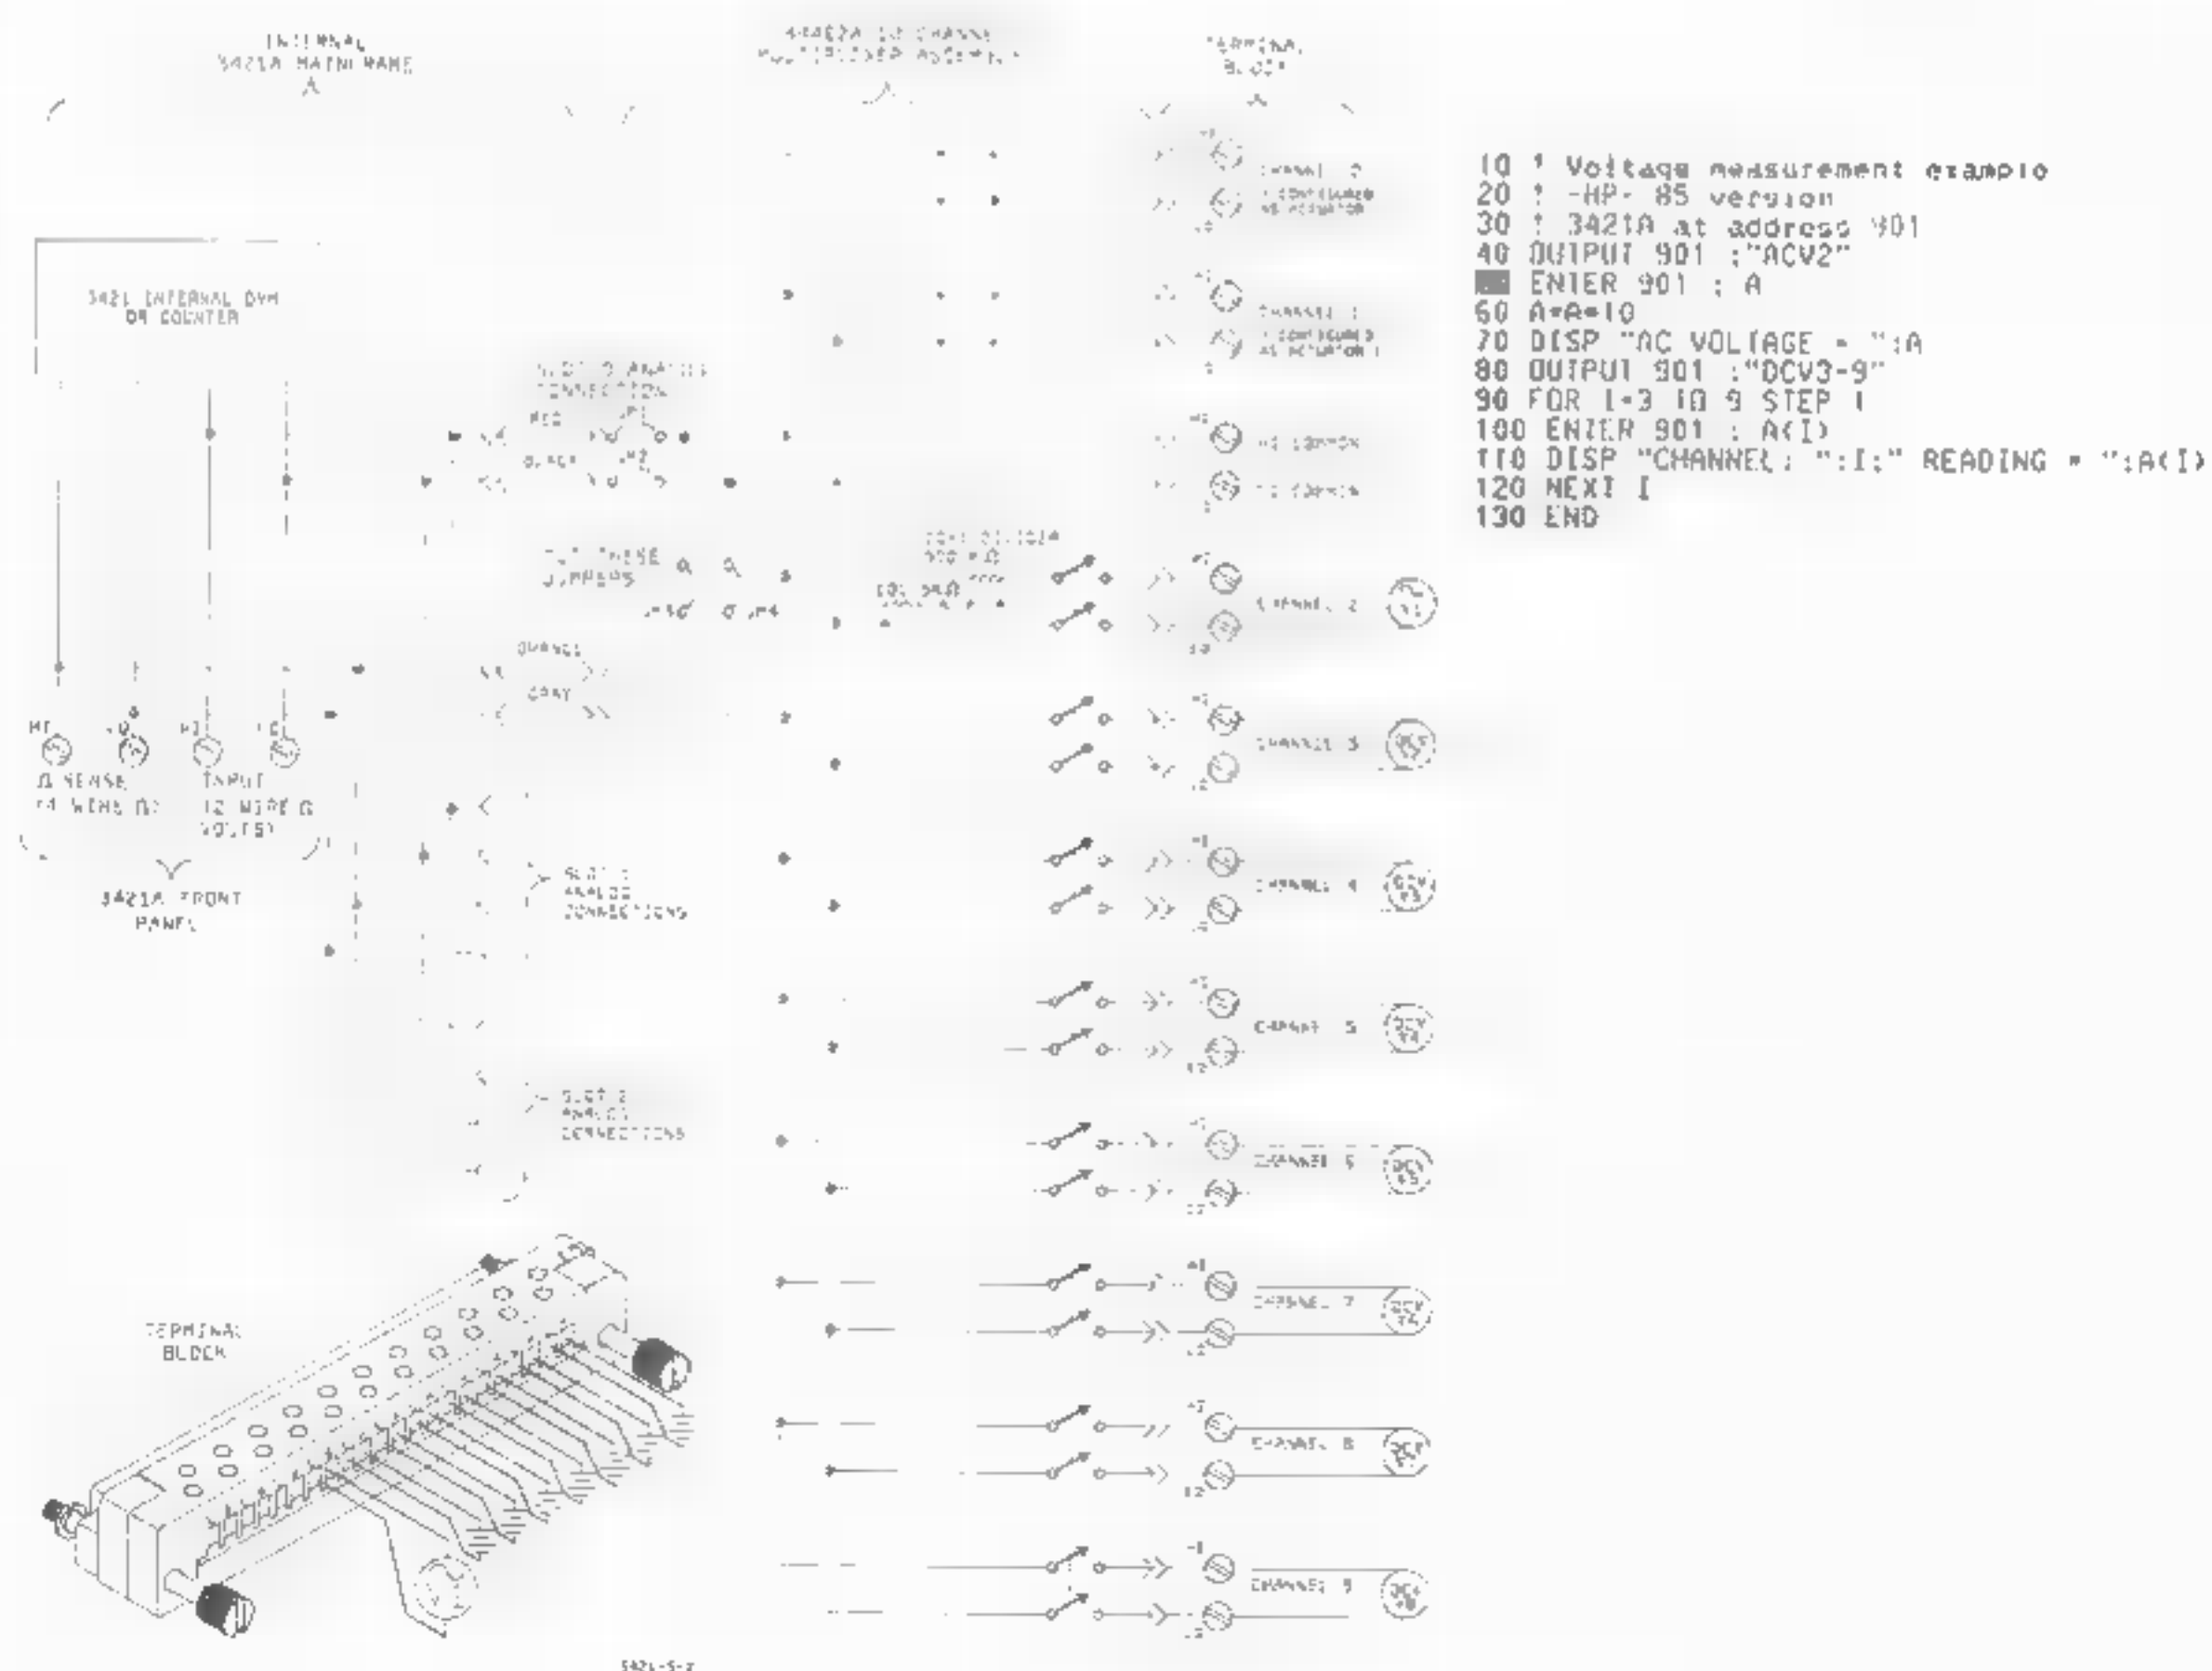


Figure 5-2. Voltage Measurements

Resistance Measurements

Resistance measurements, like DC voltage measurements, are easily made with the 44462A assembly. Resistance measurements are made by the 3421A sourcing a current through the unknown resistance. The DC voltmeter measures the attendant voltage drop across the resistor and calculates the resistance. Two types of resistance measurements can be made by the 3421A; 2-wire and 4-wire.

The 2-wire ohms mode is used most commonly when the resistance of the test leads is not critical. Inaccurate results may occur when using the 2-wire ohms mode if the resistance of the test leads is very high. For example, suppose you are making a temperature measurement using a thermistor (2.252 kOhms @ 25°C). This thermistor is 40 feet away from the 3421A. At 20°C the thermistor will have a resistance of 2814 ohms. However, at 20°C, 40 feet of #24 A.W.G. copper wire has a resistance of 1.02 ohms. Two wires, each 40 feet long would produce an error of 2.04 ohms. Using a 2-wire ohms measurement results in a 1% resistance error. In addition, the 3421A has a 2-wire Ohms offset of up to 4 ohms, adding an other 1.5% error. See Figure 5-3.

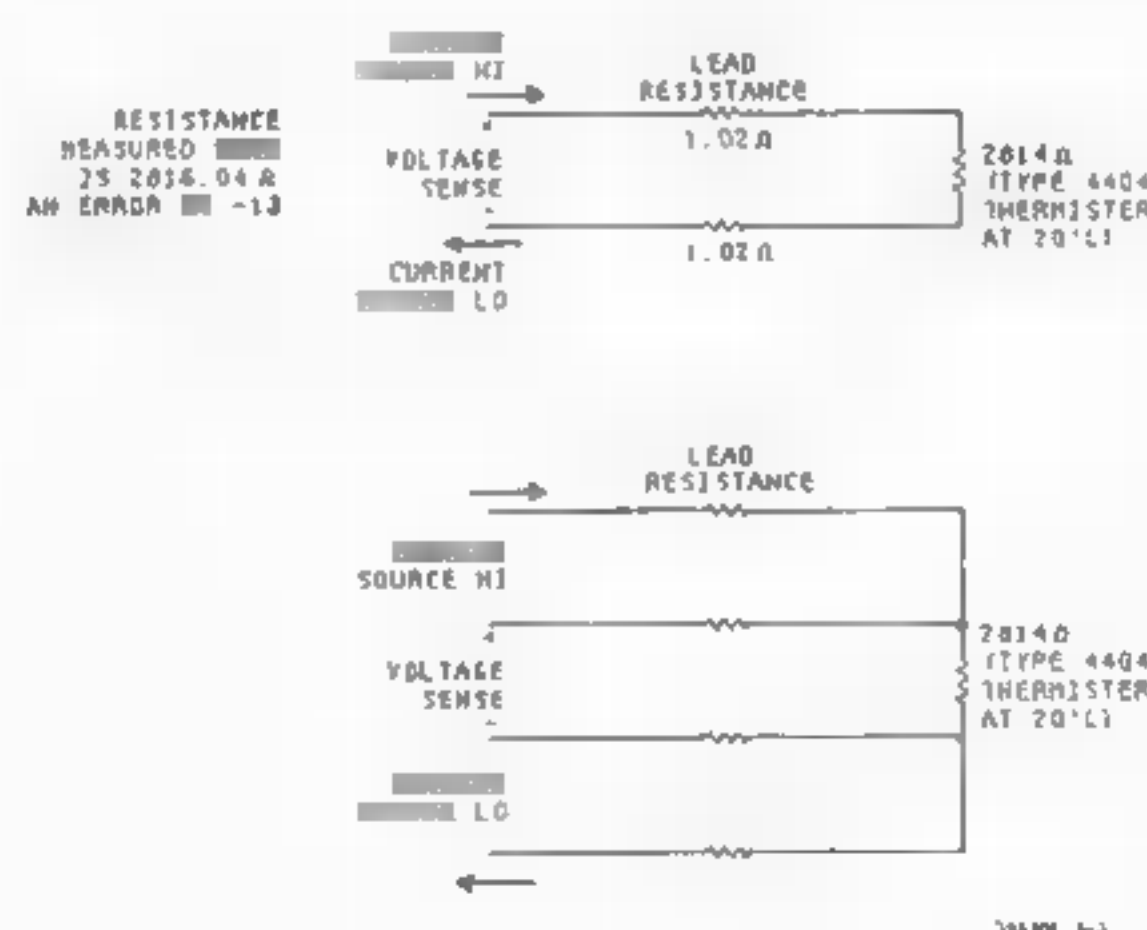


Figure 5-3. 2-Wire vs. 4-Wire Resistance Measurements

The use of a 4-wire ohms measurement eliminates the error caused by the test lead resistance. The current through the thermistor is the same regardless of the lead resistance but the voltmeter measures only the voltage drop across the thermistor, not across the combined lead resistance. The 4-wire measurement is essential where long lead lengths are present or where the highest accuracy is desired. Two 44462A relay assemblies are needed for 4-wire resistance measurements, one with the 4-Wire Ohms Source jumpers in place and the other with the 4-Wire Ohms Sense jumpers in place.

TWO [x,y,...z], 2-Wire Resistance Measurements

Figure 5-4 illustrates the procedure for making 2-wire resistance measurements. The command for a 2-wire measurement is `TWO [x,y,...z]`. `TWO` represents Two Wire Ohms. The parameter `[x,y,...z]` is the channel list to specify which channels to make the measurement on. In the figure below, channels 2 through 5 and channels 8 and 9 are used for the resistance measurement. Therefore, the command to make those measurements could be: `TWO2-5,8,9`. This is demonstrated in the sample program associated with the illustration.

The TWO[x,y,...z] command acts identical to the DCV[x,y,...z] command except that a 2-wire resistance measurement is made.

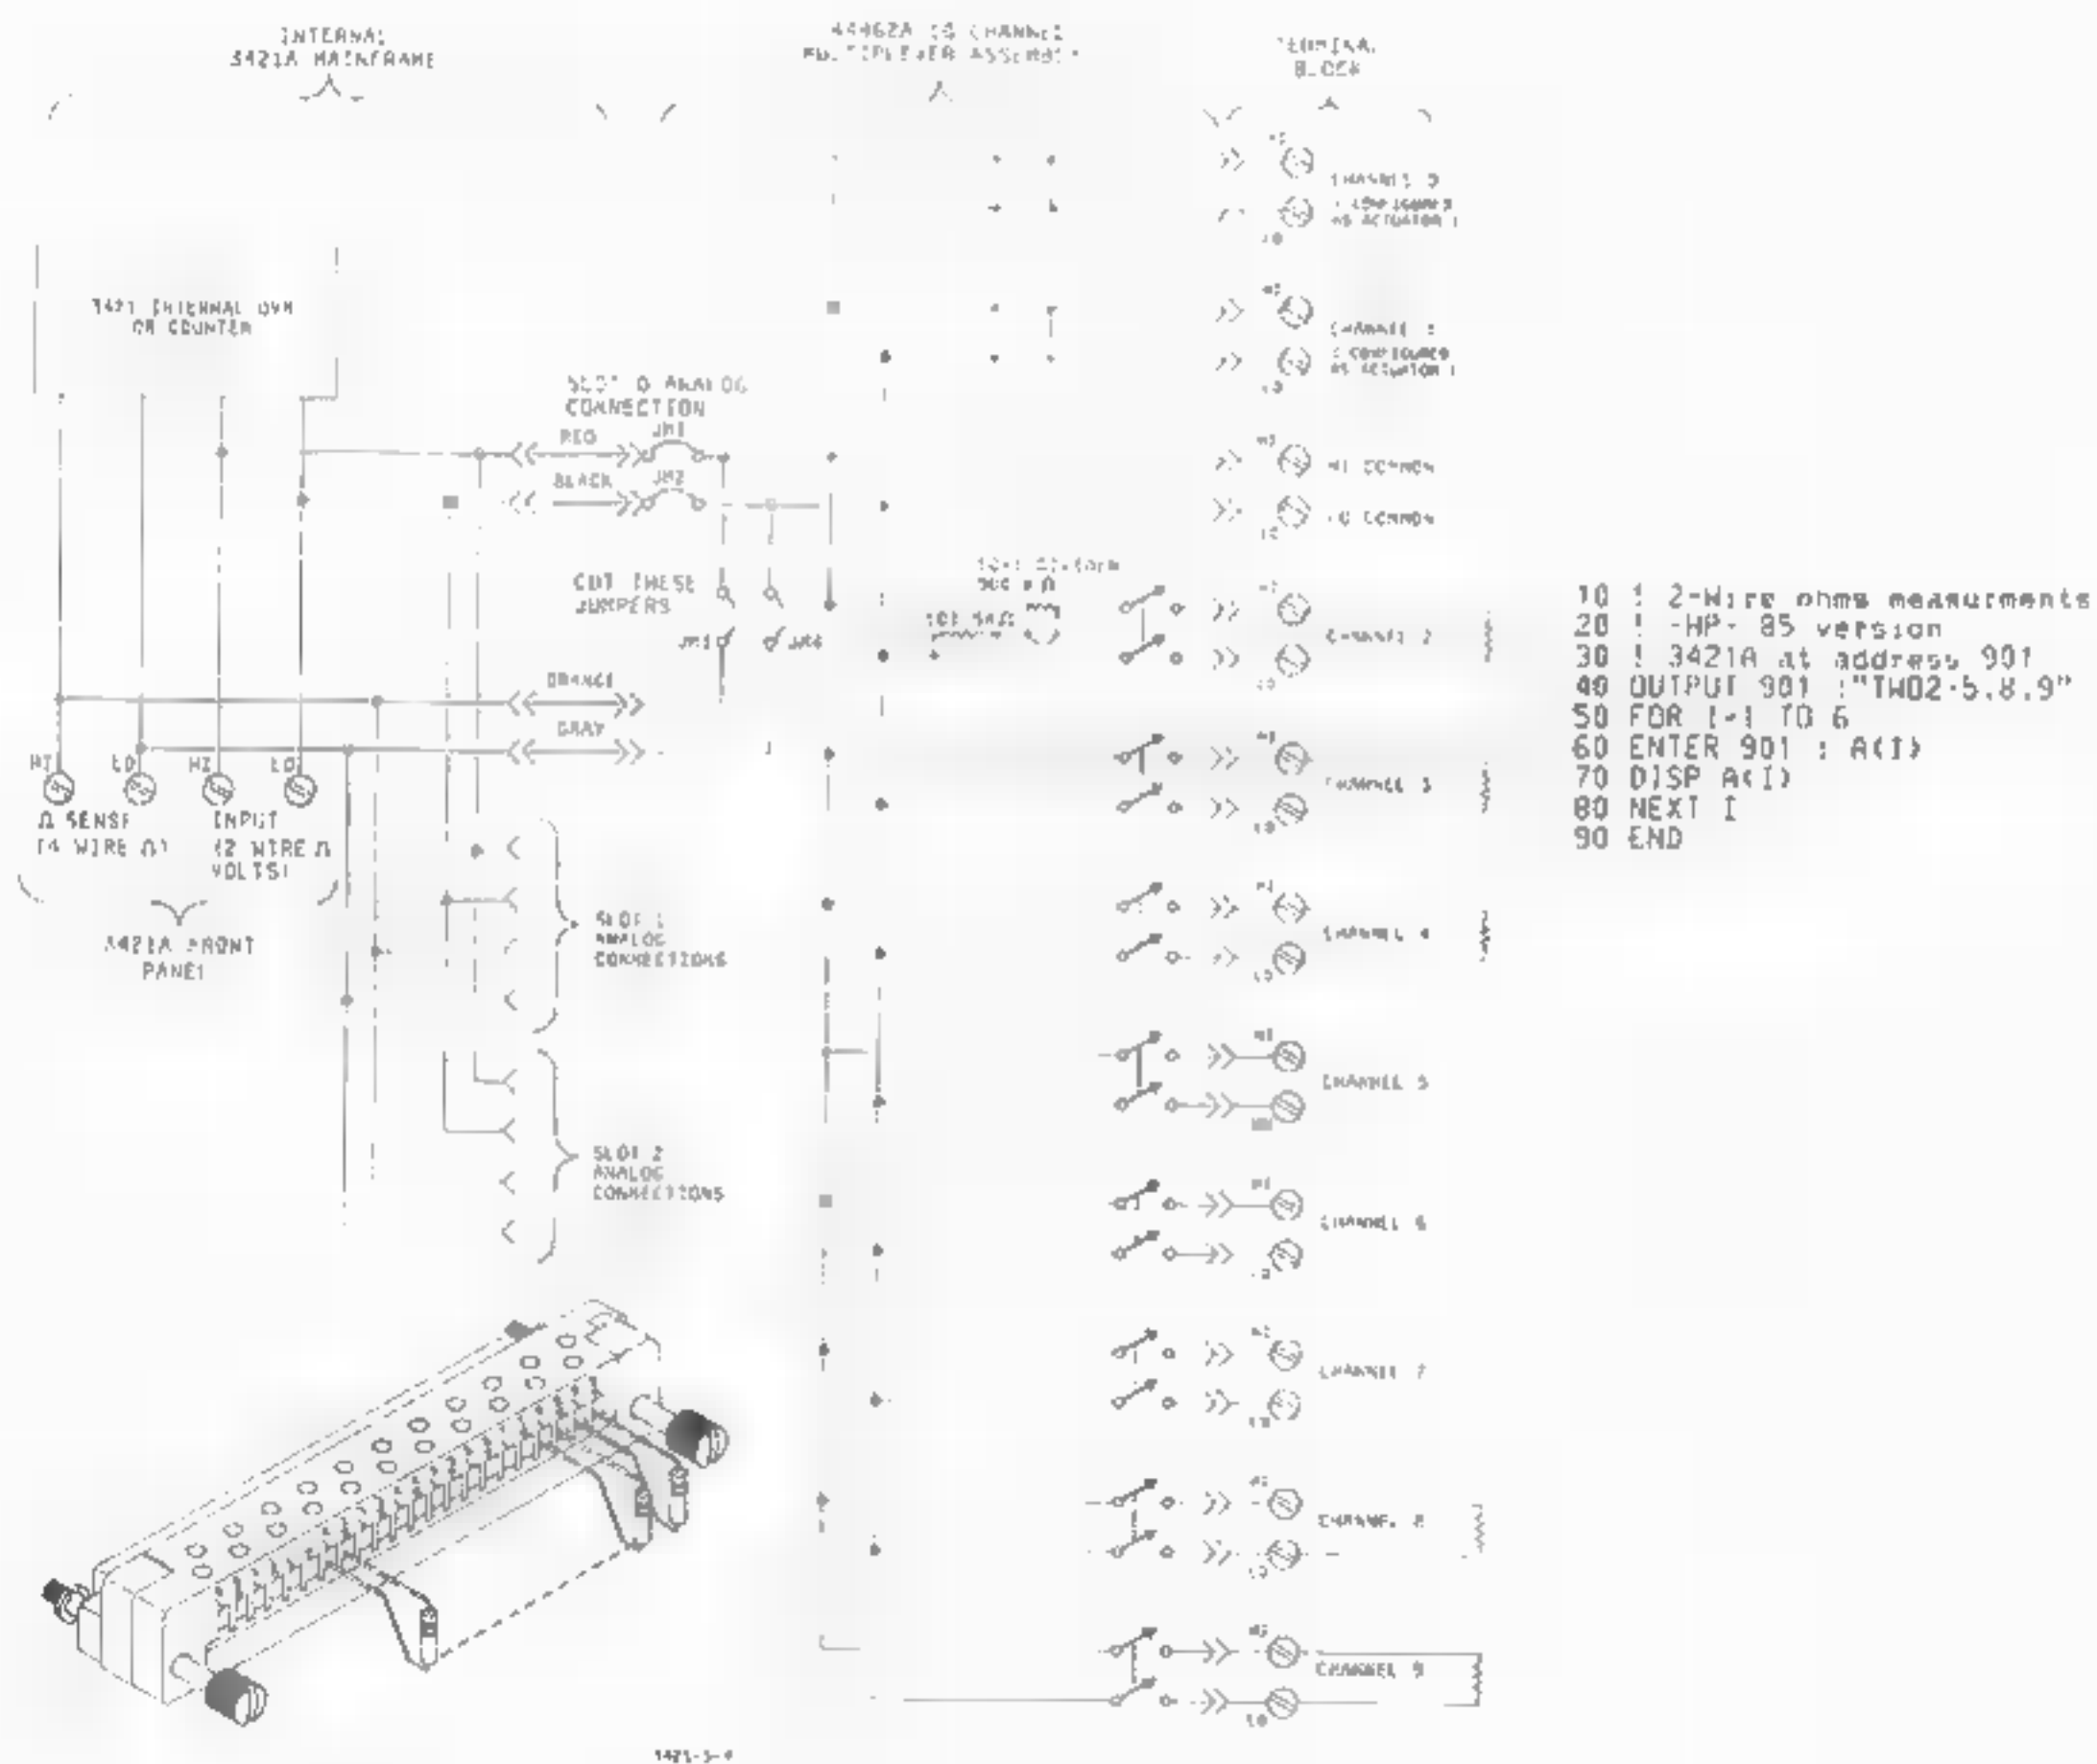


Figure 5-4. 2-Wire Resistance Measurements

FWO[x,y,...z], 4-Wire Resistance Measurements

4-wire resistance measurements are essential when the highest accuracy is required or where long lead lengths are present. Using the 3421A to make 4-wire measurements necessitates two 44462A relay assemblies. As mentioned previously, the relay assemblies will require a slight modification. Information for the service technician to make this modification can be found in Chapter 8.

The FWO command acts identical to the TWO command except that a 4-wire resistance measurement is made. Ideally, all addresses in the channel list [x,y,...z] should be in the same decade, that is, the same 44462A board. This is because the channels are paired with [x+10,y+10,...z+10]. This is true unless [x,y,...z] are between 20 and 29, in which case they are paired with [x-20,y-20,...z-20].

CAUTION

Anytime a channel is specified with the FWO command, the 3421A will attempt to close the appropriate pair. If either the specified channel or its pair is not on a 44462A multiplexer assembly, an error will be generated but no other action will be taken. If both channels are on 44462A assemblies and are configured as multiplexers, both channels will be closed. Make certain that you know what is connected to both channels, and the configuration (i.e., actuator, etc.) before executing the FWO command.

Figure 5-5 demonstrates a typical 4-Wire Ohms measurement setup. The current source leads are connected to one relay assembly. This assembly must have jumpers JM3 and JM4 removed and JM1 and JM2 installed. A second 44462A assembly is used to connect the 4-Wire Ohms Sense Leads. This assembly must have jumpers JM1 and JM2 removed and JM3 and JM4 installed. The two assemblies must be placed in adjacent slots, i.e., 0 and 1, 1 and 2, or 2 and 0. This is because the 4-wire ohms command, FWO, closes two channels, one on each assembly.

For example, if one assembly is placed in slot 1 and the other assembly in slot 2, the command FWO12 would close channels 12 and 22. With this setup, all channels specified in the FWO channel list must be in the same slot, that is, slot 1.

Thermocouple Temperature Measurements

The 44462A assembly is designed for compensated thermocouple temperature measurements. This assembly utilizes an integrated circuit temperature sensor to determine the temperature of the terminal block. In performing a software compensated thermocouple temperature measurement, the following steps must occur:

1. Measure the temperature transducer voltage from the relay assembly and compute the terminal block temperature. This is known as the reference temperature. The Standard REF command will perform this step automatically.

2. Convert the terminal block temperature to a thermocouple reference voltage. The implementation of this step is dependent upon the type of thermocouple being compensated and allows the use of different thermocouple types on the same 44462A assembly.

3. Measure the voltage produced by the thermocouple.

4. Add the reference voltage (computed in step 2) to the voltage produced by the thermocouple to effect icepoint compensation.

5. Convert the sum total voltage (step 4) to a temperature in °C.

Note that if type T thermocouples are used, the 3421A TEM command performs all of these steps automatically and returns the measured temperature. However, if other thermocouple types are used, the 3421A can do steps 1 and 3, but the system computer must perform steps 2, 4 and 5. Examples are provided in both chapters 3 and 4 showing how this can be done and listing the necessary conversion coefficients.

TEM[x,y,...z], REF[x]

The TEM[x,y,...z] command follows the same constraints as the DCV[x,y,...z] command. The REF[x] command is used to measure the temperature of the reference junction (integrated circuit transducer) on the multiplexer assembly where channel 'x' is located. The answer returned is in degrees C. If channel 'x' is not specified, the REF command defaults to a 44462A assembly that has a relay closed. If there are no relays closed, the REF command goes to the 44462A assembly with the lowest slot number. If there are no 44462A assemblies, ■ syntax error is generated (see Status Byte in chapters 3 and 4) and the error message -8.88888E+8 is sent.

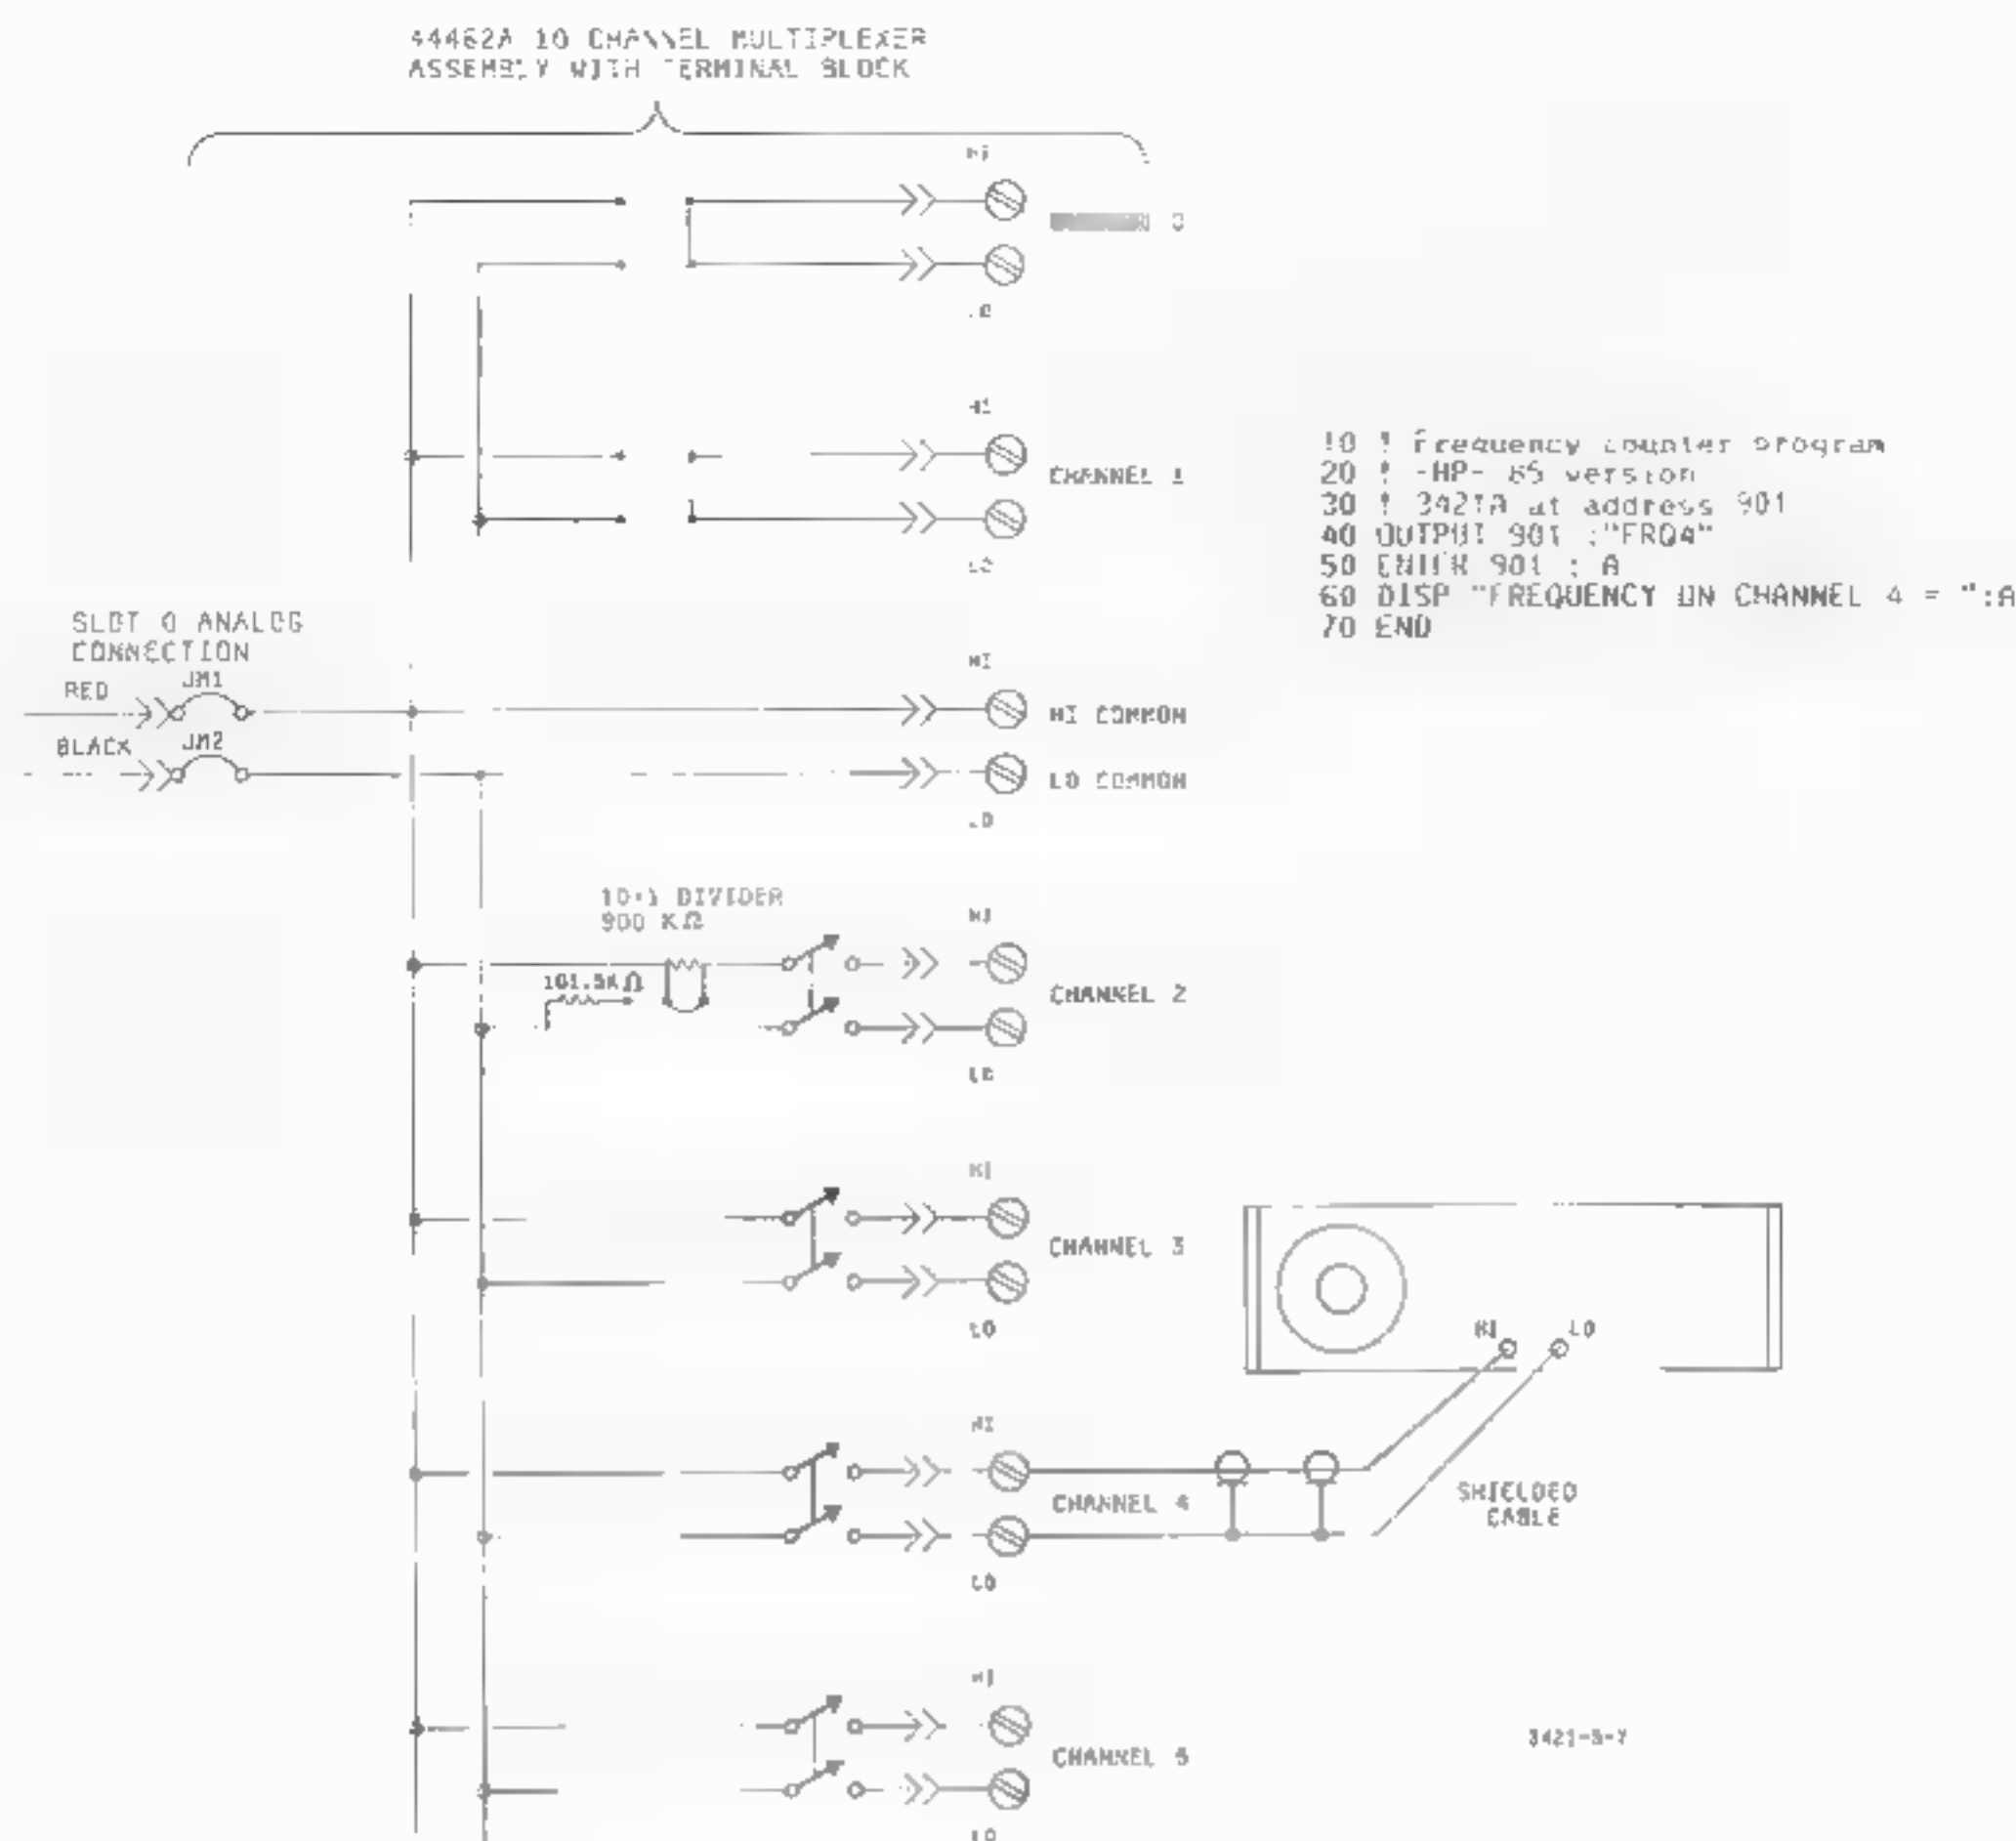


Figure 5-7. Frequency Measurements

FRQ[x,y,...z]

The FRQ[x,y,...z] command sets up the 3421A to the frequency counter mode, 1 second gate time, and 5 ½ digit resolution. If no channel list is sent, the frequency measurement is made from whichever channel is closed. If a channel list is sent, frequency measurements are made and stored from each channel in the sequence specified.

TOT[x]

The totalize command, TOT[x] is used to totalize events occurring on the channel specified by 'x'. TOT clears and starts the totalize counter. If a channel is not specified, TOT totalizes on the currently closed channel. If the channel specified is not a multiplexer channel an error is generated. Note that when the 3421A is addressed to talk, it will output the current subtotal from the counter without interrupting the counter.

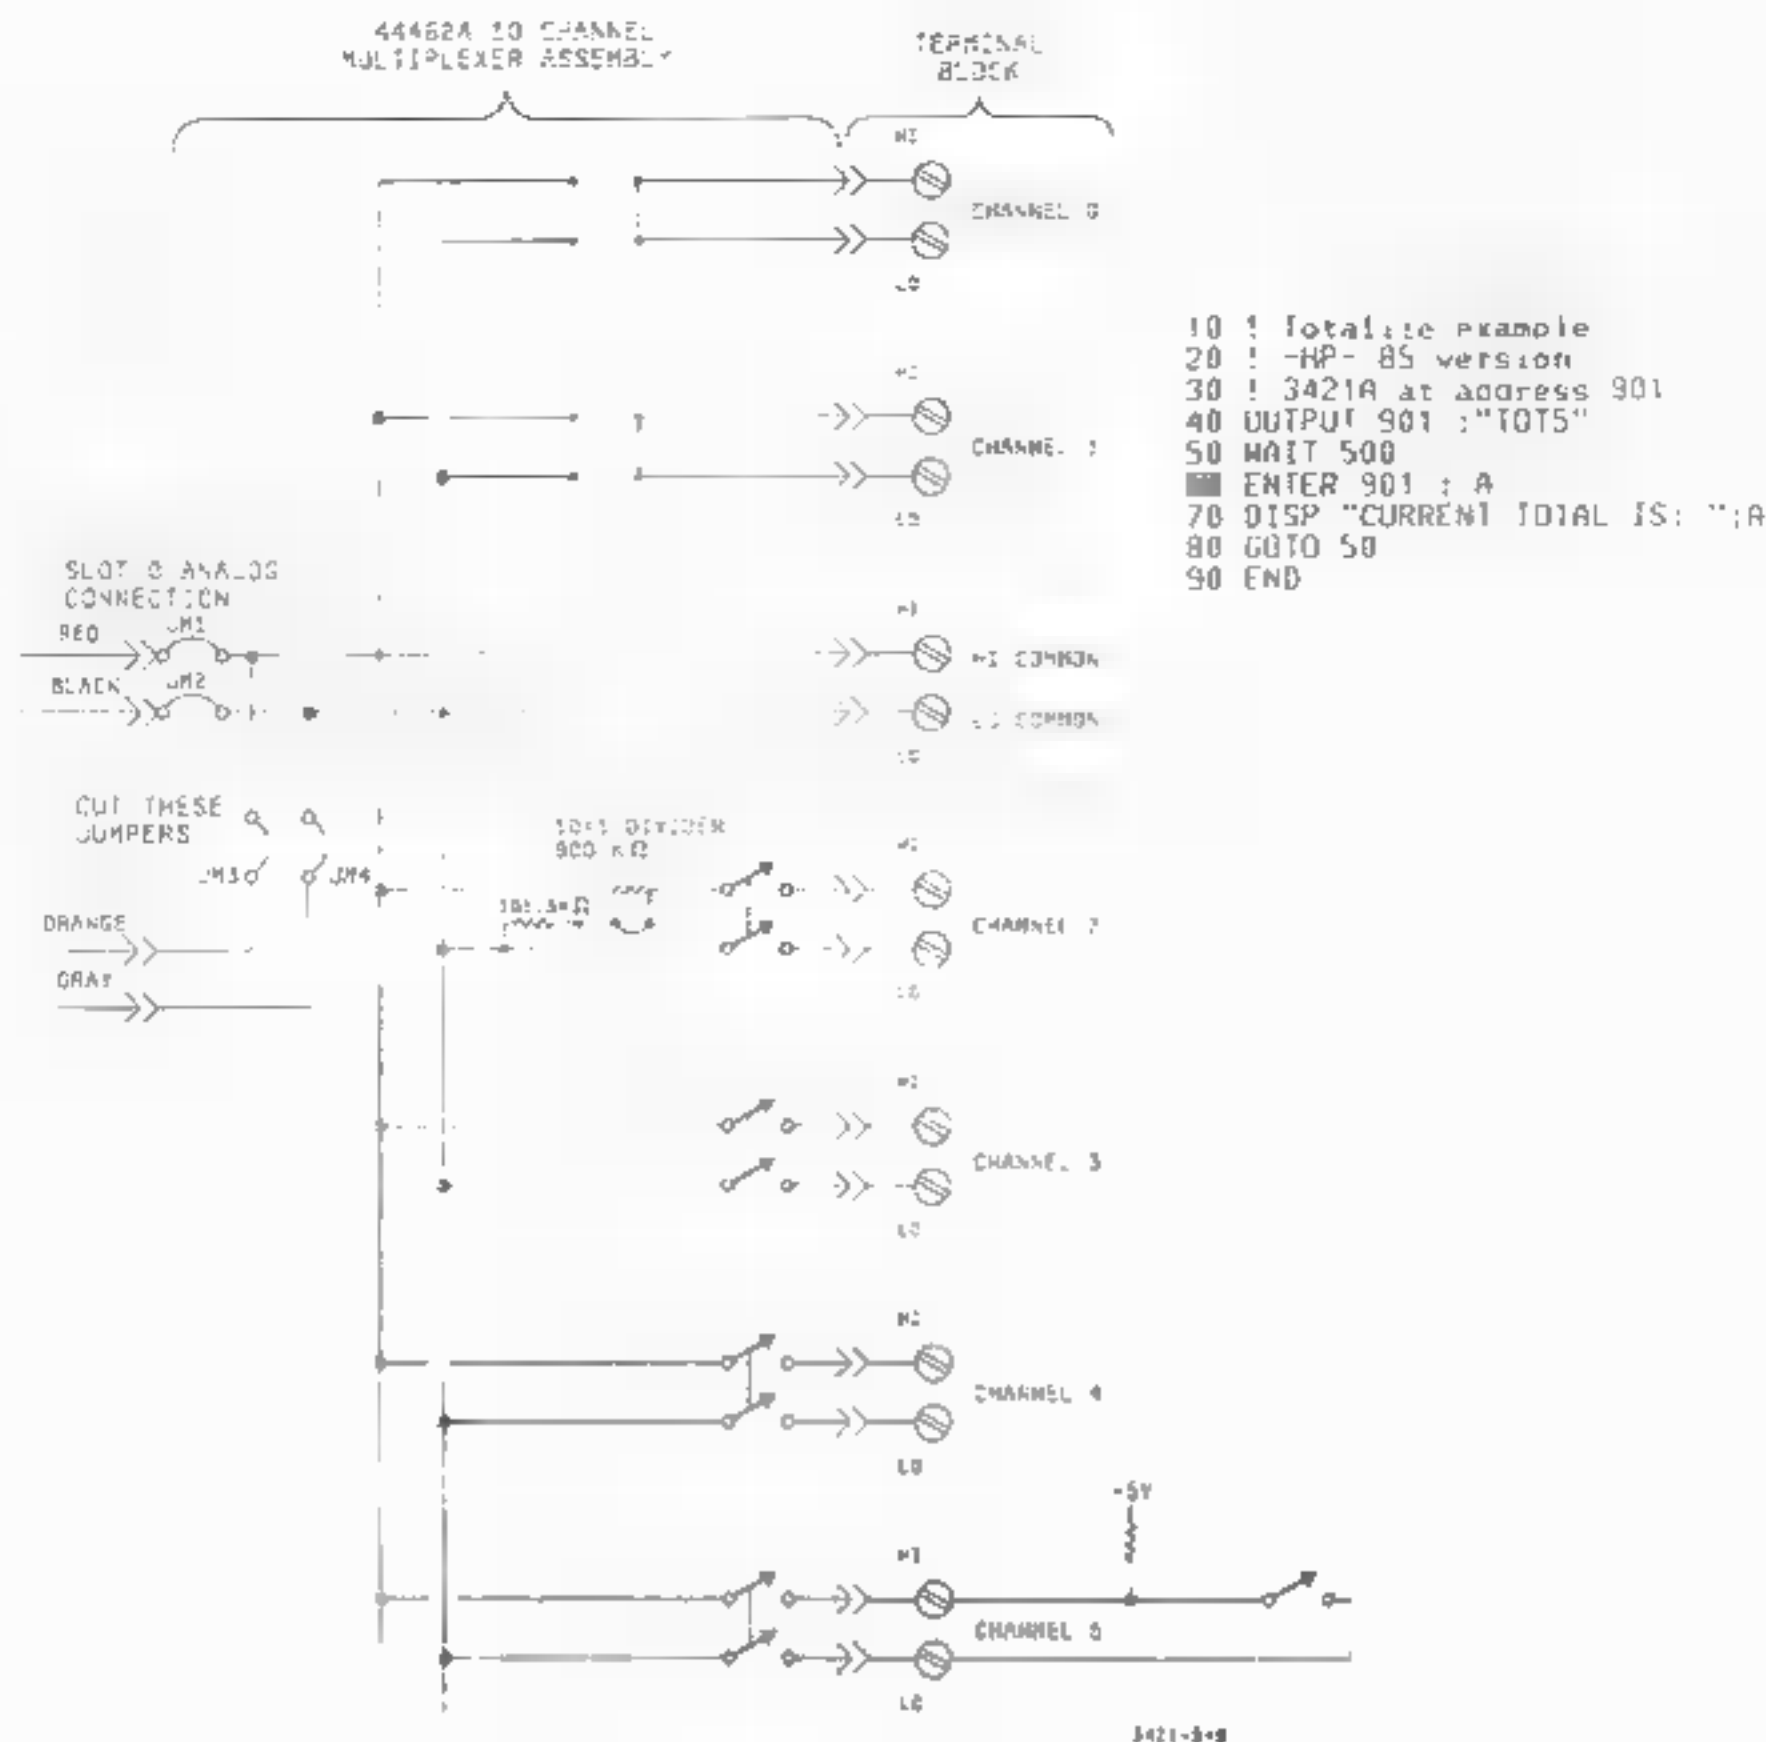


Figure 5-8. Totalizing

Channel "x" will remain closed until another instruction opens it. Note also that if a trigger command is received while TOT is asserted, the 3421A will abort TOT and begin taking frequency readings (FRQ).

Attenuators

Attenuators are used to reduce an input signal to a useable level. For example, the 3421A AC voltmeter has a maximum range of 30 volts. To measure a 120V power line, an attenuator is used. If a 10:1 attenuator is used, the 120V power line is reduced to 12.0 volts, well within the range of the voltmeter. Precision components should be used to maintain accuracy.

It was mentioned previously that channel 2 on each multiplexer assembly has a built in 10:1 attenuator. This attenuator can be taken out of the circuit (no attenuation) by moving jumper J8 on the assembly to the 'OUT' position. Any voltage measured from channel 2 with the jumper J8 in the 'IN' position must be multiplied by 10 to obtain the correct value.



Channels 0, 1 and 3 through 7 have provisions for installing your own components (series and/or shunt) for attenuators, etc. Channels 8 and 9 have provisions for installing components in shunt (from HIGH to LOW terminals) with the signal path. Chapter 8 provides information sufficient for the service trained technician to install and reconfigure the option board assembly.

WARNING

Only qualified personnel with a knowledge of electronic circuitry should install and reconfigure the option boards. Installation and configuration information for this option board is provided in Chapter 8.

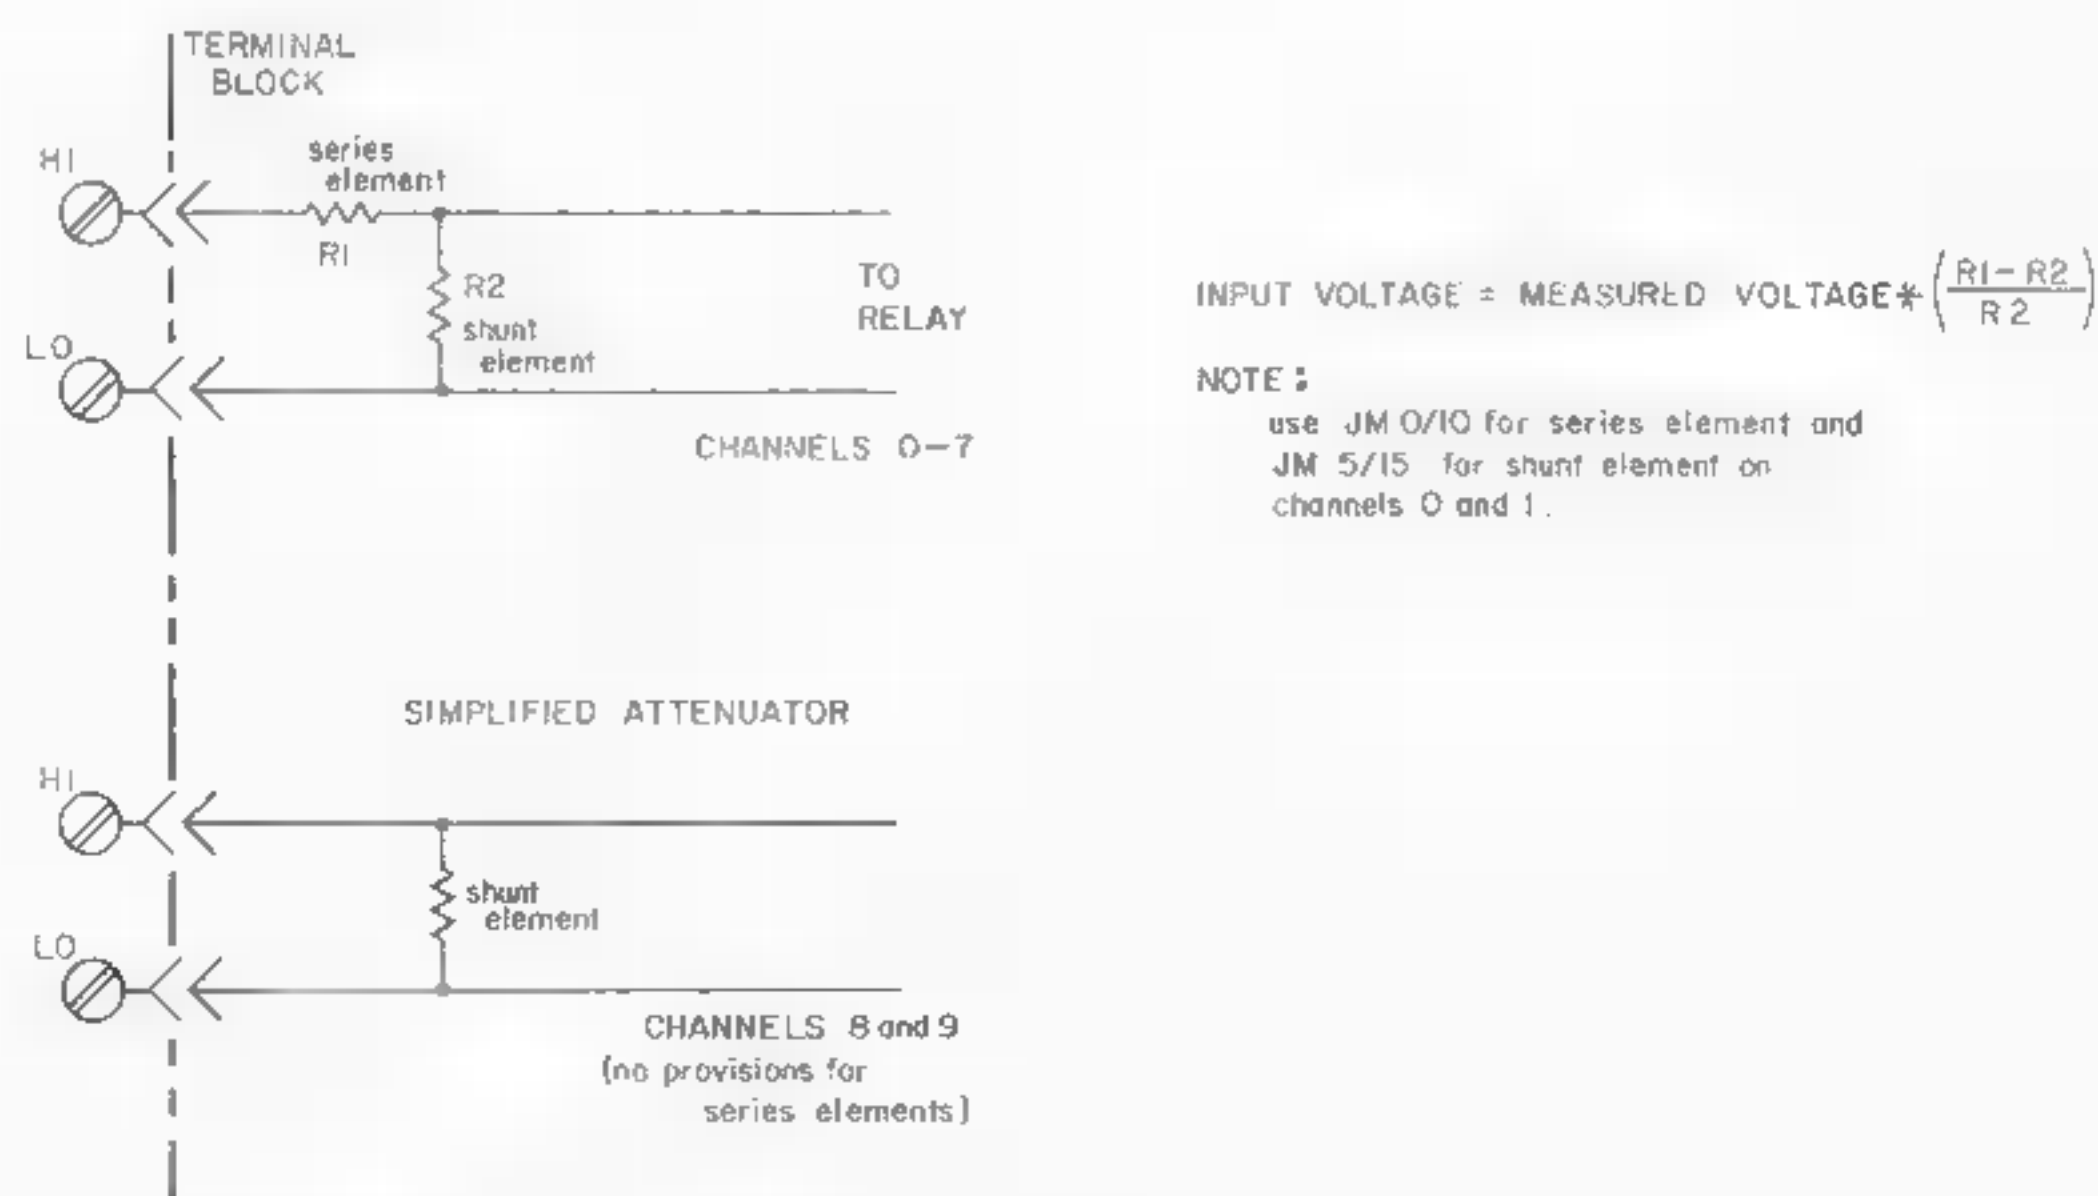


Figure 5-9. Attenuators

Actuators

Channels 0 and 1, as the assembly is shipped from the factory, are configured as actuators. Each relay can be used to switch 150 VA maximum thus making them ideal for switching power to external devices. Relay contact protection is provided to minimize RFI and extend relay contact life. Two commands that are generally used with the actuators are CLSx and OPN[x].

Figure 5-10 illustrates how one actuator may be used to switch power to sound an alarm. Chapter 8 provides sufficient information for the service trained technician to install and reconfigure the actuators.

WARNING

Only qualified personnel with a knowledge of electronic circuitry should install and reconfigure the option boards. Installation and configuration information for this option board is provided in Chapter 8.

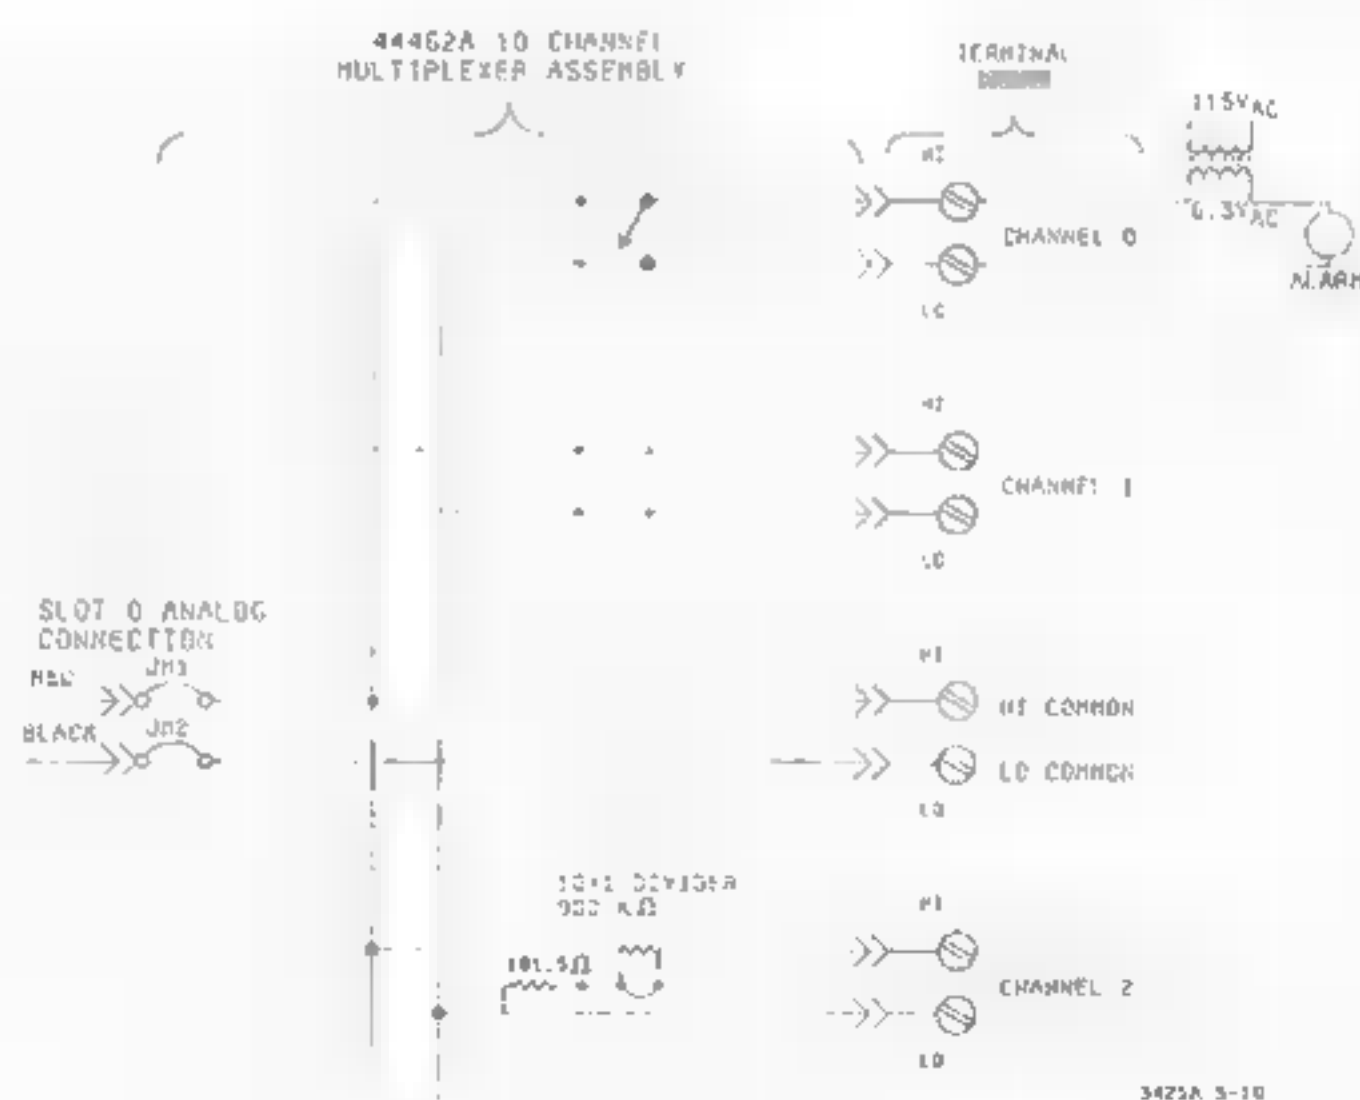


Figure 5-10. Actuator

Power Down/Power Failure

When using the 3421A in control applications, it is imperative to know what the state of the actuator relay will be in during Power Down or in the event of power failure. When the 3421A receives a Power Down command, the relays will not change state. Moreover, they cannot be changed until the 3421A is powered up. Should the AC power line fail, the 3421A automatically operates from its internal battery, so no change occurs. In the event the battery should fail, still no relays change state.

Please note that this applies only the 44462A actuators. The switches in the 44465A Digital Output port may also be used as actuators. In the event of power down or power failure, all digital output port actuators will assume a high impedance (open) state.

Channel and Advanced Commands

There are several other commands that directly relate to the 44462A 10 channel multiplexer assembly. These commands are provided to further enhance the power and flexibility of the 3421A and its multiplexer option.

CLSx

CLSx is used to close a single relay, whether it is an actuator relay or a multiplexer relay. If the channel specified by "x" does not exist, ■ syntax error is generated. See Status Byte in Chapter 3. Valid channel numbers for actuators are 0, 1, 10, 11, 20, and 21.

CLPx

The CLPx command is used to close a pair of channels simultaneously. It first opens all multiplexer relays and then closes channels x and x+10 (e.g., CLP12 closes channels 12 and 22). If channel x is between 20 and 29, then channels x and x-20 will be closed (e.g., CLP25 closes channels 25 and 5). If either x or its pair is not a multiplexer channel, then no channels will be opened or closed and a syntax error generated. This command is useful for closing two channels when making 4-wire ohms measurements.

OPN[x]

The OPN[x] command is used to open the relay specified by "x". If "x" is not sent, the OPN command opens all relays. An error is generated if the channel specified by "x" does not exist.

LSx[,y,...z]

The LSx[,y,...z] command (Load Single multiplexer channels) can be used to load the channel list. The channels are loaded in the order received and the channel list pointer is reset to the first channel. If a T3 or SI1 command is received all multiplexer channels will be opened and the first channel in the list will be closed.

LPx[,y,...z]

LPx[,y,...z] is used to Load Pairs of scanner channels into the channel list. Essentially, this is the same as the LS command except that channels x and x+10, etc., are closed simultaneously. If x is greater than 20, then x and x-20 are closed.

RL

To Read the current channel List, the RL command is used. When the 3421A is addressed to talk, the channel list is sent to the controller in the same sequence that they are assigned. Channel numbers are separated by a Carriage Return, Line Feed. If a place in the list is empty, the place will be marked by "99". For example, if you assign a channel list of 1-7,15,18 and then read it back, the response will be: 1, 2, 3, 4, 5, 6, 7, 15, 18, 99, 99, 99, 99... until all 30 positions in the list are sent.

SI0, SI1

These two commands are called the System Increment commands. SI0 is used to initialize the channel list pointer to the first channel in the list. No channels are opened or closed. The SI1 command, however, is used to increment the channel list. The current channel is opened and the next channel in the list is closed.

DTx

The DT command (Digital Trigger) allows for external triggering of the voltmeter or counter. This feature looks at Digital Input bit at address "x" and when that bit goes LOW, a T3 trigger is executed. T3 turns on reading storage and reads from the channel list. Consider the following example. The channel list is set up using the LS command, the voltmeter is set to DC Volts (F1) and autorange (RA1), etc. When input bit "7" goes low in slot "1" goes low, the voltmeter takes the readings, stores them and then interrupts the computer via Data Ready SRQ. Lines 10 through 30 could be combined into one OUTPUT statement but are separated here to make it easier to follow the program.

```

10 OUTPUT 901 ;"LS2-;F1RA1ZIN4" ! SET UP 3421A FOR MEASUREMENTS
20 OUTPUT 901 ;"M1" ! SET SRQ MASK FOR READING READY
30 OUTPUT 901 ;"DT17" ! SET DIGITAL TRIGGER FOR CHANNEL 17
40 SEND 7 : UNL ! THIS LINE NEEDED FOR HP-IB ONLY
50 ON INTR 9 GOSUB 1000 ! WHERE TO GO WHEN INTERRUPTED
60 ENABLE INTR 9:8 ! ENABLE THE INTERRUPT
70 ! LINES 70 THROUGH 900 CONTAIN THE BODY OF THE PROGRAM
900 GOTO 70
910 END
1000 !                                START OF INTERRUPT SUBROUTINE
1010 FOR I=2 TO 7
1020 ENTER 901 : A(I)
1030 DISP A(I)
1040 NEXT I
1050 RETURN

```

UCx

The UCx command is used to **UNCONDITIONALLY** Close a channel or set a digital bit (see chapter 6). No channels are opened when the UC command is executed.

NOTE

Use extreme caution when using this command. It is possible to have two or more channels closed simultaneously with this command. Damage to the instrument or to external transducers or other instrumentation may result.

Application Examples

The sample program in the DT command illustrates that any of the voltmeter Advanced Commands can be used with the 44462A assembly. This of course applies also to the counter Advanced Commands. The following Application Examples are designed to show you how to enhance the measurement capabilities of the 3421A.

Burst Measurements

The following program shows how the 3421A can take a burst of 30 readings from a selected channel, in this case 5. This burst will take less than 1 second to complete.

Line 20 sets the 3421A to hold measurements but enable the channel list scanner (T0), loads the entire channel list with channel 5 (LS5-5), DC volts (F1), autozero off (Z0), and 3½ digits of display (N3). When the 3421A is triggered, it will take 30 readings from channel 5 and store them. The readings are read back and displayed in lines 40 through 80.

```
10 ! Burst measurements
20 OUTPUT 901 : "T0LS5-5:F1Z0N3"
30 FOR I=1 TO 30
40 ENTER 901 : A(I)
50 DISP "READING # " : I : "READING = " : A(I)
60 NEXT I
70 END
```

Single Ended Measurements

The method of Single Ended Measurements allows you to expand your 3421A to a maximum of 56 channels. Single ending the 3421A requires that one of the 44462A assemblies dedicates its two actuators to multiplexing analog signals from all remaining channels. Since each channel represents 2 relays (HI and LO), there will be 16 single ended channels on the dedicated assembly and 20 single ended channels available on the other 44462A assemblies.

Two words of caution should be mentioned here. First, any 44462A assembly configured for single ended measurements cannot be used for any other type of measurements. For example, if you need only 20 channels for your single ended measurements, two 44462A assemblies will be required. The two assemblies will provide 36 channels but 16 channels will remain unused. This will become more apparent later in the discussion.

Second, all analog signals must share a common LO connection to the 3421A voltmeter. Therefore, use extreme caution when making floating measurements.

For the most part, channel selection is straight forward. Channel lists may be made up as with other types of measurements (i.e., DCV5-20). What you must be aware of though is that one of the two dedicated actuators must be closed prior to making the measurements. This set of measurements may be from the HI relay contacts. Next, the first actuator must be opened and the second one closed prior to making the measurements on the LO relay contacts.

The illustration in Figure 5-11 shows how the relays are set up with the two actuators. The bold line traces the signal path from the source through the relays and to the voltmeter. A program is also supplied to demonstrate the measurement process.

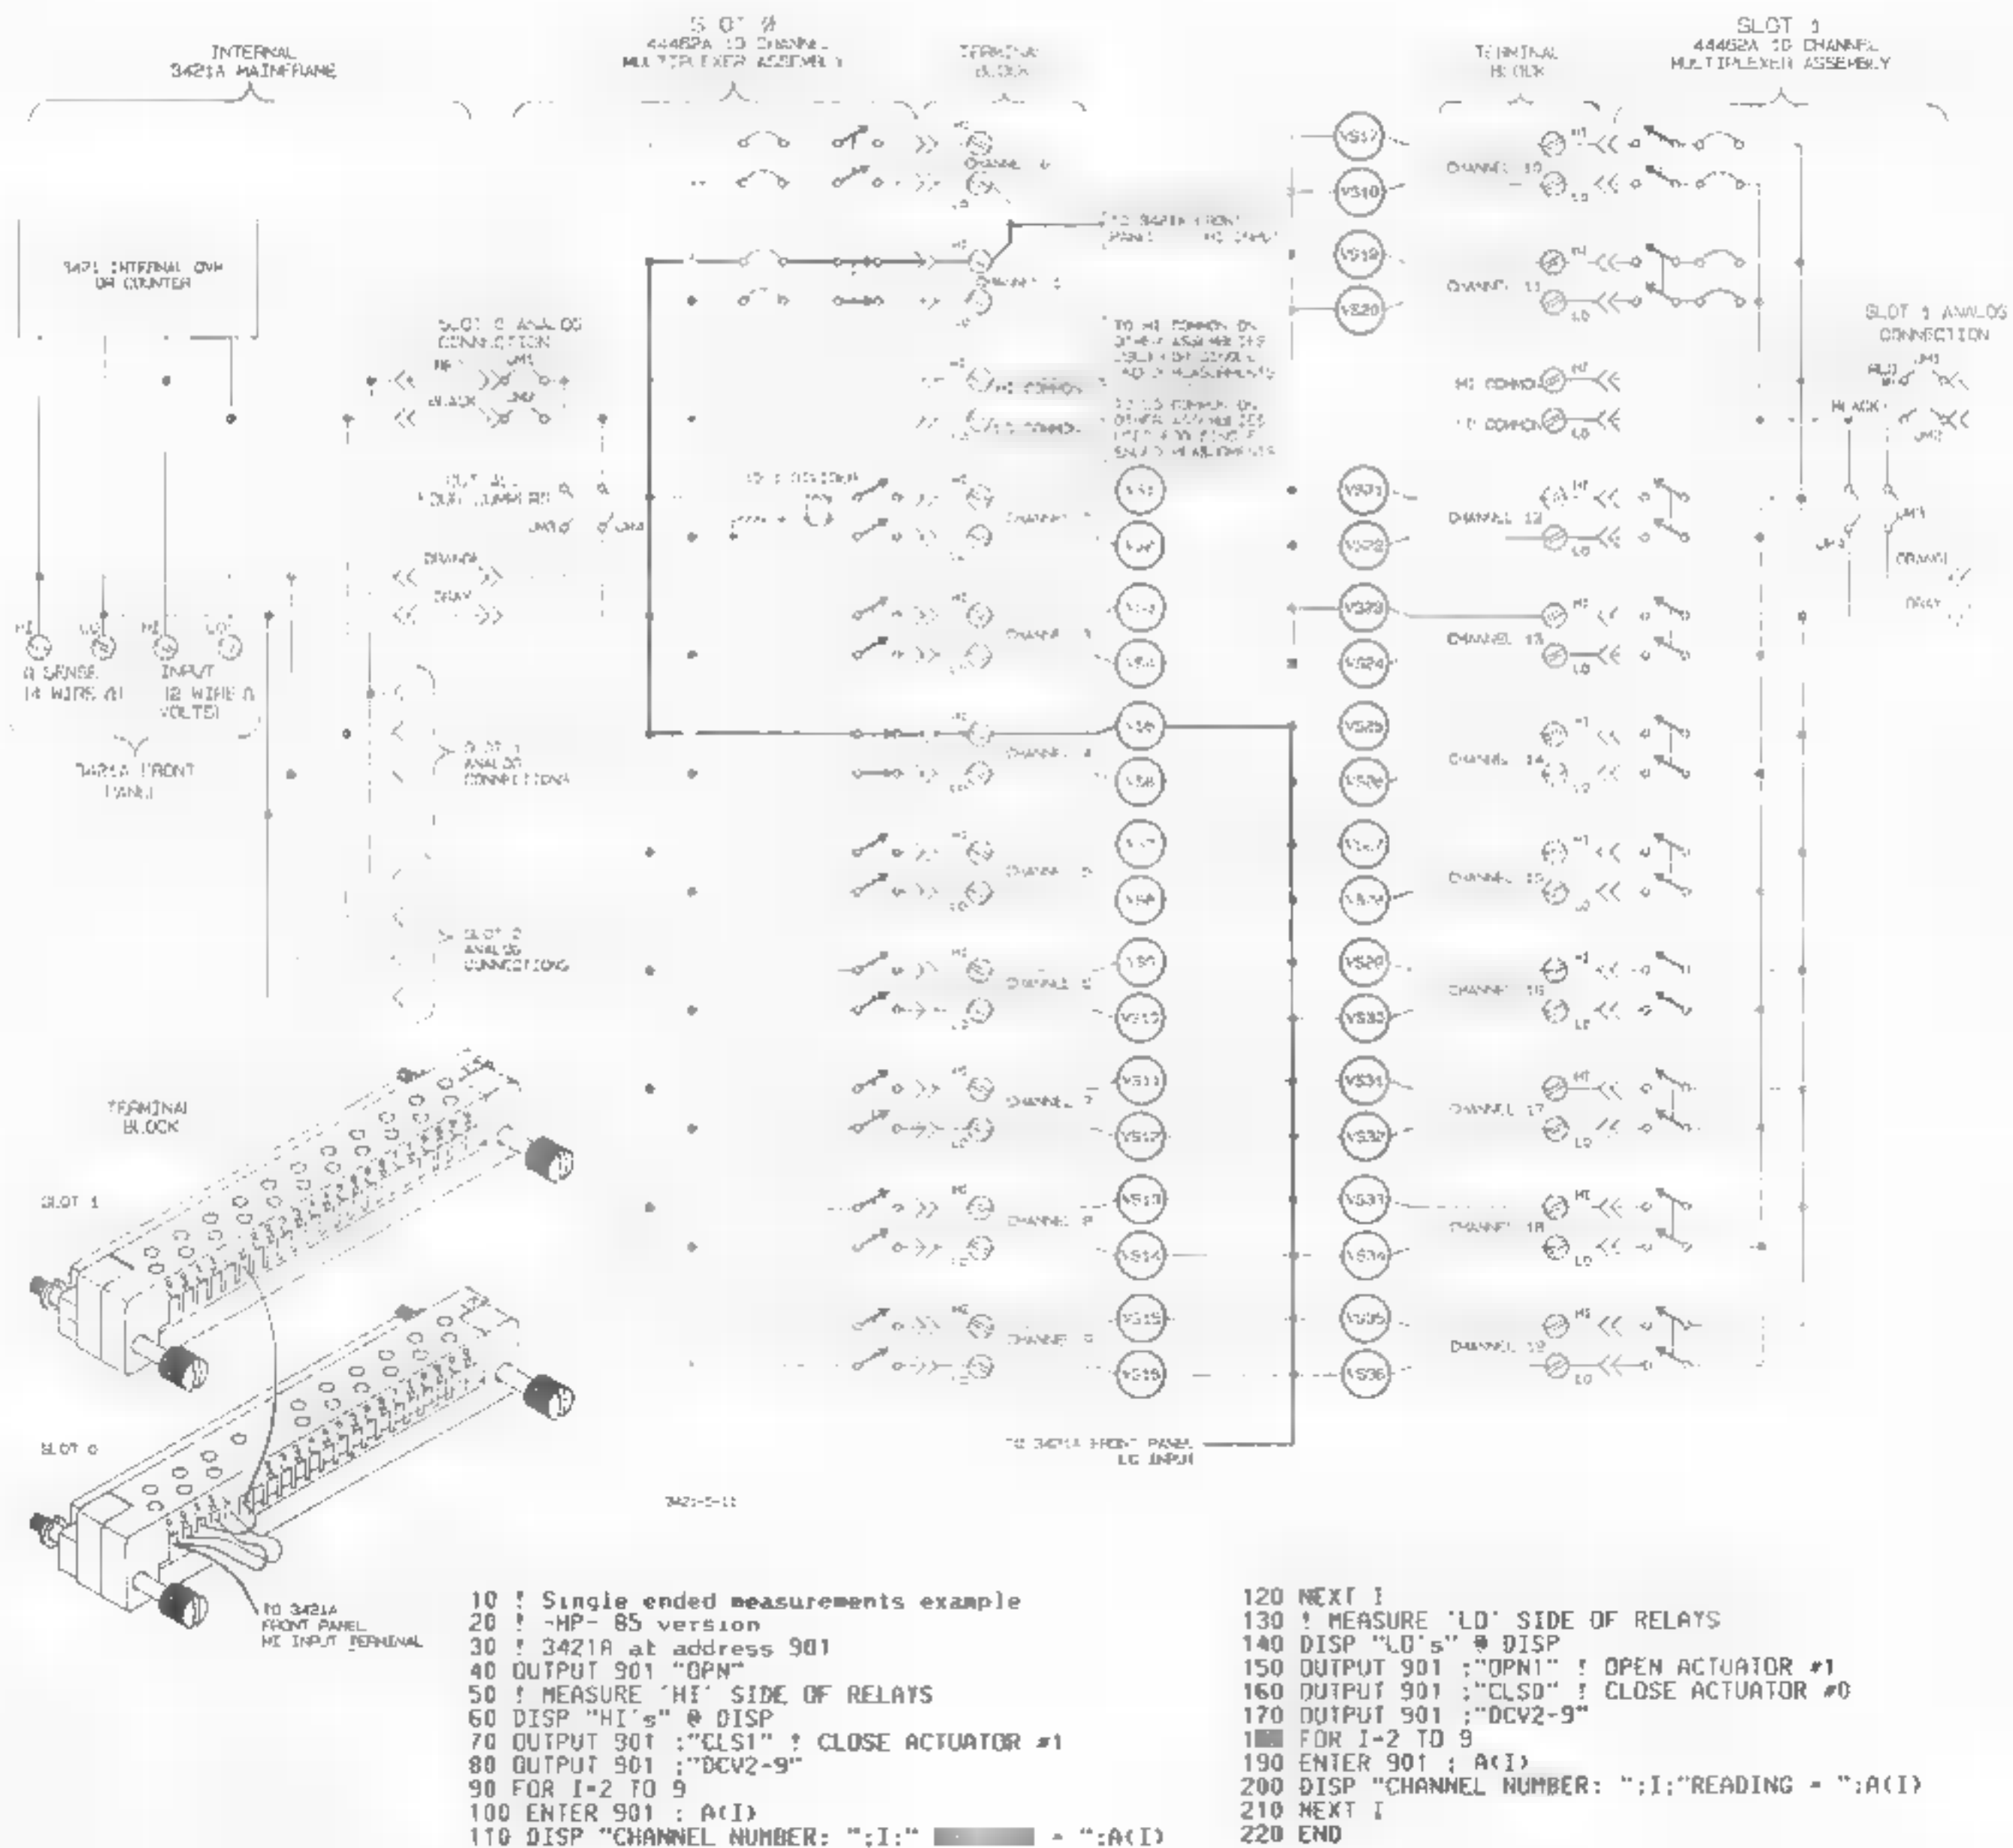


Figure 5-11. Single Ended Measurements

Shielding and Noise Rejection

Inaccuracies caused by radiated and/or "Common Mode Noise" are common problems with Data Acquisition Systems. These problems are especially pronounced when the signal being measured is quite small, such as with thermocouples. The 3421A, however, helps to eliminate many of these types of problems. For example, the 3421A internal voltmeter uses a method of integration for analog to digital conversion. Integration is a process where noise is averaged over a full power line cycle. Thus, power line frequency related noise and its harmonics are virtually eliminated.

The purpose of this section is to demonstrate additional ways of reducing the effects of noise on low signal level measurements.

Consider the following example. Several thermocouples are attached to an automobile engine to monitor engine heating. The engine is located several hundred feet from the Data Acquisition system. To further complicate matters, the thermocouple wires have been pulled through the same conduit as a 220V AC power line. The capacitance between the power lines and the thermocouple wires will create an AC noise on the thermocouple wires. Shielding the thermocouple wires and connecting the shield to the LO terminal on the 3421A serves to shunt the noise away from the voltmeter.

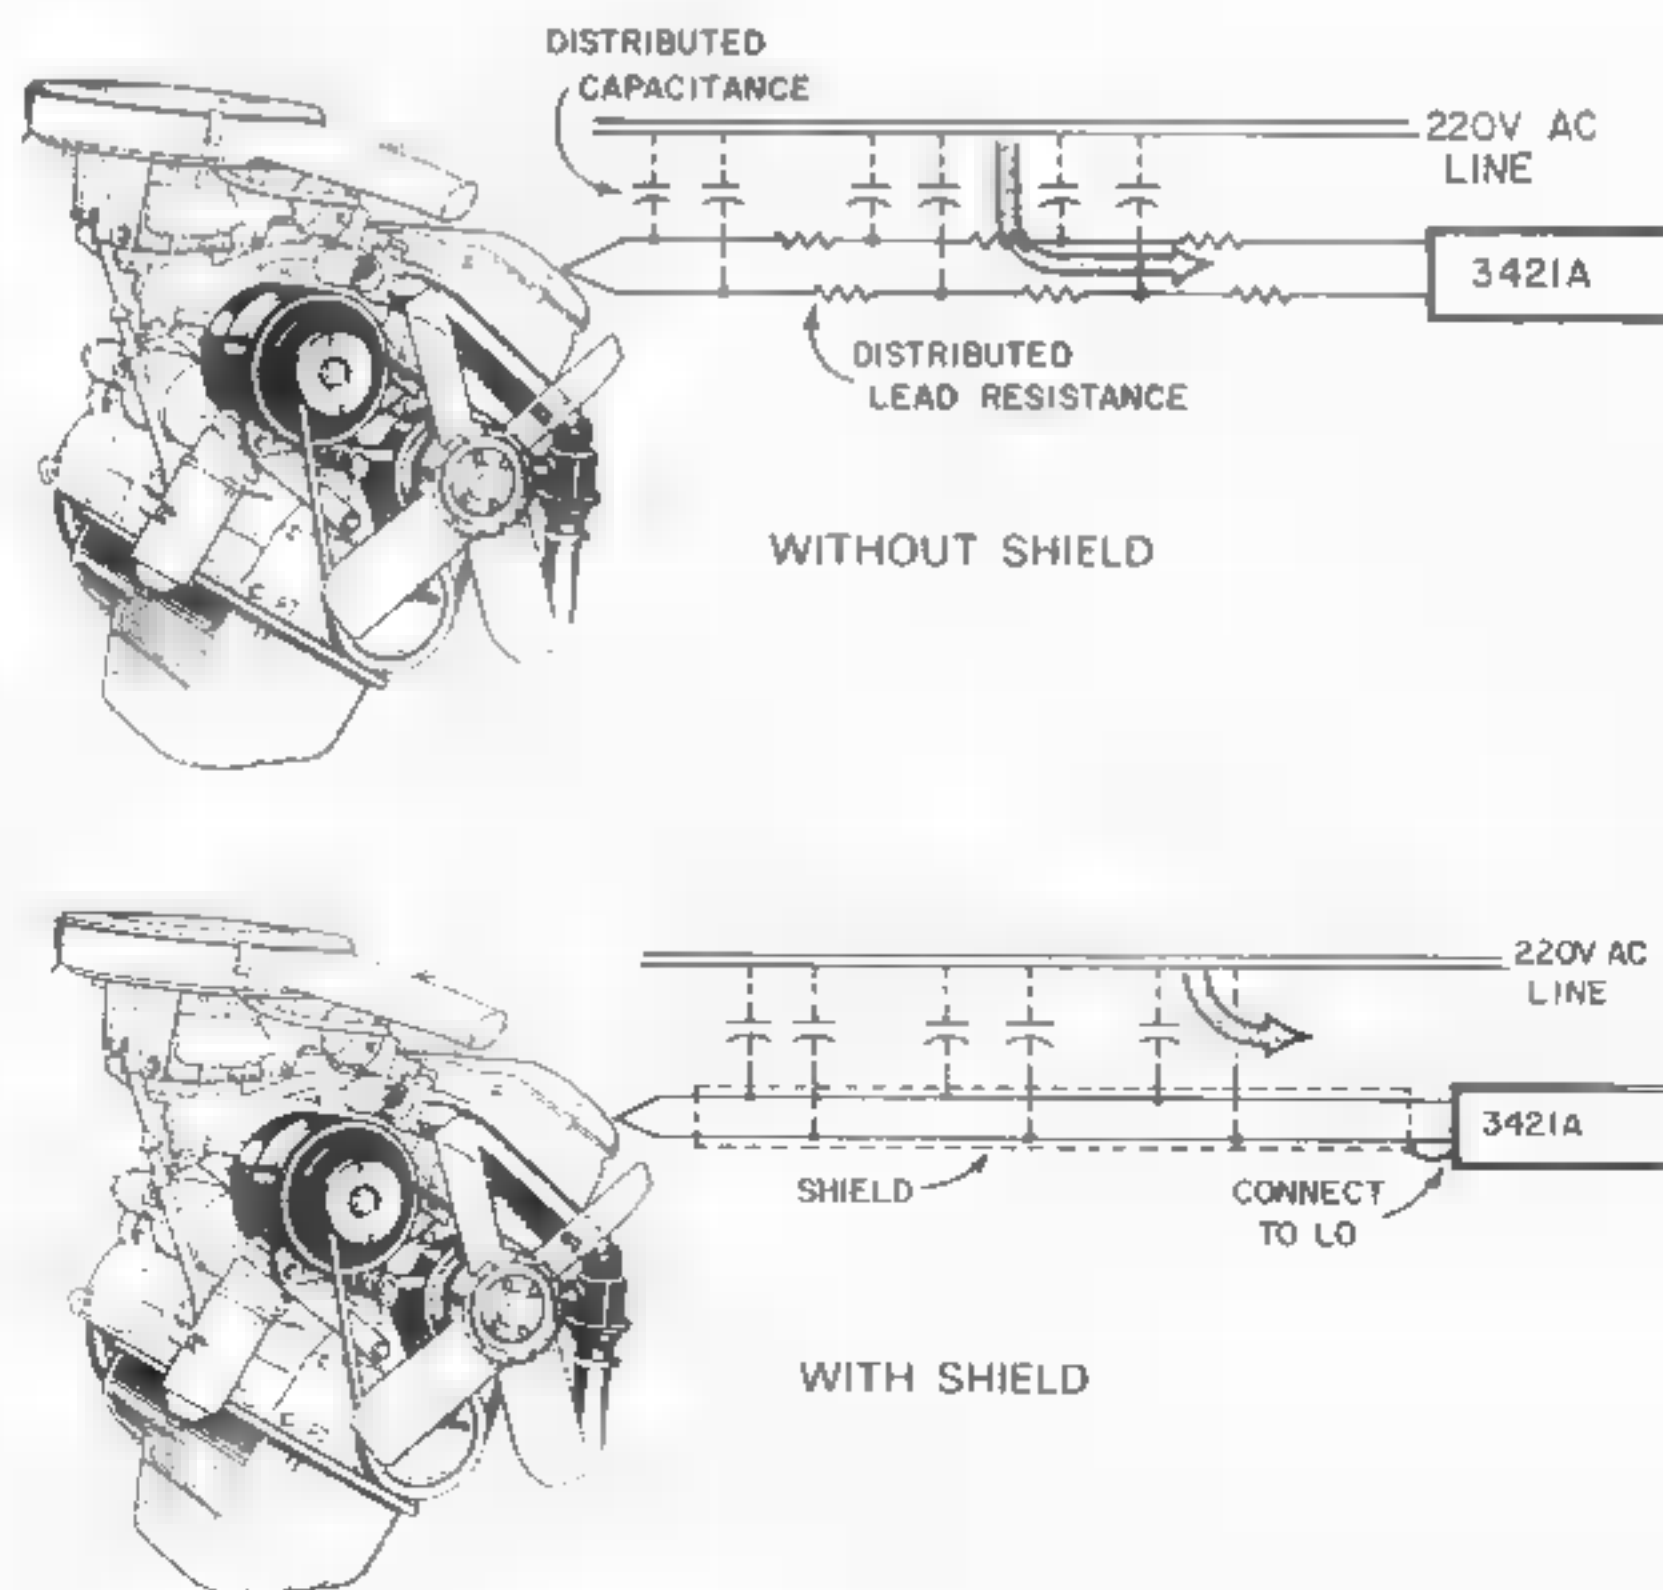


Figure 5-12. Shielding

A second source of noise, called Common Mode Noise or Common Mode Voltage (CMV), occurs if there is a voltage difference between the engine ground and the System ground. If this common mode voltage is very large, say 100VAC, potential damage to the 3421A could result. To illustrate, Figure 5-13 shows two thermocouples attached to the base of a light bulb.

Assume, for the moment, that channel 1 closed when the CMV was at its top peak. This means the voltmeter LO terminal would be at voltage V1, approximately +141 volts. When channel 1 is opened the LO terminal remains at that voltage due to the stray capacitance. Now if channel 2 is closed when the CMV was at its bottom peak, the LO terminal would immediately drop to -141 volts. This is an instantaneous drop of 282 volts and could conceivably damage the 3421A.

To eliminate this problem, dedicate one channel to a good earth ground, say for example channel 0. Now, between each measurement, close channel 0. This brings the LO terminal to 0 volts which is a maximum step of only 141 volts which is quite safe for the 3421A.

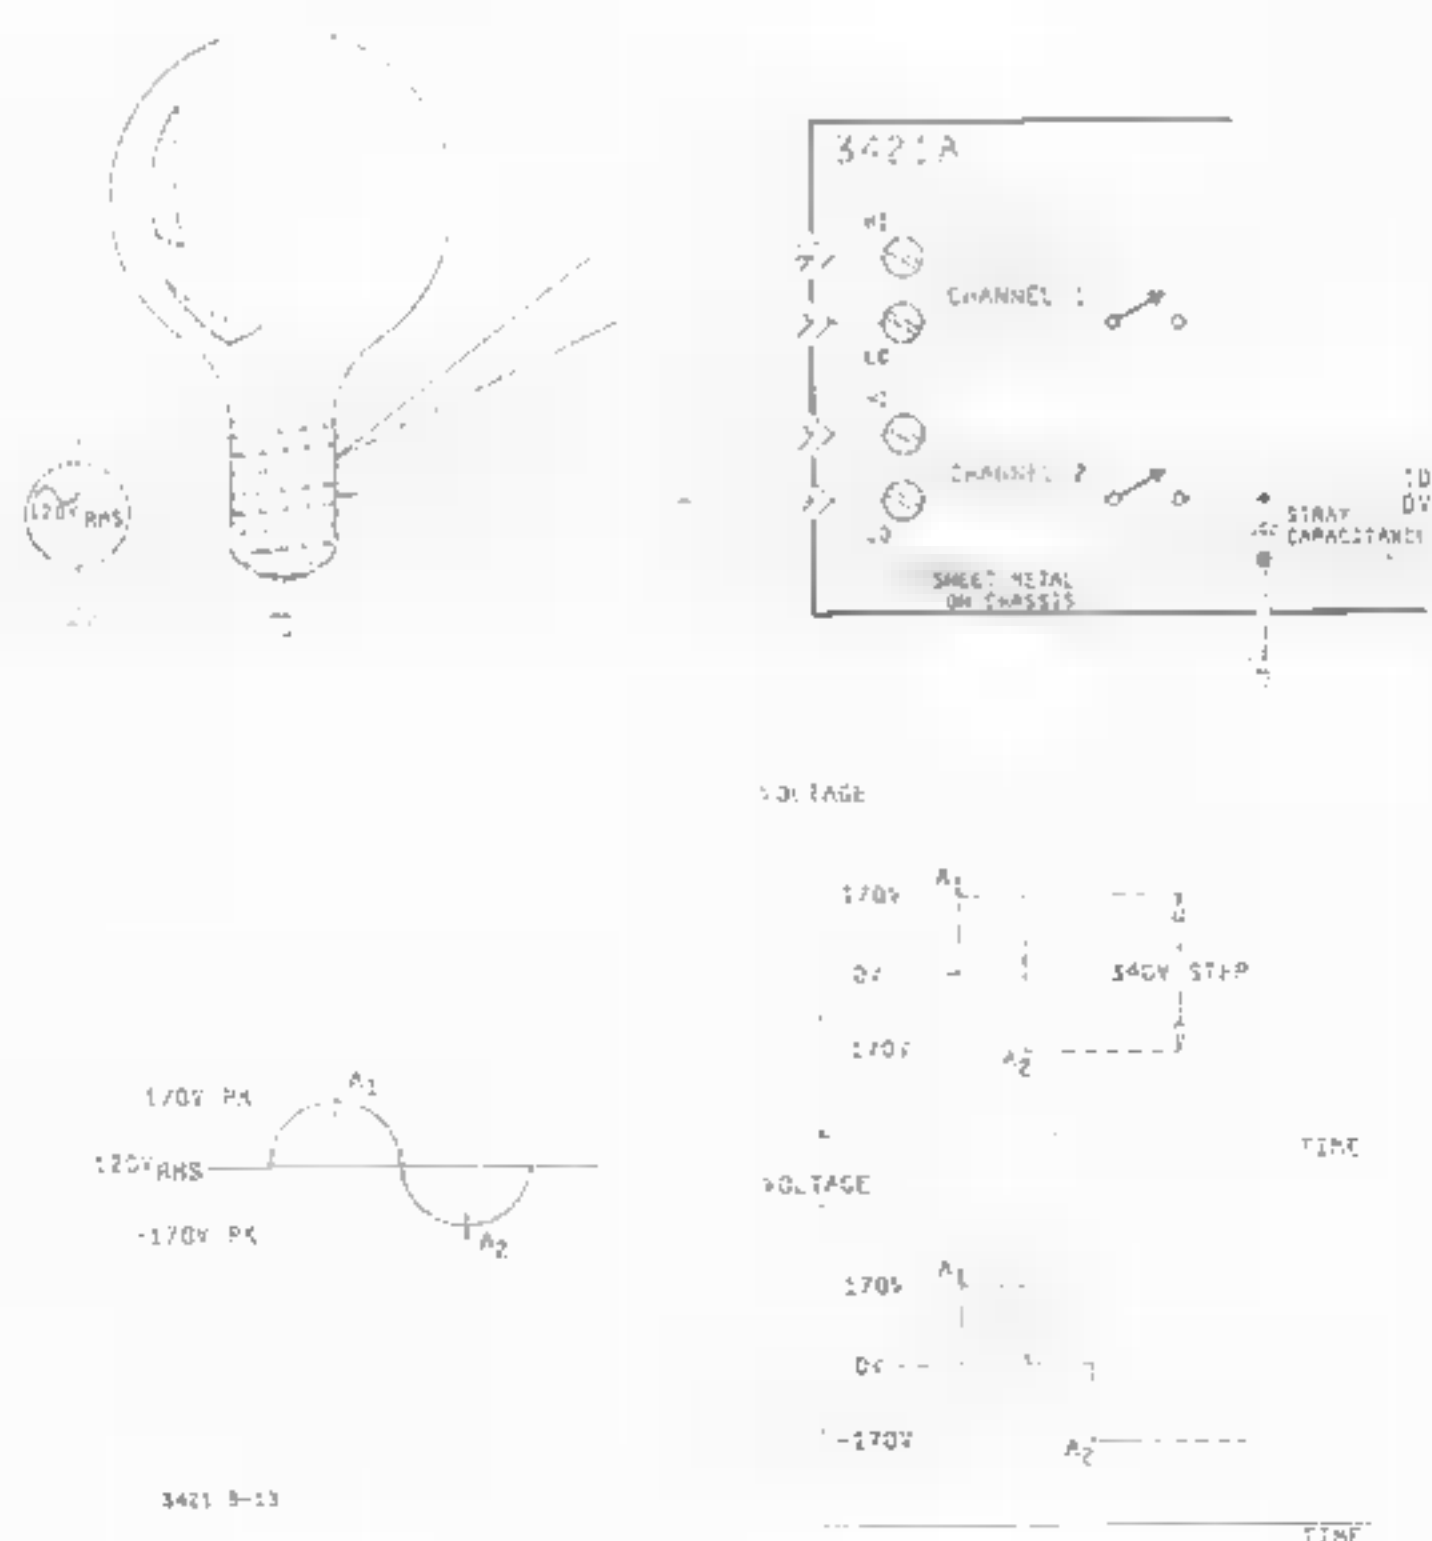


Figure 5-13. Common Mode Noise

4-20 mA Current Loop

The 44462A assembly is capable of sensing the current in a 4-20 mA industrial current loop. A resistor must be placed in shunt with the current path and the 3421A voltmeter used to monitor the resultant voltage drop. A suitable resistor is 50 Ohms, .1%, .5 watts (such as -hp- part number 0699-0064). The formula for converting the measured voltage drop to loop current is:

$$\text{Loop Current} = \frac{\text{Measured Voltage}}{\text{Shunt Resistance (50 Ohms)}}$$

Thus, the 50 ohm resistor converts the 4-20 mA signal to 0.2-1 volt signal.

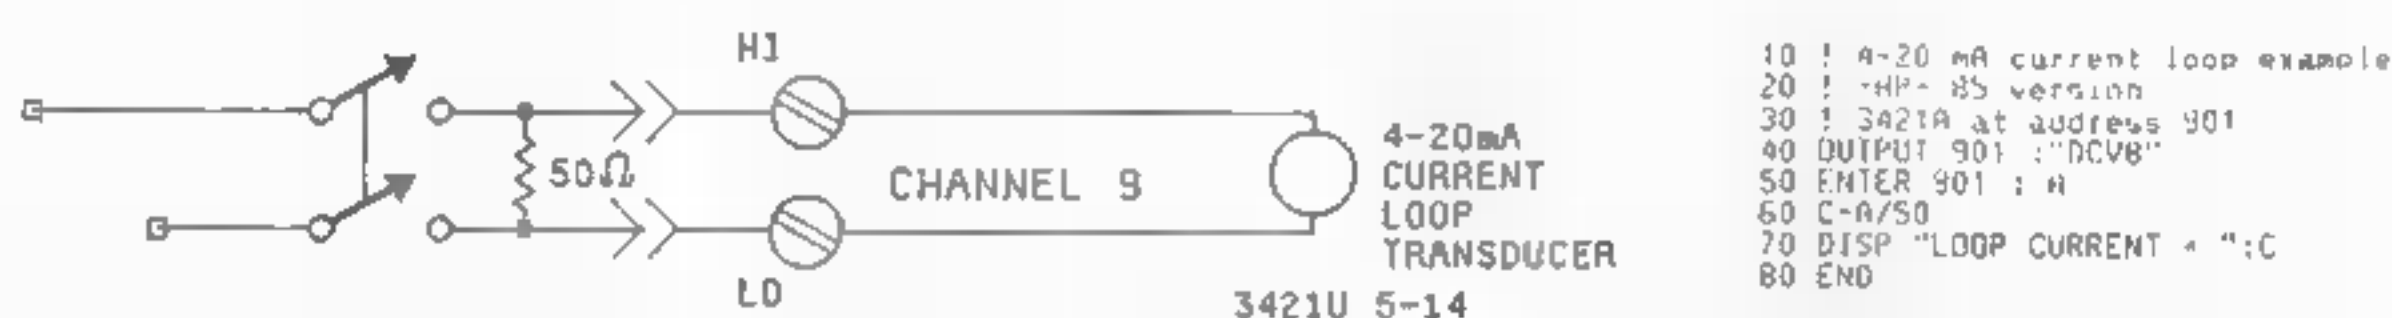


Figure 5-14. 4-20 mA Current Loop

Specifications

The following specifications are the critical specifications that must be considered in all applications. Expanded specifications may be found in chapter 7 of this manual.

Voltage (multiplexer): 300VDC 250VAC RMS 150VA Maximum
(actuator): 300VDC 250VAC RMS 2A Maximum

Contact Resistance: <1.4 Ohms

Thermal Offset (multiplexer): <3 μ V

All relays break-before-make

Chapter 6


44465A

8 Bit Digital I/O Option (Option 040)

Introduction

The 44465A Digital I/O assembly gives you the capability of monitoring the closure of position switches and closing relays. In addition, you can use the assembly to trigger the internal voltmeter when an event occurs. This chapter gives the operating instructions for the 44465A Digital I/O option. Here you will learn how the option can be used in a wide variety of applications. This assembly can be used almost anywhere you need on/off, present/absent type of information and control.

Several program examples are included to enhance your understanding and provide you practice in using the commands. All computer programs in this chapter are written in BASIC language such as used by the -hp- 85 computer. Feel free to experiment with the programs and alter them to meet your individual needs.

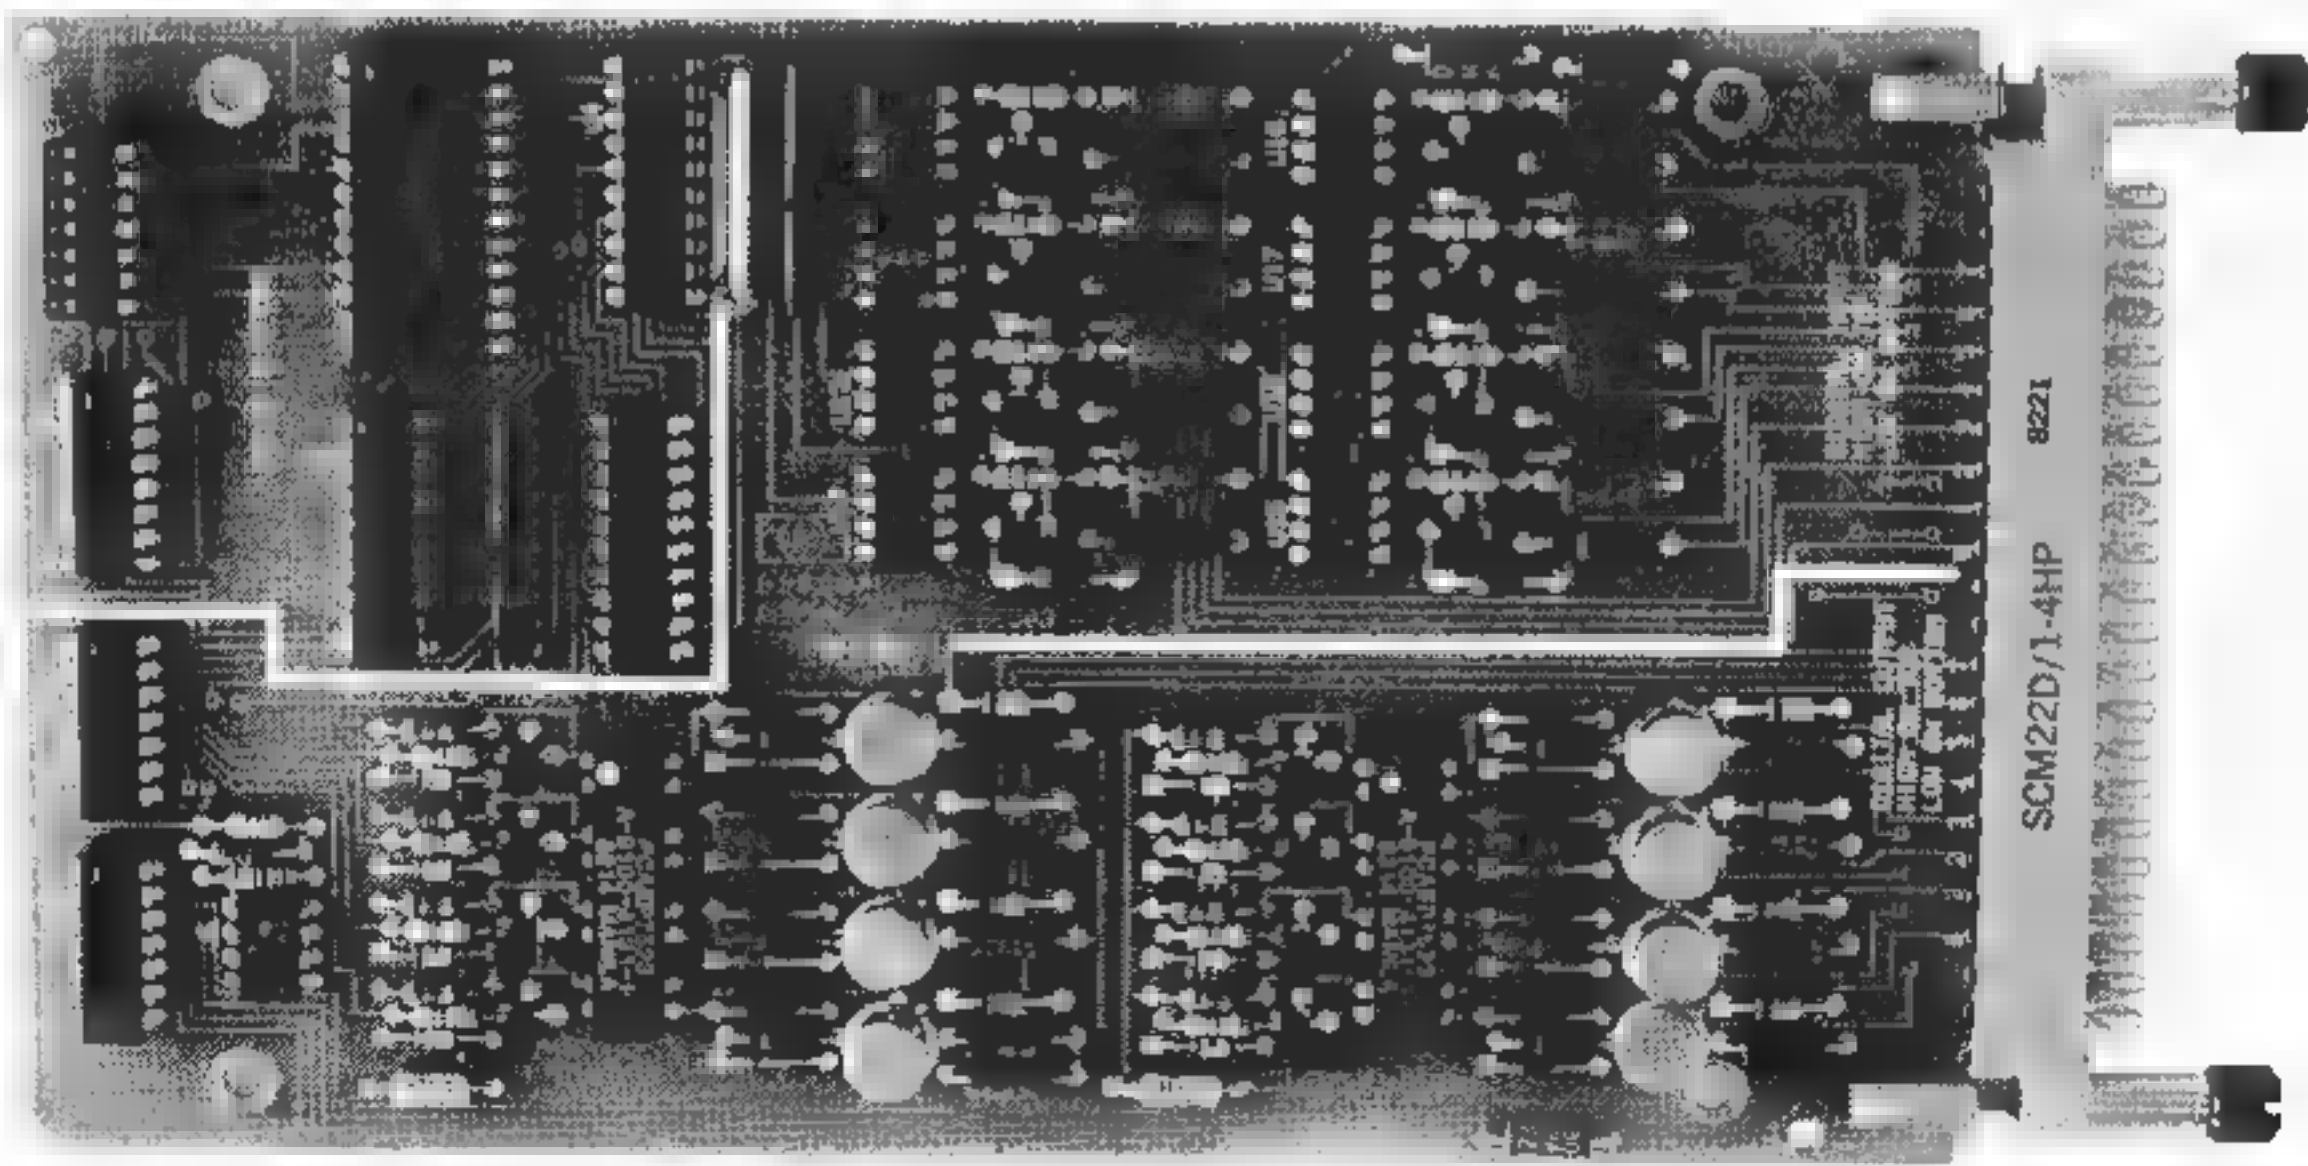


Each 44465A Digital I/O card provides one 8-bit input port and one 8-bit output port. Each bit is electrically isolated from the rest. Typical uses for the input port include limit and position switch monitoring and communicating with digital logic circuits. The output port can be used in low voltage switching applications. Critical specifications for the card are located near the end of this chapter.

CAUTION

Only qualified personnel with a knowledge of electronic circuitry should install or reconfigure the option boards. Installation and configuration information for this option board is provided in Chapter 8.

Input Port Overview

Many monitoring capabilities are provided at the input port. Typical uses for the input port involve monitoring switches or valves to determine if they are open or closed. This can best be described with an illustration. Imagine for a moment an overhead trolley. As the trolley moves along its track it must stop at several stations to perform some task. Position switches are used at each station to signal the controller to stop the trolley motor. Each position switch is sensed by an individual bit in the digital input port. The reason it is called a digital port is because it acknowledges two different states; i.e., either the switch is open or it is closed.

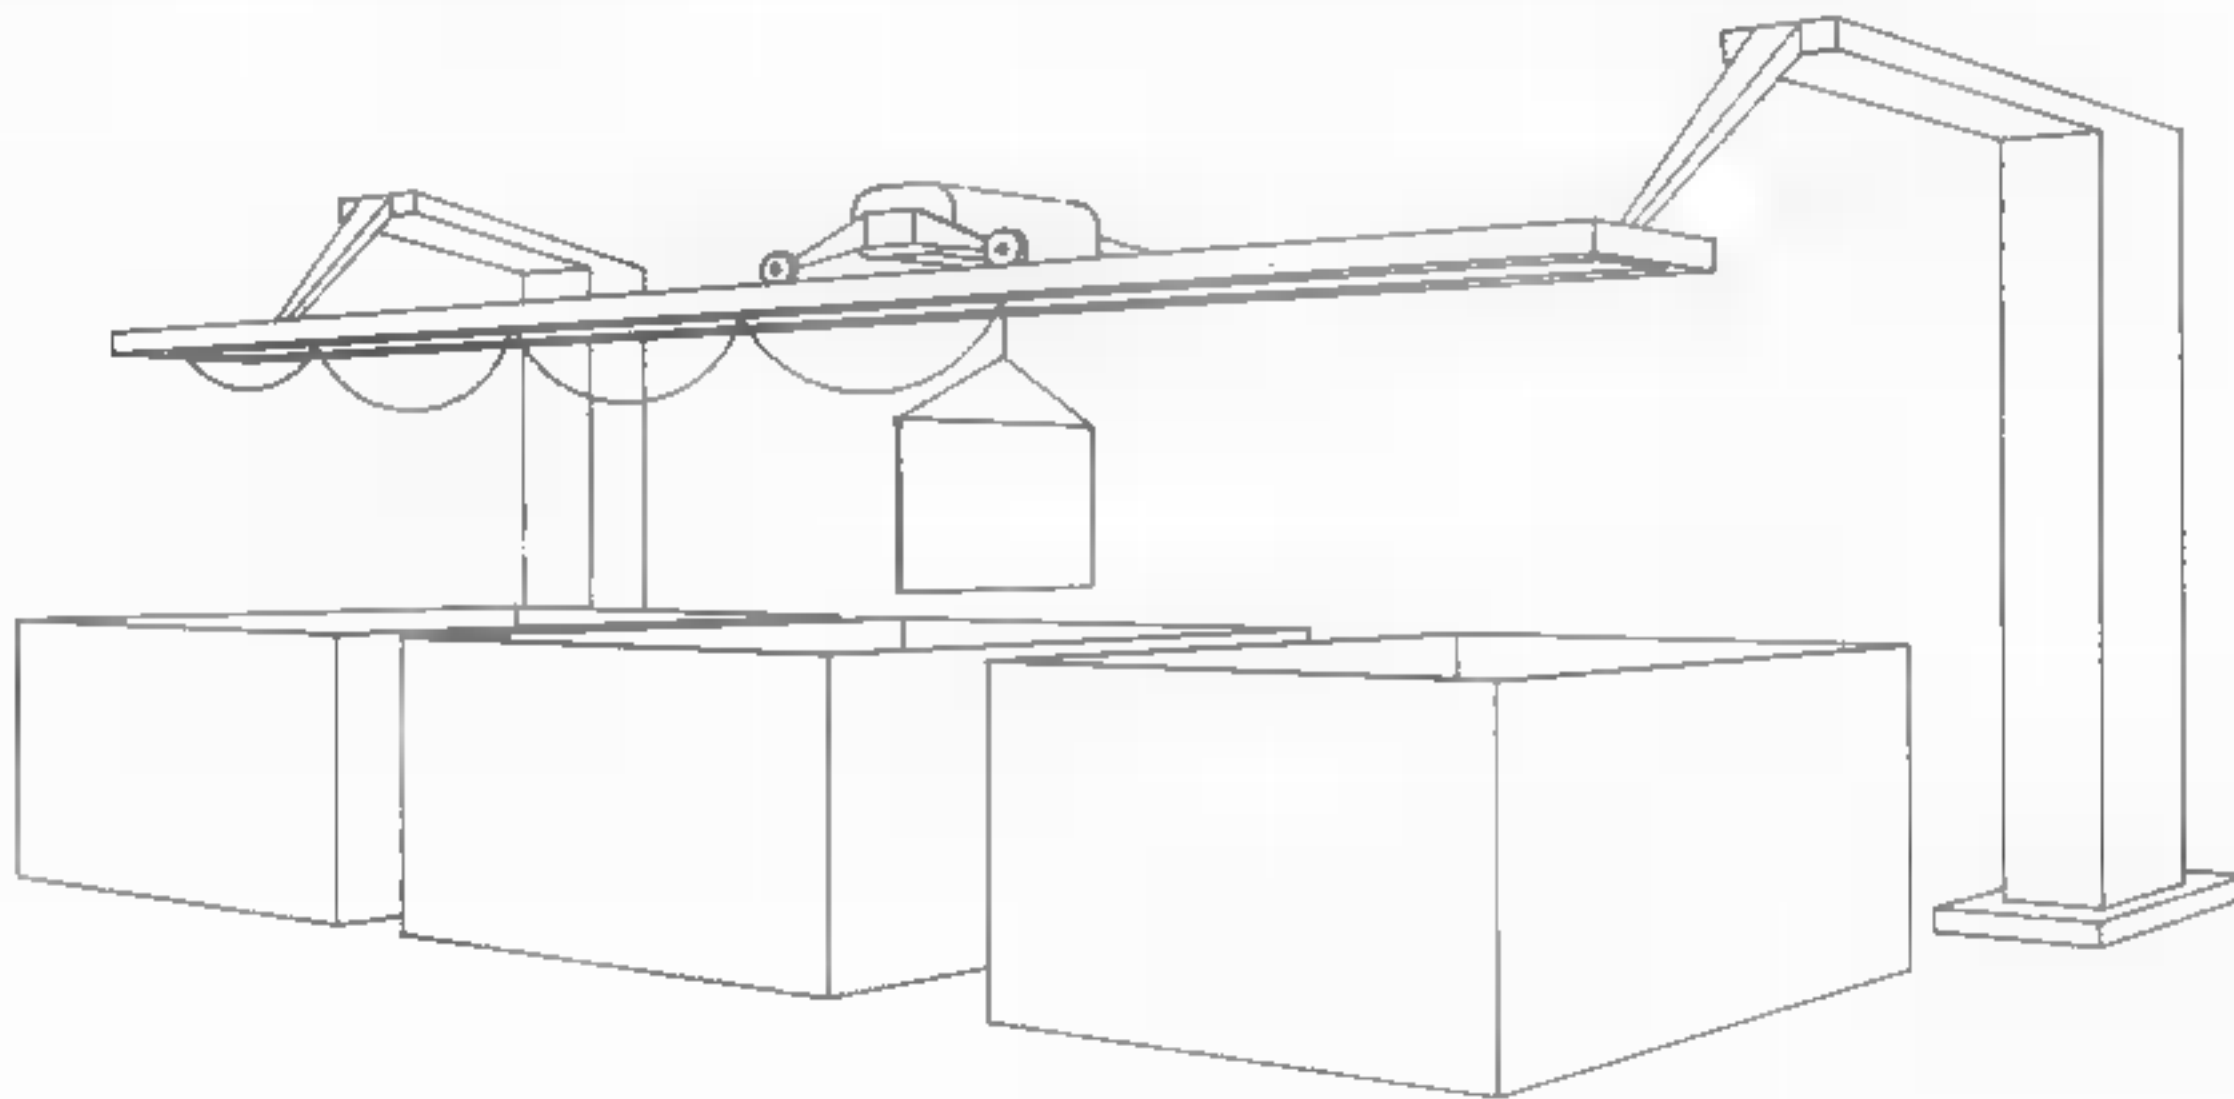

The 8-bit input port is optically coupled to provide maximum isolation and prevent noise and ground loops. A wide range of input supply voltages (2.4 to 24 Vdc) coupled with a maximum current of 25 mA means that the input port can be used in a wide variety of applications. Let's take a look at the command set before looking at specific examples using the port:

Standard Commands

The two STANDARD commands used most often with the input port are REDi (REaD slot i) and BITx. REDi allows you to look at the entire 8-bits (each "bit" represents

one switch) from the slot specified by "i". BITx, however, permits you to select individual bits to look at. In the following discussion the words "set" and "clear" will be used. Set means that a condition is true; e.g., a switch is closed, a logic "1" condition, etc. Clear means just the opposite; i.e., the switch is open, or a logic "0" condition. So you won't be confused by these terms, several examples are provided in this section to illustrate exactly what they mean.

REDi

The REDi command reads all digital input bits associated with slot "i" and responds with a decimal number between 0 and 255. This decimal number corresponds to the sum of the values of the individual bits that were "set". For example, if you have a Digital I/O card in slot 1 and bits 0, 2, 3, 5, and 7 are "set" (all others are cleared), the value 173 would be returned. Refer to the chart below.

Bit Number	7	6	5	4	3	2	1	0
Bit value if set	$2^7 = 128$	$2^6 = 64$	$2^5 = 32$	$2^4 = 16$	$2^3 = 8$	$2^2 = 4$	$2^1 = 2$	$2^0 = 1$

Example: word 1 0 1 0 1 1 0 1
 Decimal Value = 128 - 0 + 32 + 0 + 8 + 4 + 0 + 1 173

Bit Value Chart

The following is a program to assist you in decoding the decimal number and determining which bits are set. Line 10 sends the REDi command for slot 1. This line should be changed to reflect the slot that your 44465A card is in. Line 20 is used to enter the decimal value and the rest of the program decodes it and prints the "set" bits.

```

10 OUTPUT 901 ;"RED1"
20 ENTER 901 ; A
30 IF A=0 THEN DISP "NO BITS SET"
40 IF A<128 THEN 60
50 A=A-128 @ DISP "BIT 7 SET"
60 IF A<64 THEN 80
70 A=A-64 @ DISP "BIT 6 SET"
80 IF A<32 THEN 100
90 A=A-32 @ DISP "BIT 5 SET"
100 IF A<16 THEN 120
110 A=A-16 @ DISP "BIT 4 SET"
120 IF A<8 THEN 140
130 A=A-8 @ DISP "BIT 3 SET"
140 IF A<4 THEN 160
150 A=A-4 @ DISP "BIT 2 SET"
160 IF A<2 THEN 180
170 A=A-2 @ DISP "BIT 1 SET"
180 IF A<1 THEN 200
190 A=A-1 @ DISP "BIT 0 SET"
200 END

```

BITx

The BITx command allows you to look at individual bits. The following table shows the addressing scheme for individual bits for 44465A cards in each of the three slots of the 3421A. Notice that bit addresses 08, 09, 18, 19, 28, and 29 are not allowed. The 3421A sends a value +1.000E+0 if the bit is set and +0.000E+0 if the bit is clear.

Bit#	Bit Address if card in Slot #		
	Slot 0	Slot 1	Slot 2
0	0	10	20
1	1	11	21
2	2	12	22
3	3	13	23
4	4	14	24
5	5	15	25
6	6	16	26
7	7	17	27

Bit Value Address Chart

Look again at the example given in the bit value chart earlier. If you execute ■ "BIT17" (for bit 7 in slot 1) followed by an ENTER statement, the calculator will show a value of 1. The following program shows how this can be done. If you execute a "BIT12" (bit 2 in slot 1), the calculator will return with 0 because the bit is clear.

```
10 OUTPUT 901 ;"BIT17"  
20 ENTER 901 : A  
30 DISP A  
40 END
```

BIT can also be used with a channel list, e.g., BIT17,15,13,11,10. The following program shows how this can be done.

```
10 OUTPUT 901 ;"BIT17,15,13,11,10"  
20 ENTER 901 : A,B,C,D,E  
30 DISP A,B,C,D,E  
40 END
```

The command BIT0-27 sets the bit list (also called channel) to read all input port bits in the 3421A

Advanced Commands

The advanced instruction set provides added capabilities for the input port. The three commands in this group are; MHa, MLa, MNi. These three may be used to cause an interrupt (SRQ) to signal the controller. The MNi command uses two other commands, XR[abc] and AN[abc], to specify the parameters that will cause the interrupt.

MHx

The MHx (Monitor High) command monitors the bit specified by "x". Refer to the bit value address chart shown earlier to determine the value of "x". When bit "x" becomes set, the EVENT OCCURRED bit in the Status Register (bit 3, see Chapter 3, SPOLL) likewise becomes set. If the appropriate SRQ mask bit were set, an interrupt (SRQ) is generated to flag the controller. Refer to chapter 3 under the topic of SPOLL for more information on SRQ and the Status Register. When the 3421A is addressed to talk it will output the a decimal number equal to the sum of the values of the bits that were set at the time of the interrupt (similar to a REdi command).

NOTE

If the 3421A receives another command after the the MHx, MLx or MNi command, the monitor function will be turned off.

The proper way of sending the monitor commands to the 3421A is to eliminate the final end-of-line sequence. With the -hp- 85 this is done with the format:

OUTPUT 901 USING "#,K";"MHx;" (or MLx,MNi)

Note the use of the semicolon terminator after MHx. A colon (:) could have been used instead.

MLx

The MLx (Monitor Low) performs the same way as MHx except "Event Occurred" means the specified bit became cleared.

Example

Let's look at an example of this. Assume that you have a 44465A card in slot 2 of your 3421A. You want to monitor bit 1 and when it becomes set, e.g., from a switch closure, you want to print a message. The following program shows how this can be done.

```

10 ! Digital monitor program
20 ! -HP- 85 version
30 ! 3421A at address 901
40 OUTPUT 901 ;"M8"
50 OUTPUT 901 ;"MH21"
60 ON INTR 9 GOTO 1000
70 ENABLE INTR 9;8
80 ! BODY OF PROGRAM
980 GOTO 80
990 END
1000 STATUS 9,1 ; A
1010 P=SPOLL(901)
1020 IF BIT(P,3) THEN DISP
"DIGITAL INTERRUPT"
1030 END

```

Line	Description
40	Sets up the SRQ mask for event occurred. See Chapter 3.
50	Sets the Monitor High command for bit 1 in slot 2.
55	The SEND 7;UNL command is used only with the HP-IB option. It allows the 3421A to send the SRQ interrupt to the computer.
60	Instructs the computer where to go (line 1000) when an interrupt (SRQ) occurs.
70	ENABLE INTR 9;8 enables the -hp- 85 to respond to the interrupt.
80-990	These lines form the body of the program. They could be replaced by other program statements. The program will continue to run until an interrupt occurs.
1000	Line 1000 is the beginning of the interrupt subroutine. The STATUS command reads and clears the -hp- 85 so that it can respond to future interrupts.
1010	SPOLL places the value of the 3421A Status Register into variable P. It also clears the 3421A Status Register.
1020	Bit 3 of Status Byte (P) is checked to make sure that it is a "1". If it is, then the interrupt was caused by the digital I/O board and the message is displayed. If the bit is a "0", something else caused the interrupt.

MNi (AN[abc], XR[abc])

The MNi command allows you to specify an entire word (8-bits) to cause an interrupt. MNi uses the XR[abc], AN[abc] commands to extract only the bits you want to look at. XR[abc] is called an Exclusive Or mask. It allows you to specify which bits are to be set to cause the interrupt. The AND mask is set up by the AN[abc] command and allows you to specify which bits you want to monitor. In the discussion to follow, it will help to remember these two points:

1. The XR command determines which bits are to be set to cause the interrupt.
2. The AN command determines which bits you want to look at.

The MNi command reads the input bits from the card in slot i, performs a logical Exclusive-OR with the XOR mask, takes the result and performs a logical AND with the AND mask. If the final result equals 0, the EVENT OCCURRED bit in the Status Register (bit 3) will be set. If the SRQ Mask is set for bit 3, an SRQ interrupt will be generated.

XR[abc]

The XR[abc] command sets the logical Exclusive-OR mask for the MN command. The value [abc] represents a decimal number from 0 to 255. Refer to the bit value chart shown earlier in this chapter. The Exclusive OR function performed by the MN command is done on a bit-by-bit basis. The following Truth Table and example show how the XR mask works.

Logical XOR Truth Table

Input Bit	Mask Bit	XOR Result	Example
0	0	0	1 0 1 0 1 1 0 0 - XR mask = 172
0	1	1	0 1 1 1 0 0 1 0 - Input Bits
1	0	1	- - - - -
1	1	0	1 1 0 1 1 1 1 0 - Logical XOR Result

When you are sending a mask number, whether XR or AN, to the 3421A, it is not always necessary to send all three digits [abc]. Leading zeros are automatically inserted. In other words, XR5 is the same as XR005. If no number is received by the 3421A, the mask is set to all 0's.

AN[abc]

The AN[abc] command sets the AND mask. The value [abc] represents a decimal

number between 0 and 255. Refer to the bit value chart given earlier in this chapter. The AND performed by the MN command is done on a bit by bit basis. For example, sending AN173 would represent a binary AND mask of 10101101 ($2^7 + 2^5 + 2^3 + 2^2 + 2^0 = 173$). Suppose the digital inputs were 10011000. The logical AND would be 10001000, as shown in the following illustration.

Logical AND Truth Table

Input Bit	Mask Bit	AND Result	Example
0	0	0	1 0 1 0 1 1 0 1 - AN mask = 173
0	1	0	1 0 0 1 1 0 0 0 - Input Bits
1	0	0	- - - - -
1	1	1	1 0 0 0 1 0 0 0 - Logical AND

As with the XR command, leading zeros are inserted. In other words, AN5 is the same as AN005. If no number is received, the mask is set to all 0's.

Let's look at an example of how this works. Imagine we have a situation where the controller is to be interrupted only when bits 3, 5, and 6 are set and bits 4 and 7 are cleared. We don't care about bits 0, 1, and 2.

0	1	1	0	1	X	X	X	= Desired interrupt word
					└────────┘			
					don't care			

Remember the first of the two rules mentioned earlier; the XR mask consists of the bits which are to be set. In this example they would be bits 3, 5, and 6.

0	1	1	0	1	0	0	0	= XR104 (XR Mask - bits to be set)
---	---	---	---	---	---	---	---	------------------------------------

Rule 2 states that the AN command specifies only the bits we want to look at. In this example those are bits 3, 4, 5, 6, and 7.

1	1	1	1	1	0	0	0	= AN248 (AN Mask - bits we are concerned with)
---	---	---	---	---	---	---	---	--

Referring to the bit value chart, we can see that the XR mask should be set to value 104. In other words, execute the command XR104. The AND mask will be set to value 248; i.e. AN248. The following three tables show how the MN command works to produce the final result. In A, all conditions are met and the final result equals 0. Remember that when the final result equals 0, the computer will be interrupted. In B we have an example of bit 4 being set but all other conditions be-

ing met. Table C shows an example of bit 6 being cleared but all other conditions being met.

	A	B	C
Input	01101xxx	01111xxx	00101xxx
XOR mask	01101000	01101000	01101000
Result 1	00000xxx	00010xxx	01000xxx
AN Mask	11111000	11111000	11111000
Final Result	00000000	00010000	01000000

In the examples "x" means that we don't care whether it is set or cleared. Notice that after the XOR operation the "don't care" bits are not changed. However, after the AND operation, those bits are always 0 regardless of their previous state.

DTx


The Digital Trigger command (DTx) provides a way to externally trigger the 3421A voltmeter. The DT command monitors the bit at address "x", and when it goes low, a voltmeter T3 trigger command is executed. Trigger command T3 is used to trigger the voltmeter to make a measurement from each channel in the channel list and store the readings. The channel list and measurement function must be set up prior to asserting the the DTx command. An example of using the DT command is provided in chapter 3.

If any information is passed through the HP-IL interface prior to the trigger, the digital trigger function will be aborted.

Working With the Input Port

Essentially, only two things are required when working with each bit of the input port; an external power supply and a switch. The switch may be a mechanical switch, a discrete transistor or integrated circuit, etc.

The following illustration shows one bit of the input port in a typical configuration. Two connections are needed for each bit input. When the switch is closed, or the transistor turns on, the input bit light isolator turns on. This is the condition described previously as being "set". With the switch open the bit is "cleared". If one power supply is to be used with all 8-bits of the input port, it should be capable of providing a minimum of 200 mA per option card.

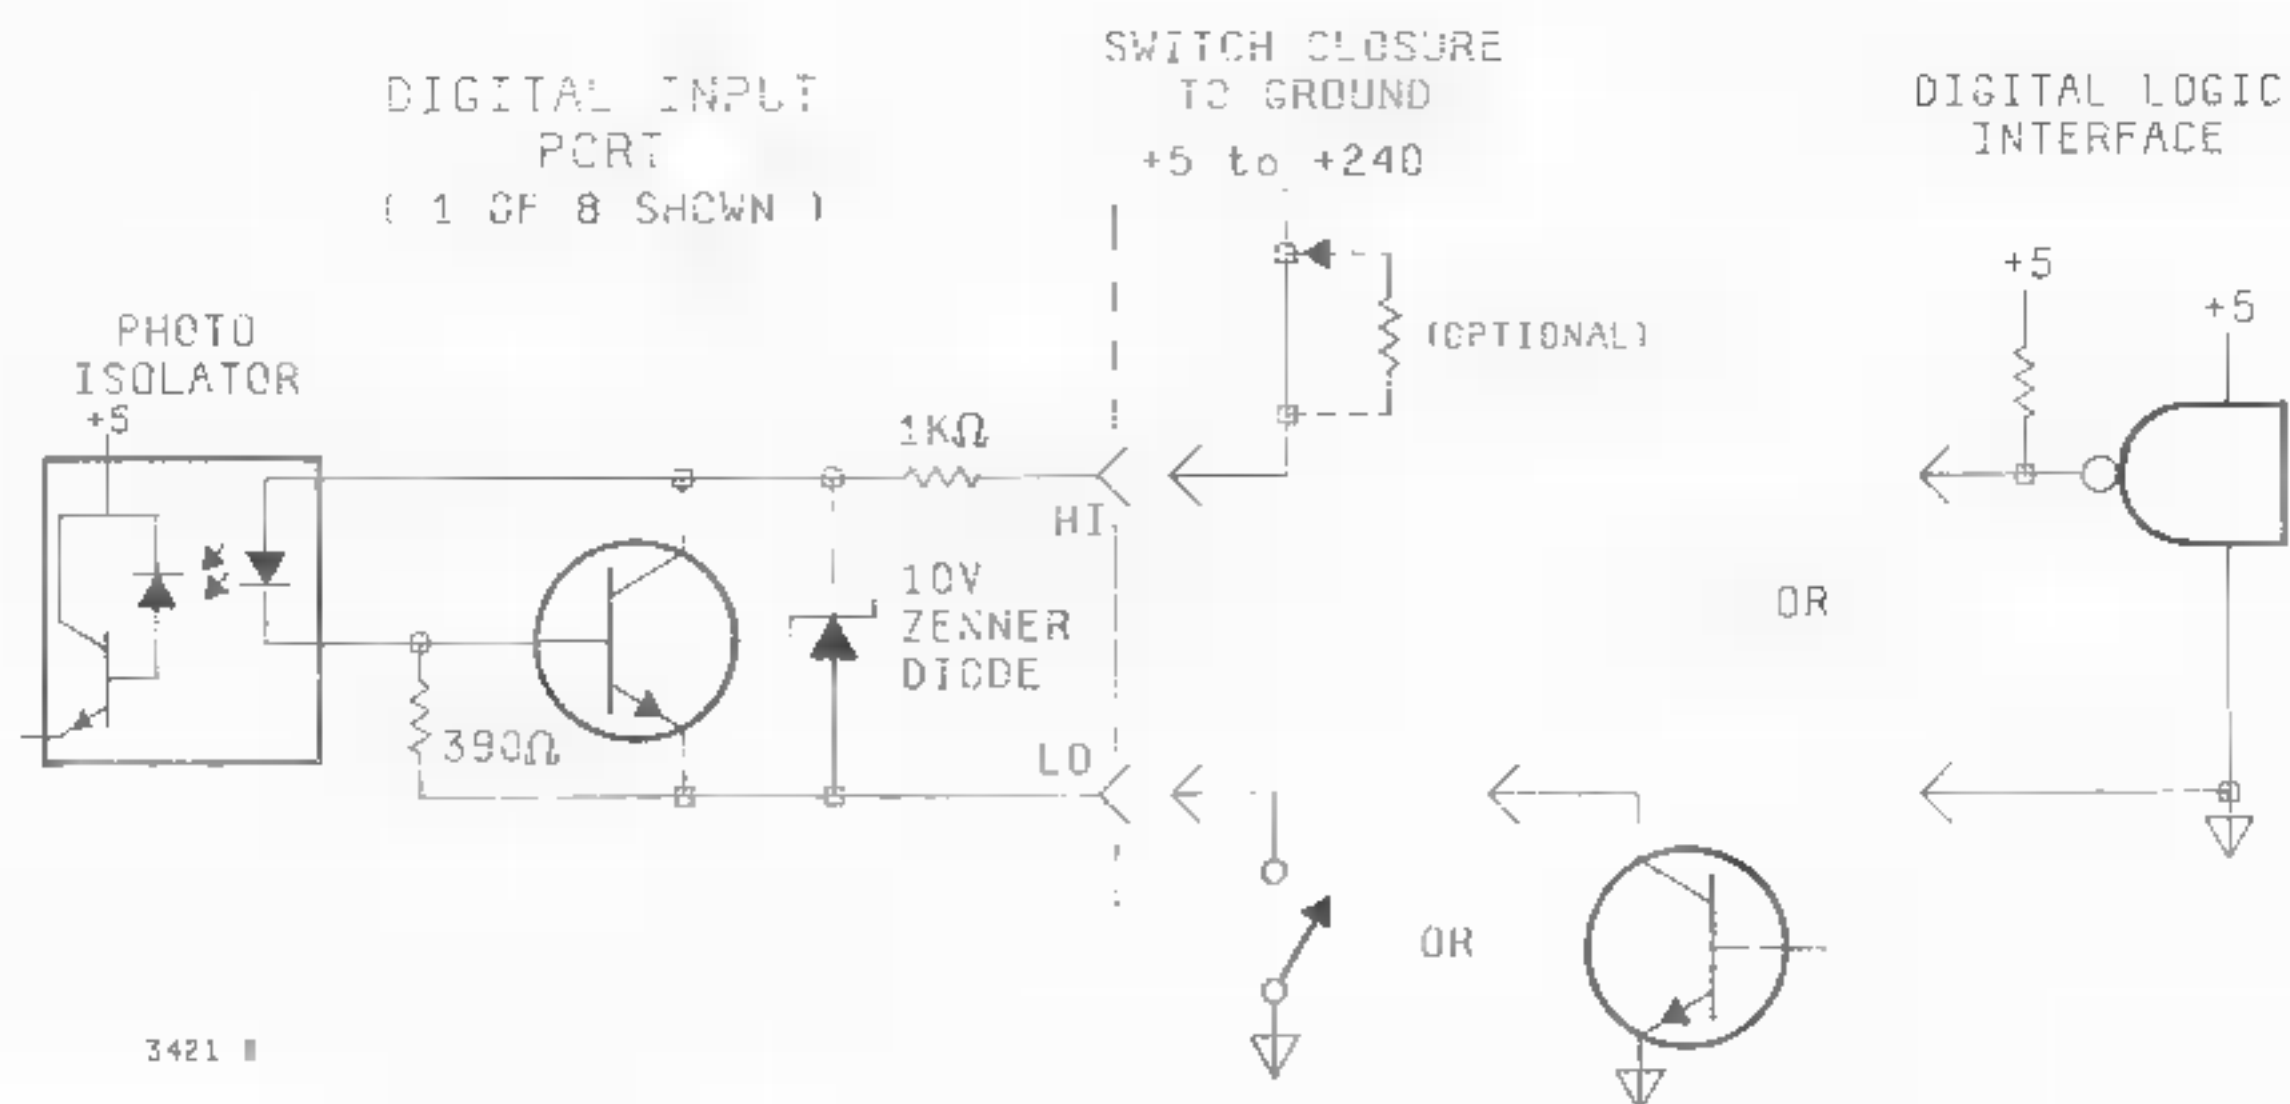

Output Port Overview

The output port contains 8 VMOS Field Effect Transistor (FET) switches. These switches are completely independent of each other and allow you to control such things as alarms and relays. A high switching voltage ($<42\text{VDC}$) and current ($<300\text{ mA}$) means that the output port can be employed in many different ways.

Standard Commands

The three STANDARD commands most commonly used with the output port are CLSx, OPNx, and WRTi,[abc]. The first two, CLSx and OPNx, allow control of individual switches in the port. WRTi, on the other hand, permits one command to control all 8 switches. In the discussion to follow, the word "closed" means that the switch is closed (low impedance) and "clear" means the switch is open (high impedance).

CLSx, OPNx

The command CLSx (CLose Single switch x) "closes" the switch specified by x. OPNx performs just the opposite task, it clears the switch specified by x. The table below shows the switch address chart for the three different slots.

Switch#	Switch Address if card in slot#		
	Slot 0	Slot 1	Slot 2
0	0	10	20
1	1	11	21
2	2	12	22
3	3	13	23
4	4	14	24
5	5	15	25
6	6	16	26
7	7	17	27

If, for example, you have a digital I/O card in slot 1 and you wanted to close switch 5, execute CLS5. If you want to open switch 3, execute OPN3.

WRTi,[ab]c

To control all switches with one command use the WRTi,[ab]c command. The i represents the slot number for the digital I/O card. The value [ab]c is a decimal number(1 to 3 digits) equal to the sum of the values of the switches that you want closed. See the switch value chart below. If you want to close only switches 3, 4, and 5 and open all other switches in slot 1, regardless of their previous condition, execute the command WRT1,56. This example is shown below.

Switch Number	7	6	5	4	3	2	1	0
Switch Value If Closed	128	64	32	16	8	4	2	1

Example: $0 + 0 + 32 + 16 + 8 + 0 + 0 + 0 = 56$

To make it easier for you to convert binary to decimal, here's a simple program to do the conversion for you. Simply enter the bit numbers that you want to be set. The program will return the decimal equivalent number.

```

10 ! BINARY TO DECIMAL CONVERSION
20 A=0
30 DISP "HOW MANY BITS DO YOU WANT TO SET"
40 INPUT B@ IF B>=9 THEN 30
50 FOR I=1 TO B
60 DISP "BIT NUMBER?" @ INPUT N
70 A=A+2^N
80 NEXT I
90 DISP "DECIMAL VALUE =" ;A
100 END

```

Advanced Commands

The advanced instruction set provides added capabilities when using the output port. The two instructions from this set are DSi,[abc], and DCi[abc].

DSi,[ab]c

The **Digital SET** command, DSi,[ab]c, closes the output switches on card "i" to the configuration specified by the decimal number abc. All switches not specified by [abc] remain unchanged. The value [abc] represents the sum of the values of the switches you wish to close. Use the switch value chart shown previously to determine the value abc. For example, if you want switches 1 and 5 closed in slot 2 and all other switches to remain in their previous state, execute the command DS2,34.

The DS command differs from the WRT command in that DS (and DC) affects only the switches specified in the command. The WRT command affects all switches on the assembly. For example, suppose that on a 44465A assembly (slot 0), switches 2, 3, and 4 are closed. Executing the command: DS0,1 would close switch number 1. Switches 2, 3, and 4 would remain closed. However, if the WRT0,2 command had been executed, switch 1 would be closed but switches 2, 3, and 4 would be opened. (Remember that WRT uses the sum of the decimal values rather than the bit numbers.)

DCi,[ab]c

The **Digital Clear** command, DCi,[ab]c, clears (opens) the switches specified in the same manner as the Digital Set command closes switches.


Working With the Output Port

Although there are several ways to use the output port, the most common application is a switch closure to ground. In whatever way you use it, two things are required, a power supply and a load. The FET switches are designed for a maximum

power supply voltage of 42 volts. The load must be designed to limit current through the switch to a maximum of 300mA. Consider the following two examples.


Relay Control

In this first example, one bit of the digital output port is used to control a relay. In this circuit, the relay was chosen because it has a 12 volt, 300 ohm coil. The 300 ohm coil limits the current to 40 mA. The diode across the relay coil must be there to prevent damage to the FET switch.

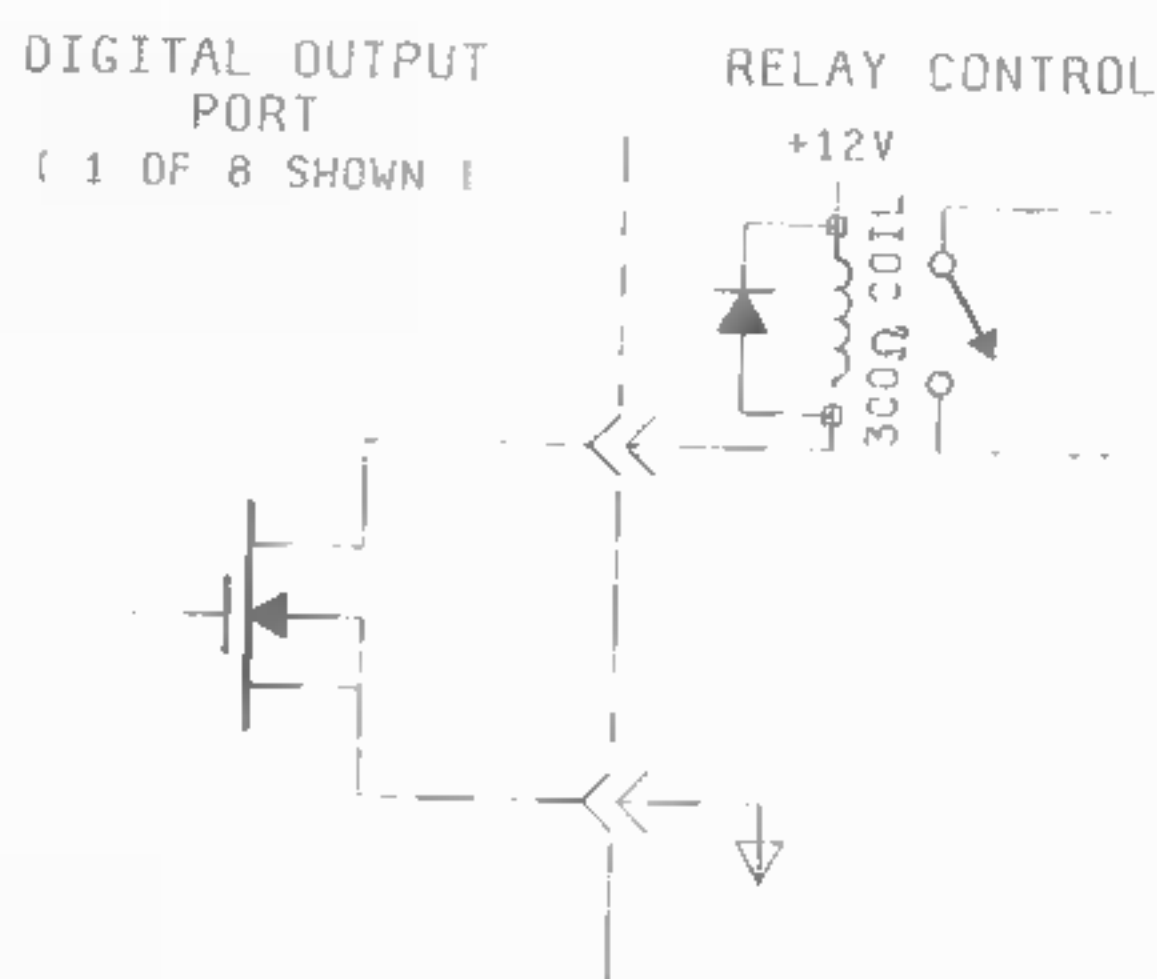

Digital Logic Interface

The second example demonstrates how the output port could be used to communicate with digital logic devices. The value of the pull-up resistors are determined by the type of logic family the output port will be driving. As a general rule, the following values will suffice: standard TTL, use 2.2KΩ; for LS TTL devices, use 10KΩ; for CMOS devices, use 50KΩ.

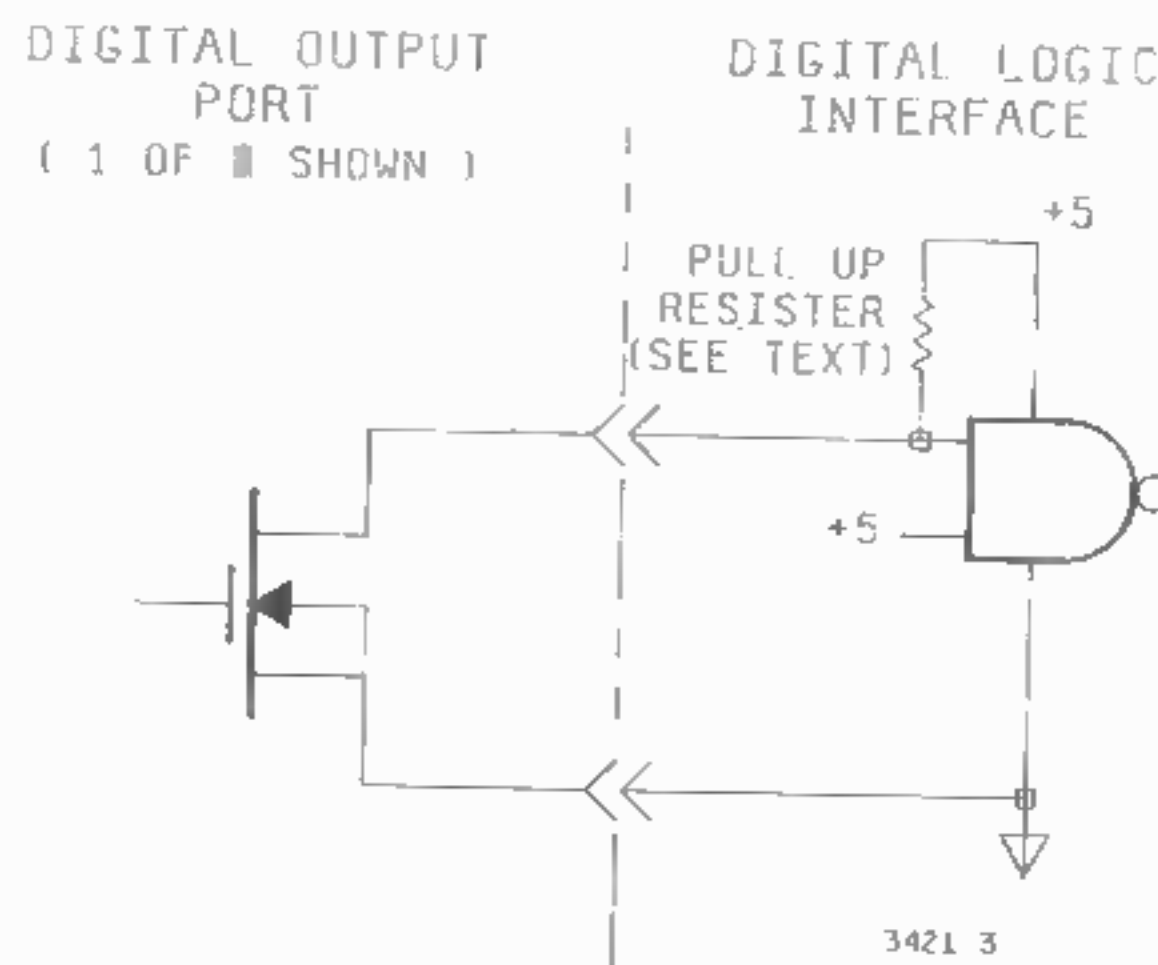

Specifications

Input Port

Input Voltage Levels:

Low Voltage Maximum:	.8 V
High Voltage Minimum:	2.4 V
High Voltage Maximum:	24.0 V

Maximum Input Current for Low State: 100 μ A

Minimum Input Current for High State: 800 μ A

Maximum input current for High State (24V): 25mA

Monitor Functions:

Minimum pulse width:	100 μ S
Time from trigger to SRQ:	300 μ S

Output Port

Logic 1 (Closed): Low impedance, <2 Ohms, \leq 300mA current, <.6V Drop across switch

Logic 0 (Open): High impedance, >10Mohms, \leq +42V across switch.

Chapter 7

Operator Maintenance

Introduction

Your 3421A Data Acquisition and Control Unit was engineered for ease of use, accuracy, and reliability. The instrument was carefully inspected before shipping and should be free of mechanical and electrical flaws and should be in proper working condition.

The information in this chapter covers the initial setup and installation of the 3421A and should be read before the instrument is installed for use. This chapter also includes warranty information, instructions on obtaining repair service, cleaning, etc.

Accessories

The following table lists the available accessories and options for your 3421A. These accessories are offered to help you maximize the useability and convenience of your 3421A.

Description of Option/Accessory	Use this number when ordering with 3421A	Use this number when ordering separately
HP-IB Interface	Option 201	44461A
10-Channel Multiplexer with thermocouple compensation and connector block	Option 020	44462A
Extra connector block for 10 channel Multiplexer	44463A	44463A
8-Bit Digital I/O Assembly with connector block	Option 050	44465A
Breadboard Assembly with connector block	Option 040	44464A
Extra connector block for Digital I/O or Breadboard	44466A	44466A
Six pairs of resistors for 10:1 divider, used on 10-channel multiplexer. One pair comes premounted (channel 2) on each assembly.	44469A	44469A
Side handle Kit	Option 401	---
Front Handle Kit	Option 907	-----
Rack Mount Kit	Option 908	-----
Rack Mount Kit with Front Handle	Option 909	-----
Carrying Case with Pocket for 41C/CV	11341A	11341A
Additional set of 3421A Documentation	Option 910	Order by part number
-hp- 41CV calculator, 82160A HP-IL interface, 82182A Time module, and 44468A DA/C Pac	Option 541	Order components separately
-hp- 82161A HP-IL Digital Cassette Drive	Option 561	82161A
-hp- 82162A HP-IL Printer	Option 562	82162A
Temperature Probe	10023A	10023A
500MHz RF Probe	11096A	11096A
Test lead kit	34118A	34118A
1 Metre HP-IB Cable	10833A	10833A
2 Metre HP-IB Cable	10833B	10833B
4 Metre HP-IB Cable	10833C	10833C
0.5 Metre HP-IB Cable	10833D	10833D
0.5 Metre HP-IL Cable	82167A	82167A
1 Metre HP-IL Cable	82167B	82167B
5 Metre HP-IL Cable	82167D	82167D

Preparation For Use

Unpacking Instructions

When you are unpacking the 3421A for the first time, make certain the options that you ordered have been installed in your 3421A. The following list of items should also be included with the 3421A:

Qty.	Item
1	3421A Operating, Programming, and Configuration Manual.
1	3421A Service Manual.

Also, make certain that the instrument and option assemblies that you ordered coincide with what you received. This includes line voltage options as well as HP-IB and other option assemblies.

Initial Inspection


Your 3421A was carefully inspected before it left the factory. It should be free of marks or scratches and in proper working order upon receipt. You should, however, inspect the instrument for any damage that may have occurred in transit. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been mechanically and electrically inspected. Procedures for checking the electrical performance of the 3421A are given in the 3421A SERVICE MANUAL (-hp-part number 03421-90001). If there is any mechanical damage, the contents are incomplete, or the instrument fails to pass its performance tests, promptly notify the nearest Hewlett-Packard office. A list of -hp- Sales and Service Offices is located in the back of this manual. If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Save the shipping materials for the carrier.

CAUTION

Before connecting the 3421A to an ac power source, verify that the ac power source matches the power requirements of the instrument as marked on the option label on the rear panel of the instrument. Only qualified service trained personnel should reconfigure the 3421A for a different power line voltage option.

Power Requirements





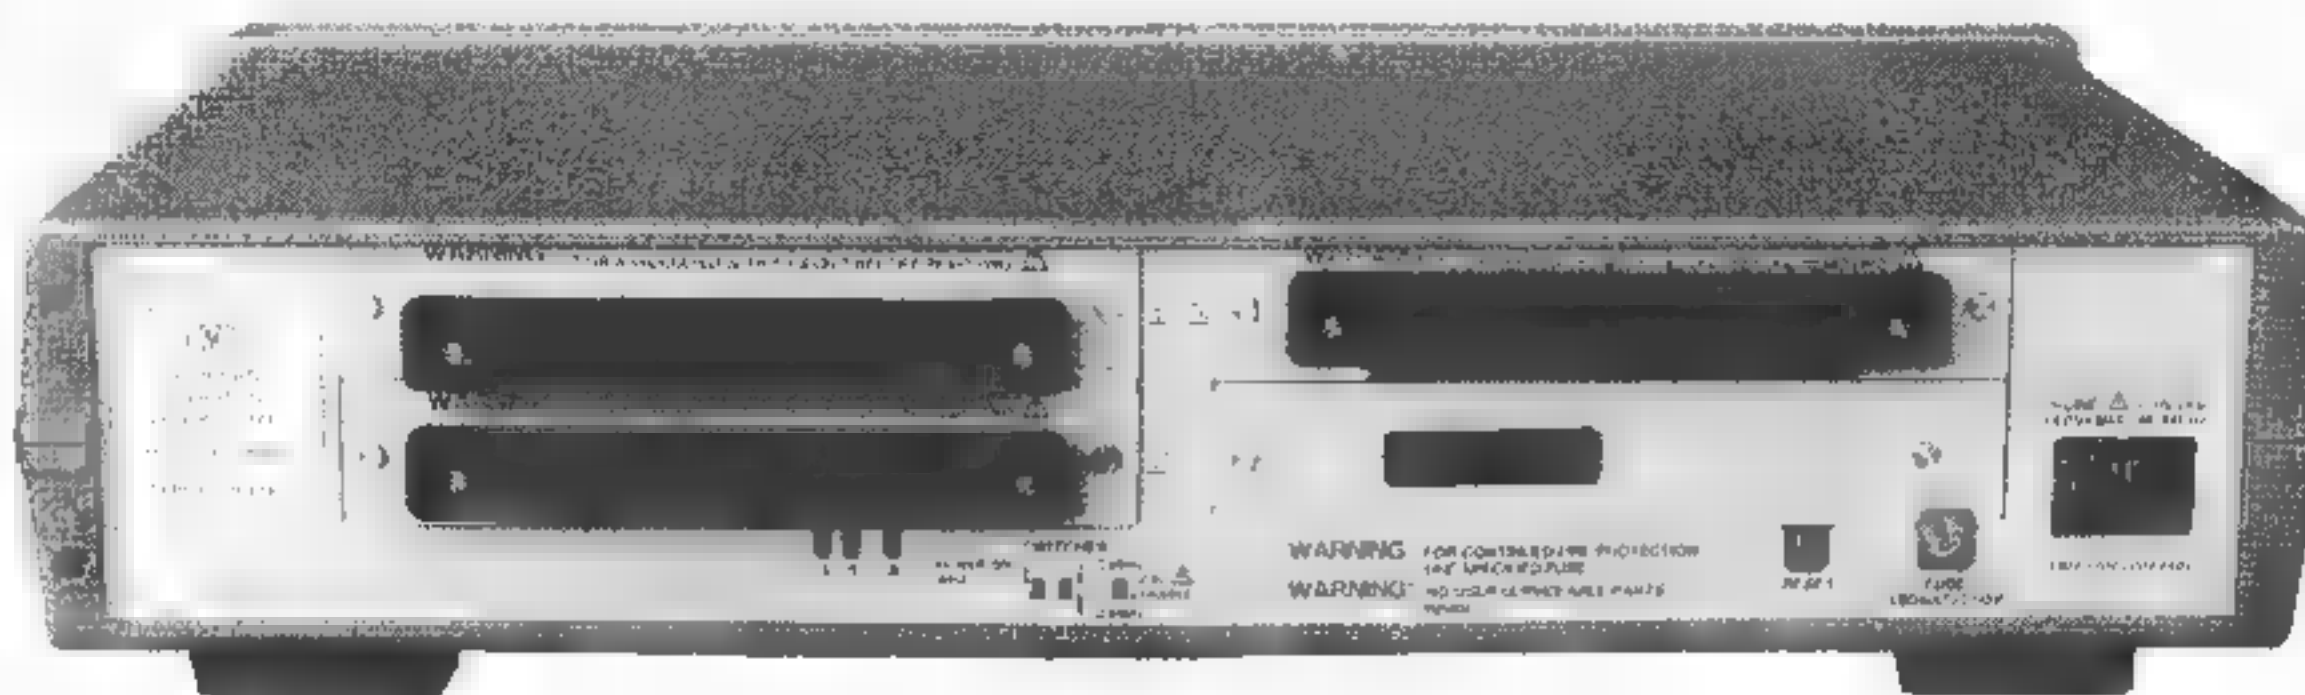



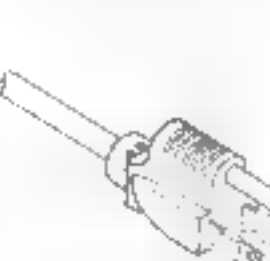
The 3421A requires a power source of 100, 120, 220, or 240 VAC (-10%, +5%), 48 to 440 Hz single phase. Maximum power consumption is 6 VA. Refer to the 3421A rear panel for the line voltage option label. Make certain the option marked on the label is the same as the nominal line voltage for your area. Also check the 50/60 Hz switch for the proper setting, i.e., up for a 60 Hz line and down for a 50 Hz line.



3421 Back Panel

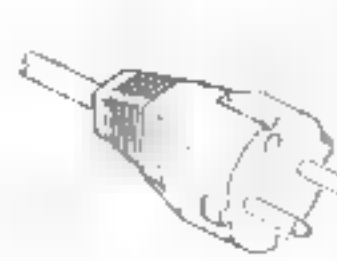Power Cords and Receptacles

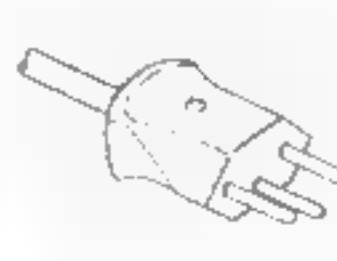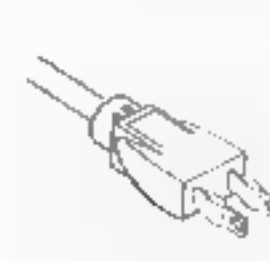The following illustration shows the various power cord configurations that are available to provide power to the 3421A. The -hp- part number shown directly below the individual power plug drawing is the part number for the power cord complete with plug. If the appropriate power cord is not included with the instrument, notify the nearest -hp- Sales and Service Office.

 <p>250 V OPERATION</p> <p>PLUG* CEE7 V1 CABLE* HP 8120 1692</p>	 <p>250 V OPERATION</p> <p>PLUG* CEE72 V1 CABLE* HP 8120 1860</p>	 <p>250 V OPERATION</p> <p>PLUG* BHR 107 CABLE* HP 8120 2356</p>	 <p>250 V OPERATION</p> <p>PLUG* SEL 1015 1858-24507 TYPE 10 CABLE* HP 8120 2104</p>	
 <p>125 V 6A**</p> <p>PLUG* NEMA 1 15P CABLE* HP 8120 0684</p>	 <p>250 V OPERATION</p> <p>PLUG* NZSS 138-AS C112 CABLE* HP 8120 0696</p>	 <p>250 V OPERATION</p> <p>PLUG* BS 1363A CABLE* HP 8120 1703</p>	 <p>250 V 6A**</p> <p>PLUG* NEMA 6 15P CABLE* HP 8120 0698</p>	 <p>125 V 6A**</p> <p>PLUG* NEMA 5-15P CABLE* HP 8120 1521</p>

STD B 4193 (Rev 1)

*The number shown for the plug is the industry code for the plug only.
The number shown for the cable is an hp part number for a complete cable including the plug.
**UL listed for use in the United States of America.

Power Cords

Grounding Requirements

The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground). The power jack and supplied power cable meet IEC (International Electrotechnical Commission) safety standards.

Power Line Fuse Replacement

The power line fuse is located on the rear panel of the 3421A in the lower right corner. To replace the fuse, turn the instruments power switch off and remove the power cord from the rear of the instrument. With a small flatblade screwdriver rotate the fuse terminal counterclockwise. Replace the fuse with the same type fuse. Reinstall the terminal and apply power. The following table lists the available power line options and the appropriate fuse.

Line Voltage Options

Option No.	Line Voltage	Frequency	Power Line Fuse
315	100VAC	50Hz	.15A Time Delay (-hp- Part Number 2110-0234)
316	100	60	
325	120	50	
326	120	60	
335	220	50	
336	220	60	
345	240	50	
346	240	60	

Installation Considerations

There are two items to keep in mind whether you are installing the 3421A in a rack or simply setting it on a test bench. First, do not set the 3421A where air blowing into the instrument may cause thermal gradients and cause errors in temperature measurements. Second, the REFERENCE junction on the 10-channel multiplexer assembly was calibrated with the 3421A in a horizontal position. Consequently the 3421A should be used in ■ horizontal position or temperature gradients may again cause errors in measurements. If the instrument is to be used in another position, the REFERENCE junction should be calibrated with the instrument in that position.

WARNING

The 3421A uses latching relays on the 10-channel multiplexing assembly (option 020) and on the mainframe. The state of these relays can only be altered under program control. This is an advantage in the sense that, under most conditions of failure, the relays will remain in whatever state your program has set them. However, in case of power or equipment failure, any application requiring a failsafe method of insuring that the circuits under control are in a known state must be provided by the installer.

Safety Considerations

General safety precautions must be adhered to during all phases of operation of the 3421A. Failure to comply with these precautions or with specific warnings elsewhere in this manual, violates safety standards of design, manufacture, and intended use of this instrument. The Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

Operating personnel must not remove instrument covers. Component replacement must be made by qualified service trained personnel with a knowledge of the hazards involved. Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

Warnings and cautions precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings and cautions must be followed. Safety symbols used on the instrument or in the manual include the following:

WARNING	The WARNING sign denotes a hazard. It calls attention to a procedure, practice, condition, or the like, which, if not correctly performed or adhered to, could result in injury or death to personnel.
CAUTION	The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, condition, or the like, which, if not correctly performed or adhered to, could result in damage or destruction to all or part of the product.
NOTE	The NOTE sign denotes important information. It calls attention to a procedure, practice, condition, or the like which is essential to highlight.



INSTRUCTION MANUAL SYMBOL. The product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the instrument.



Indicates dangerous voltage (terminal fed from the interior by voltages exceeding 1000 volts must be so marked).




Alternating Voltage/Current



Direct Voltage/Current

Interface Connections

The -hp- Model 3421A is compatible with the Hewlett-Packard Interface Loop (HP-IL). HP-IL is an easy to use interface that allows interaction and control between several -hp- controllers, such as the 41C/CV calculator or 85A desktop, and instruments like the 3421A or -hp- 3468A. Instruments are connected together in series, forming a "loop". Refer to the figure below. The 3421A also has an option 201 which provides switch selectable HP-IB or HP-IL. HP-IB (Hewlett-Packard Interface Bus) is Hewlett-Packard's implementation of IEEE Std. 488-1978, "Standard Digital Interface for Programmable Instrumentation."

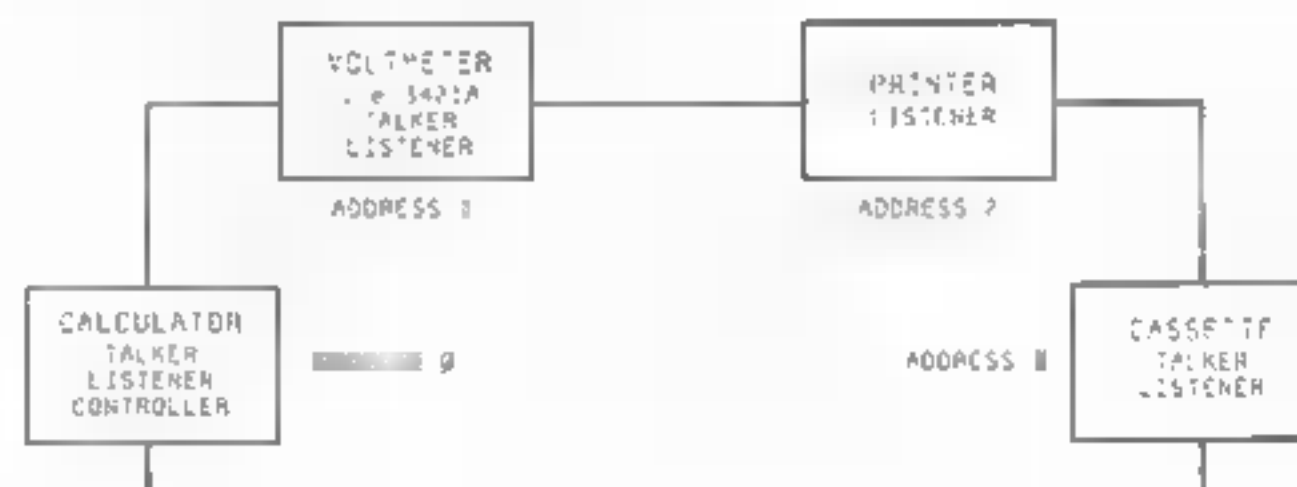

HP-IL


Although the 3421A may be connected anywhere in the loop, delays in triggering will be reduced if the 3421A is the first device in the loop. HP-IL connections to the 3421A are made by two cables, one going to the previous instrument in the loop (RECEIVE) and the other going to the next instrument in the loop (TRANSMIT). All of the interface cables must form a continuous loop. All connectors are designed for proper orientation. To connect a device, such as the 3421A, in the loop, first turn off the calculator and the device to be added to the loop. Then, disconnect the loop in one place and connect the 3421A into the loop at that place. All devices must be turned on for the interface to work properly. The calculator/controller should be the last device turned on as it re-assigns new addresses to each device when turned on. Total cable length between any two consecutive devices in the loop must not exceed 10 metres (33 feet) for standard HP-IL cable.

HP-IL Address Selection

Each device in the loop is assigned a unique address - a number from 1 to 30 - allowing the controller to specify and control individual devices. The 3421A has a default turn-on address of 09, however, the controller will sequentially re-address each device in the loop. The addresses start with address 1 for the first device in the loop after the calculator in the direction of information transfer. In this way, each instrument has a unique address, which it stores internally.

HP-IB

The 3421A with option 201 provides switch selectable HP-IL or HP-IB* interfaces. The photograph below shows the rear panel of the 3421A with the option and points out the switch. Connection to HP-IB is made by an interface cable to the 24 pin HP-IB connector located on the rear panel. A typical interconnection is shown below in which system interconnection is made by two interface cables. The ends of the cables have both a male and female connector to enable connections to other cables. As many as 15 instruments (including the controller) can be connected by the same interface bus. However, the maximum length of cable that can effectively be used to connect a group of instruments should not exceed 2 metres (6.5 feet) times the number of instruments to be connected, or 20 metres (65.6 feet), whichever is less.

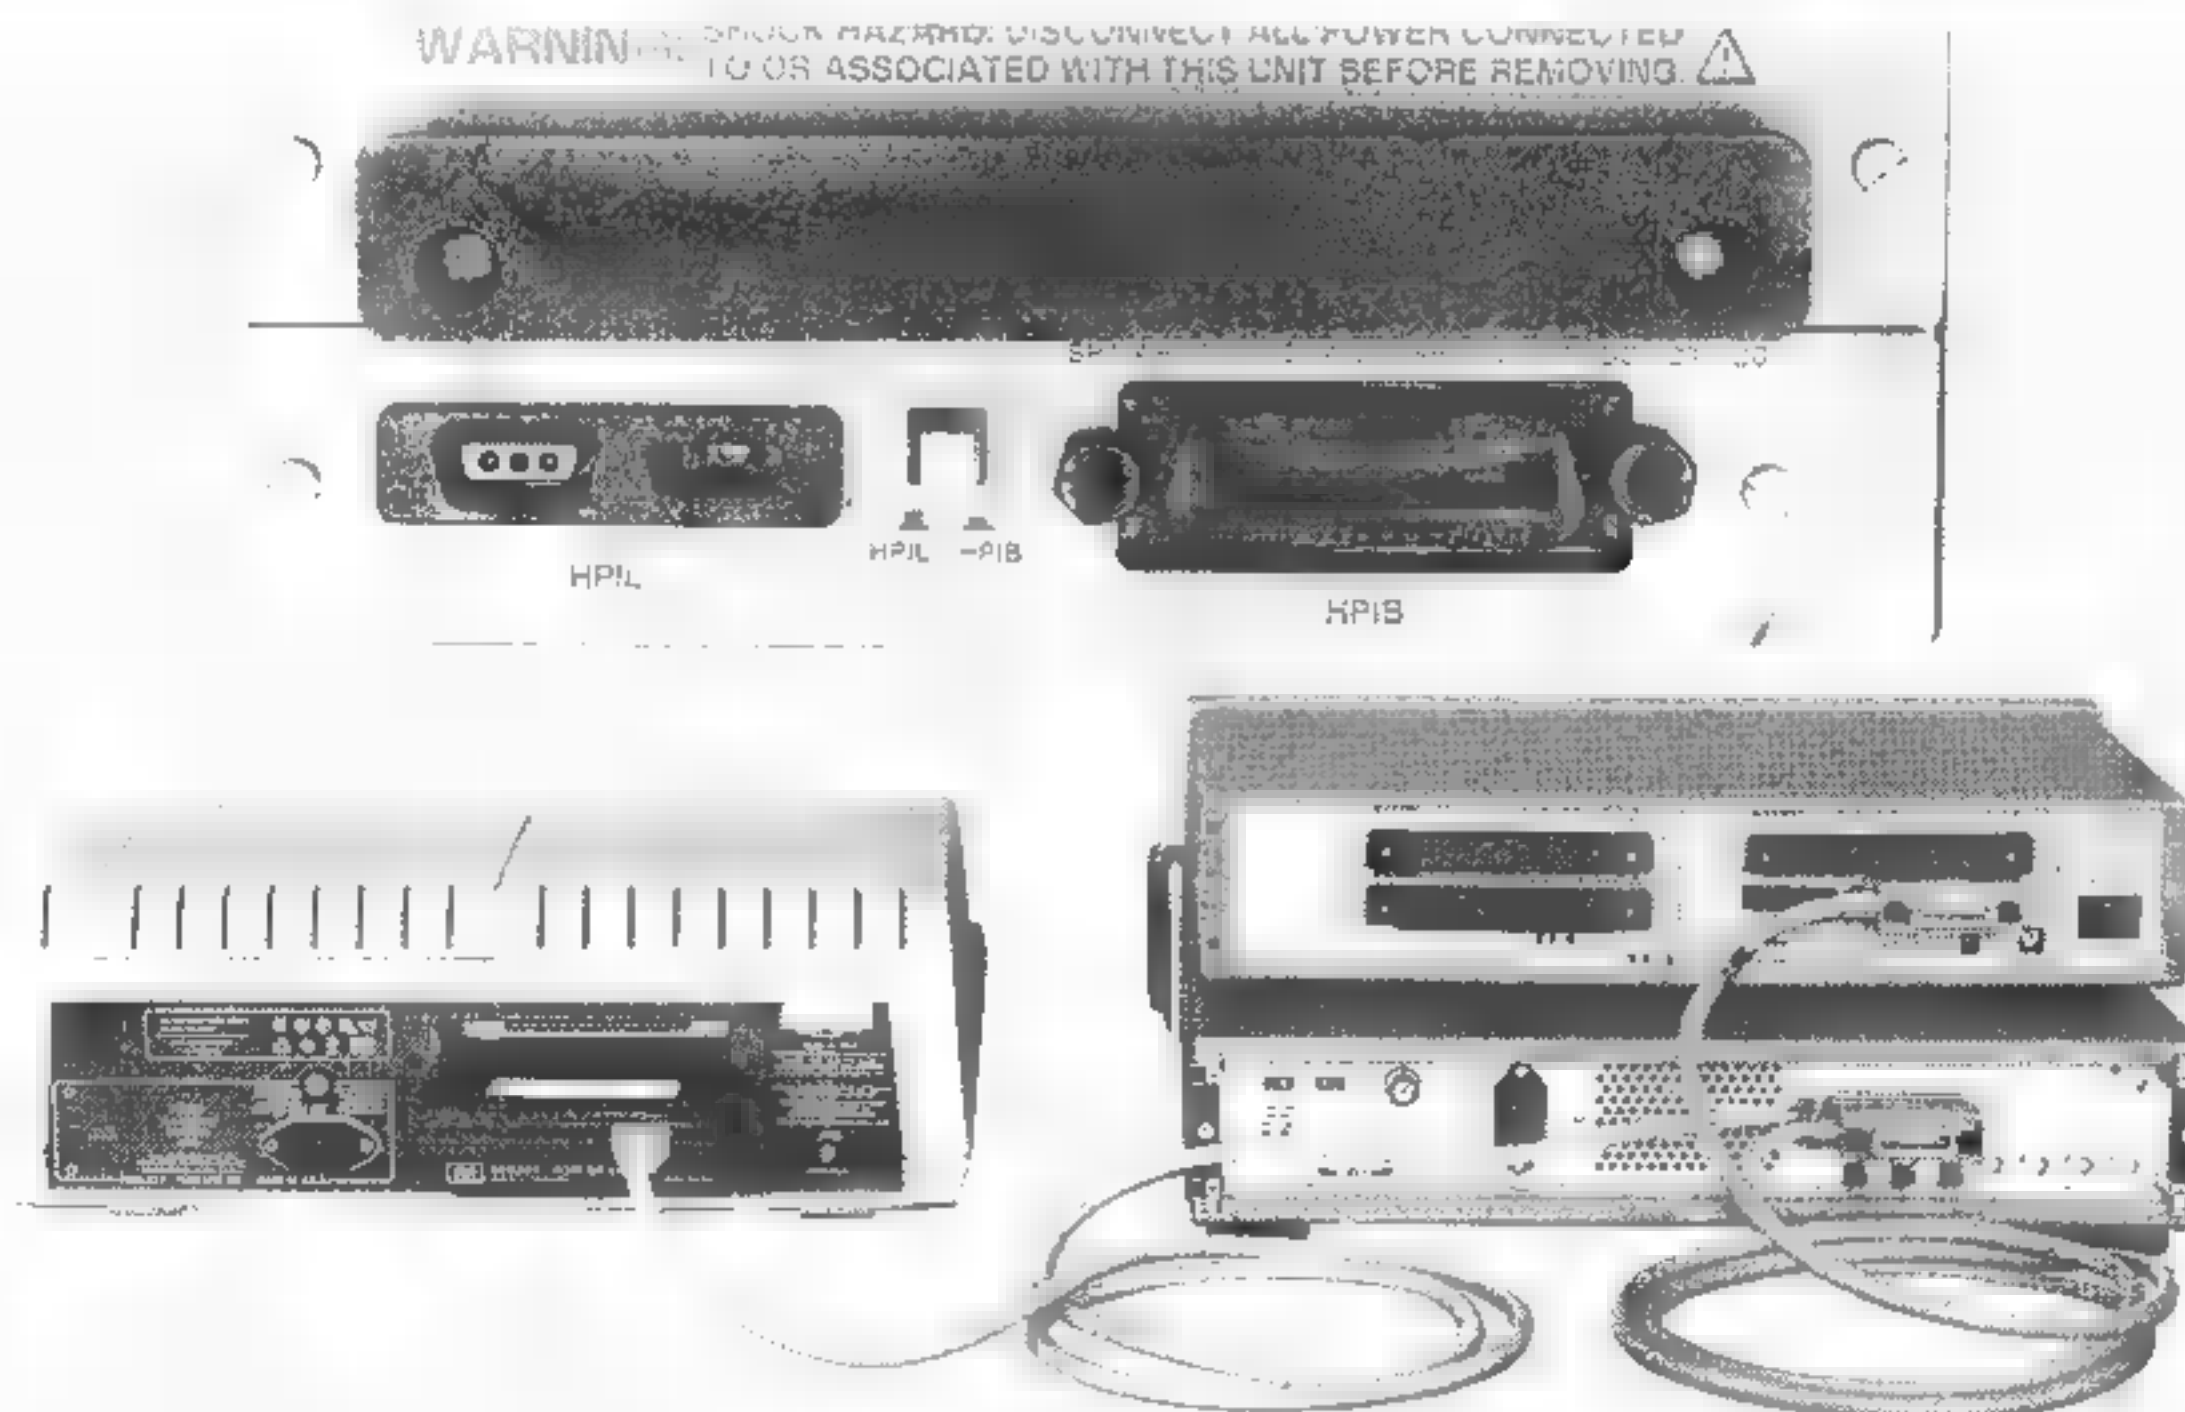

HP-IB and Two Cable System

HP-IB Address Selection

The HP-IB address for the 3421A is determined by the setting of five switches located inside the instrument case. The 3421A leaves the factory with the address switches set to decimal code "09". Changing the HP-IB address requires a qualified service trained technician. Refer to the 3421A Option 201 Service Manual.

Warranty Information

Certification

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

Warranty

This Hewlett-Packard product is warranted against defects in material and workmanship for a period of one year from the date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by -hp-. Buyer shall prepay shipping charges to -hp- and -hp- shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to -hp- from another country.

Hewlett-Packard warrants that its software and firmware designated by -hp- for use with an instrument will execute its programming instructions when properly installed on that instrument. Hewlett-Packard does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

Limitation of Warranty

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HEWLETT-PACKARD SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusive Remedies

THE REMEDIES PROVIDED HEREIN ARE BUYERS SOLE AND EXCLUSIVE REMEDIES. HEWLETT-PACKARD SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

Assistance

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided in the back of this manual.

In addition to the above warranty, the following LIMITATION OF WARRANTY applies to the option 040, Breadboard Assembly:

Limitation of Warranty for Option 040

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer. Buyer supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

The design and implementation of any circuit used on this product is solely the responsibility of the Buyer. Hewlett-Packard Company does not warrant the Buyers circuitry or malfunctions of the 3421A or plug-in options that result from the Buyers circuitry. In addition, -hp- does not warrant any damage that occurs as a result of the Buyers circuit, including but not limited to the following:

1. Analog and digital sections are interconnected.
2. 3421A power supply limitations are exceeded.
3. Component height/protrusion restrictions are violated.
4. Internal 3421A DVM voltage specifications are violated.
5. Maximum input voltage on the digital lines is exceeded.
6. The trace specifications listed in Chapter 9 of this manual are exceeded.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HEWLETT-PACKARD SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Specifications

The specifications for the 3421A are the performance characteristics of the instrument which are certified. These specifications are listed at the end of this chapter, and are the performance standards or limits against which the instrument is tested. Included in the table are some supplemental characteristics of the 3421A. These should be considered as additional and general information for you, the user. Because of the many operational capabilities of the 3421A, exercise care when checking the instruments specifications.

Any changes in specifications due to manufacturing changes, design, or traceability to the National Bureau of Standards will be covered in a manual change supplement.

NOTE

Specification for 40°C > 65% relative humidity are verified by a 5 day type test.

Environmental Requirements

When the 3421A is calibrated, careful note should be taken of the ambient temperature. In order to meet and maintain the specifications listed in this chapter, the 3421A should be operated within $\pm 5^{\circ}\text{C}$ ($\pm 9^{\circ}\text{F}$) of the ambient calibration temperature. This temperature is also called the reference temperature. As it is shipped from the factory, the 3421A should be operated within an ambient temperature range of $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ ($73^{\circ}\text{F} \pm 9^{\circ}\text{F}$). The instrument may be operated within an ambient temperature range of 0°C to 55°C ($+32^{\circ}\text{F}$ to 131°F) but with reduced accuracy.

WARNING

To prevent potential electrical or fire hazard, do not expose the 3421A to rain or moisture.

How to Obtain Repair Service

You may have your 3421A repaired at your local -hp- service center at anytime, whether it is under warranty or not. There is a charge for repairs after the one year warranty period. Contact your local Sales and Service Office for shipping instructions prior to returning the instrument. A list of Sales and Service Offices is located in the back of this manual.

Serial Number

Each 3421A carries its own serial number on a plate on the rear panel. Each of the 3421A option assemblies will also have a Date Code stamped on it. It is recommended that owners keep a separate record of these numbers. Should your unit be lost or stolen, the complete serial number is often necessary for tracing and recovery, as well as insurance claims.

General Shipping Instructions

Should you ever need to ship your 3421A, be sure it is packaged in ■ protective package (use the original shipping container and cushioning material) to avoid transit damage. Such damage is not covered by the warranty. Hewlett-Packard suggests that you always insure shipments. Attach a tag to the instrument identifying the owner and indicating the service or repair needed. Include the model number and full serial number of the instrument and/or option cards. In any correspondence, identify the instrument by model number and full serial number.

Further Considerations

Cleaning

Disconnect the 3421A from its ac power source before cleaning. Also, remove all sources of power from the option assemblies. The instrument can be cleaned with ■ soft cloth dampened either in clean water or in water containing a mild detergent. Do not use an excessively wet cloth, or allow water inside the instrument. Do not use any abrasive cleaners, especially on the display. Do not press hard on the display.

The panel area surrounding the input terminals should not be touched because oils on the instrument surface caused by fingerprints may cause leakage paths and decrease the input impedance. To maintain the high input impedance of the 3421A, the input terminal area should be cleaned periodically with a cotton swab dipped in isopropyl alcohol and then rinsed with deionized water. Let the panel thoroughly dry before using.

Detailed Specifications... These specs are more detailed than in the data sheet. In particular, we've added 24 hour specifications.

DC VOLTAGE

Input Characteristics

Range	Maximum Display (5½ Digit)	5½ Digit	Resolution 4½ Digit	3½ Digit	Input Resistance	> 40°C/65%RH Input Resistance	Maximum Input Voltage
0.3 V	.30100	1 µV	10 µV	100 µV	10 ¹¹ Ω	10 ¹¹ Ω	HI - LO
3 V	3.01000	10 µV	100 µV	1 mV	10 ¹¹ Ω	10 ¹¹ Ω	± 301 Vp
30 V	30.01000	100 µV	1 mV	10 mV	10M ± 1%	10M + 1% - 9%	HI terms to earth ± 350 Vp
300 V	301.000	1 mV	10 mV	100 mV	10M ± 1%	10M + 1% - 9%	LO terms to earth ± 150 Vp

Measurement Accuracy: ± (% of reading + number of counts). Auto-zero on.
(20°C ≤ calibration temperature ≤ 30°C)

24 hours: calibration temperature ± 1°C, after 1 hour warmup. For less than 1 hour warmup, use 90 day specs

Range	5½ Digit	4½ Digit	3½ Digit
0.3 V	.0050 + 5	.0050 + 1	.0050 + 1
3 V	.0035 + 3	.0035 + 1	.0035 + 1
30 V	.0050 + 3	.0050 + 1	.0050 + 1
300 V	.0055 + 3	.0055 + 1	.0055 + 1

90 days: calibration temperature ± 5°C

Range	5½ Digit	4½ Digit	3½ Digit
0.3 V	.0088 + 6	.0088 + 1	.0088 + 1
3 V	.0072 + 3	.0072 + 1	.0072 + 1
30 V	.0087 + 3	.0087 + 1	.0087 + 1
300 V	.0089 + 3	.0089 + 1	.0089 + 1

1 year: calibration temperature ± 5°C

Range	5½ Digit	4½ Digit	3½ Digit
0.3 V	.0194 + 6	.0194 + 1	.0194 + 1
3 V	.0181 + 3	.0181 + 1	.0181 + 1
30 V	.0195 + 3	.0195 + 1	.0195 + 1
300 V	.0195 + 3	.0195 + 1	.0195 + 1

Temperature Coefficient: Add to Measurement Accuracy ± (% of reading + number of counts) / °C for each °C outside of calibration temperature ± 5°C

Range	5½ Digit	4½ Digit	3½ Digit
0.3 V	0.0008 + 0.5	0.0008 + 0.05	0.0008 + 0
3 V	0.0007 + 0.05	0.0007 + 0	0.0007 + 0
30 V	0.0008 + 0.5	0.0008 + 0.05	0.0008 + 0
300 V	0.0007 + 0.05	0.0007 + 0	0.0007 + 0

Auto-zero Off: Add to Measurement Accuracy ± (number of counts). For 24 hours in a stable environment (temperature within ± 1°C of the temperature when auto-zero is turned off)

Range	5½ Digit	4½ Digit	3½ Digit
0.3 V	11	1	0
3 V	3	0	0
30 V	11	1	0
300 V	3	0	0

Noise Rejection: For 50, 60 Hz ± 0.1% (depending on option) 1 kΩ unbalance in Lo. Auto-zero on.

In dB	40°C/65%RH					
	5½ Digit	4½ Digit	3½ Digit	5½ Digit	4½ Digit	3½ Digit
AC NMR	80	59	0	80	59	0
AC ECMR	140	120	60	140	120	60
DC CMR	140	140	140	120	120	120

RESISTANCE (2-wire Ω, 4-wire Ω)

Input Characteristics

Range	Maximum Reading 5½ Digit	Resolution 5½ Digit	Resolution 4½ Digit	Resolution 3½ Digit	Current Through Unknown	Max. Open Circuit Voltage
300 Ω	301.000	1 mΩ	10 mΩ	100 mΩ	1 mA	6.5
3 K	3.01000	10 mΩ	100 mΩ	1 Ω	1 mA	6.5
30 K	30.1000	100 mΩ	1 Ω	10 Ω	100 µA	6.5
300 K	301.000	1 Ω	10 Ω	100 Ω	10 µA	5.5
3 M	3.01000	10 Ω	100 Ω	1 kΩ	1 µA	4.5
30 M	30.1000	100 Ω	1 kΩ	10 kΩ	100 nA	4.5

Non-destructive overload ± 300 volts peak.

Short-term overload ± 650 volts peak.

Detailed Specifications (continued)...

RESISTANCE (2-wire Ω , 4-wire Ω) (Continued)

Measurement Accuracy: \pm (% of reading + number of counts). Auto-zero on. 4-wire ohms.

5 1/2 Digit Mode

Range	23°C \pm 1°C 24 Hour	23°C \pm 5°C 90 Day	23°C \pm 5°C 1 Year
300 Ω	.0045 + 5	.012 + 6	.017 + 6
3 K	.0035 + 3	.011 + 3	.016 + 3
30 K	.0035 + 3	.011 + 3	.016 + 3
300 K	.0035 + 3	.011 + 3	.016 + 3
3 M	.010 + 3	.014 + 3	.018 + 3
30 M	.092 + 3	.107 + 3	.115 + 3

> 40°C/65% RH

Range	23°C \pm 1°C 24 Hour	23°C \pm 5°C 90 Day	23°C \pm 5°C 1 Year
300 Ω	.0046 + 4	.012 + 6	.017 + 6
3 K	.0047 + 3	.011 + 3	.017 + 3
30 K	.0318 + 3	.0335 + 3	.0354 + 3
300 K	.315 + 3	.315 + 3	.315 + 3
3 M	3.08 + 3	3.08 + 3	3.08 + 3
30 M	25.2% + 3	25.2% + 3	25.2% + 3

4 1/2 Digit Mode

Range	23°C \pm 1°C 24 Hour	23°C \pm 5°C 90 Day	23°C \pm 5°C 1 Year
300 Ω	.0045 + 1	.012 + 1	.017 + 1
3 K	.0035 + 1	.011 + 1	.016 + 1
30 K	.0035 + 1	.011 + 1	.016 + 1
300 K	.0035 + 1	.011 + 1	.016 + 1
3 M	.010 + 1	.014 + 1	.018 + 1
30 M	.097 + 1	.114 + 1	.123 + 1

> 40°C/65%RH

Range	23°C \pm 1°C 24 Hour	23°C \pm 5°C 90 Day	23°C \pm 5°C 1 Year
300 Ω	.0046 + 1	.012 + 1	.017 + 1
3 K	.0047 + 1	.011 + 1	.017 + 1
30 K	.0318 + 1	.0335 + 1	.0354 + 1
300 K	.315 + 1	.315 + 1	.315 + 1
3 M	3.08 + 1	3.08 + 1	3.08 + 1
30 M	25.2% + 1	25.2% + 1	25.2% + 1

3 1/2 Digit Mode

Range	23°C \pm 1°C 24 Hour	23°C \pm 5°C 90 Day	23°C \pm 5°C 1 Year
300 Ω	.0045 + 1	.012 + 1	.017 + 1
3 K	.0035 + 1	.011 + 1	.016 + 1
30 K	.0035 + 1	.011 + 1	.016 + 1
300 K	.0035 + 1	.011 + 1	.016 + 1
3 M*	.076 + 1	.082 + 1	.087 + 1
30 M*	.74 + 1	.78 + 1	.79 + 1

* 3 1/2 digit 3 M spec is for ac operation with floating input. Measurement will decrease with LO connected to EARTH or in battery operation in which case the spec is the same as for 5 1/2 digit with 0 counts offset

> 40°C/65% RH

Range	23°C \pm 1°C 24 Hour	23°C \pm 5°C 90 Day	23°C \pm 5°C 1 Year
300 Ω	.0046 + 1	.012 + 1	.017 + 1
3 K	.0047 + 1	.011 + 1	.017 + 1
30 K	.0318 + 1	.0318 + 1	.0318 + 1
300 K	.315 + 1	.315 + 1	.315 + 1
3 M*	3.08 + 1	3.08 + 1	3.08 + 1
30 M*	25.2% + 1	25.2% + 1	25.2% + 1

* 3 1/2 digit 3 M spec is for ac operation with floating input. Measurement noise will decrease with LO connected to EARTH or in battery operation in which case the spec is the same as for 5 1/2 digit with 0 counts offset

First reading is in specification with default delay and 200 pF of capacitance.

2-wire ohms accuracy is the same as 4-wire ohms except add a maximum of 4 Ω offset.

Temperature Coefficient of Measurement Accuracy:

0°C to 18°C, 28°C to 55°C

5 1/2 digit display, auto-zero on

\pm (% reading + number of counts/°C)

Range	Temperature Coefficient
300 Ω	.0009 + .5
3 K	.0009 + .05
30 K	.0009 + .05
300 K	.0009 + .05
3 M	.0021 + .05
30 M	.021 + .05

For 4 digits, multiply counts by .1

For 3 digits, multiply counts by .01

Auto-zero Off: (5 1/2 digits)

For stable environment ($\pm 1^\circ\text{C}$) add 11 counts for 300 Ω range, 3 counts for 3K through 300K ranges, 8 counts for 3M and 33 counts for 30M range. For 4 1/2 or 3 1/2 digits, multiply counts by .1 and .01 respectively. Changes in lead resistance not corrected in 4-wire ohms with auto-zero off.

Current Source Accuracy: 2.7%

Maximum Lead Impedance 4-wire Ω

Ω sense leads 10K All ranges
 Ω source lo lead 1/30 of full scale All ranges
 Ω source hi lead 1/3 of full scale 3K through 30M
 3K Ω for 300 Ω

Source Lead	300 Ω	3K Ω	30K Ω	300K Ω	3M Ω	30M Ω
Lo	10	100	1K	10K	100K	1M
Hi	3K	1K	10K	100K	1M	10M

Detailed Specifications (continued)...

AC VOLTAGE

Input Characteristics

Range	Maximum Display (4½ Digit)	4½ Digit Resolution	Input Resistance	Maximum Input Voltage
3 V	3.0100	100 μ V		Hi-Lo ± 30 V peak
30 V	30.100	1 mV	10M $\Omega \pm 1\%$	Lo terminal earth: ± 150 V peak

Measurement Accuracy*: $\pm (\% \text{ Reading} + \text{Counts})$
(90 days)

	20 Hz - 1 kHz	45 Hz - 500 Hz	Temperature Coefficient $\pm (\% \text{ Reading} + \text{Counts}) \cdot ^\circ\text{C}$ 0 - 18°C, ■ - 55°C
3½ Digits	1 + 6	0.5 + 6	01 + 7
4½ Digits	1 + 6(0)	0.5 + 6(0)	01 + 7

*These specifications assume: $V_{in} > 0.3$ V (3V Range)
 $V_{in} > 3$ V (30V Range)

High Voltage Divider (44469A):

Z_{in} : 1 M $\Omega \pm 1\%$

C_{in} : < 25 pF

Add 1% Reading error when using divider

Maximum Input Voltage:

301 V RMS (± 425 V peak) Hi-Lo

± 350 V peak - Hi terminal to earth

± 150 V peak - Lo terminal to earth

OPTION 020 -

10 CHANNEL MULTIPLEXING ASSEMBLY

Voltage (Scan) 301 Vdc 150 VA Max. 252 Vac

Voltage (Actuate) 30 Vdc 252 Vac 2A Max.

Contact Resistance (Actuate) < 1.4 Ω

Thermal Offset (Scan) < 3 μ V

Average Switch Life 5×10^6 operations with proper contact protection

Maximum Switching Rate 50/sec.

Open Contact Capacitance < 15 pF

Closed Channel Capacitance < 90 pF with 1 Option 020
< 130 pF with 2 Option 020
< 170 pF with 3 Option 020

Interchannel Capacitance < 30 pF

	< 30°C 65%RH	> 30°C 65%RH
Isolation Resistance		
HI to LO	10 ¹¹	10 ⁹
HI to EARTH	10 ¹¹	10 ⁹
LO to EARTH	10 ¹¹	10 ⁹

Frequency Response
(50 Ω source) 1 MHz
(1 Meg source) 1 kHz

All relay scans break before make.

Relay configuration at shipment:

Channel	Mode
3 - 9	1 of N, Scan, 150 VA Max.
0.1	Actuate
2	10:1 Divide, 1 of N, } RECONFIGURABLE Scan $\pm 1\%$

COUNTER

AC coupled zero crossing

Frequency range:

1 Hz to 10 kHz with rise time < 1.5 ms

10 Hz to 10 kHz with rise time > 1.5 ms

Sensitivity: 600 mV p-p

Minimum pulse width (5V):

50 μ sec, 5% duty cycle minimum

Accuracy: .05% of reading ± 1 LSB

Maximum input voltage: 300V

Maximum DC offset: 2V

Input impedance: 10M + 1 - 10%

TOTALIZE MODE

Minimum pulse width (5V):

50 μ sec, 5% duty cycle minimum for signals with period
1 second

Sensitivity: 600 mV

Maximum counts: 65,535

Maximum rise time for signals less than 10 Hz: 1.5 ms

Minimum pulse period: 100 μ sec

Maximum input voltage: 300V

Maximum DC offset: 2V

Input impedance: 10M + 1 - 10%

REFERENCE JUNCTION

COMPENSATION

Accuracy (23°C ■ 5°C): $\pm 1^\circ\text{C}$

T/C 0 - 18°C, 28 - 50°C: .05°C/°C

TYPE T THERMOCOUPLE

COMPENSATION


Range: - 200°C to + 400°C

Detailed Specifications (continued)...

TYPE T THERMOCOUPLE

COMPENSATION (Continued)

Accuracy: includes reference junction error, thermal offset, dvm error and curve fit. It does not include wire errors.

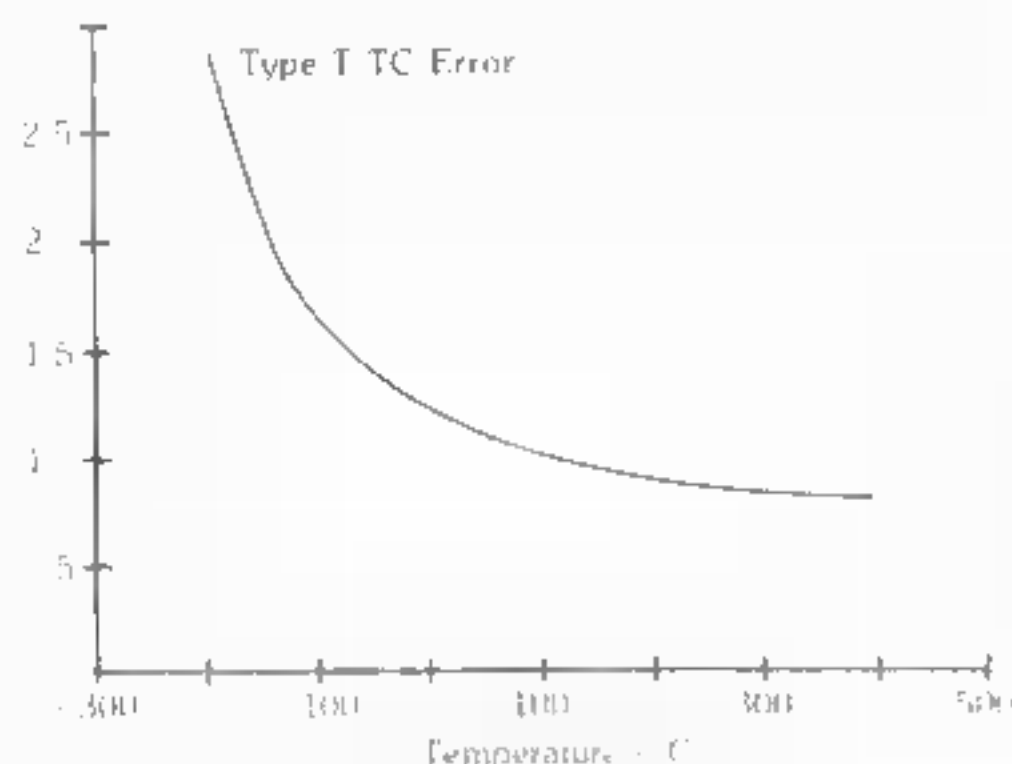

Temperature Coefficient: .05°C/°C (0 – 18°C,
28 – 55°C)

OPTION 040 –

BREADBOARD ASSEMBLY

Board Space: 95 sq. cm. (14.75 sq. in.)

Maximum Voltage: ± 360 V

Power Available: 5 V, 35 mA; 6 V, 150 mA

Hole Sizes: .046

Grid: .100"

Connectors: 22 pin edge (solder)

Component Lead Length: 0.25

Component Lead Height: 0.5"

Maximum Power Dissipation: 0.5 watts

OPTION 050 –

DIGITAL I/O ASSEMBLY

All terminals ± 360 V max. to earth

Isolated input specs: 8 bits wide 0 – 7

Input voltage levels:

Low voltage maximum .8

High voltage minimum 2.4

High voltage maximum 24.0

Maximum input current at low state: 100 μ A

Minimum input current at high state: 800 μ A

Maximum input current at high state (24V in): 25 mA

Logic polarity: Positive true

Monitor mode (generates SRQ):

Minimum pulse width: 100 μ S

Trigger latch: high or low level

Masking: any combination of the 8 bits

Time from trigger to SRQ: 300 μ S

Entire 8 bits latched when trigger received

OPTION 050 –

DIGITAL I/O ASSEMBLY

Isolated output specs: 8 bits wide 8 – 15 DMOS FETS

Input	Output Characteristics
Logic 1	Low impedance 2 Ω , sink 300 mA, 180 mW
Logic 0	High impedance 10 M Ω , 0 to +42V across switch, (1 watt zener protection for inductive loads)

Each bit individually controlled

BATTERY LIFE

Battery life from full charge:

HP-IL – 12 hours minimum

HP-IB – 6 hours minimum

Battery charge rate from minimum to full charge:

16 hours if 3421A off or asleep

21 hours if 3421A is on

3421A READING SPEEDS – INTO

INTERNAL MEMORY (READINGS/SEC)

REPEAT ON ONE CHANNEL

	Z1F1	Z0F1	Z1F2	Z0F2	Z1F3	Z0F3	F6		F7
N5	2.26	4.08			2.26	4.12	1.05	G-1	8.4
N4	15.85	23.92	.91	1.11	15.85	24.31	1.05	G0	.98
N3	30.96	38.56	1.37	1.41	30.93	38.31	1.05	G1	1

RANDOM CHANNEL

	Z1F1	Z0F1	Z1F2	Z0F2	Z1F3	Z0F3	F6		F7
N5	2.19	3.98			2.19	3.99	.98	G-1	7.59
N4	13.18	18.34	.90	1.08	13.20	18.61	.98	G0	.97
N3	22.22	25.99	1.35	1.39	22.19	26.01	.98	G1	1

N5, N4, N3 – 5 1/2, 4 1/2, 3 1/2 digit mode

Z1 = auto zero on

Z0 = auto zero off

F1 = dc volts

F2 = ac volts

F3 = ohms

F6 = Temperature (T-type)

F7 = Frequency

G-1 = 1 second gate time

G0 = 1 second gate time

G1 = 10 second gate time

Section II

Option Assembly Installation and Configuration

WARNING

Chapters 8 and 9 of this 3421A Operating, Programming, and Configuration Manual were written for service trained personnel only. Only qualified service trained personnel with an understanding of electronic circuitry and the hazards involved should remove, configure, and re-install the 3421A option assemblies.

Chapter 8

Installation and Configuration

Introduction

This chapter has been written specifically for the trained service technician. It provides the necessary information for a person with a knowledge of electronics to remove, configure and install the 3421A option assemblies. Currently available option assemblies are: the 44462A 10 Channel Multiplexer Assembly, the 44465A Digital I/O Assembly, and the 44464A Breadboard Assembly. Carefully read through this chapter and observe all cautions and warnings.

This chapter is divided into three sections; General Option Removal/Installation Procedures, Configuring the 44462A 10 Channel Multiplexing Assembly, and Wiring the 44465A 8 Bit Digital I/O Assembly. Each section contains simplified schematics, illustrations, and/or photographs to enhance the description of the procedures. The Breadboard assembly is covered in Chapter 9.

WARNING

Only qualified service trained personnel should remove, configure, and re-install the 3421A option assemblies.

LETHAL voltages may be present on the option assemblies even though the 3421A is disconnected from the AC power line. Before ANY handling or servicing of the option assemblies takes place, make certain that all external sources of electrical power to the option assemblies have been removed. Read the Safety Summary in Chapter 7 of this manual.

General Option Removal/Installation Procedures

This section of the chapter provides general guidelines to help take some of the guesswork out of removing, configuring and installing the option assemblies. In addition, this section shows you how to set the address switches on the HP-IB option board.

The option assemblies should be removed from the 3421A before they can be re-configured. If you need only to connect the wires from your external transducers to the option assemblies, refer to the specific option later in this chapter.

WARNING

Disconnect the 3421A power cord from the back of the 3421A prior to removing the top cover.

To prevent serious personnel injury, caution must be exercised when working with the option assemblies. Electrical shock hazards (up to 350 volts peak) may exist on the 44462A assembly from the device(s) under test. Make certain that all wires to the option assemblies are free of voltage sources prior to removing or installing the option assemblies.


CAUTION

Use clean handling techniques and anti-static procedures when removing, configuring, and installing the option assemblies. The 44462A Multiplexing Assembly is a high impedance circuit board and must be kept clean to ensure compliance with specifications. The option assemblies as well as the 3421A motherboard contains CMOS devices which are susceptible to static discharges.

Disassembly/Option Removal

If wiring connections to external devices or transducers have already been made to the option assembly terminal blocks, you should first remove the terminal blocks. This is accomplished by:

1. Make certain that all external sources of electrical power have been removed from the terminal blocks before starting the removal procedures. Also, make certain that the 3421A POWER switch is in the 'off' position and the ac power cord removed.
2. Removing the two screws holding the black strain relief bar.
3. Remove the grey "WARNING" safety cover. The two screws holding the cover are captive to the cover.
4. Loosen the two screws holding the terminal block to the option circuit board and then remove the terminal block.

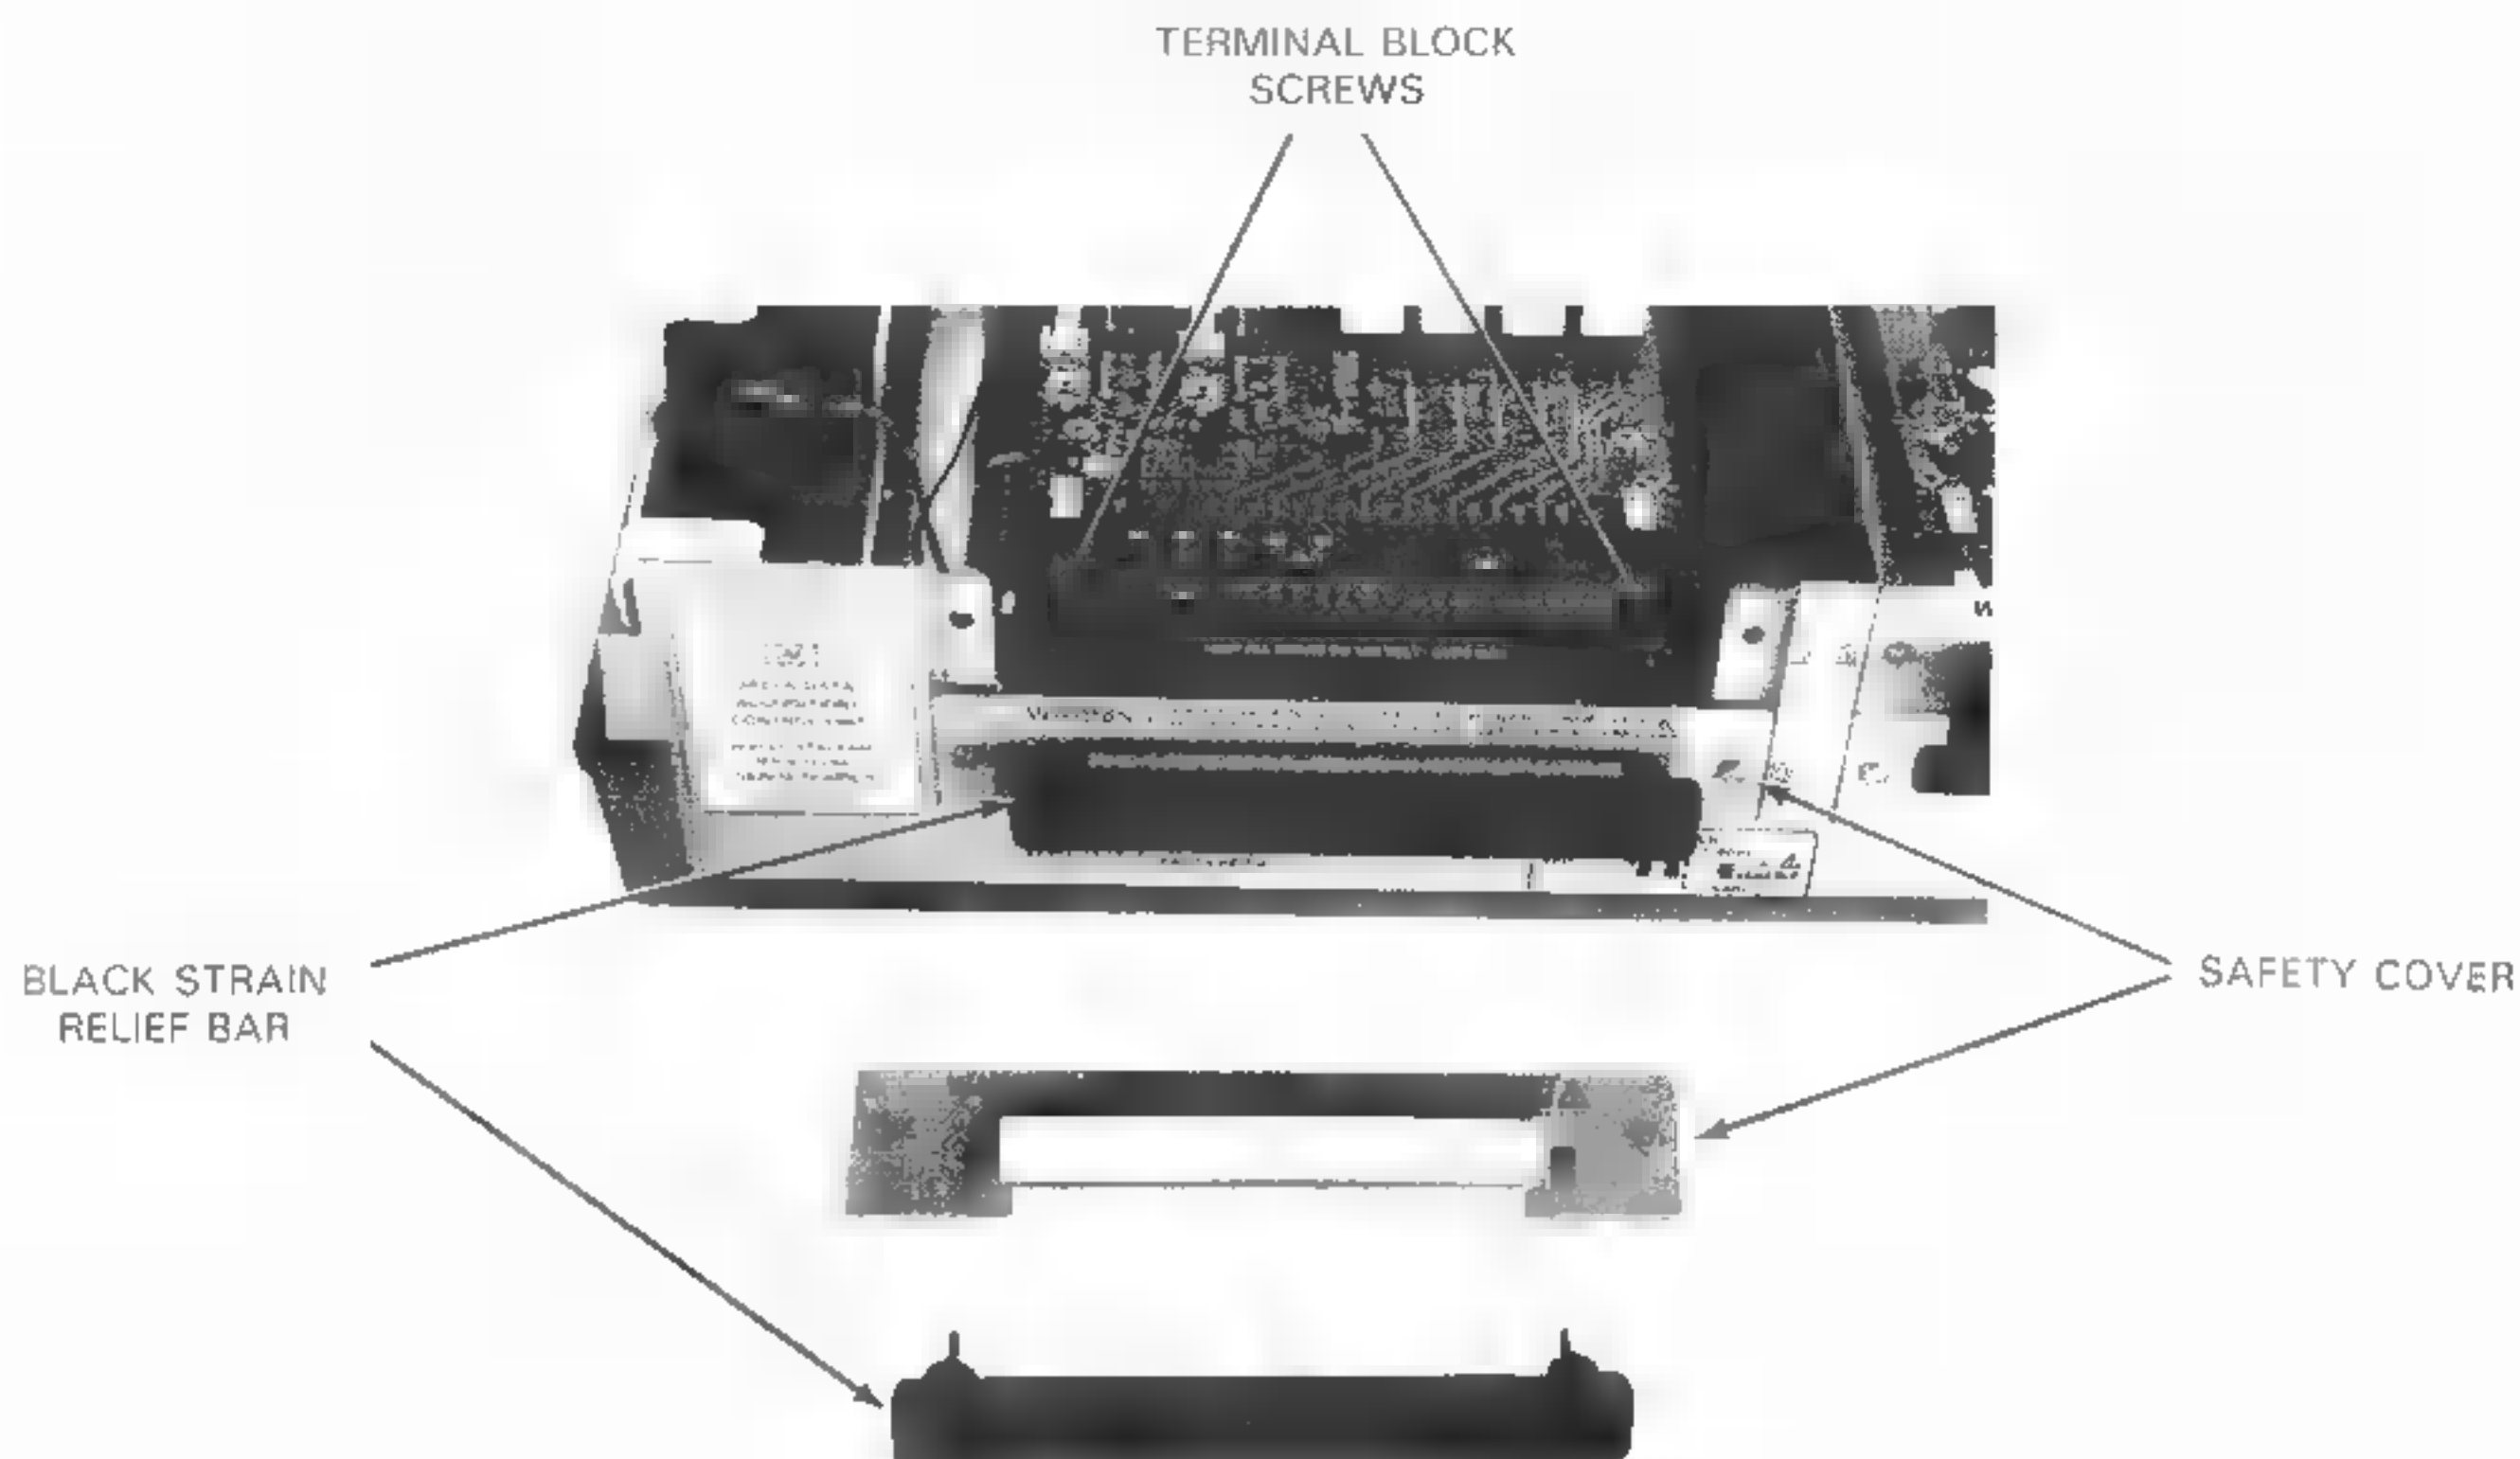

To remove the option assemblies the 3421A case will need to be disassembled. Perform the following procedures very carefully. When removing the option assemblies take careful note of which option was originally installed in each slot. As you are disassembling the 3421A, carefully observe the orientation of the various plugs and the unorthodox cable routing ■ they must be properly returned when re-assembling the instrument. In the following discussion, the front panel of the 3421A should be facing you.


NOTE

When re-installing the options, make certain that the option that was removed from slot 0 is returned to slot 0, likewise with slots 1 and 2. This is important for two reasons. First, if a computer program was written for a certain option in a known slot, reinstalling the option in a different slot may cause the program or test to fail. Second, measurement errors may result if a 44462A Multiplexer option is not re-installed in the same slot it was removed from. This is due to each board having an individual reference junction calibration.

3421A Disassembly


To disassemble the instrument, do the following:

1. Turn the instrument upside down. This is preferably done on top of a protective mat to reduce scratching or marring the cabinet. Loosen the six screws on the bottom of the instrument.

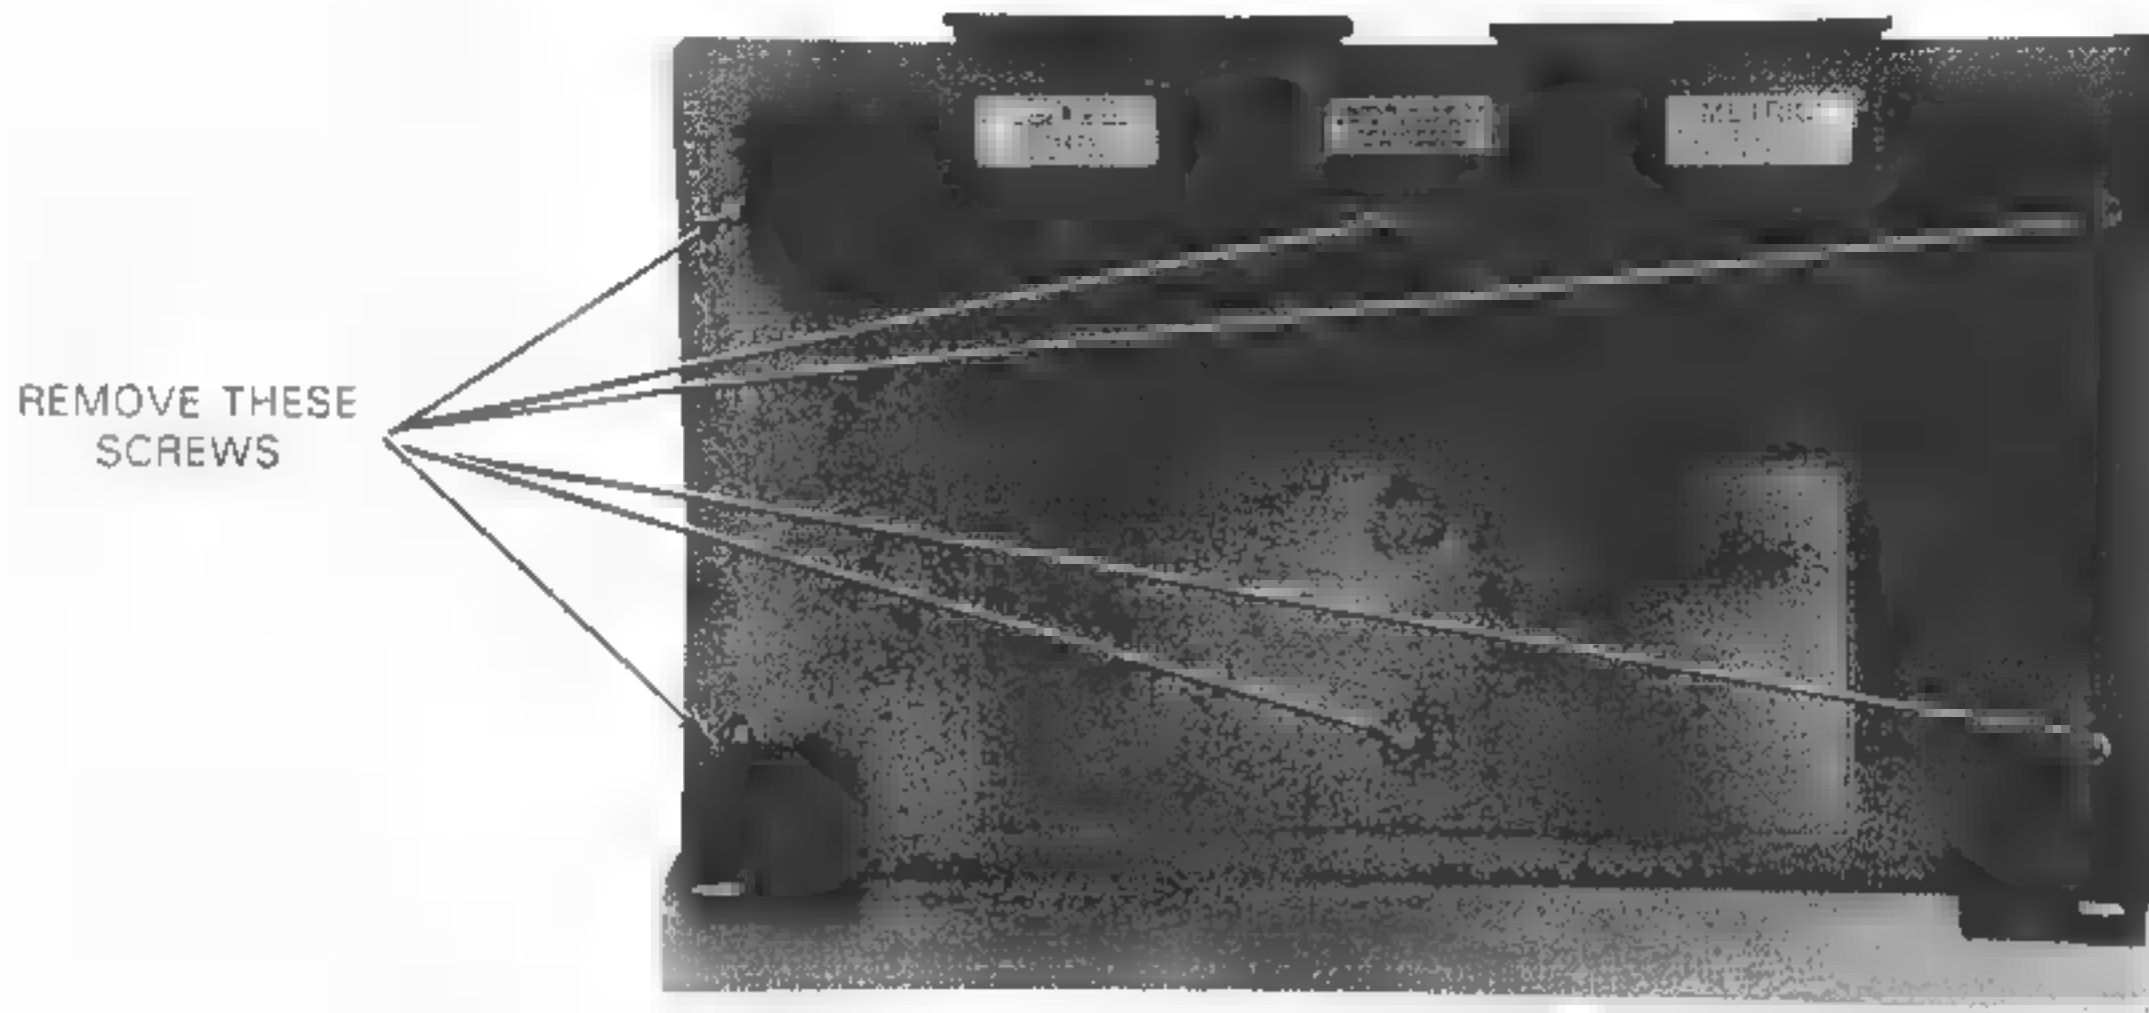

2. Holding the top cover in place, turn the instrument upright. The six screws are captive to the bottom cover and will not fall out. Remove the top cover.


3. Locate the main battery fuse toward the right rear of the instrument and remove it from its socket. This will reduce the possibility of an accidentally dropped screw or standoff from causing any problem.

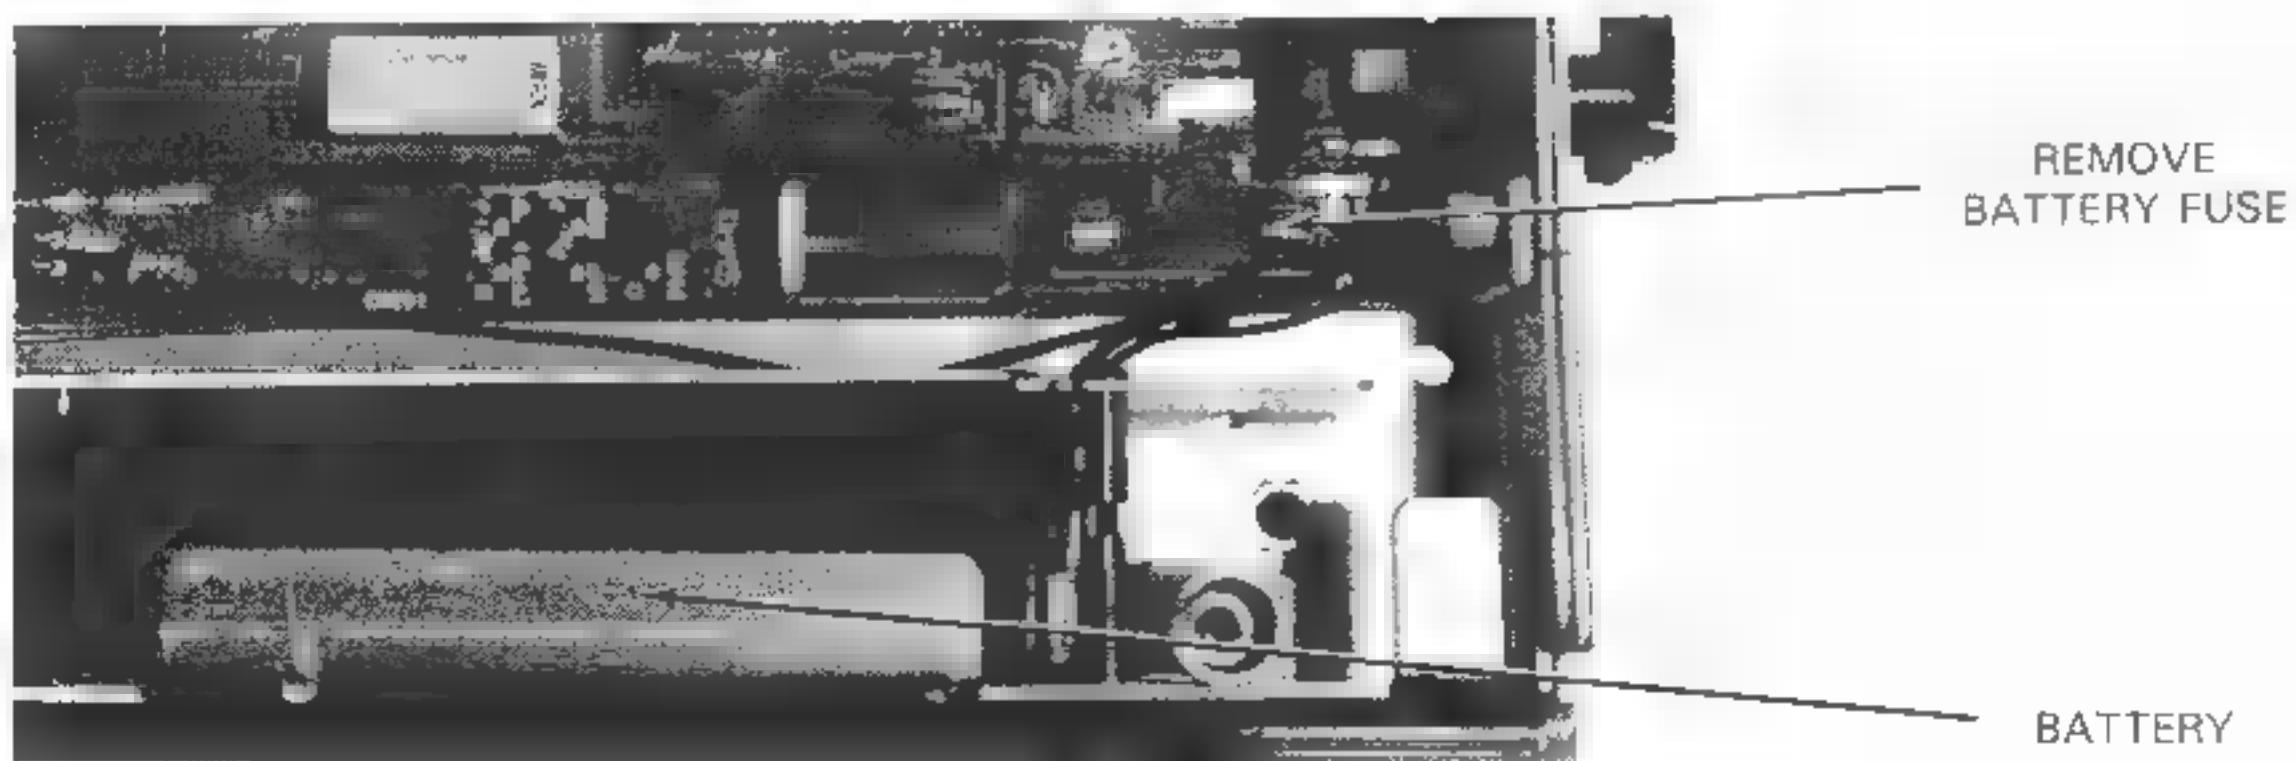

4. If the black strain relief bars and grey 'WARNING' safety covers have not been removed from the rear panel, they should be removed at this time.


5. Remove the grey ribbon cable connector from the option in slot 1. Be very careful to lift the connector straight up from the option so as not to bend any of the pins on the connector. If the option in slot 1 is a 44462A Multiplexer option, remove the 4-wire voltmeter input cable from the motherboard.

6. Remove the four screws that hold the slot 1 option in place.

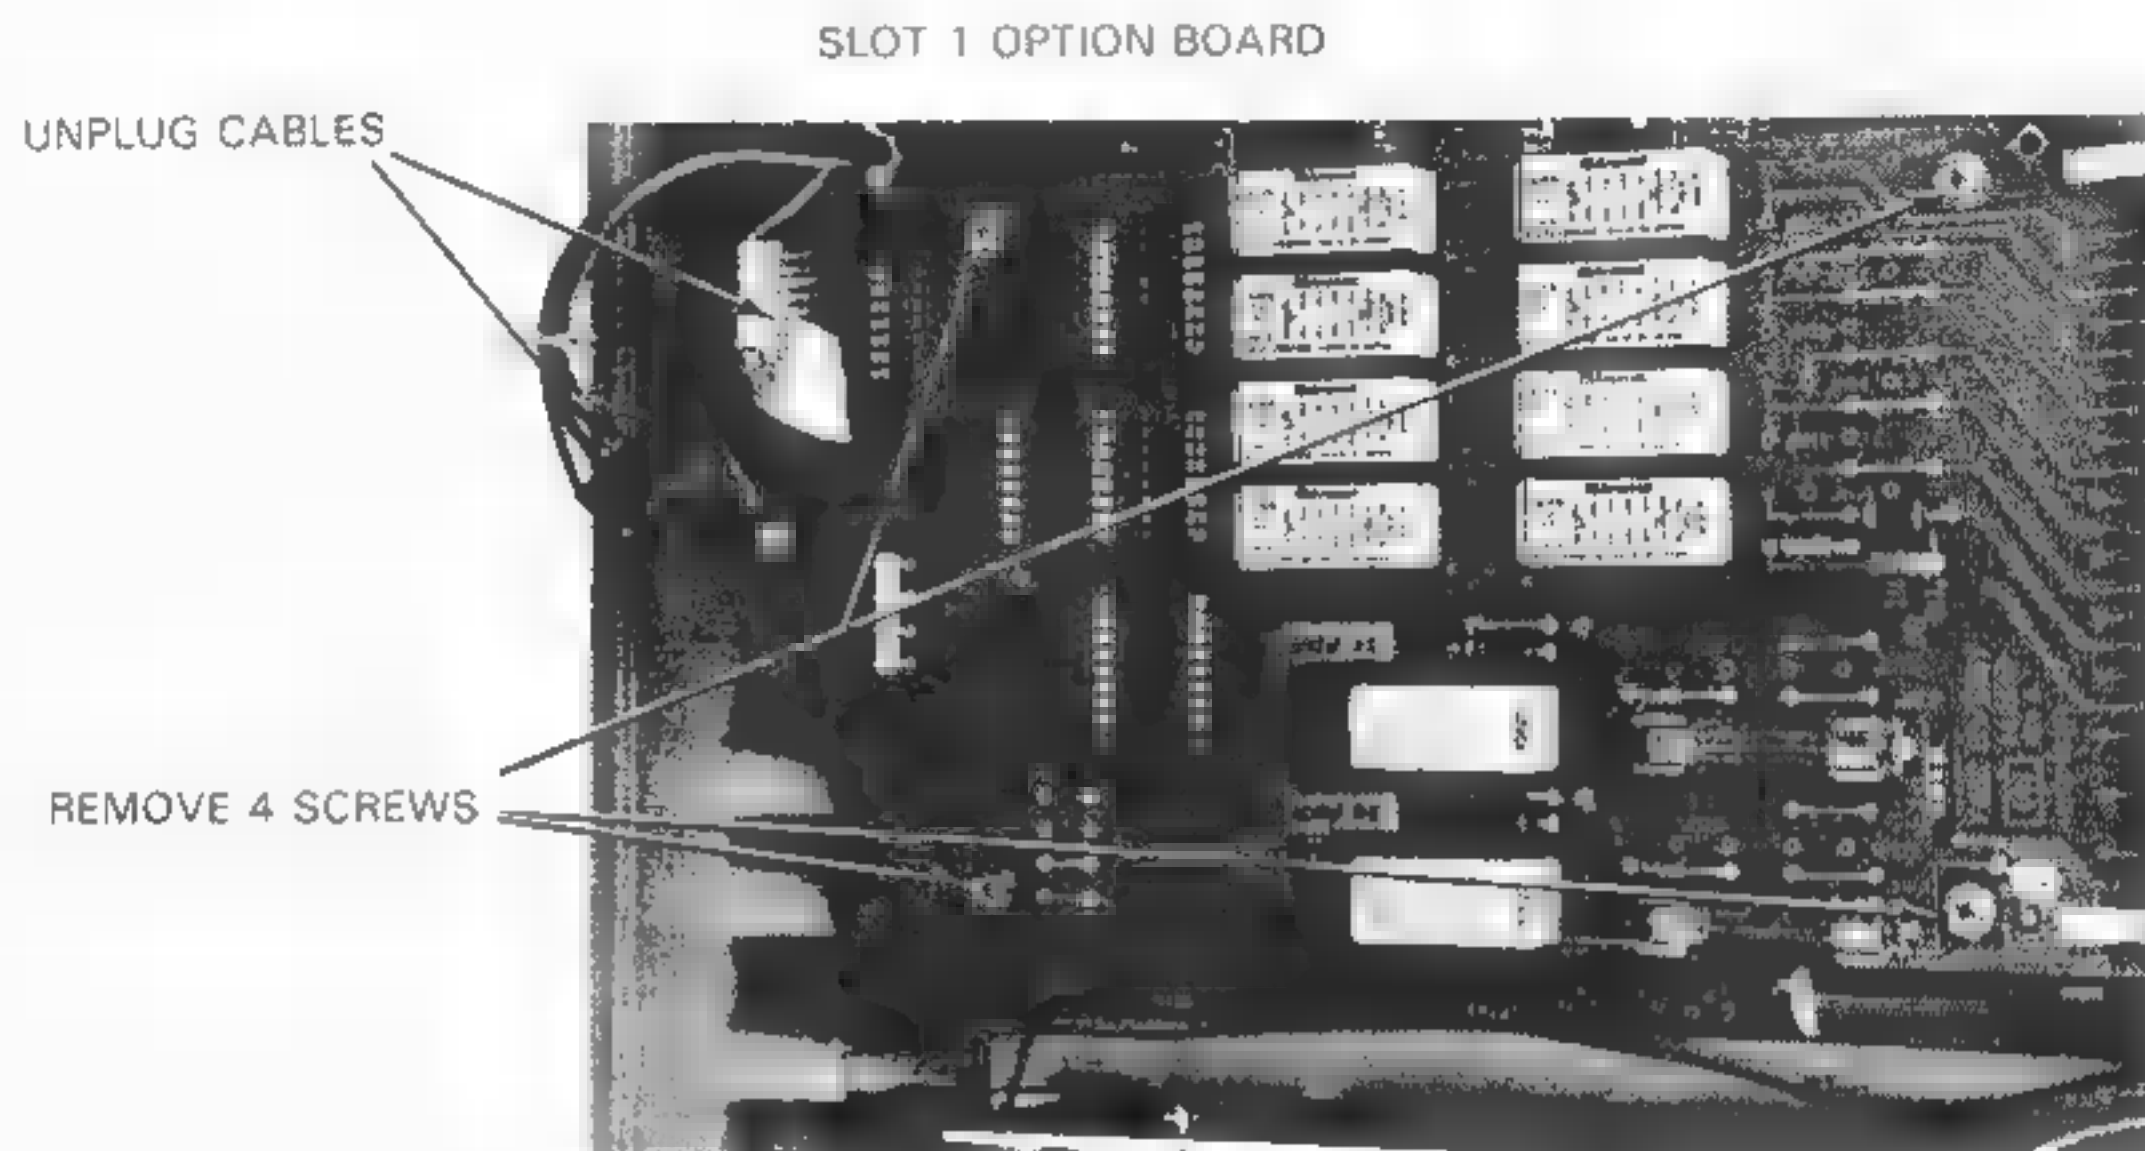

7. Remove the option from slot 1.

8. Unplug the ribbon cable connector from the option assembly in slot 0. If the option in slot 0 is a 44462A Multiplexer assembly, also remove the 4-wire voltmeter cable.

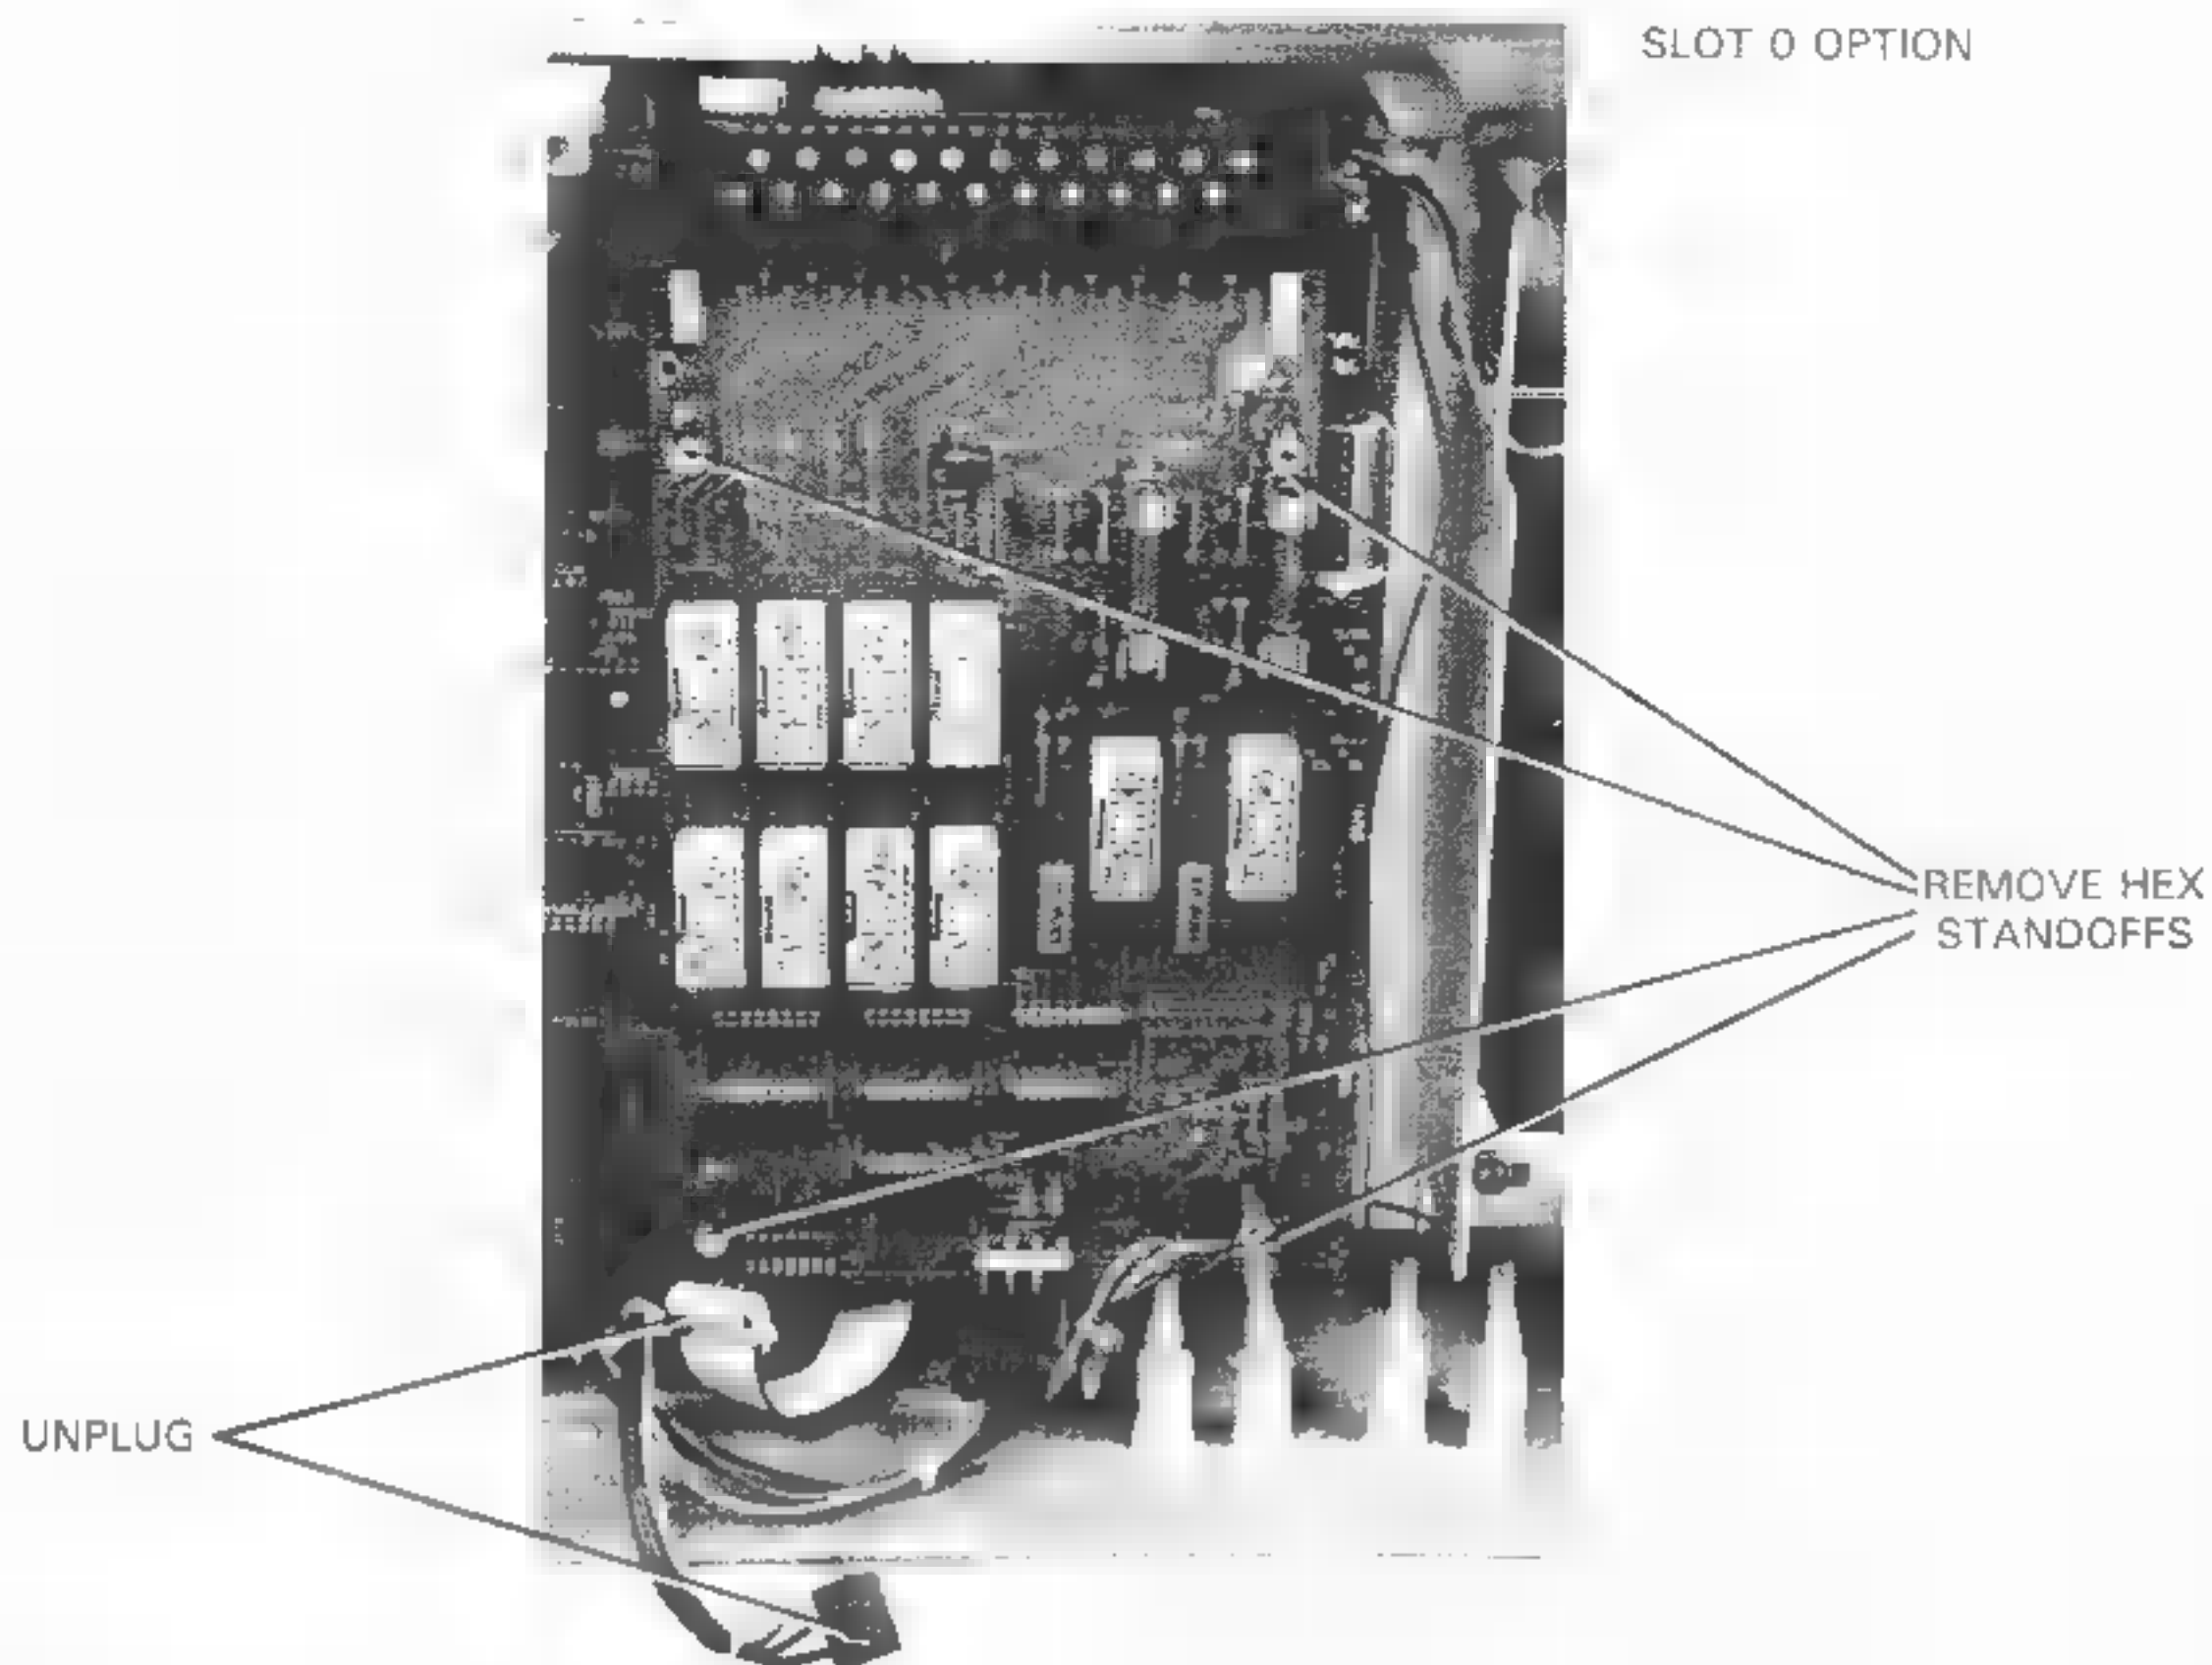

9. Using a $7/32''$ wrench, remove the four hex screw standoffs securing the option assembly. Remove the slot 0 option from the instrument.

10. Leave the bottom hex standoffs in place securing the motherboard to the chassis.


NOTE

The hex standoffs securing the motherboard to the chassis are shorter than the hex standoffs separating the two options in slots 0 and 1.


Some of the first instruments manufactured may have round standoffs that are riveted to the motherboard and round spacers between options instead of the hex screw-in standoffs. The round riveted standoffs should be firmly secured to the chassis with screws and round spacers to establish a ground connection when troubleshooting.

11. To remove the option occupying slot 2, remove the ribbon cable connector and the 4 wire voltmeter cable if present. Remove the four screws that hold the option assembly in place and remove the option.

SLOT 2 OPTION

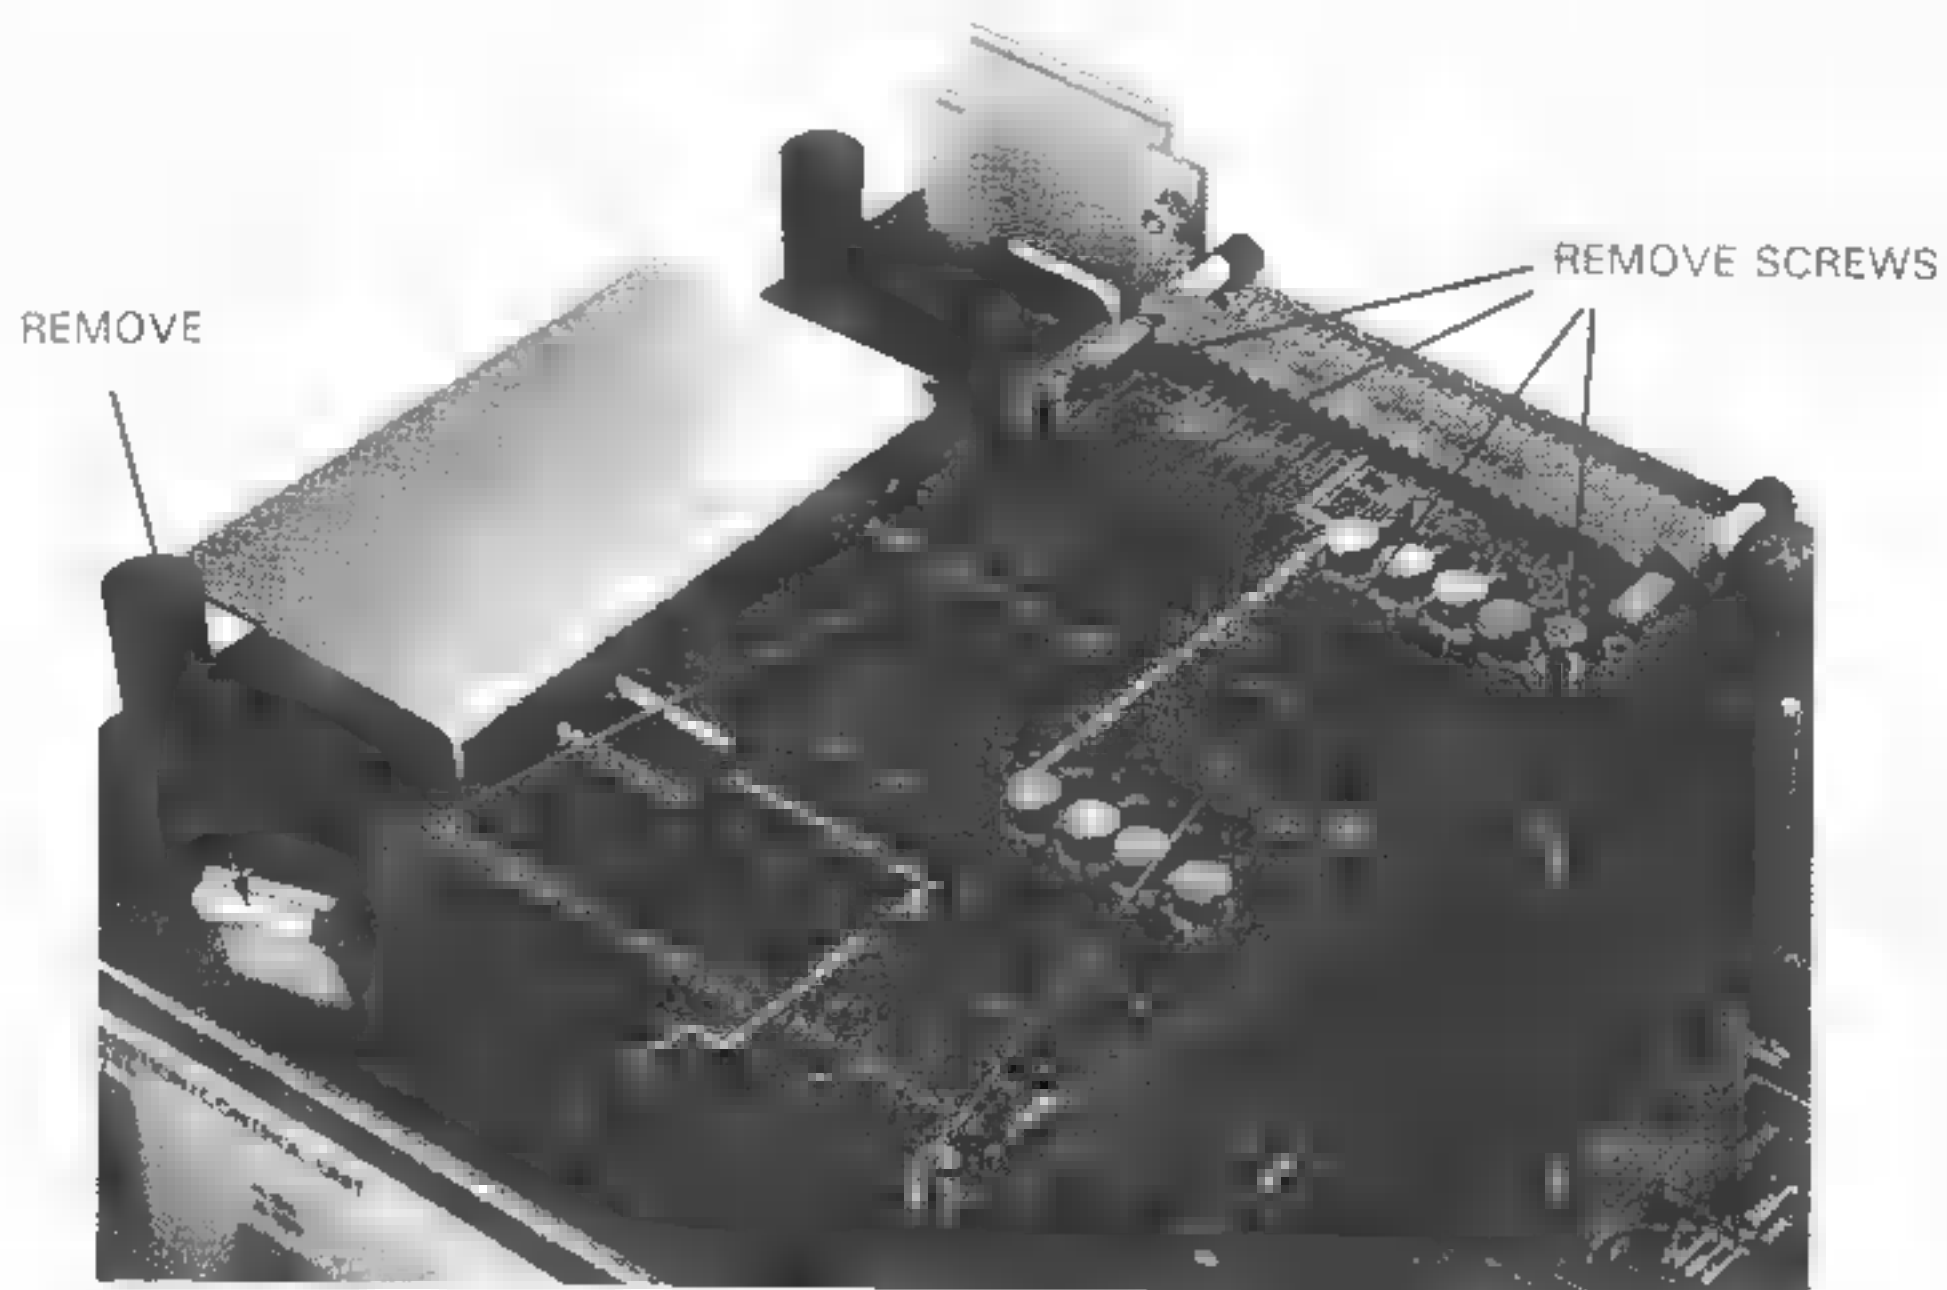


12. If the HP-IB option (option 201) is present, do not remove it. Do not remove any of the metal shields from the 3421A chassis.

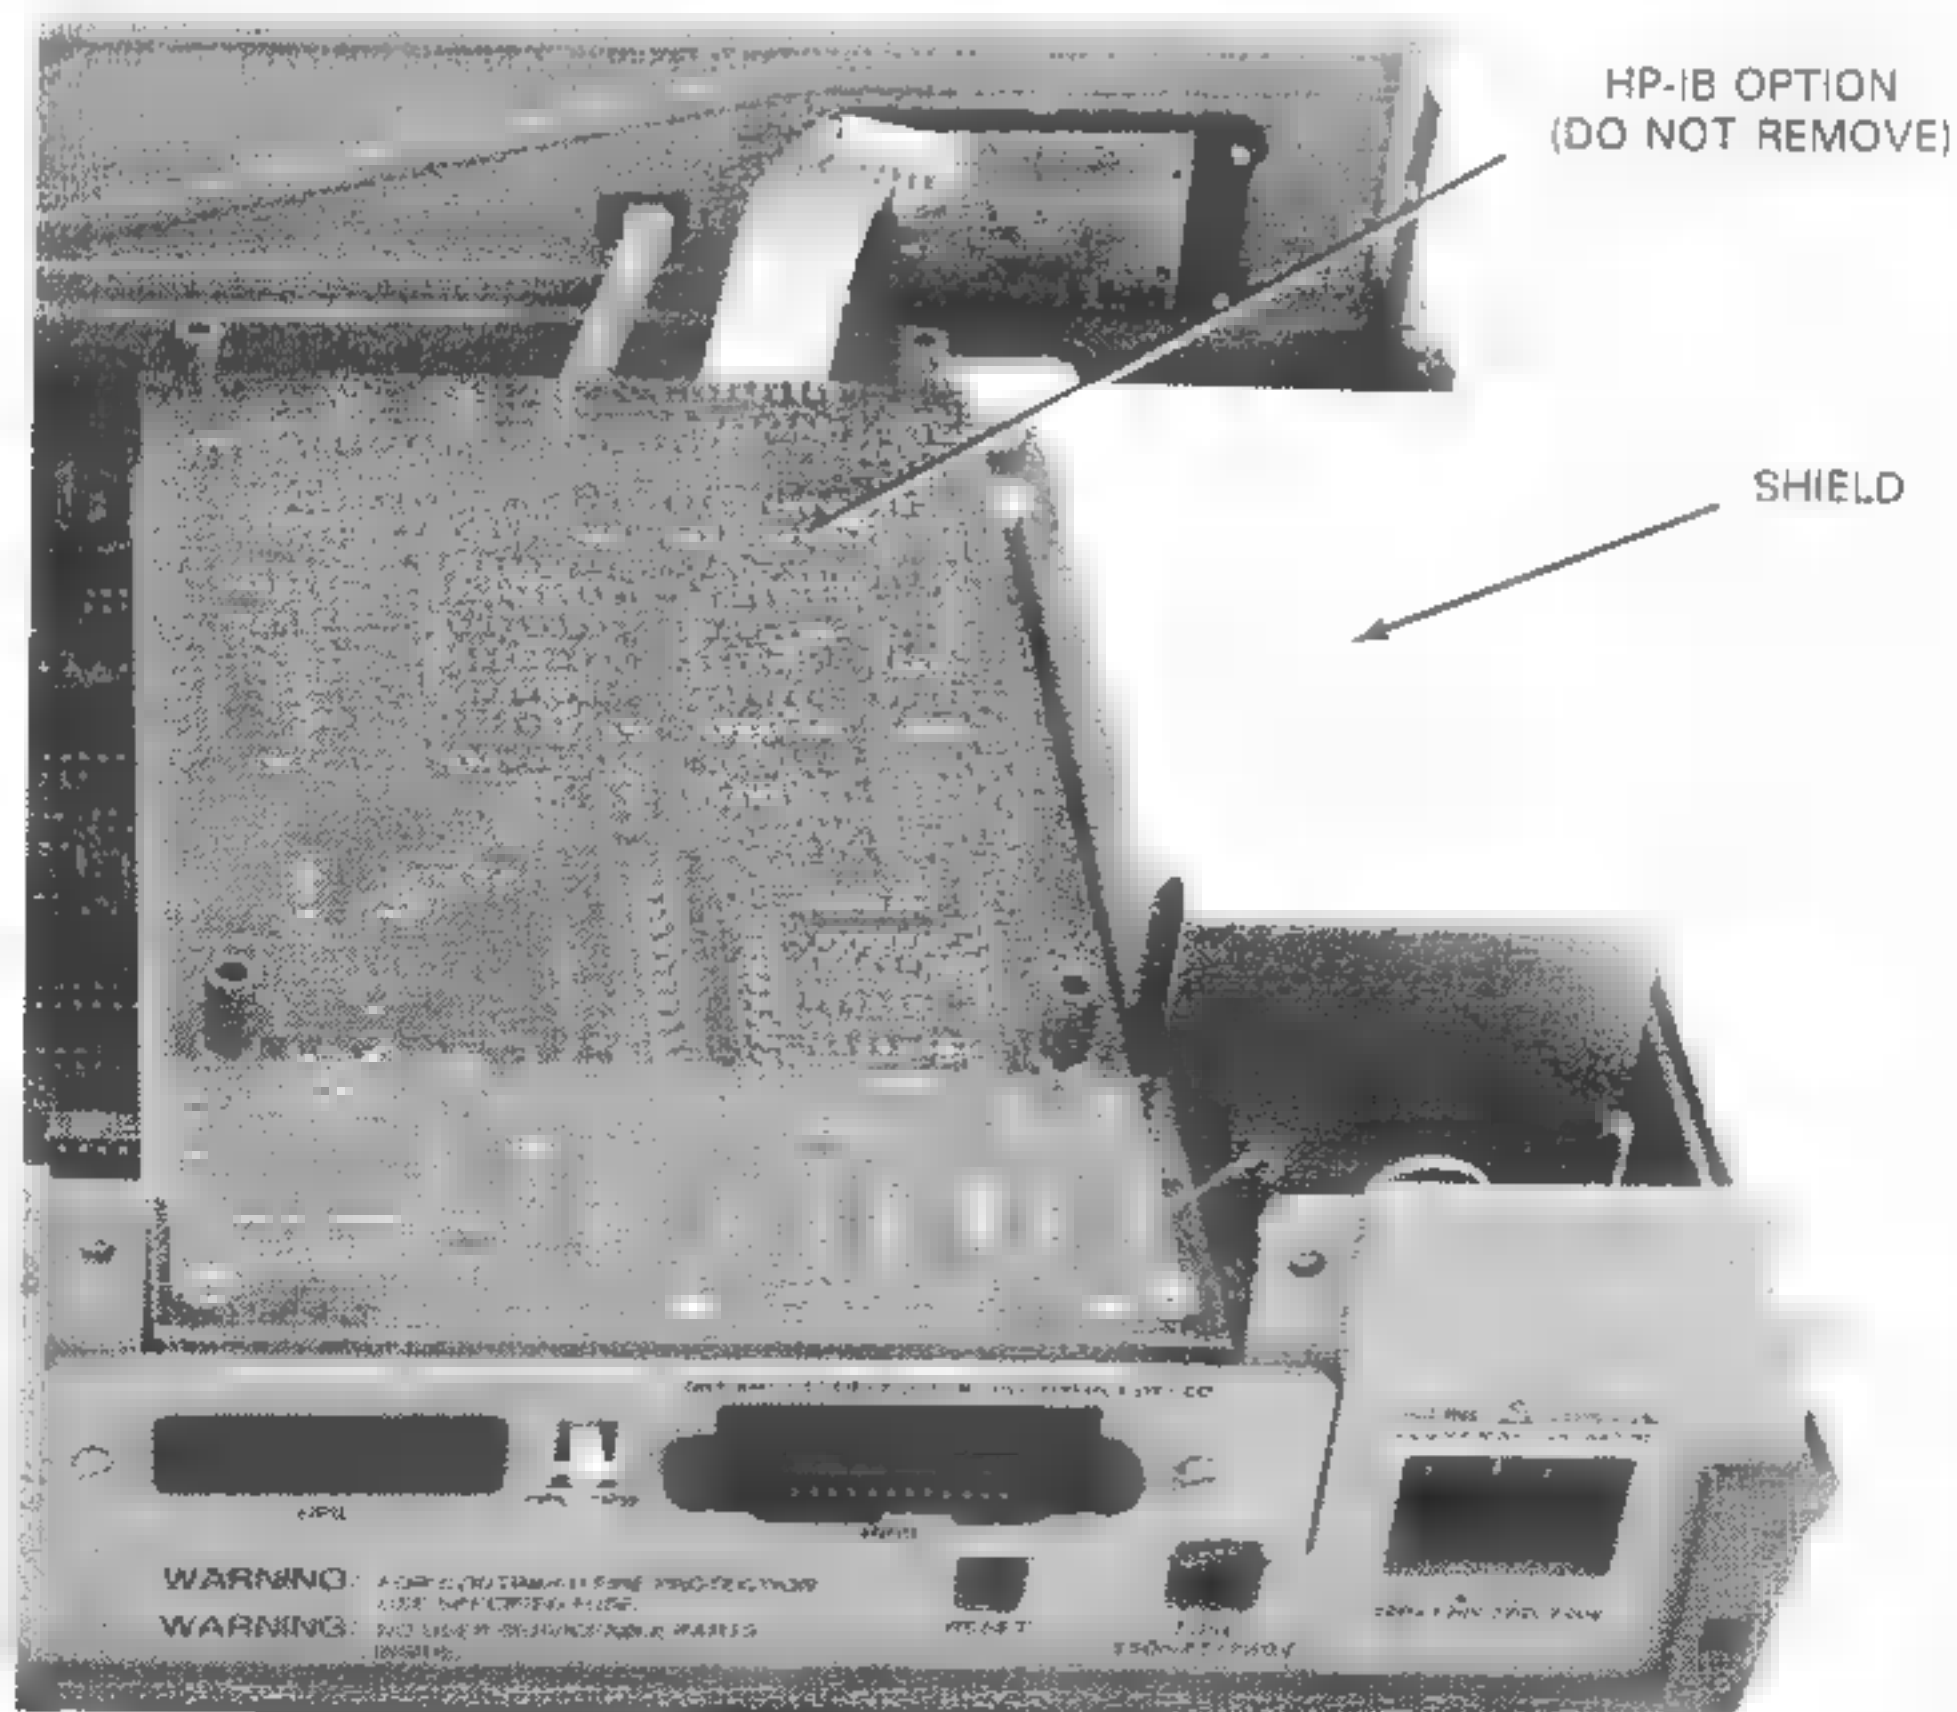

3421A WITH HP-IB

SHIELD
(DO NOT REMOVE)

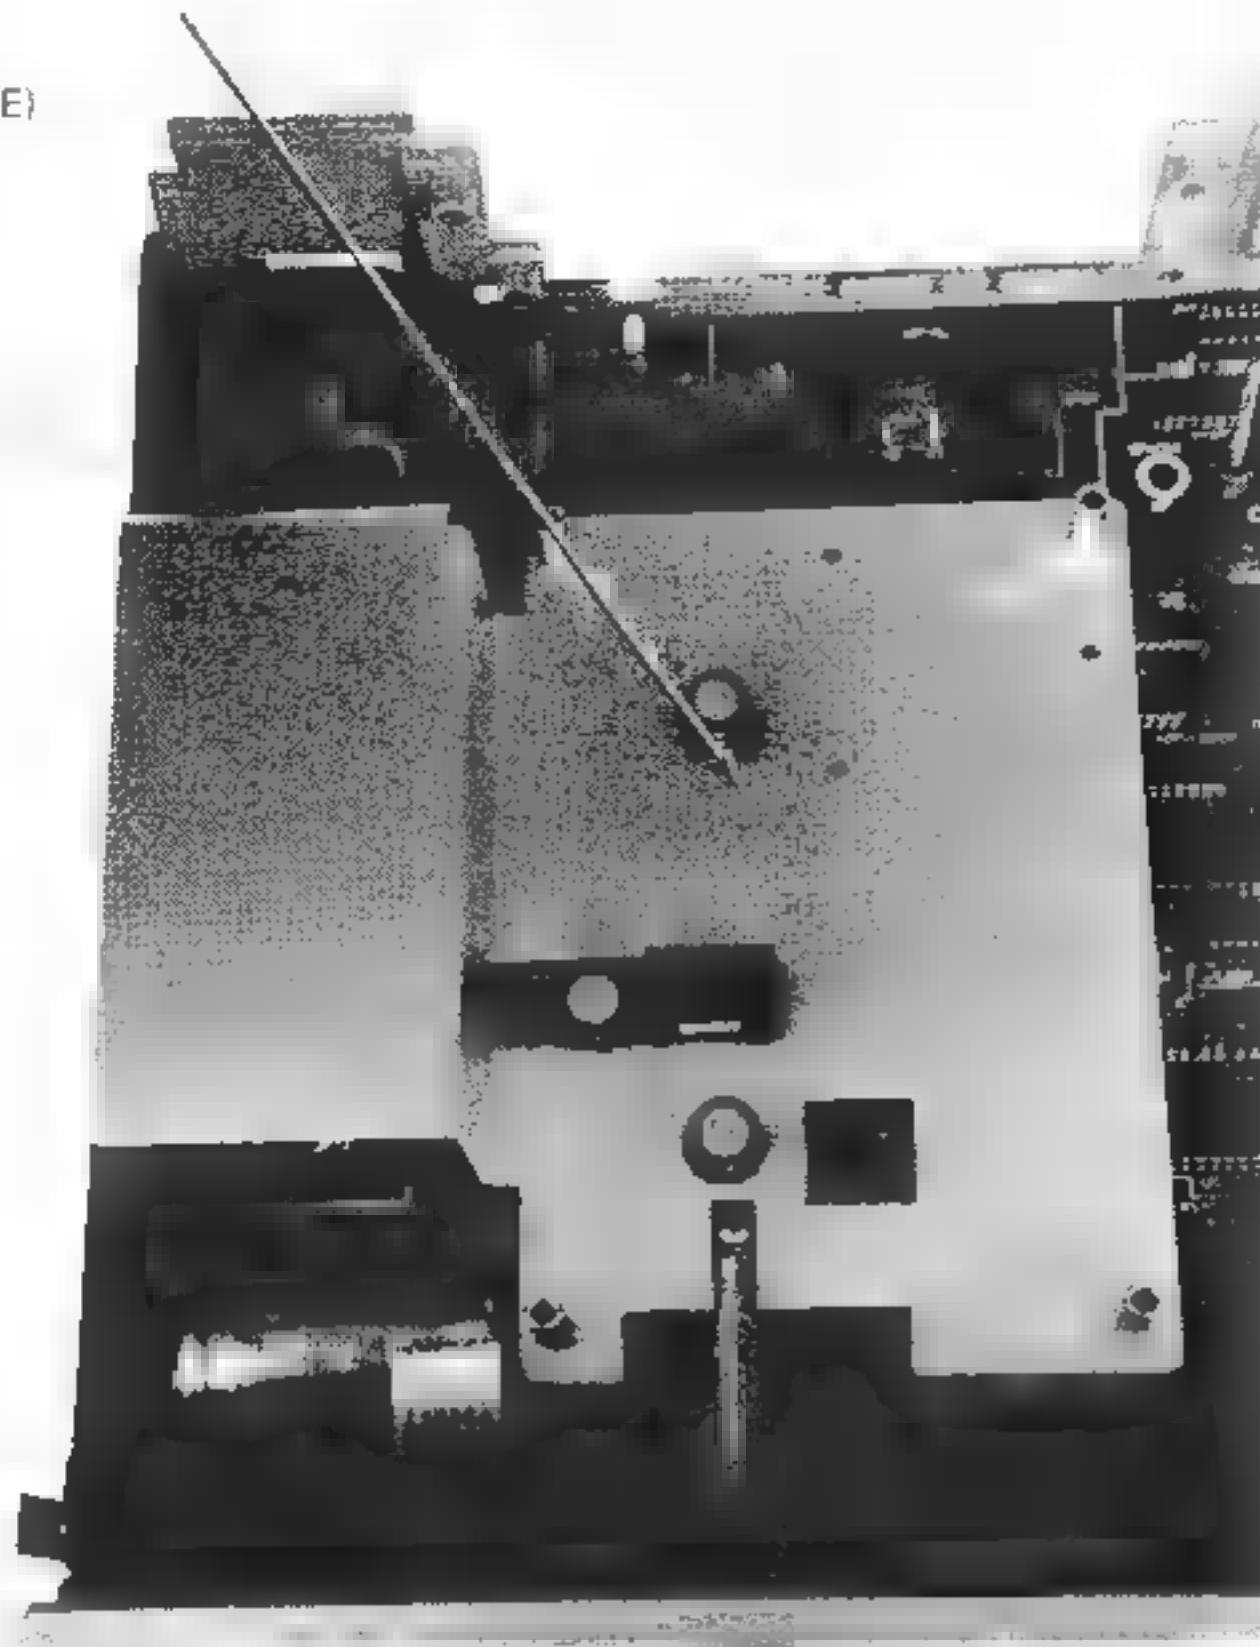

3421A WITHOUT HP-IB

At this point, all option assemblies have been removed and are ready for reconfiguring. Refer to the specific option later in this chapter for configuration information.

Installing the Option Assemblies

Two cases need to be addressed when installing the option assemblies in the 3421A chassis. The first case assumes that the same options are being installed that were previously removed. In this case remember to install the options in the same slots they were removed from. The second case is for new options to be installed. In other words, an option that was not previously installed is now being installed. As a general rule, multiplexing assemblies should be installed in slots 0 and 1 before installing them in slot 2.

NOTE

In order to ensure the highest accuracy on all temperature measurements, the 3421A should be recalibrated after installing a 44462A Multiplexing Assembly. If the 3421A is not recalibrated with the multiplexer assembly installed, the 3421A self test will fail (uncalibrated) and the first reading returned to the calculator will be an error message.

Before installing on option assembly in slot 2, make certain that the ribbon cable is routed around the shield standoffs as shown in the following photograph. This will prevent the ribbon cable from interfering with the front panel POWER switch. If the option 201 HP-IB assembly is installed, this cable will be below the HP-IB circuit board.

1. If your 3421A is not equipped with the HP-IB option, place the slot 2 option assembly directly on top of the bottom shield standoffs. Put the four long screws in place but do not tighten them yet. Go to step 3.

2. If your 3421A is equipped with the HP-IB option, make certain that all cables to the HP-IB option are in place and that the HP-IB circuit board is positioned component side down on top of the bottom shield standoffs. The option assembly for slot 2 is mounted component side up on top of the HP-IB circuit board. Put the four long screws in place but do not tighten yet.


3. Plug the appropriate terminal block edge connector onto the option assembly in slot 2.

4. Re-install the grey 'WARNING' safety cover onto the 3421A back panel for slot 2. Align the option assembly so that the black strain relief bar can be screwed into place. Loosely attaching one screw through the black strain relief bar will align both holes. Finally, tighten down the four screws holding the option assembly in place.

5. Plug the ribbon cable onto the option assembly in slot 2. Make sure that the red stripe on the cable is oriented to the right. If the option assembly for slot 2 is a 44462A Multiplexing Assembly, connect the 4 wire voltmeter cable to the option. This 4 wire cable should be oriented per the label on the circuit board and connected to J100 on the motherboard (grey to grey, etc.).

SLOT 2 OPTION
CABLE ROUTING


ROUTE CABLE AROUND STANDOFFS
(THIS CABLE ROUTING IS THE SAME
WHETHER HP-IB OPTION IS INSTALLED
OR NOT.)

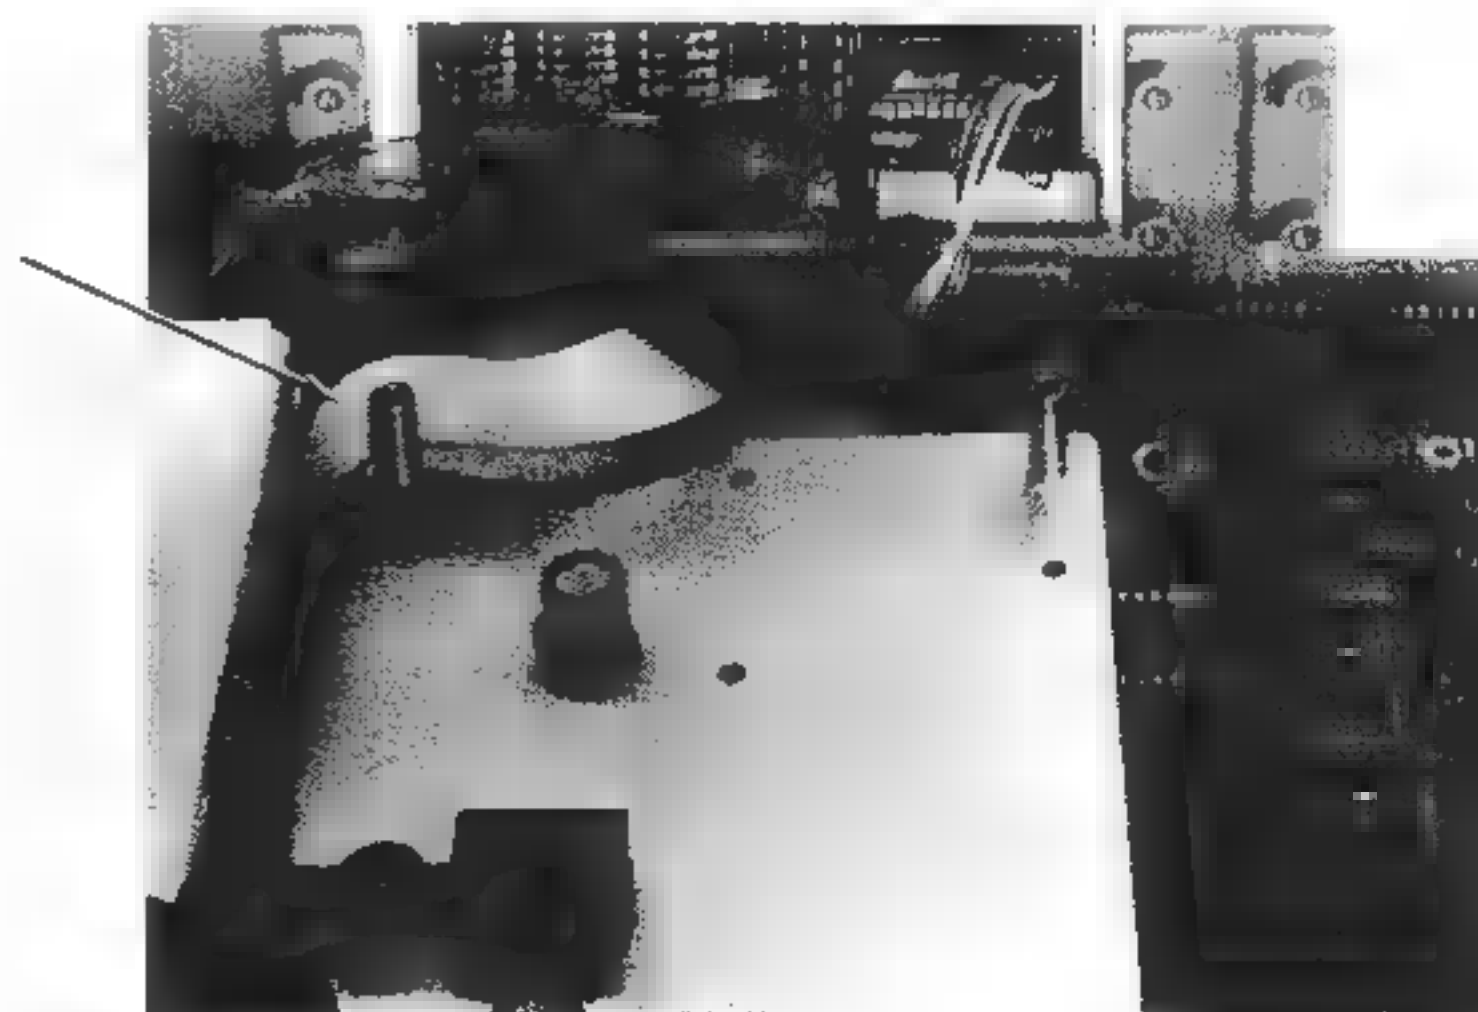

6. To install an option assembly in slot 0, make certain that the four hex standoffs are in place in the motherboard. DO NOT OVERTIGHTEN THESE STANDOFFS. Excessive torque (> 11 in/lb) may break off the screw heads.

7. Route the ribbon cable from J500 on the motherboard between standoffs. The red stripe should be oriented to the right. Make sure that it will not get pinched between a standoff and the option assembly that will be mounted in slot 0.

SLOT 0
CABLE ROUTING

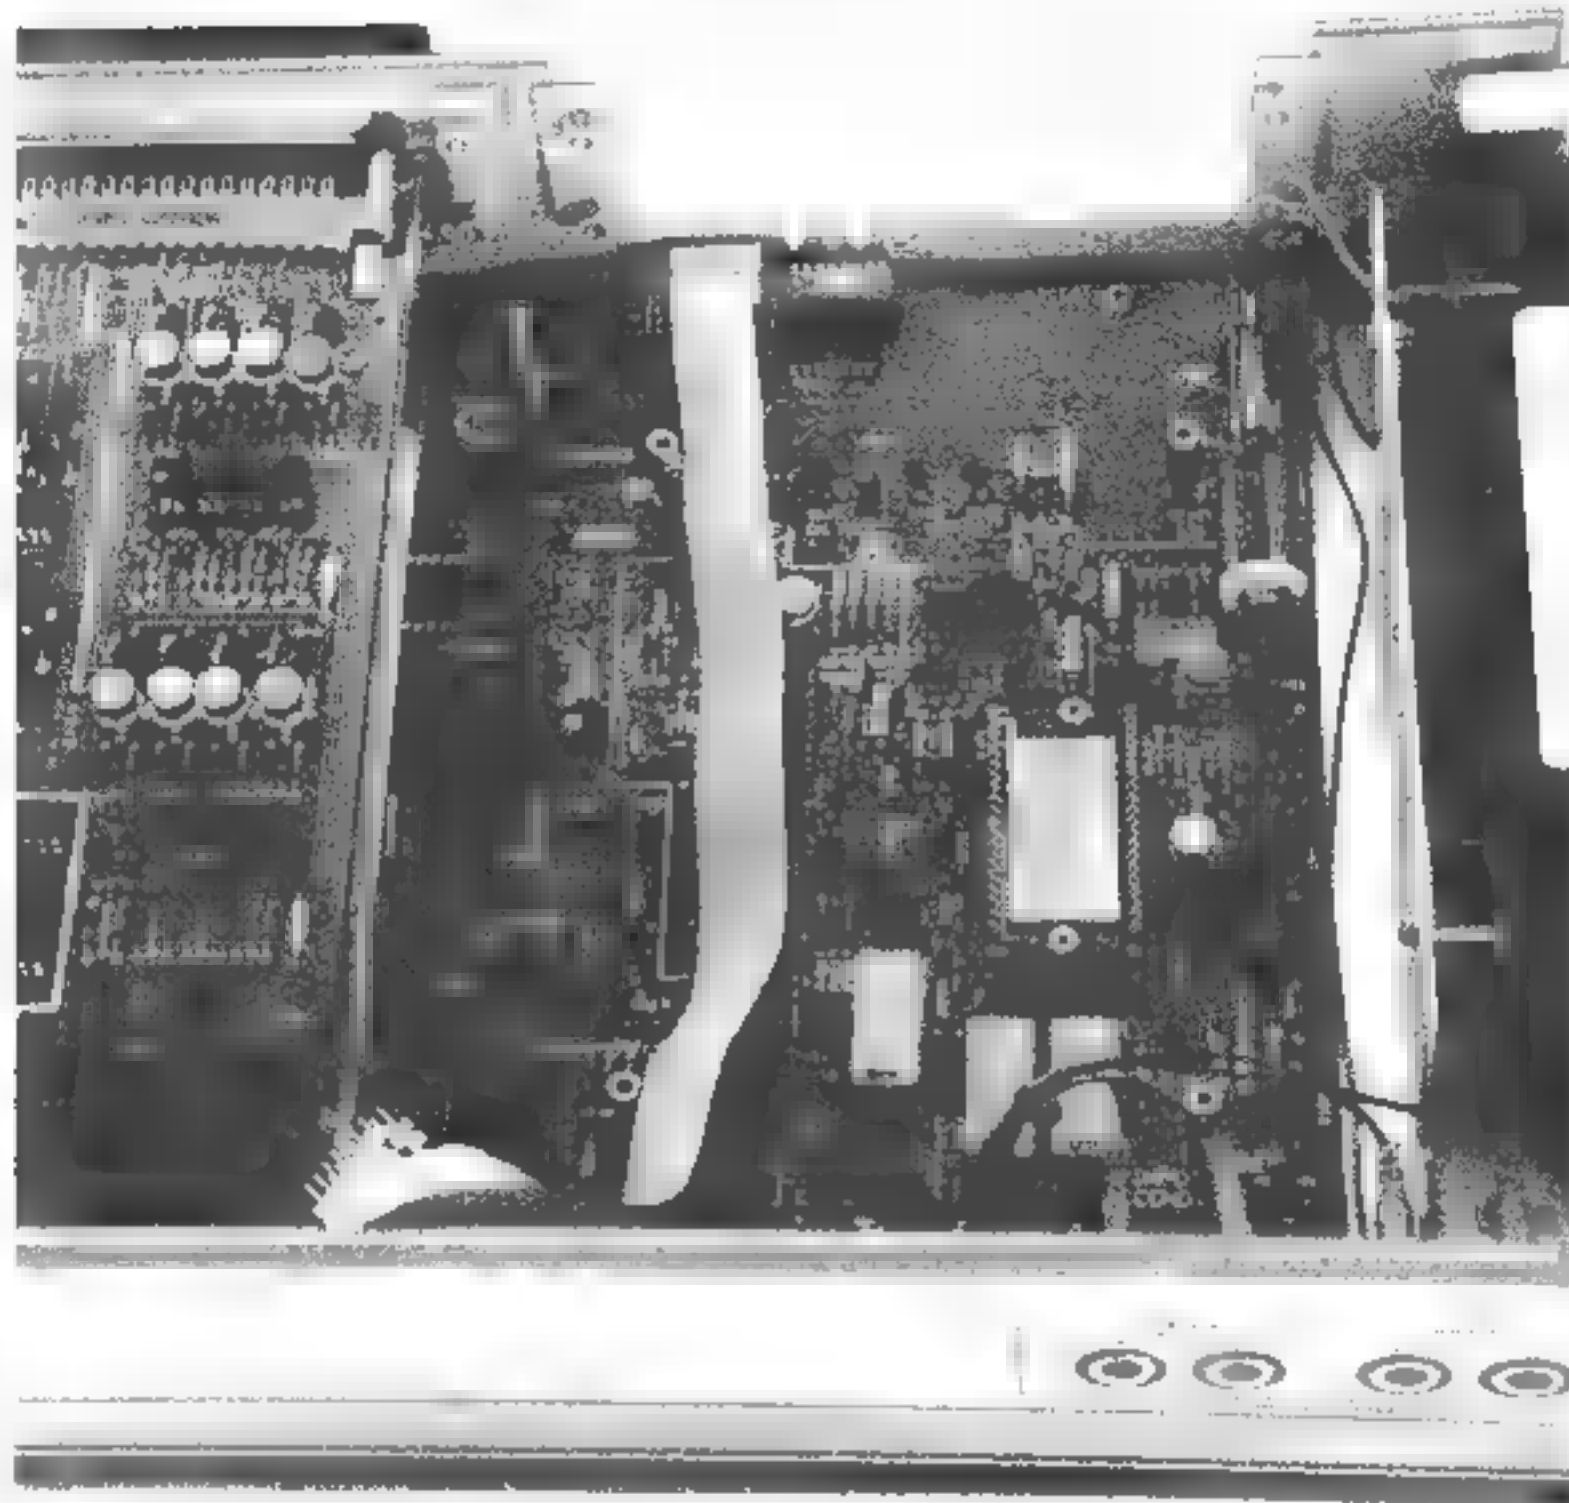

8. Set the slot 0 option assembly in place, component side up. Make certain that the ribbon cable underneath is not pinched. Loosely screw in the remaining 4 hex standoffs. Do not tighten these standoffs at this time.

9. Plug the ribbon cable into the slot 0 option assembly. Make sure that the red wire is oriented to the right. If the slot 0 assembly is a 44462A Multiplexing Assembly, plug the 4-wire voltmeter cable into the option assembly. Orient the 4-wire cable per the label on the option board. The other end of this cable should be connected to J110 on the motherboard with the wires oriented per the label on the motherboard.

10. Plug the appropriate terminal block edge connector onto the option assembly. Replace the rear panel grey 'WARNING' safety cover. Align the option assembly with the rear panel holes by installing one screw of the black strain relief bar. This will automatically align the other side.


NOTE

Do not overtighten the black strain relief bar. Overtightening will cause warping of the rear panel and therefore difficulty in replacing the top cover of the 3421A. If the strain relief bar is mounted with both screws, it should be loosely attached until the top cover is installed.

11. Tighten the hex standoffs to secure the option assembly in slot 0. Do not overtighten these standoffs.

12. Route the ribbon cable from J501 across the slot 0 option assembly. Make sure the red stripe is oriented to the right.

SLOT 1
CABLE ROUTING

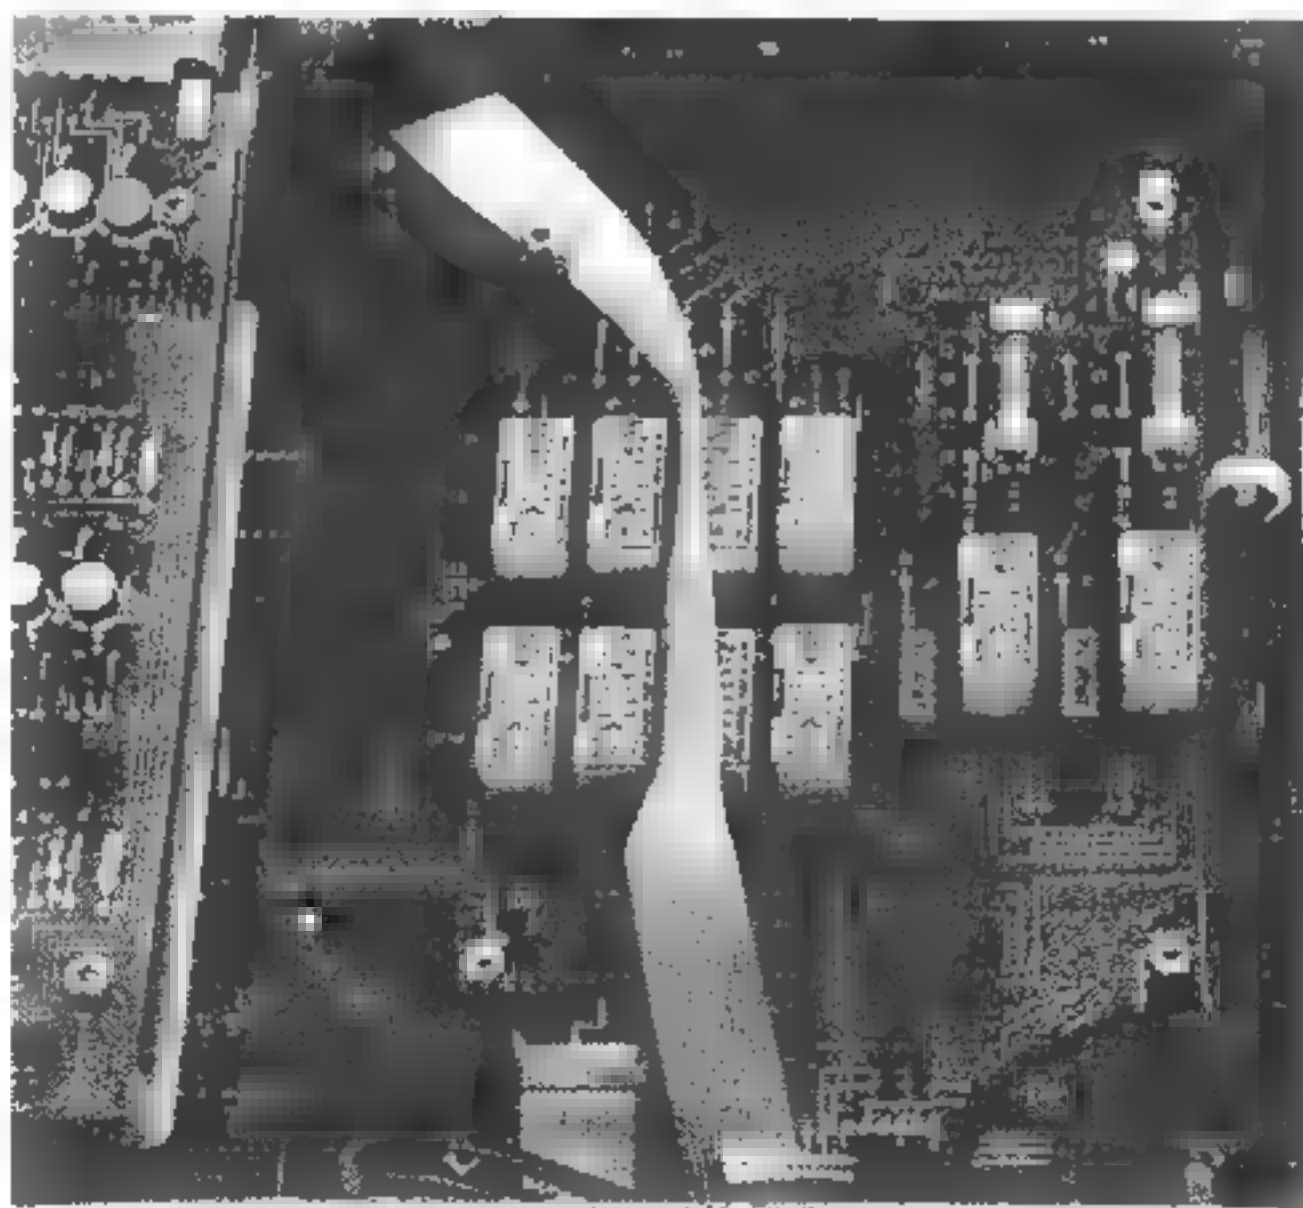

13. Set the option assembly for slot 1 in place. Make sure that the ribbon cable is not pinched between the standoffs and the assembly. Loosely screw the four screws to secure the option assembly in place. Do not tighten these screws yet.

14. Plug the ribbon cable into the slot 1 option assembly making sure the red stripe is oriented to the right. If this assembly is a 44462A Multiplexing Assembly, connect the 4-wire voltmeter cable to the option. This 4-wire cable connects to J120 on the motherboard. Orient the cable as per the labels on the motherboard and the option assembly.

15. Plug the appropriate terminal block edge connector onto the slot 1 option assembly.

16. Replace the rear panel 'WARNING' safety cover for slot 1.

17. Align the option assembly with the rear panel holes and loosely screw on the black strain relief bar.

18. Tighten down the four screws securing the slot 1 option.

To replace the top cover, first make sure the main battery fuse has been replaced. Then, locate the six plastic standoffs and place them over the six cabinet screws. Make sure that the end with the small hole is up and the large hole is down.

Set the 3421A flat on the workbench. Make certain that the bail handles on the front feet are collapsed. Align the top cover and lower it in place. Be sure the guiding grooves are properly engaging the front and rear panels. If the grooves are properly engaged but the top cover will not lower into place properly, one of the plastic standoffs is probably out of alignment. To correct this, move the top cover back and forth (left and right) until the standoffs align properly.

Finally, once the top cover is in place, hold the two halves of the case together and turn the instrument upside down. Tighten the six bottom screws.

Strain Relief

Some strain relief is provided by the 3421A for cables coming from the external transducers to the option assemblies. This strain relief is in the form of a two piece cover. The first piece is the black strain relief bar. It presses the wires against a piece of foam. The second piece is the grey "WARNING" cover.

The photograph below shows several wires coming out of the terminal blocks and through the strain relief. Be sure to leave a small loop in the wire to avoid stress in the terminal block connection. When installing the black strain relief bar, attach one end with the bar held down and away from the instrument so it doesn't bear on the foam. Then rotate the bar up and connect the other end.

To protect wires smaller than 22AWG it is recommended that these wires be bundled together starting no more than 4' from the back of the 3421A. Failure to do so may result in the wires breaking at the strain relief. To illustrate the need for this, a 26 AWG wire can survive only about 7 to 8 pounds of tension before breaking. A bundle of 10, however, could survive up to 70 pounds of tension.




HP-IB

The Option 201 HP-IB Assembly has a set of eight switches near the back panel. These switches are accessible by removing the grey access cover. Note that the two nuts on the HP-IB connector will need to be removed.

HP-IB Switches

Option 201 for the 3421A is an HP-IB interface. This option allows the 3421A to communicate to computers via either the HP-IB interface or the HP-IL interface but not both simultaneously. The option assembly is mounted circuit side down in the 3421A case and has a set of eight switches near the back panel. These switches are accessible by removing the grey access cover.

The HP-IB address of the 3421A is determined by the setting of the five right-most switches. These switches are read and displayed at power-on by the 3421A HP-IB processor to determine the HP-IB address. The 3421A Option 201 normally leaves the factory with the address switches set to decimal; code "09". The corresponding ASCII code is a Listen address code of ")" and a Talk address code of "I". Refer to the following figure for setting the address switches for other addresses.

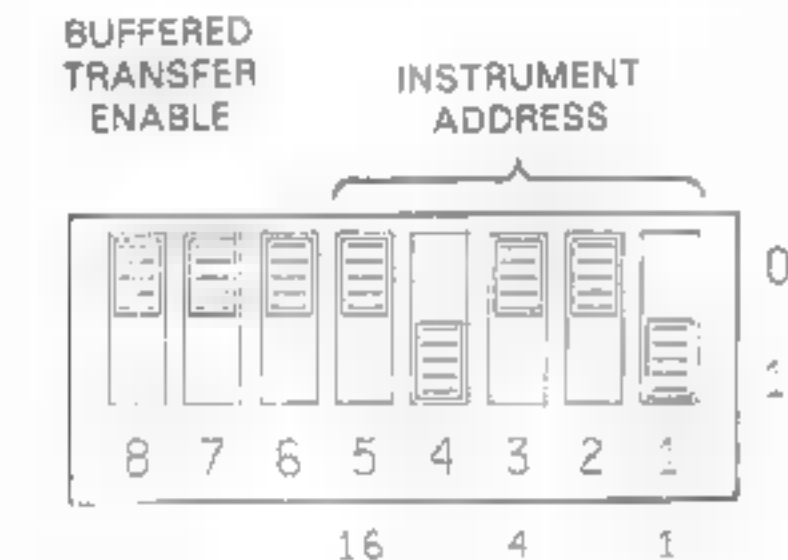

DSA
(TROUBLESHOOTING)

Shown at Factory
Default Address (09).
This number is called
the Primary Address.

Select Codes can be
any integer 1 thru 12.
Primary Addresses can
be any integer 0 thru
30. 31 is not a valid HP-
IB address.

ASCII Code Character		Address Switches					5-bit
Listen	Talk	5	4	3	2	1	Decimal Code
SP	■	■	0	0	0	0	00
!	A	0	0	0	0	1	01
"	■	0	0	0	1	■	02
#	C	0	0	0	■	1	03
\$	■	0	0	1	0	0	04
%	■	0	0	1	0	1	05
■	F	0	0	1	1	0	06
.	G	0	0	1	■	1	07
/	H	0	1	0	0	0	08
0	I	0	1	0	0	1	09 -- Factory Default
1	J	0	1	0	1	0	10
2	K	■	1	0	1	1	11
3	L	■	1	1	0	0	12
4	■	■	1	1	0	1	13
5	N	0	1	1	■	0	14
6	O	0	1	1	■	1	15
7	P	1	0	0	0	0	16
8	Q	1	0	■	0	■	17
9	R	1	0	0	■	0	18
:	S	1	0	0	1	1	19
; <	T	1	0	1	0	0	20
=	U	1	0	1	0	1	21
>	V	1	■	1	■	0	22
	W	1	0	1	1	1	23
	X	■	1	0	0	0	24
	Y	1	■	0	0	1	25
	Z	1	1	0	■	0	26
	[1	■	0	1	■	27
	\	1	1	■	0	0	28
]	1	1	■	0	1	29
	^	1	1	1	1	0	30

The next switch (switch 6) is the Buffered Transfer Enable switch. The use of this switch is described in Chapter 3. As a general rule, this switch should be left in the up position unless the computer will be performing some task while the 3421A is making measurements.

The last two switches are used when servicing the HP-IB circuit board. For normal operation these switches must be in the up position.

Installing the 44462A Multiplexer Assembly


The 3421A uses latching relays on the multiplexer assembly (option 020) and on the mainframe. The state of these relays can only be altered under program control. This is an advantage in the sense that, under most conditions of failure, the relays will remain in whatever state your program has set them. However, in case of power or equipment failure, any application requiring a failsafe method of ensuring that the circuits under control are in a known state must be provided by the installer.

Installation procedures for the 44462A 10 Channel Multiplexer Assembly are straight forward. However, pay attention to the many jumpers on the assembly. The configuring of these jumpers is what will be considered next.


These jumpers can be divided into four groups. The first group is used to configure channels 0 and 1 as either actuators or as multiplexers. The second group of jumpers are used by the 3421A to determine which channels are configured as actuators and which are multiplexers. To make 4-wire ohms measurements requires removing two jumpers and replacing two others; these four belong to the third set of jumpers. Finally, the fourth set are used to install attenuators in the signal paths.

Actuator/Multiplexer Jumpers


Channels 0 and 1 on each multiplexer assembly can be configured as either actuators or as multiplexers. Several jumpers are provided on each channel for this conversion. The photograph below shows where these jumpers are located.

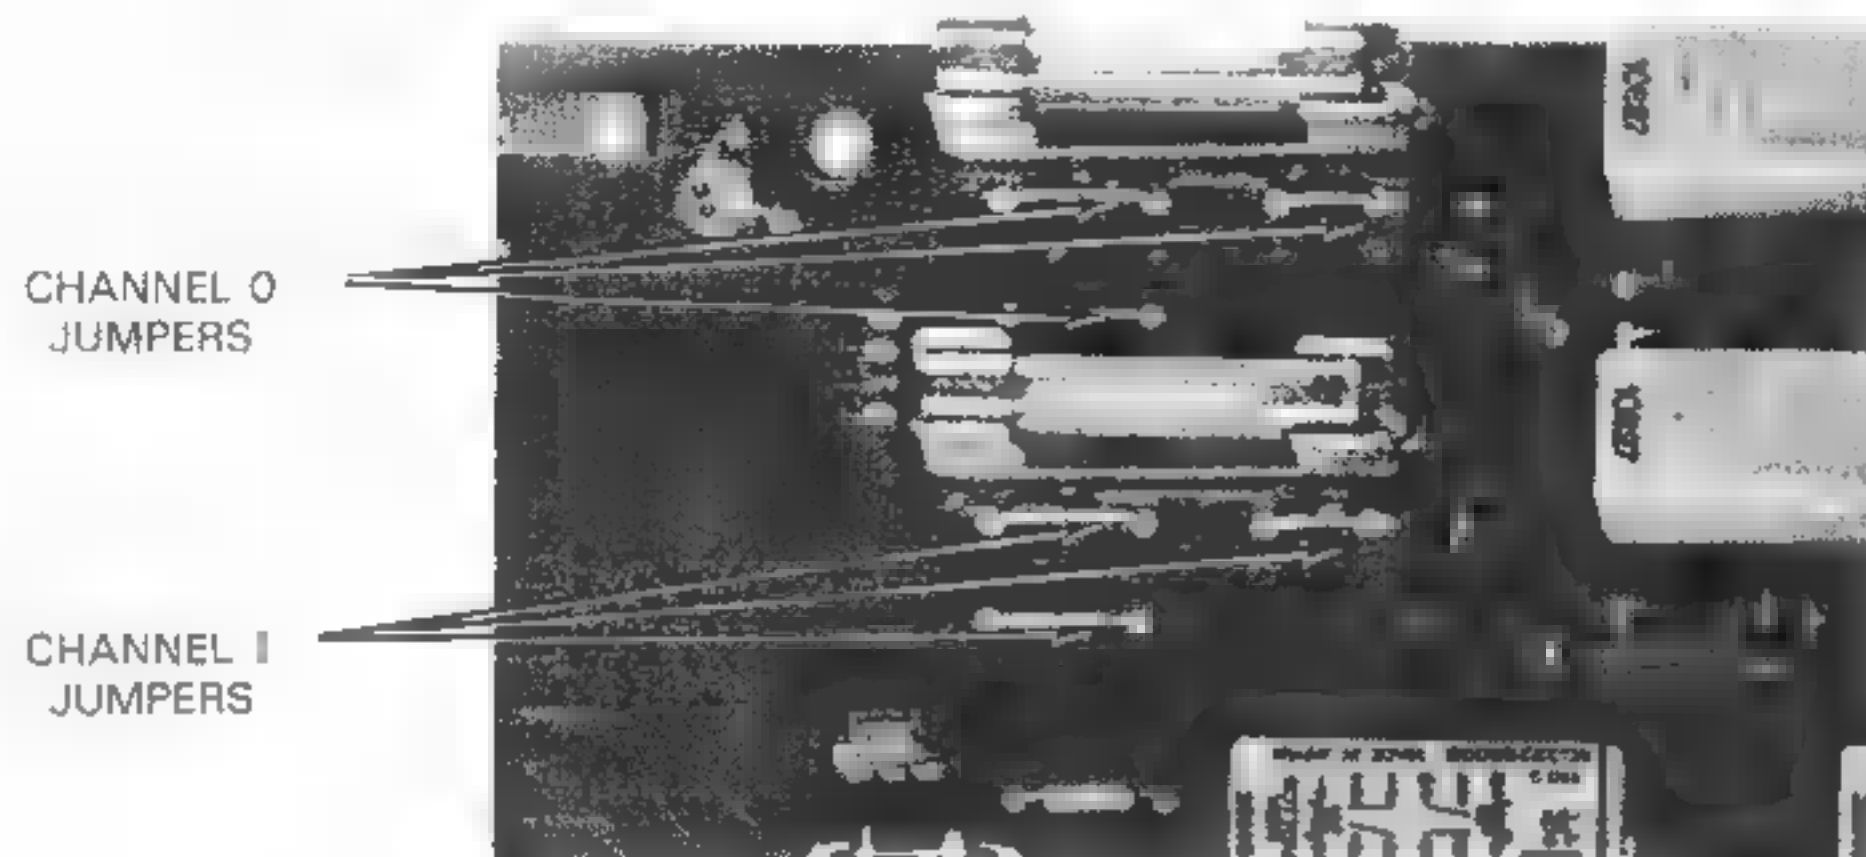

The diagram and chart below show which jumpers need to be in place for the channels to be configured as actuators and which jumpers for multiplexers. Note, the 44462A assembly is factory preset with channels 0 and 1 configured as actuators.

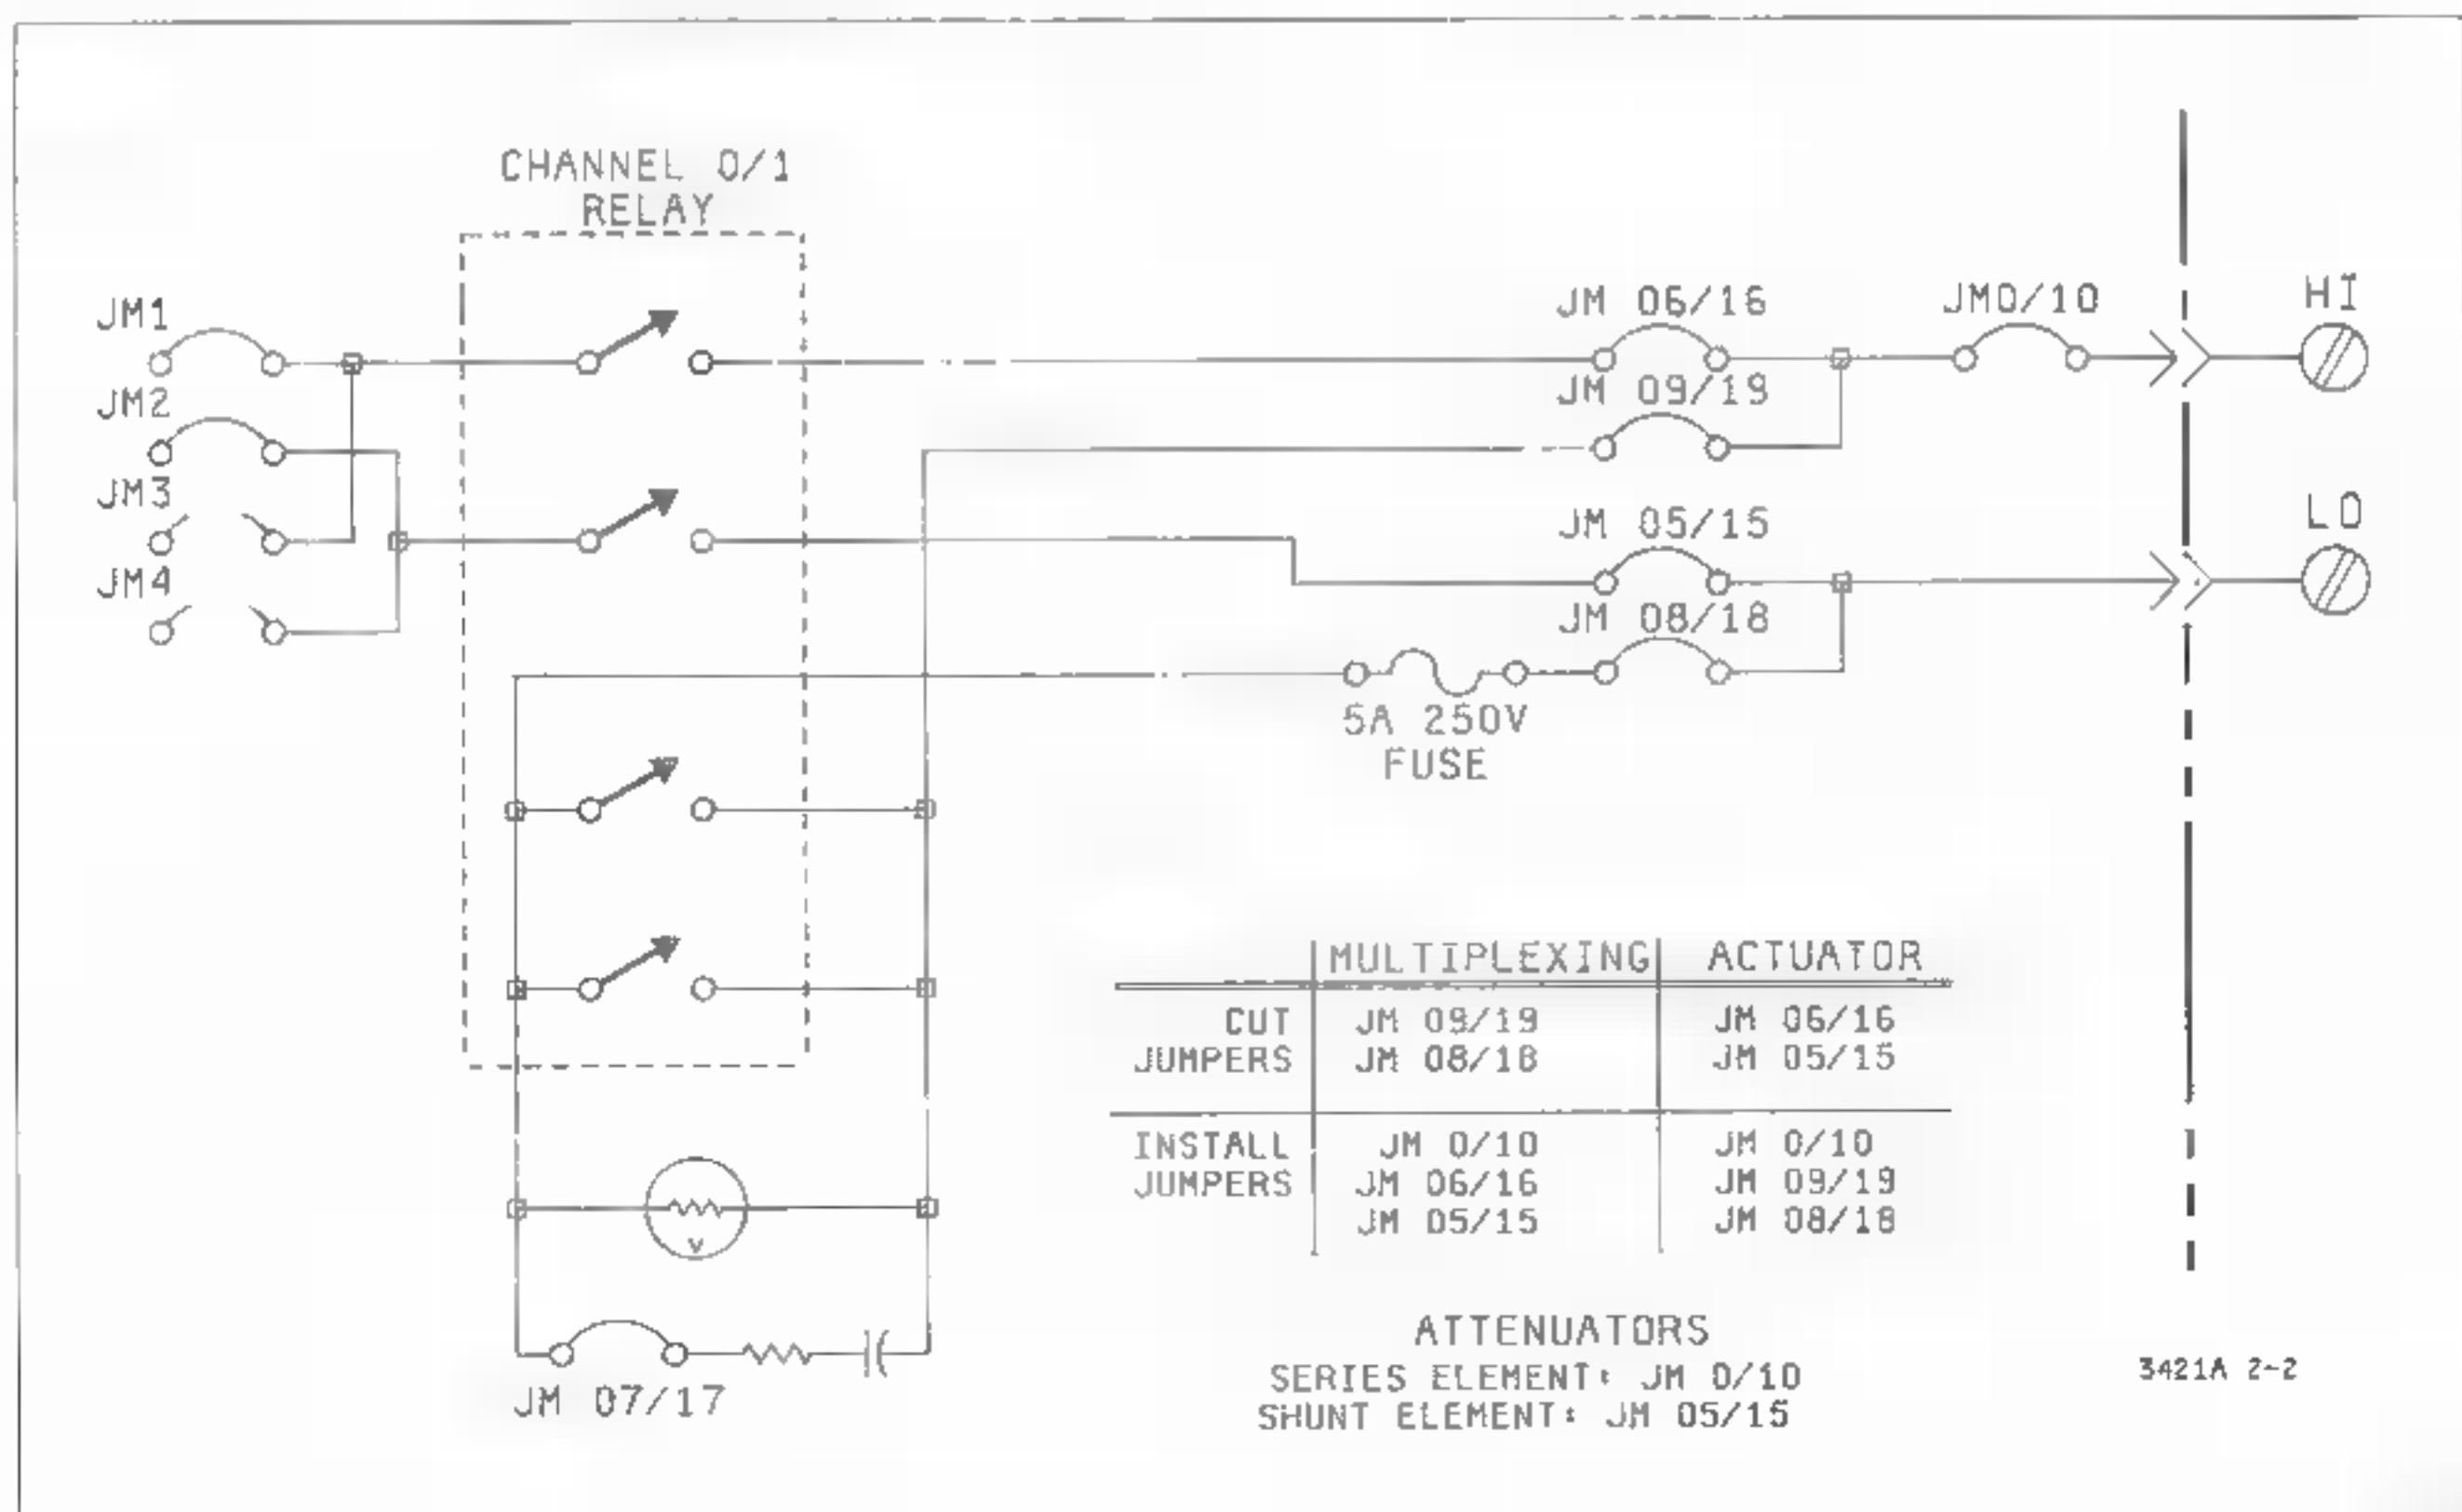

The configuration jumpers, the second set, are located as shown in the photograph below. These jumpers are used to indicate how the assembly is configured and must be set along with any other re-configuring. If these jumpers are not properly configured, an error may result. For example, if you have channel 1 configured as a multiplexer, but the configuration jumpers show it as an actuator, an error will result when you ask for a measurement from that channel; i.e., DCV1.

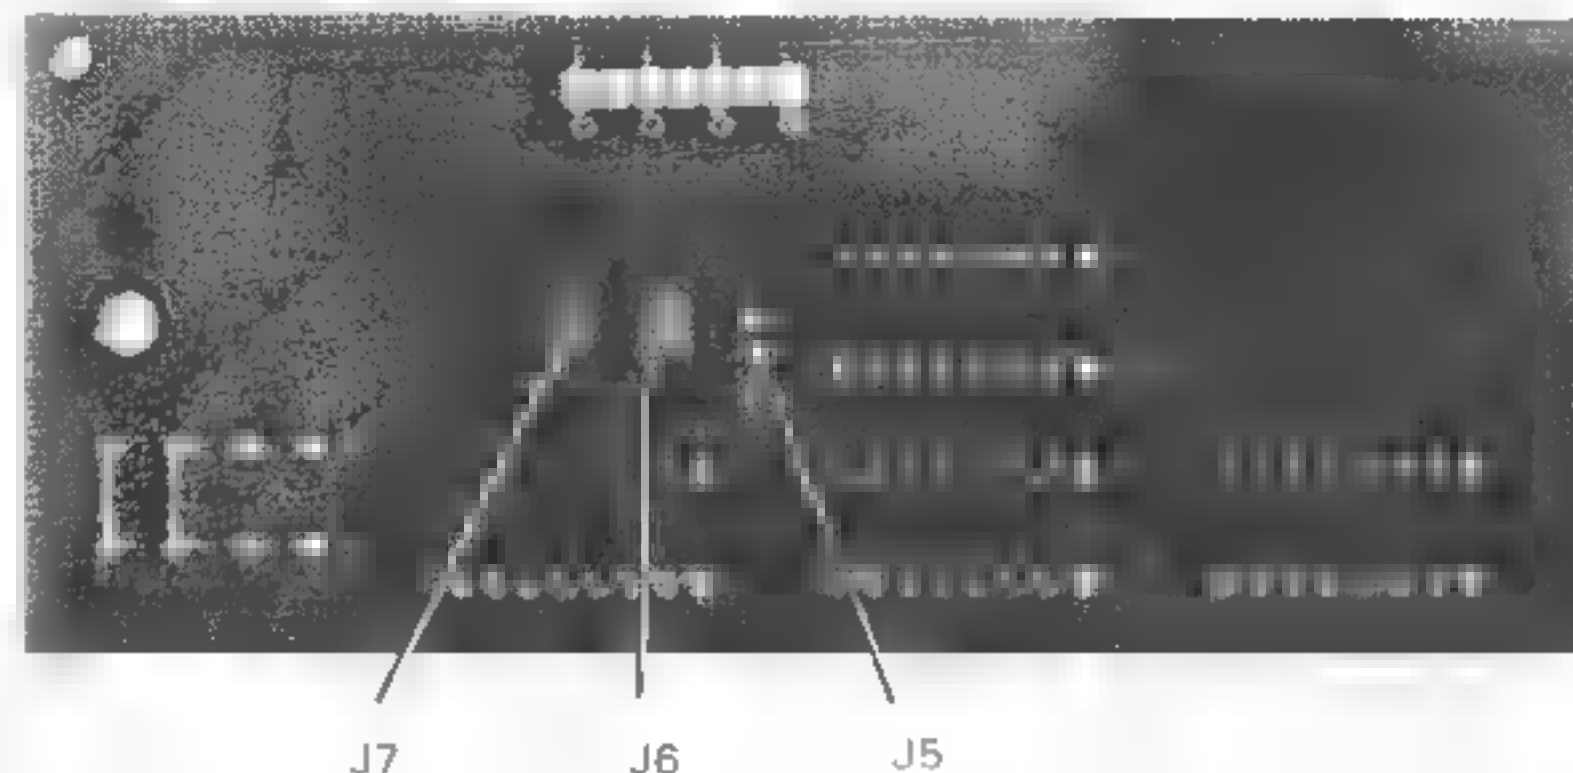

These jumpers set a code that is sent to the 3421A microprocessor to let it know the type of board as well as its configuration. The possible combinations for the jumpers are:


J5	J6	J7	Configuration/Type
0	0	0	No actuators, all 10 channels are configured as multiplexers.
0	0	1	Channel 0 is an actuator, all others are multiplexers.
0	1	0	Channel 1 is an actuator, channels 0 and 2-9 are multiplexers.
0	1	1	Channels 0 and 1 are actuators, all other channels are multiplexers. Note, this is the factory preset configuration.

CAUTION

Your 44462A Multiplexing Assembly may or may not be equipped with a jumper J5. If it is equipped with J5, it MUST remain in the '0' position. Moving J5 to the '1' position will cause the 3421A to think that the assembly is either non-existent or that it is a 44465A Digital I/O Assembly. This can cause substantial confusion when attempting to close channels or make measurements.


2- and 4-wire Ohms Measurements

There are four jumpers located near the rear of the assembly. See the photograph below. For any measurements except 4-wire ohms measurements, jumpers JM3 and JM4 should be removed. To make 4-wire ohms measurements, two 44462A assemblies are required. One assembly will have jumpers JM3 and JM4 removed. This assembly serves as the ohms current source multiplexer. The second assembly will have jumpers JM3 and JM4 installed but jumpers JM1 and JM2 removed. This assembly serves as the sense multiplexer. Refer to the diagram below.

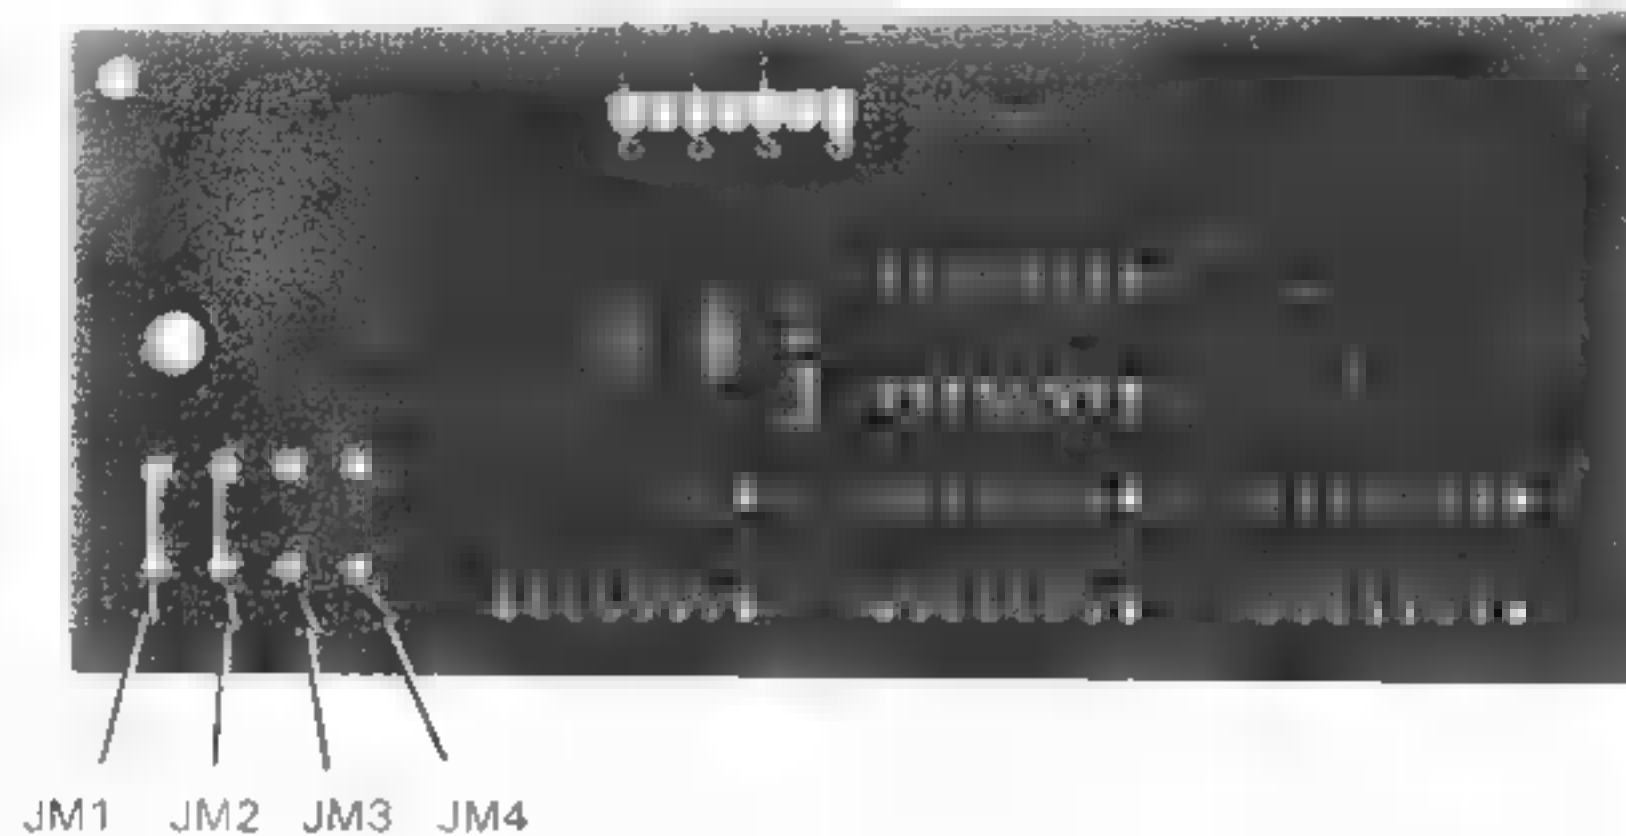


Attenuators

Provisions are made on the 44462A circuit board for attenuators to be installed on all but two channels (channels 8 and 9). An attenuator is composed of two resistors that act as a voltage divider. Consider the following diagram.

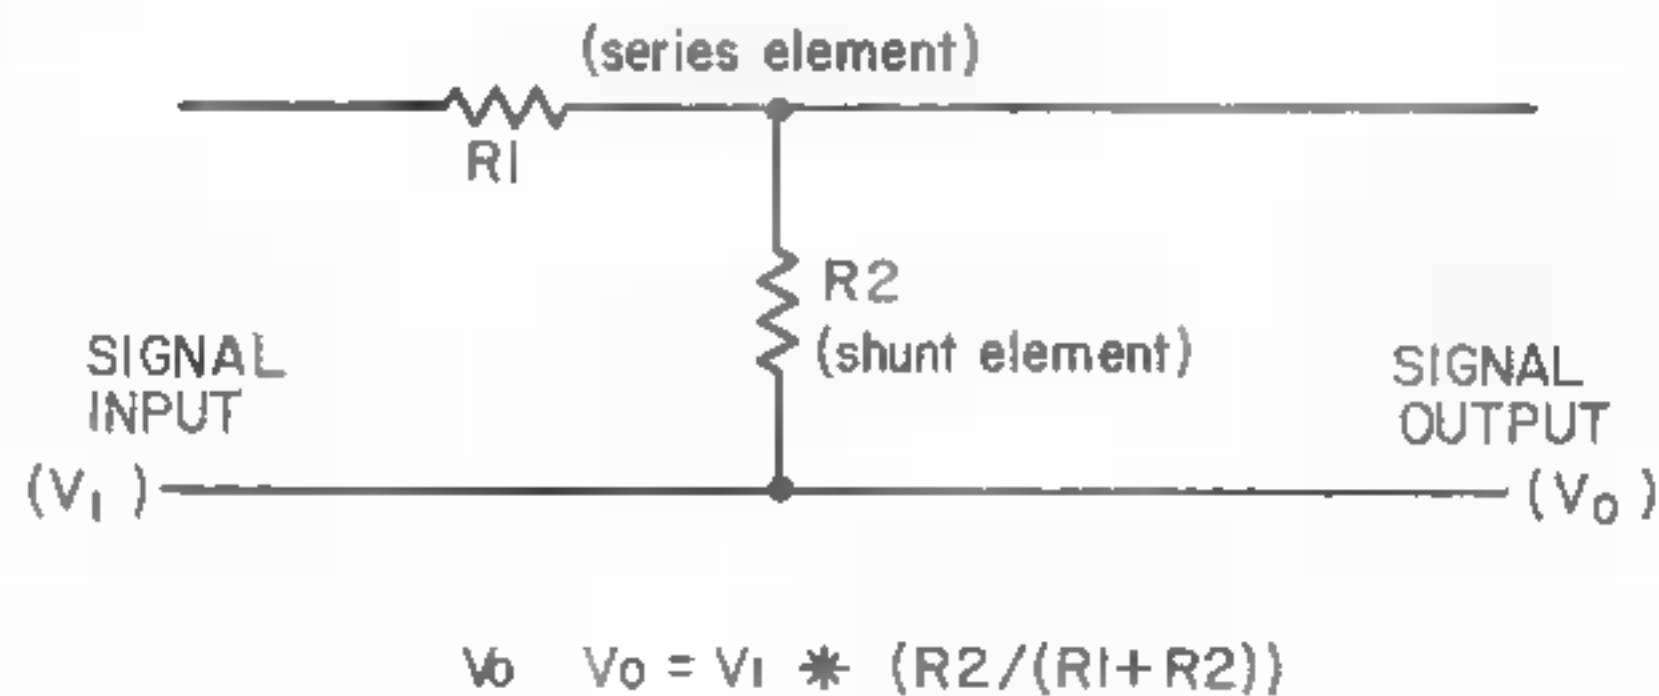

Channel 2 has a built-in, jumper selectable, 10:1 attenuator. This attenuator can be removed by moving jumper J8 from the 'IN' position to the 'OUT' position. This attenuator has an input impedance of 1 Mohm ($R1 + R2$) to prevent loading of the signal source.

Channels 0, 1 (when configured as multiplexers) and channel 3 through 7 can all have attenuators built into their respective signal paths. The following diagrams show how this can be done. A package of seven pairs of resistor (-hp- part number 44469A) are available for use as attenuators. These resistors are the same values as those used in channel 2.

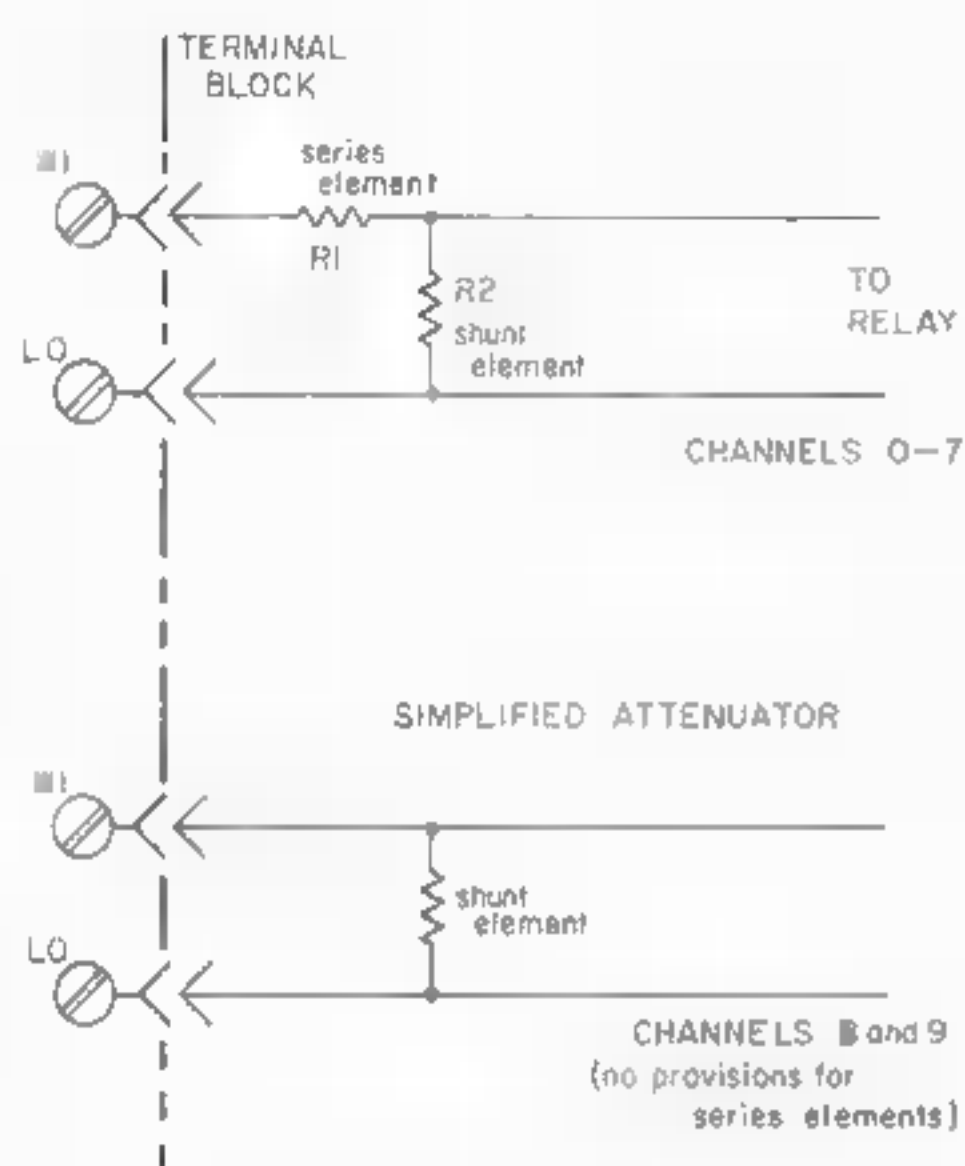


$$\text{INPUT VOLTAGE} = \text{MEASURED VOLTAGE} * \left(\frac{R1 + R2}{R2} \right)$$

NOTE:

- JM 0/10 for series element and
- 5/15 for shunt element ■
- channels 0 ■ 1.


Channels 8 and 9 can only have shunt elements built across their signal paths. An example of where this would be useful is with 4 – 20 mA transducers. A 50 Ohm resistor, $\pm .1\%$, .5 watts (-hp- part number 0699-0064) can be placed across the signal path. The resultant voltage drop (transducer current through the resistor) can be measured by the 3421A internal voltmeter. Thus, the 50 Ohm resistor converts the 4 – 20 mA signal to 0.2 – 1 volt signal.

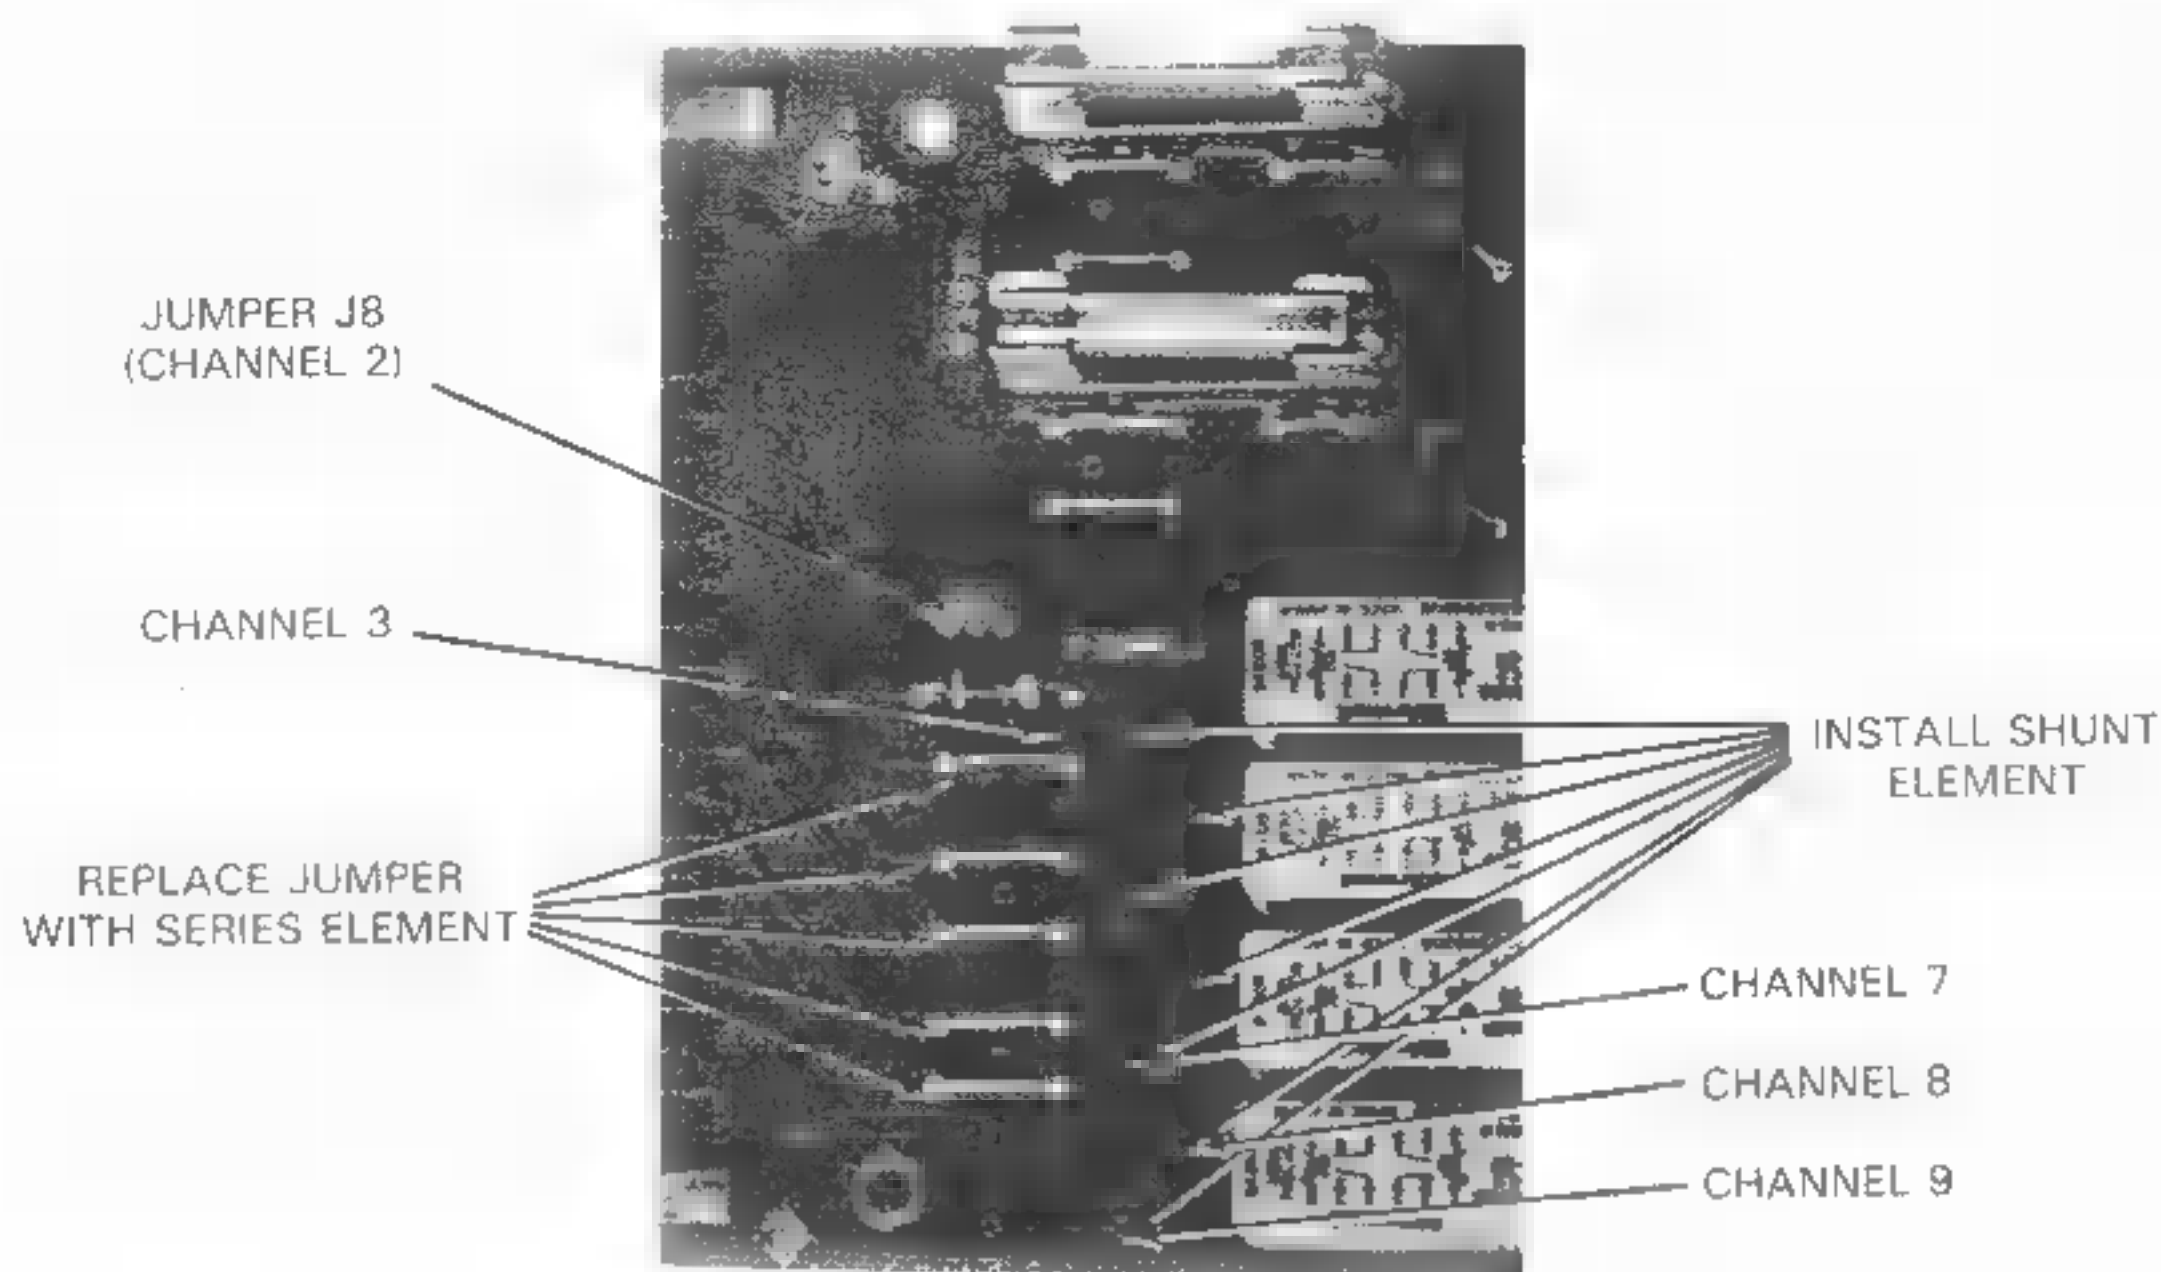

The Terminal Block Edge Connector

The following photograph shows the channel connection sequence for the terminal block. Extra terminal blocks are available under the -hp- part number: 44463A.

When installing the terminal block on the multiplexer assembly, make sure the terminal block is firmly seated and square against the multiplexer circuit board. Hand tighten the captive screws into the clevis' on the circuit board. Remember, any wires smaller than 18 guage should be bundled together starting ideally no more than 4" from the terminal block.

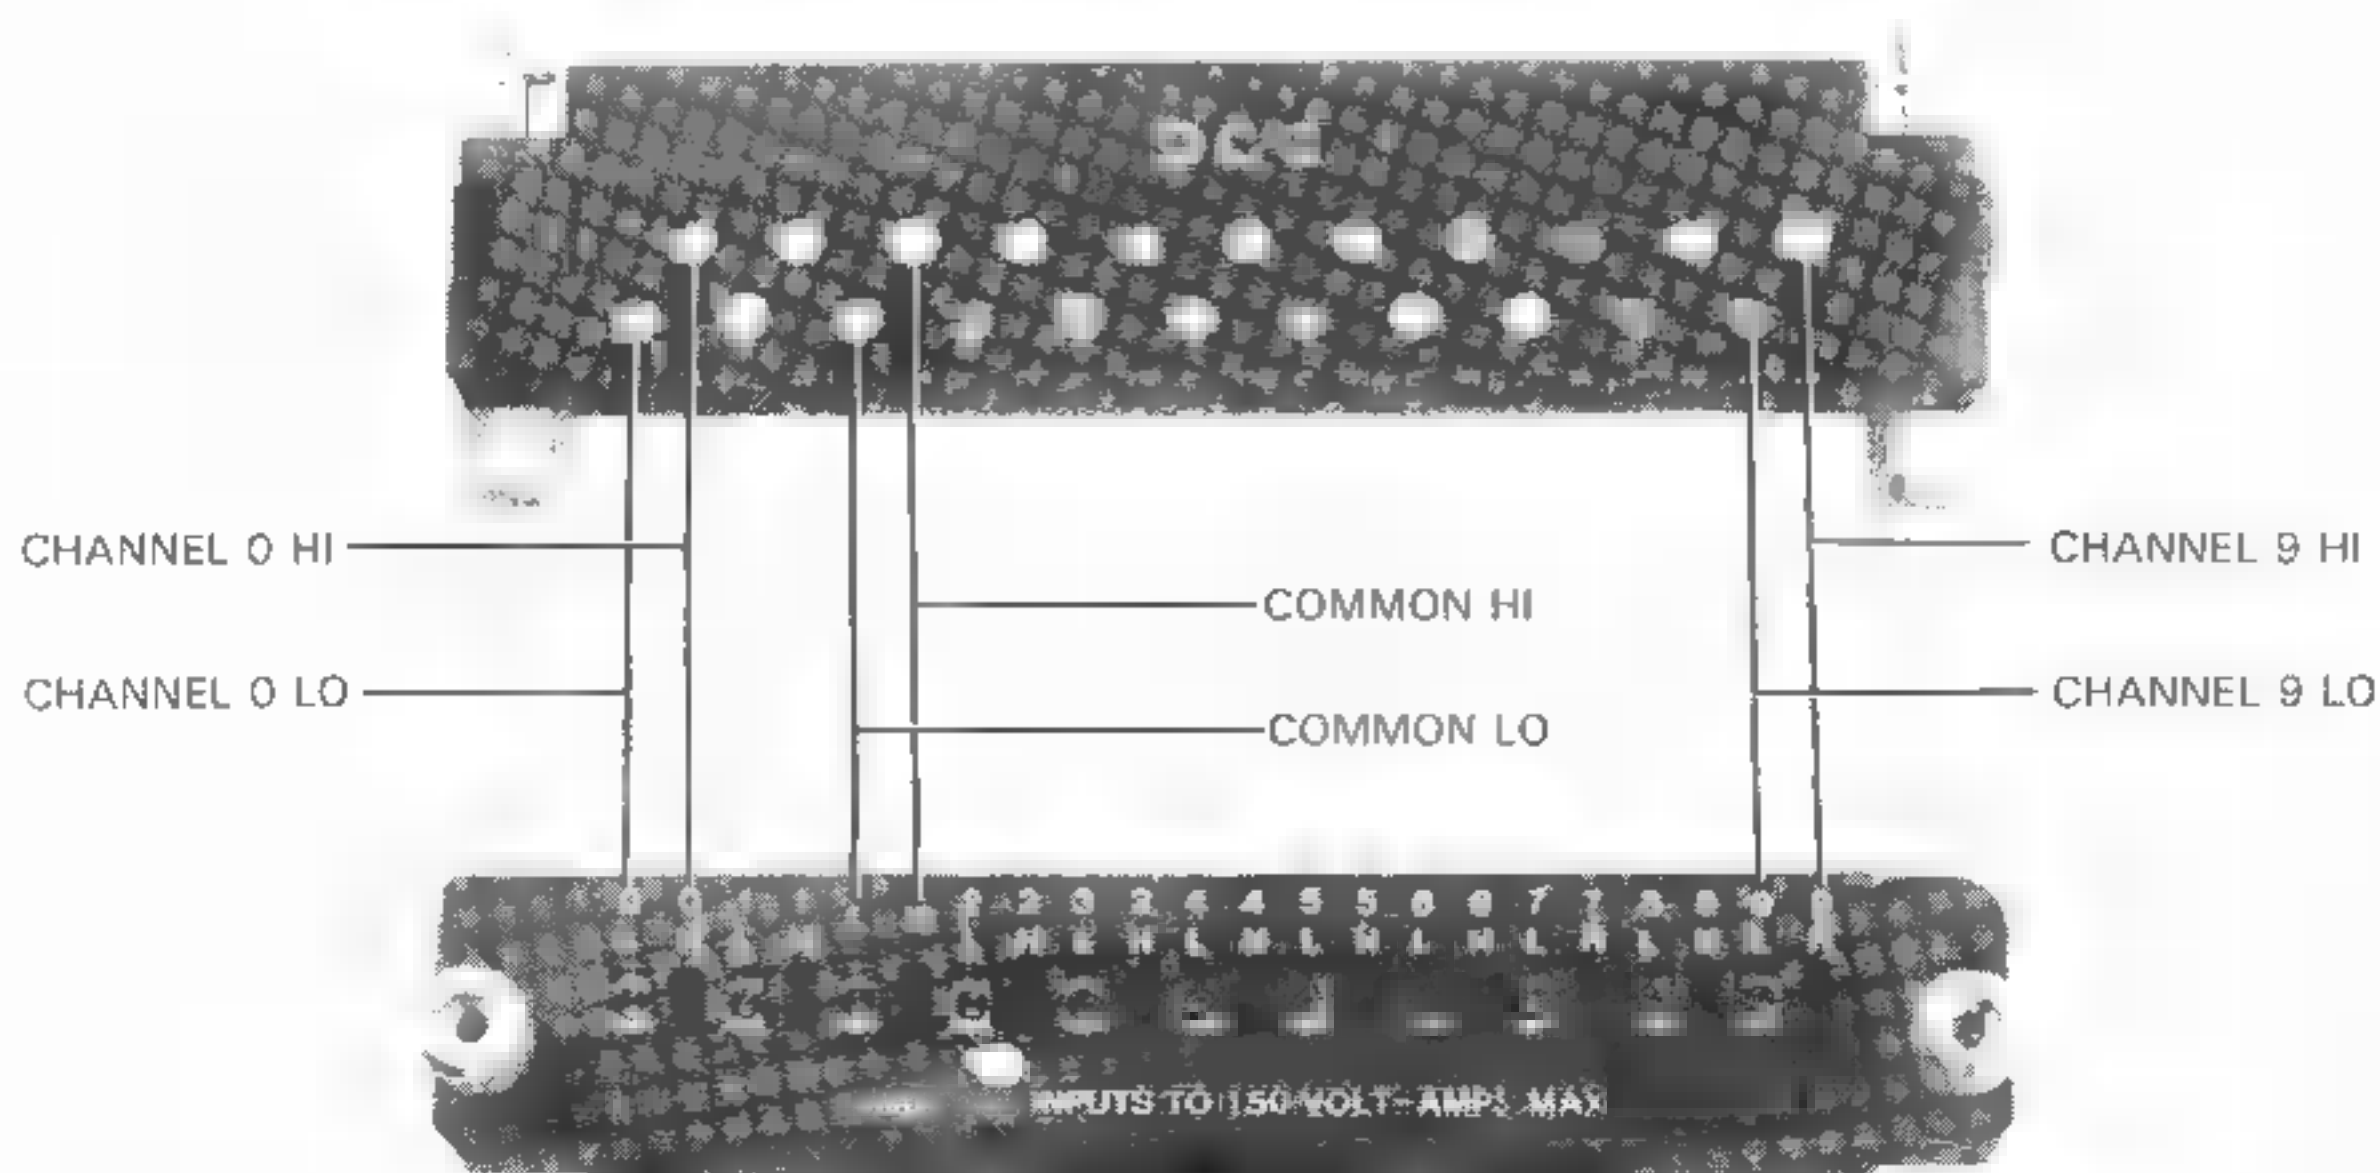



Cleaning

Clean handling techniques should be used when configuring the option assemblies. This is especially true of the 44462A Multiplexing Assembly where contamination will decrease the board impedance. If measurements are to be made under high humidity ($>80\%$) and high temperature ($>90^{\circ}\text{F}$) environmental conditions, the circuit board and edge connector should be cleaned. Also, if very high resistance measurements, or voltage measurements in high impedance circuits the terminal block edge connector must be cleaned. The following procedures can be used to clean the circuit boards after configuration.

1. Remove all source of power from the option assemblies. Then, remove the circuit board from the 3421A.
2. Wash the circuit board assembly with isopropyl alcohol.
3. Rinse the board thoroughly with de-ionized water.
4. Dry the circuit board completely before re-installing it in the 3421A.
5. The terminal block edge connector should be cleaned using the same procedure.

CHAPTER 9

44464A

Breadboard Option

Option 040


Introduction

This chapter provides the technical information necessary for the design engineer or electronic technician to use the 44464A breadboard assembly with the 3421A Data Acquisition Control Unit. This chapter is NOT intended for use by non-technical personnel.

At the end of this chapter are two pages, each showing a full size view of the front and back of the 44464A Breadboard assembly. These pages are provided to assist you in designing and laying out your circuits. You may want to tear one sheet out and duplicate for future use.

The 44464A Breadboard consists of two areas:

1. A breadboarding area which includes two power supplies, +5 volts and the battery voltage; a ground bus, which is tied to the 3421A front panel LO terminal, a 22 pin edge connector, and provisions for connecting to the 3421A internal voltmeter/counter.
2. Built-in design (you provide components) for providing an 8-bit digital input port and an 8-bit output port. The two ports are controlled by the same commands that control the 44465A Digital I/O assembly. These commands will be discussed later in the chapter. The two ports are referenced to the 3421A front panel LO terminal. Therefore, care must be taken if isolation is needed.

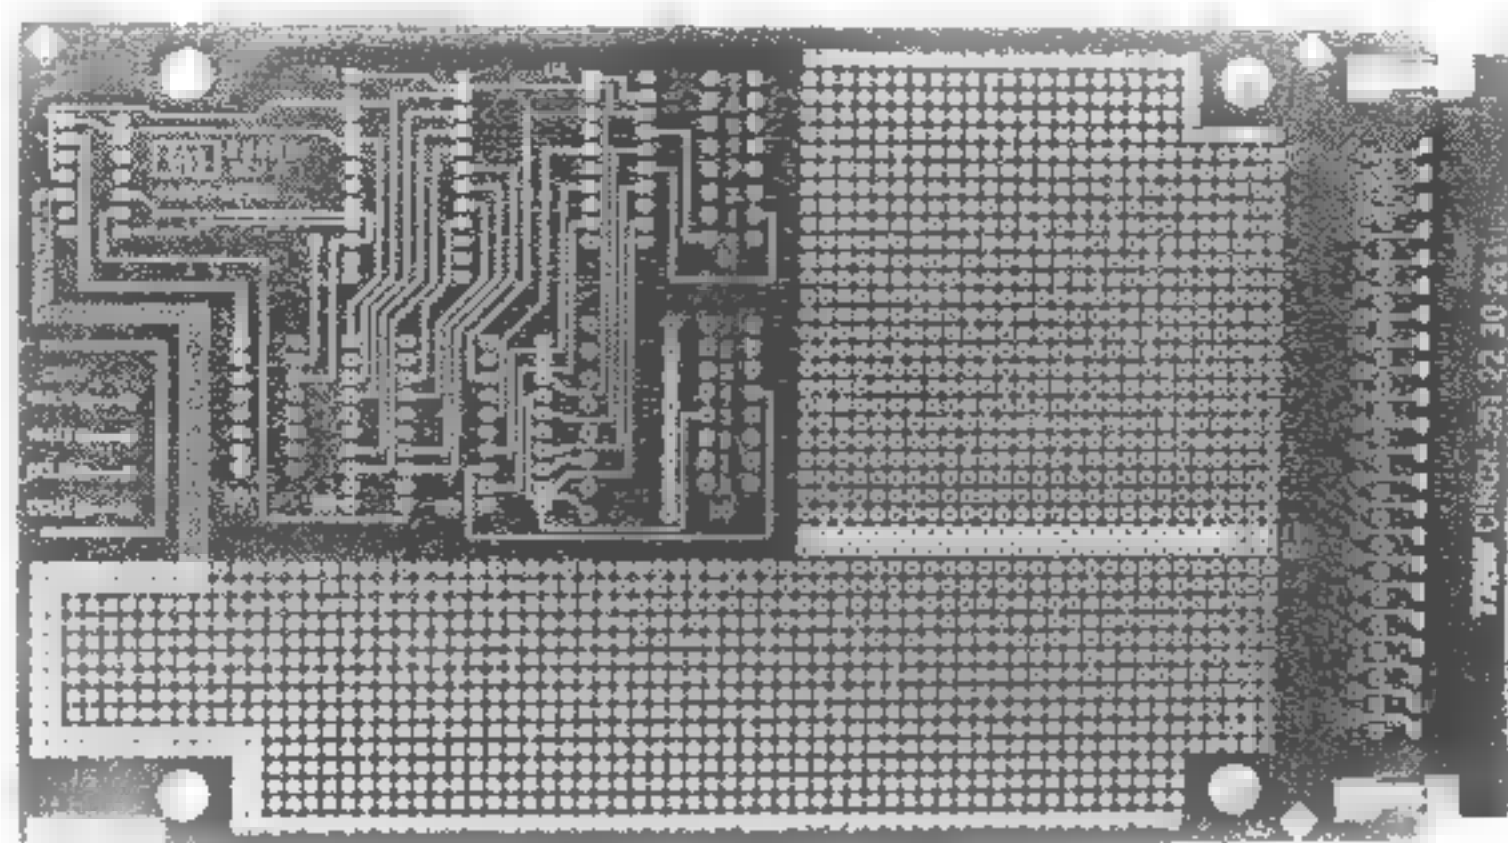

Before You Begin

Prior to designing and building any circuit on the breadboard, familiarize yourself with the signals available. Read through this entire chapter carefully. The following paragraphs describe certain hints and precautions which, if carefully observed, will cause your circuit and the 3421A to perform more reliably.

Voltmeter Input Connections

In the lower left corner of the 44464A assembly are four pins labeled: 4WL, 4WH, DCL, and DCH. These pins are for making connections to the 3421A internal voltmeter or counter. The DCL (voltmeter Low) and DCH (voltmeter High) pins are used for AC or DC voltage and 2-wire resistance measurements. They also connect to the internal counter. Make certain that no more than 300 volts (peak) is ever applied to these terminals.

The 4WL and 4WH pins are used when making 4-wire resistance measurements. They are to be used for this purpose only and no voltage should be applied to them.

WARNING

Damage to the 3421A or external devices may result if voltage inputs are made through the front panel terminals and/or the 44462A Multiplexer and/or the 44464A breadboard DCL and DCH connections simultaneously. Under no circumstances should a voltage be input through the front panel terminals or the multiplexer relays (with a relay closed) at the same time a voltage is being input through the breadboard assembly to the voltmeter.

Parts Supplied

The following is a list of all parts supplied with the 44464A Breadboard assembly.

Quantity	Part Number	Description
1	44464-66505	Bread Board Circuit Board
1	1251-0233	Circuit Board Edge Connector
1	1251-7825	4-Terminal, Right Angle Connector
1	8120-3727	4-Conductor Cable Assembly
1	8120-3678	14-Conductor, Flat Ribbon Cable
1	4040-2133	Strain Relief
1	4208-0416	Adhesive Backed Foam for Strain Relief. 90.1 X 9.9 mm
2	0515-0064	Panhead Screw, 3.0 X 16 (Metric)
2	0510-0952	E-type Screw Retainer
2	1390-0624	Captive screw, 3.0 X 36 (Metric)

Parts Not Supplied

Parts required but not supplied for the 8-bit input/output port are listed below. The location and usage of these parts will be described later in this chapter.

Quantity	Description
1	CMOS Hex Buffer Integrated Circuit, such as CD4049, or MC14049UBCP
1	CMOS 8-Stage Static Bidirectional Parallel/Serial Input/Output Bus Register such as CD4034 or MC14034BCP
1	CMOS Tri-state, Octal D-Type Latch such as MM74C373N
2	CMOS Tri-state, Octal Buffer & Line Driver with Inverting Outputs such as MM74C240N

Power Supply Limitations

The following power supply limitations must be adhered to:

Supply	Available Current	Comments
+5V	≤ 35 mA	Current Regulated Supply Internally Fuse Protected
+6V Batt.	≤ 150 mA	

Note: all power supplies are referenced to the LO input terminal on the front panel.

Battery Charging Restraints While the 3421A is Operating:

If $I_{+5V} + I_{VB} \leq 20$ mA then there is no change in the battery charging specification.

If $20 \text{ mA} \leq (I_{+5V} + I_{VB}) \leq$ maximum specified above, then battery will still charge but it will take substantially longer; up to 3 days for a full charge.

Power Supply Filtering

It is recommended that bypass and filter capacitors always be used between the +5V supply and ground. A good rule to follow is to use one $1\mu\text{F}$ tantalum filter capacitor and two $.01\mu\text{F}$ ceramic bypass capacitors for every eight (or less) IC's.

Thermal Gradients

Remember that thermal gradients caused by large power dissipations can cause errors in thermocouple temperature measurements on 44462A assemblies. Therefore, power dissipation must be kept to under 1 watt on the breadboard assembly.

Switching Inductive Loads

If your application involves switching inductive loads, arc suppression circuits may be required. These suppression circuits serve to minimize radio frequency radiation (RFI), voltage and current surges, and relay contact breakdown.

The following simplified design equations for an RC arc suppression network, will usually provide adequate protection. However, since the R and C values involve parameters difficult to determine precisely, such as the type of relay used, wiring

capacitance, etc., tests to determine the effectiveness in actual circuits should be performed. The design equations are only guidelines and are not warranted.

a. R is selected as a compromise between two values. The minimum value for R is determined by the maximum acceptable relay contact current. Thus, the minimum value for R is V_p/I , where V_p is the peak value of the supply voltage and I is the relay current. The maximum value of R is usually equal to the load resistance, R_l . So, the limits on R are: $V_p/I < R < R_l$.

b. To compute the value of C, use the equation: $C \geq ((I_o/300)^2) * L$ where L is the load inductance, I_o is the current through L just before the relay opens, and C is the total circuit capacitance.

To minimize interference caused by high voltage switching, maintain maximum isolation between the switched voltages and the 3421A logic circuits. Choose relays that have a low contact to coil capacitance.




Radiated Noise

To ensure compliance with applicable standards for Electromagnetic Interference, circuits should be constructed using good RF practice. This means shielding connected to a good earth ground, etc.

The Circuit Board

The figure below shows the dimensions of the circuit board and explains the component height/protrusion restrictions.

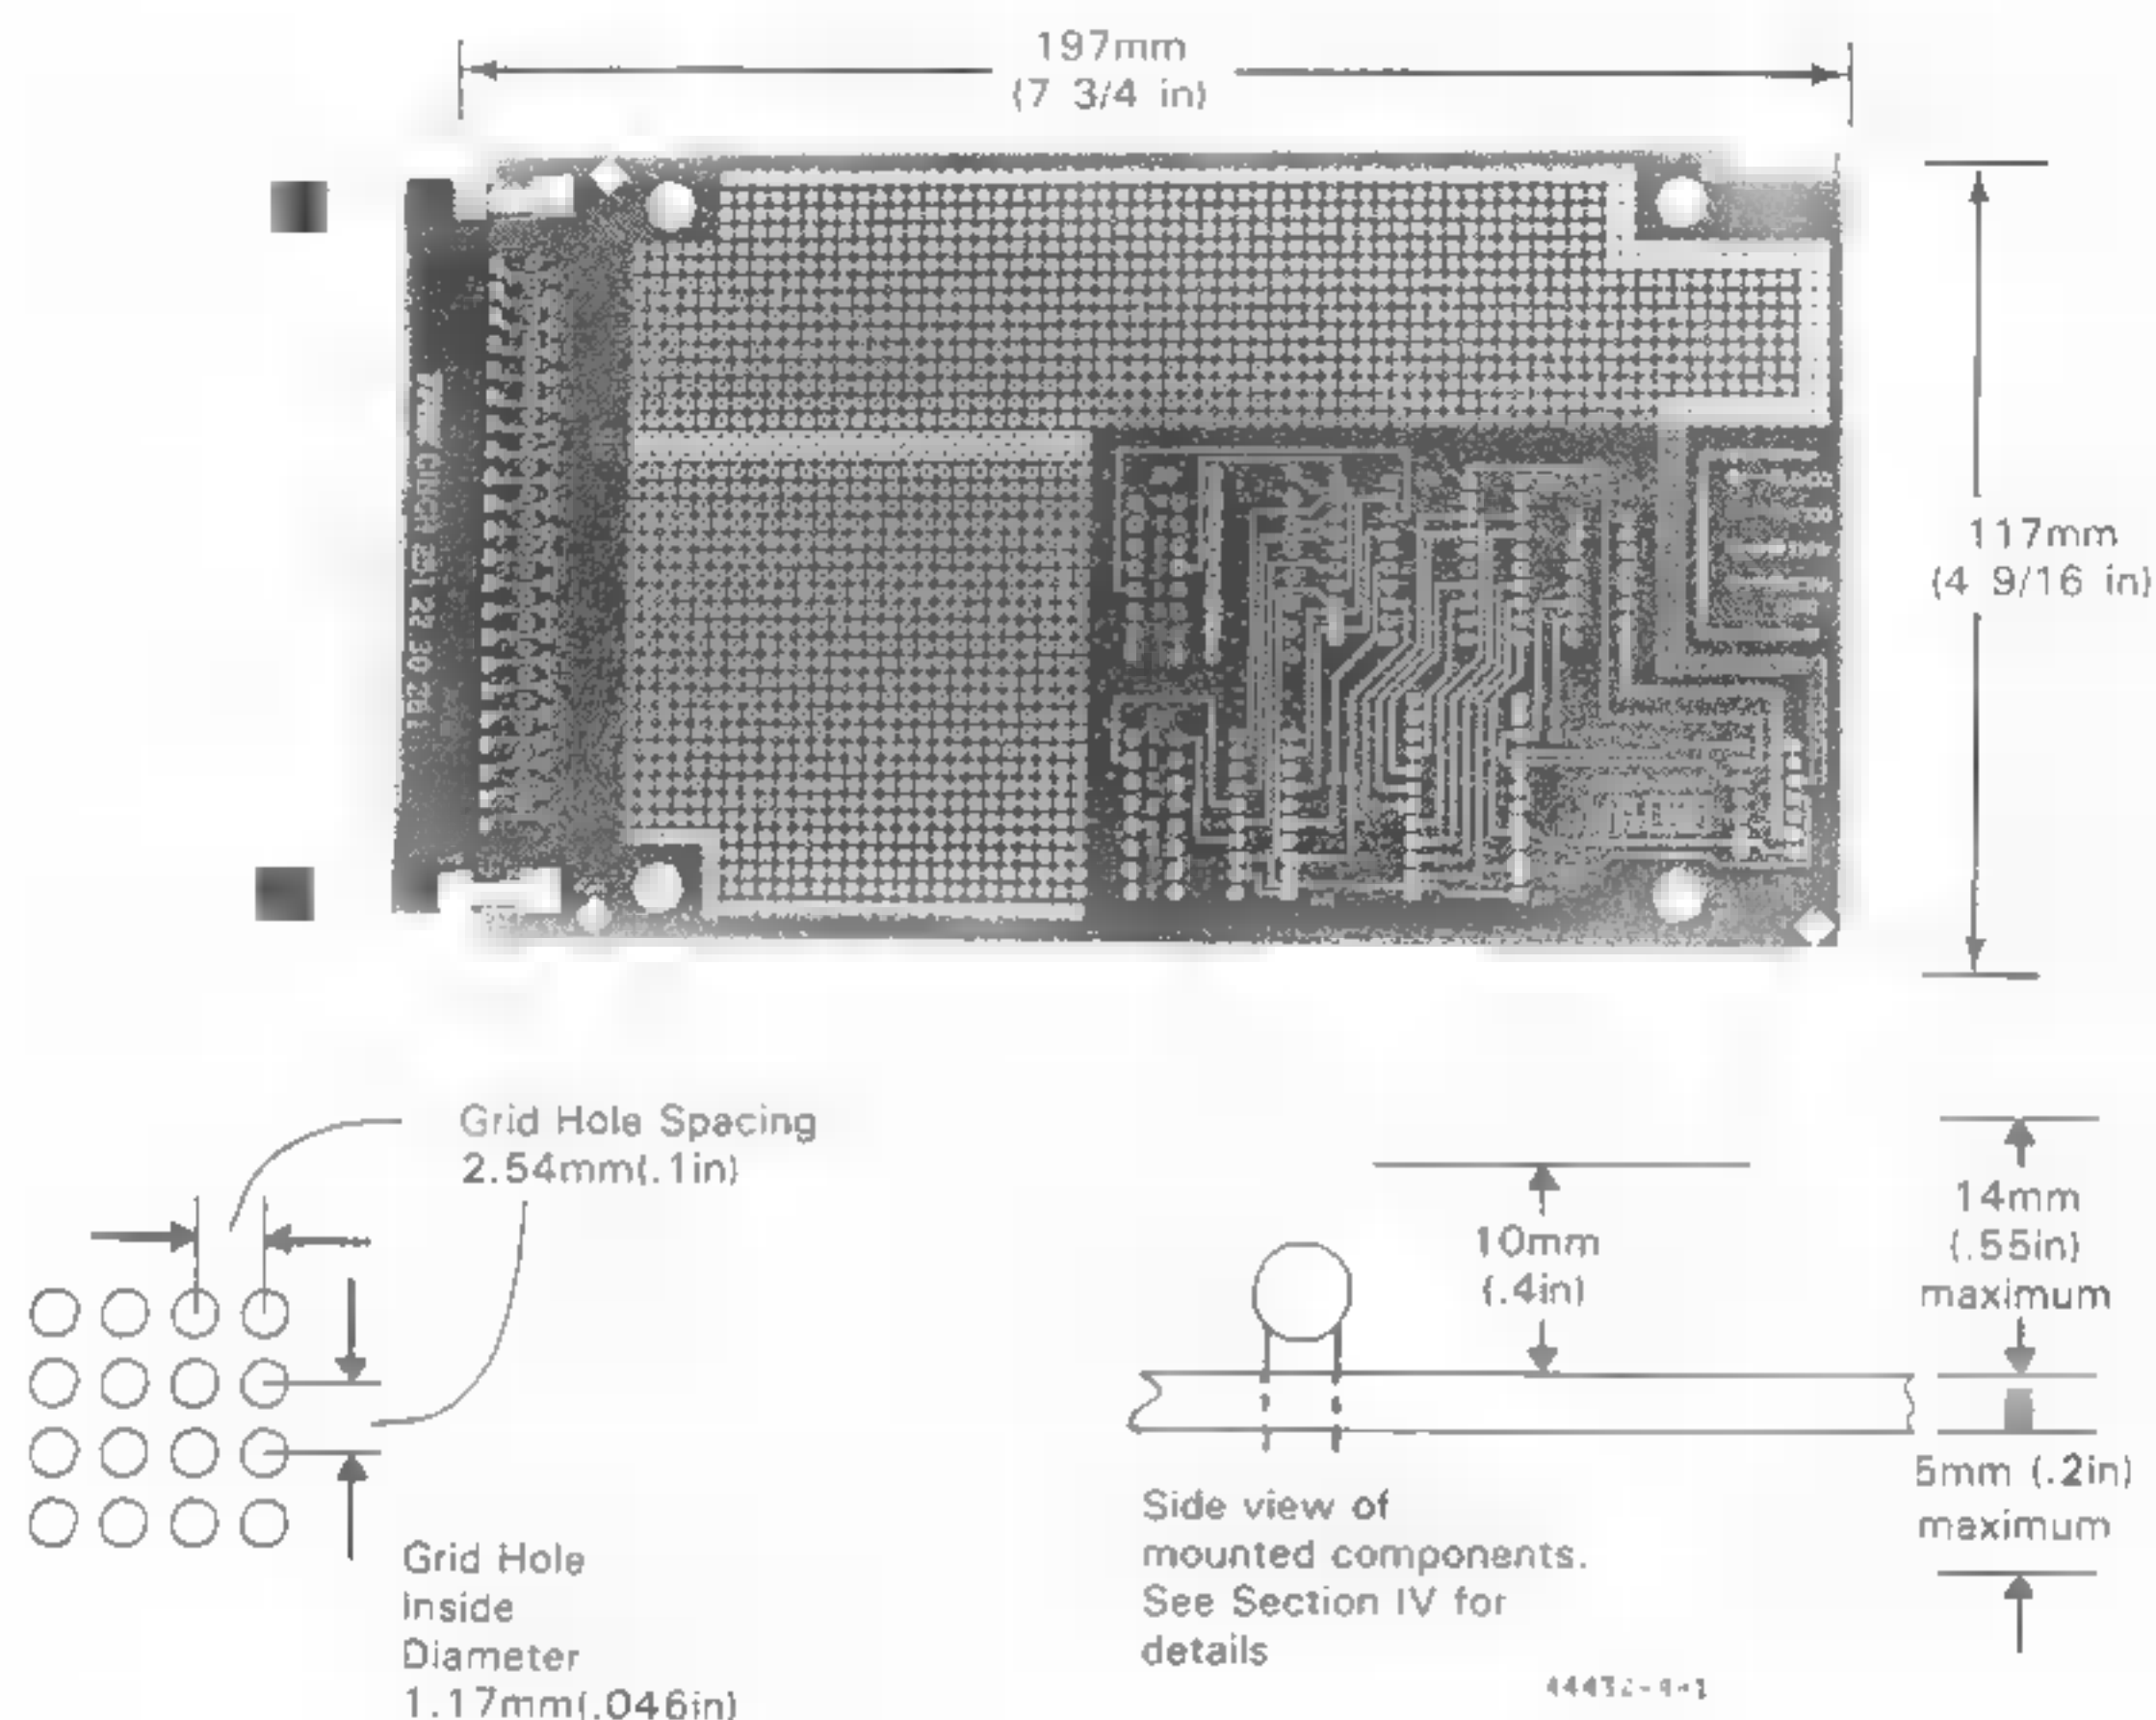


Voltage and Resistance Measurements

As mentioned earlier, connections to the 3421A internal voltmeter are made through the DCL and DCH pins on the 44464A breadboard assembly. Keep in mind that any voltage appearing on these pins will also appear on the 3421A front panel and on any 44462A closed channel in the 3421A. Conversely, any voltage being input through the 3421A front panel terminals or through the multiplexer assembly will appear on the breadboard DCL and DCH pins. Therefore, any voltages to be measured from the breadboard assembly should be isolated, preferably with a relay. The 8-bit digital output port can be used to control the relay.

To make ■ DC, AC or 2-wire resistance measurement from the breadboard, three steps should be taken. First, make certain that all relays on 44462A multiplexer assemblies are open. This can be done by executing the OPN command.

Second, close the relay on the breadboard assembly. This can be done with the BIT command, described later in this chapter.

Finally, execute DCV, ACV or TWO, whichever is appropriate for the measurement you want to make. With no channel list following the command, the measurement is made from the breadboard assembly. This process is shown in the following example.

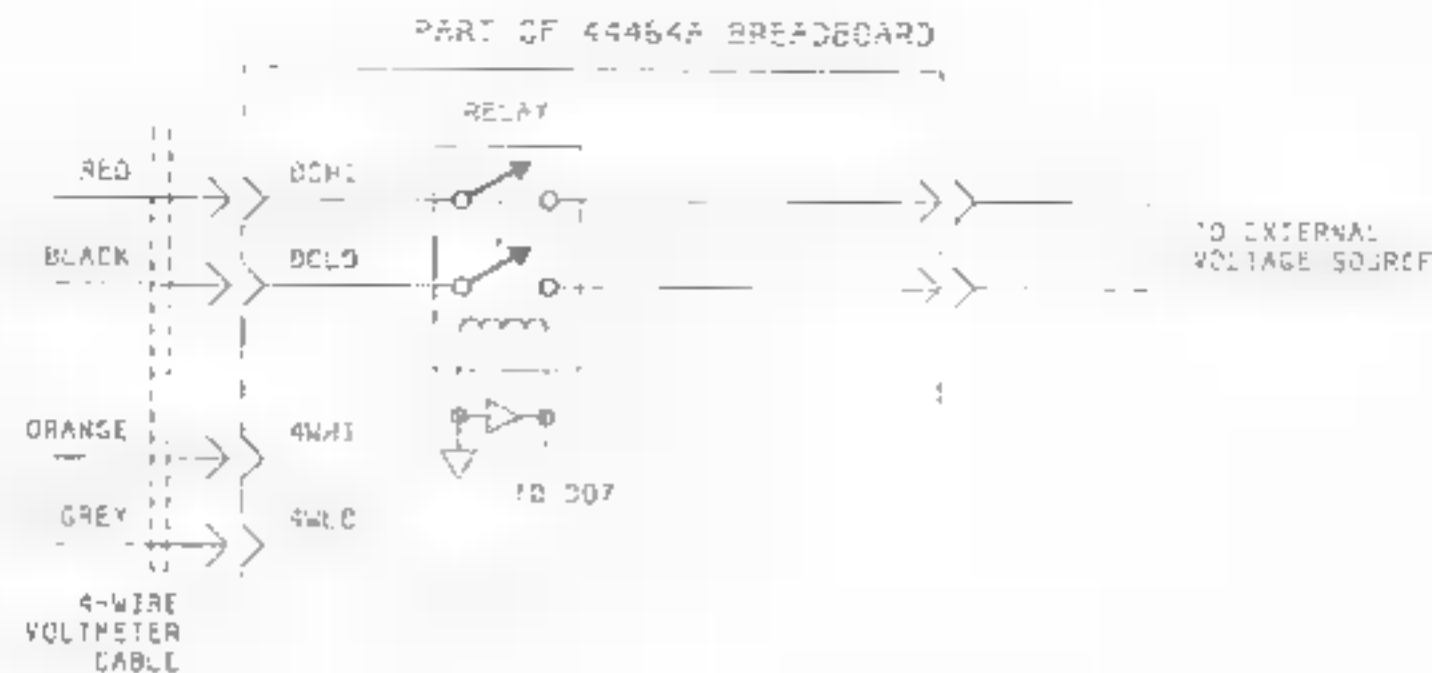


```

10 ! Voltage / 2-Wire ohms example
20 OUTPUT 901 : "OPN" ! Open all relays
30 OUTPUT 901 : "BIT17" ! Relay tied to bit 7. Breadboard in slot 1
40 OUTPUT 901 : "DCV" ! Measure DC Voltage
50 ENTER 901 : A
60 DISP A
70 END

```

4-Wire Resistance Measurements

Essentially, 4-wire resistance measurements follow the same constraints outlined above for voltage and 2-wire resistance measurements. The major difference is that the 4WL and 4WH pins are used instead of the INPUT pins. The figure below demonstrates a 4-wire resistance measurement using the 44464A breadboard assembly.

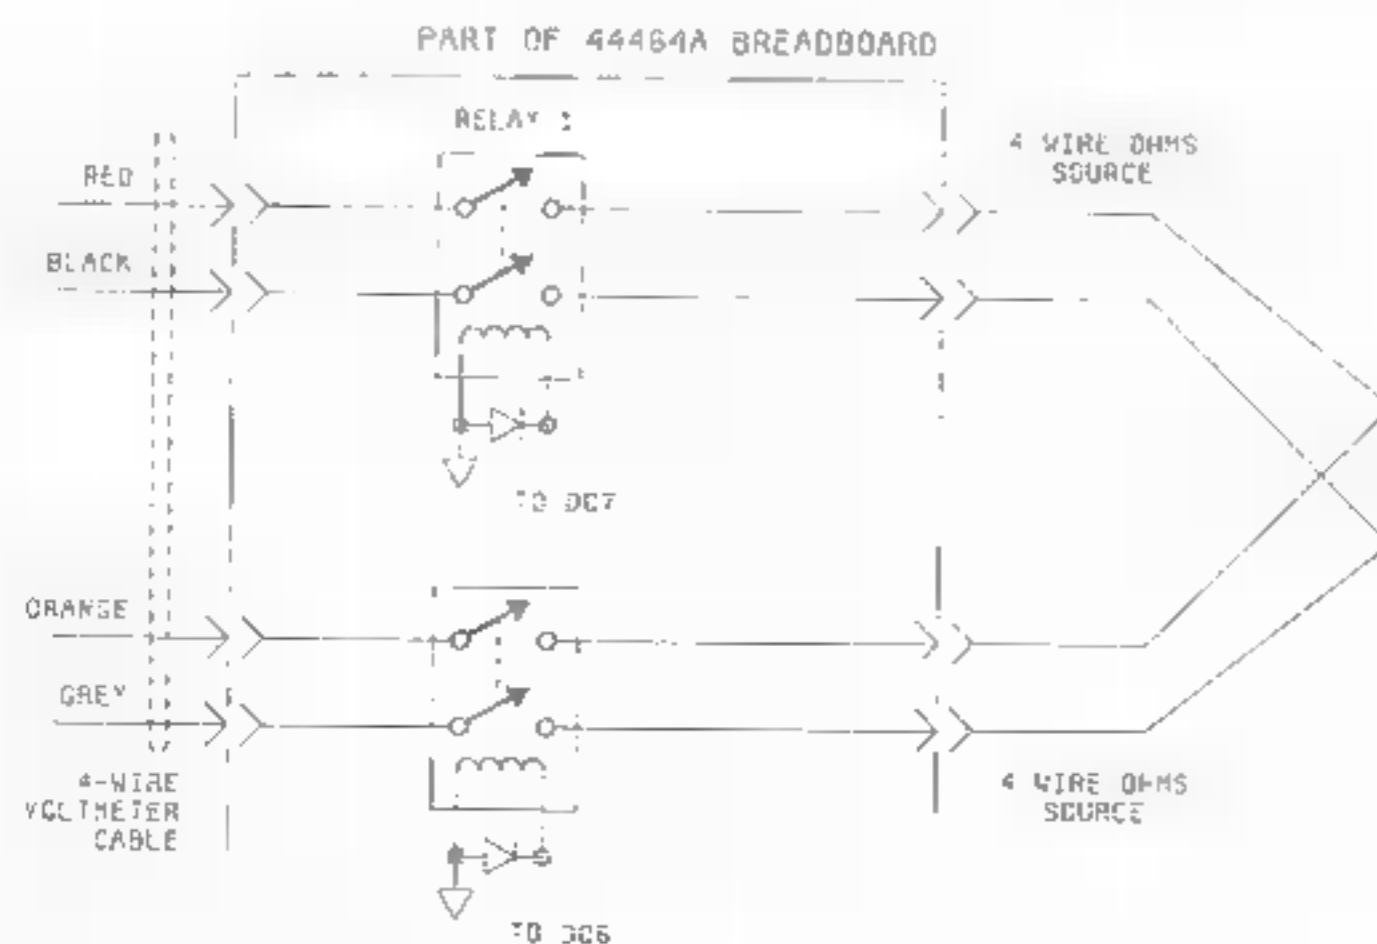

```

10 ! 4-Wire ohms example
20 OUTPUT 901 : "OPN" ! Open all relays
30 OUTPUT 901 : "BIT16,17" ! Close relays 6 & 7 == breadboard in slot 1
40 OUTPUT 901 : "FWD" ! Make 4-wire ohms measurement
50 ENTER 901 : A
60 DISP A
70 END

```

Counter and Totalize


Counter and totalize measurements, like voltage and resistance measurements, are made through the DCL and DCH pins. The same constraints apply as for voltage measurements except that the FRQ command will be used for frequency measurements and TOT for totalizing.

The 8-BIT Input/Output Port

Each 44465A Digital I/O assembly is designed to provide one 8-bit input port and one 8-bit output port. The necessary components have not been supplied with this breadboard. The two ports are designed to allow you to control relays, other digital circuits, etc. The same instruction set used with the 44465A digital I/O board is used to control either individual bits or an entire 8-bit word on the I/O ports. The following discussion is divided into the input port commands and the output port commands. For additional information and examples on programming the ports, refer to chapter 6 of this manual.

Loading The Components

Earlier in this chapter we listed the components necessary for building the digital I/O ports. The following diagram shows where to mount those components. Remember to use clean handling techniques and static protection. The integrated circuits are CMOS and susceptible to electrostatic discharge.

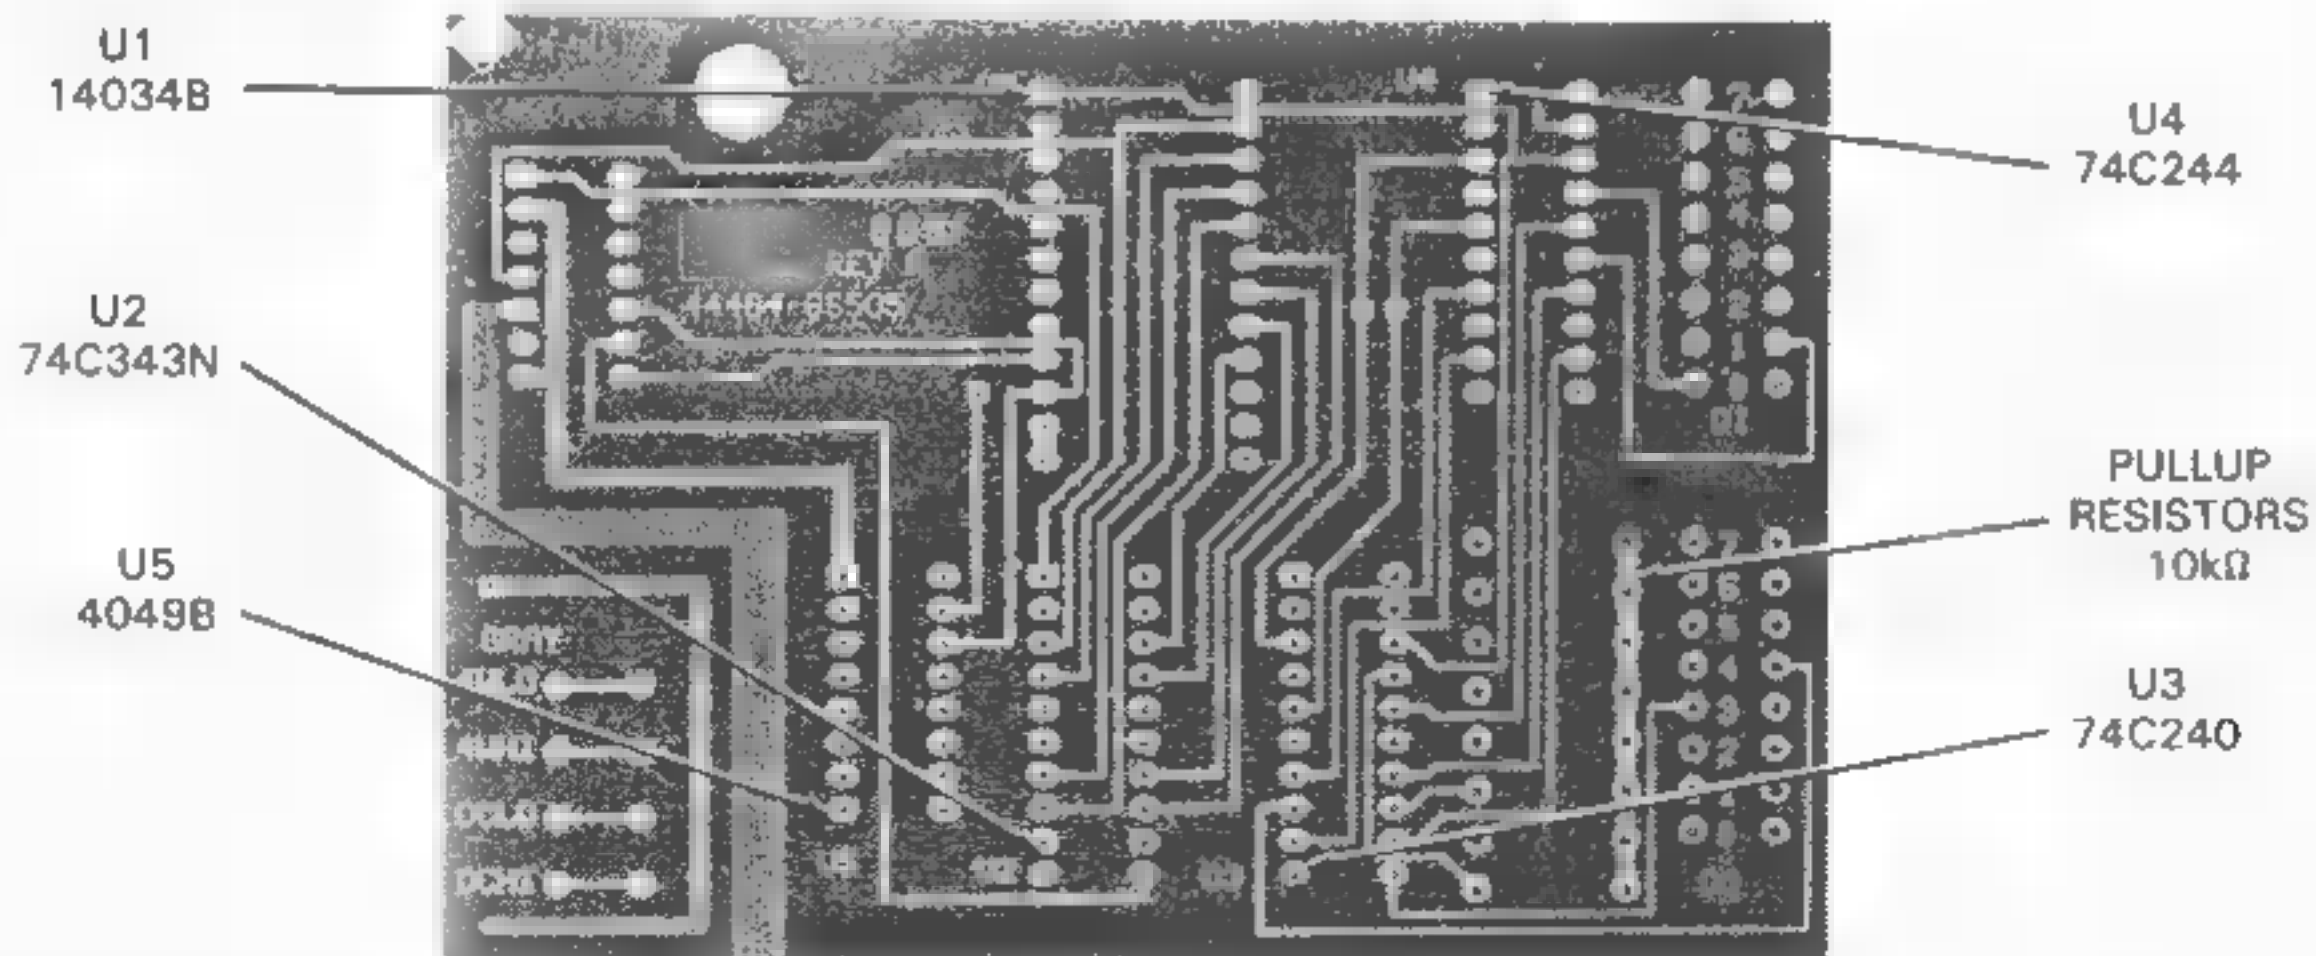

CAUTION

Only qualified service trained personnel should install or configure the breadboard assembly. Make certain that all power is removed from the breadboard before installing components. Use clean handling techniques and anti-static precautions.

At the end of this chapter is a short theory of operation describing the operation of the I/O ports.

Buffering the I/O Port Lines

Since the integrated circuits installed on the breadboard for the I/O ports are CMOS devices, all I/O lines should be buffered. The 8 digital output lines are capable of driving one (1) standard TTL device.

Input Port Commands

The command set used to control the input port are the same as those used with the 44465A 8 Bit Digital I/O assembly. Two Standard Commands are used most often with the input port: REDi (REaD slot i) and BITx. REDi allows you to look at the entire 8-bits from the slot specified by "i". BITx, however, permits you to select individual bits to look at. In the following discussion the words "set" and "clear" will be used. Set means that a condition is true; a high or logic "1" condition, etc. Clear means just the opposite; i.e., the bit is low or logic "0" condition.

REDi

The REDi command reads the digital input port and responds with a decimal number between 0 and 255. This decimal number corresponds to the sum of the values of the individual bits that were "set". For example, if you have a breadboard assembly in slot 1 and bits 0, 2, 3, 5, and 7 are "set" (all others are cleared), the value 173 would be returned. Refer to the chart below.

Bit Number	7	6	5	4	3	2	1	0
Bit value if set	128	64	32	16	8	4	2	1

Example: $128 + 0 + 32 + 0 + 8 + 4 + 0 + 1 = 173$

Bit Value Chart

BITx

The BITx command allows you to read individual bits. The following table shows the addressing scheme for the input port bits for 44464A cards in each of the three slots of the 3421A. Notice that bit addresses 08, 09, 18, 19, 28, and 29 are not allowed. The value returned to the calculator will be +1.000E+0 if the bit is set and +0.000E+0 if the bit is clear.

Bit#	Bit Address if card in Slot #		
	Slot 0	Slot 1	Slot 2
0	0	10	20
1	1	11	21
2	2	12	22
3	3	13	23
4	4	14	24
5	5	15	25
6	6	16	26
7	7	17	27

Bit Value Address Table

Look again at the example given in the bit value chart earlier. If you execute a "BIT17" (for bit 7 in slot 1) followed by an ENTER statement, the calculator will show a value of +1.000E+0. The following program shows how this can be done. If you execute a "BIT12" (bit 2 in slot 1), followed by an ENTER statement, the calculator will return with +0.000E+0 because the bit is clear.

```

10 ! Bit example
20 OUTPUT 901 ;"BIT17"
30 ENTER 901 ; AS
40 DISP AS
50 END

```

Advanced Commands

The advanced instruction set provides added capabilities for the input port. The six commands in this group are; MHia, MLia, MNia, AN[abc], and XR[abc]. Three of these; MH, ML, and MN, may be used to cause an interrupt (SRQ) to signal the controller.

MHx and MLx

The MHx (**M**onitor **H**igh) command monitors the bit specified by "x". Refer to the bit value address table shown earlier to determine the value of "x". When bit "x" becomes set, the EVENT OCCURRED bit in the Status Register (bit 3) likewise becomes set. An interrupt (SRQ) is generated to flag the controller. Refer to chapter 3 under the topic of SPOLL for more information on SRQ and the Status Register. When the 3421A is addressed to talk it will output a decimal number equal to the sum of the values of the bits that were set at the time of the interrupt (similar to a REDi command). The MLx (**M**onitor **L**ow) performs the same way except that SRQ is generated when the specified bit becomes cleared.

MNi

The MNi command is very unique in that it allows you to specify combinations of set and cleared bits to cause an interrupt. MNi uses the XR[abc], AN[abc] commands to extract only the bits you want to look at. XR[abc] sets up what is called an Exclusive Or mask. It allows you to specify which bits are to be set to cause the interrupt. The AND mask is set up by the AN[abc] command and allows you to specify which bits you want to monitor. In the discussion to follow, it will help to remember these two points:

1. The AN command determines which bits you want to look at.
2. The XR command determines which bits are to be set to cause the interrupt.

The MNi command reads the input bits from the card in slot i, performs a logical Exclusive-OR with the XOR mask, takes the result and performs a logical AND with the AND mask. If the final result equals 0, the EVENT OCCURRED bit in the Status Register (bit 3) will be set. If the Status Register bit 3 is not masked, an SRQ interrupt will be generated.

The XR[abc] command sets the logical Exclusive-OR mask for the MN command. The value [abc] represents a decimal number from 0 to 255. Refer to the bit value chart shown earlier in this chapter. The Exclusive Or function performed by the MN command is done on a bit-by-bit basis. The following Truth Table and example show how the XR mask works.

Logical XOR Truth Table

Input Bit	Mask Bit	XOR Result	Example
0	0	0	1 0 1 0 1 1 0 0 - XR mask
0	1	1	0 1 1 1 0 0 1 0 - Input Bits
1	0	1	- - - - -
1	1	0	1 1 0 1 1 1 1 0 - Logical XOR Result

In the [abc] value, if a or ab are not received, leading zeros are inserted. In other words, XR5 is the same as XR005. If no number is received, the mask is set to all 0's.

The AN[abc] command sets the AND mask. The value [abc] represents a decimal number between 0 and 255. Refer to the bit value chart given earlier in this chapter. The AND performed by the MN command is done on a bit by bit basis. For example, if you send AN173 this would represent a binary AND mask of 10101101

(bit7-bit0). Suppose the digital inputs were 10011000. The logical AND would be 10001000. This is shown in the following illustration.

Logical AND Truth Table			Example
Input Bit	Mask Bit	AND Result	
0	0	0	1 0 1 0 1 1 0 1 - AN mask
0	1	0	1 0 0 1 1 0 0 0 - Input Bits
1	0	0	- - - - -
1	1	1	1 0 0 0 1 0 0 0 - Logical AND

As with the XR command, if a or ab are not received, leading zeros are inserted. In other words, AN5 is the same as AN005. If no number is received, the mask is set to all 0's.

Output Port Commands

The three STANDARD commands most commonly used with the output port are CLSx, OPNx, and WRTi,[abc]. The first two, CLSx and OPNx, allow control of individual bits in the port. WRTi, on the other hand, permits one command to control all 8 bits. In the discussion to follow, the word "set" means that the bit is high and "clear" means the bit is low.

CLS

The command CLSx (CLOse Single bit x) "sets" the bit specified by x. OPNx performs just the opposite task, it clears the bit specified by x. The table below shows the bit address chart for the three different slots.

Bit#	Bit Address if card in slot#		
	Slot 0	Slot 1	Slot 2
0	0	10	20
1	1	11	21
2	2	12	22
3	3	13	23
4	4	14	24
5	5	15	25
6	6	16	26
7	7	17	27

If, for example, you have a digital I/O card in slot 1 and you wanted to set bit 5 you would execute CLS15. If you wanted to clear bit 3, execute OPN13.

WRT

To control all bits with one command use the `WRTi[abc]` command. The `i` represents the slot number for the digital I/O card. The value `[abc]` is a decimal number equal to the sum of the values of the bits that you want set. See the bit value chart below. If you wanted to set only bits 3, 4, and 5 and all other bits cleared in slot 1, regardless of their previous condition, execute the command `WRT1,56`. This example is shown below.

Switch Number	7	6	5	4	3	2	1	0
Switch Value If Closed	128	64	32	16	8	4	2	1

Example: $0 + 0 + 32 + 16 + 8 + 0 + 0 + 0 = 56$

Advanced Commands

The advanced instruction set provides added capabilities when using the output port. The two instructions from this set are `DSi,[abc]`, and `DCi,[abc]`.

DS


The Digital SET command, `DSi,[abc]`, sets the output port bits on the card specified by "`i`" to the configuration specified by the decimal number `[abc]`. All bits not specified by `[abc]` remain unchanged. The value `[abc]` represents the sum of the values of the bits you wish to set. Use the bit value chart shown previously to determine the value `[abc]`. For example, if you want bits 1 and 5 set in slot 2 and all other bits to remain in their previous state, execute the command `DS2,34`.

DC

The Digital Clear command `DCi,[abc]`, clears the bits specified in the same manner as the Digital Set command set bits.


Theory of Operation

This simplified theory of operation is designed to help you understand the operation of the 8-bit input/output ports. Also, should problems occur in the input/output port, this information can assist you in troubleshooting. The following block diagram illustrates the major blocks of the ports.

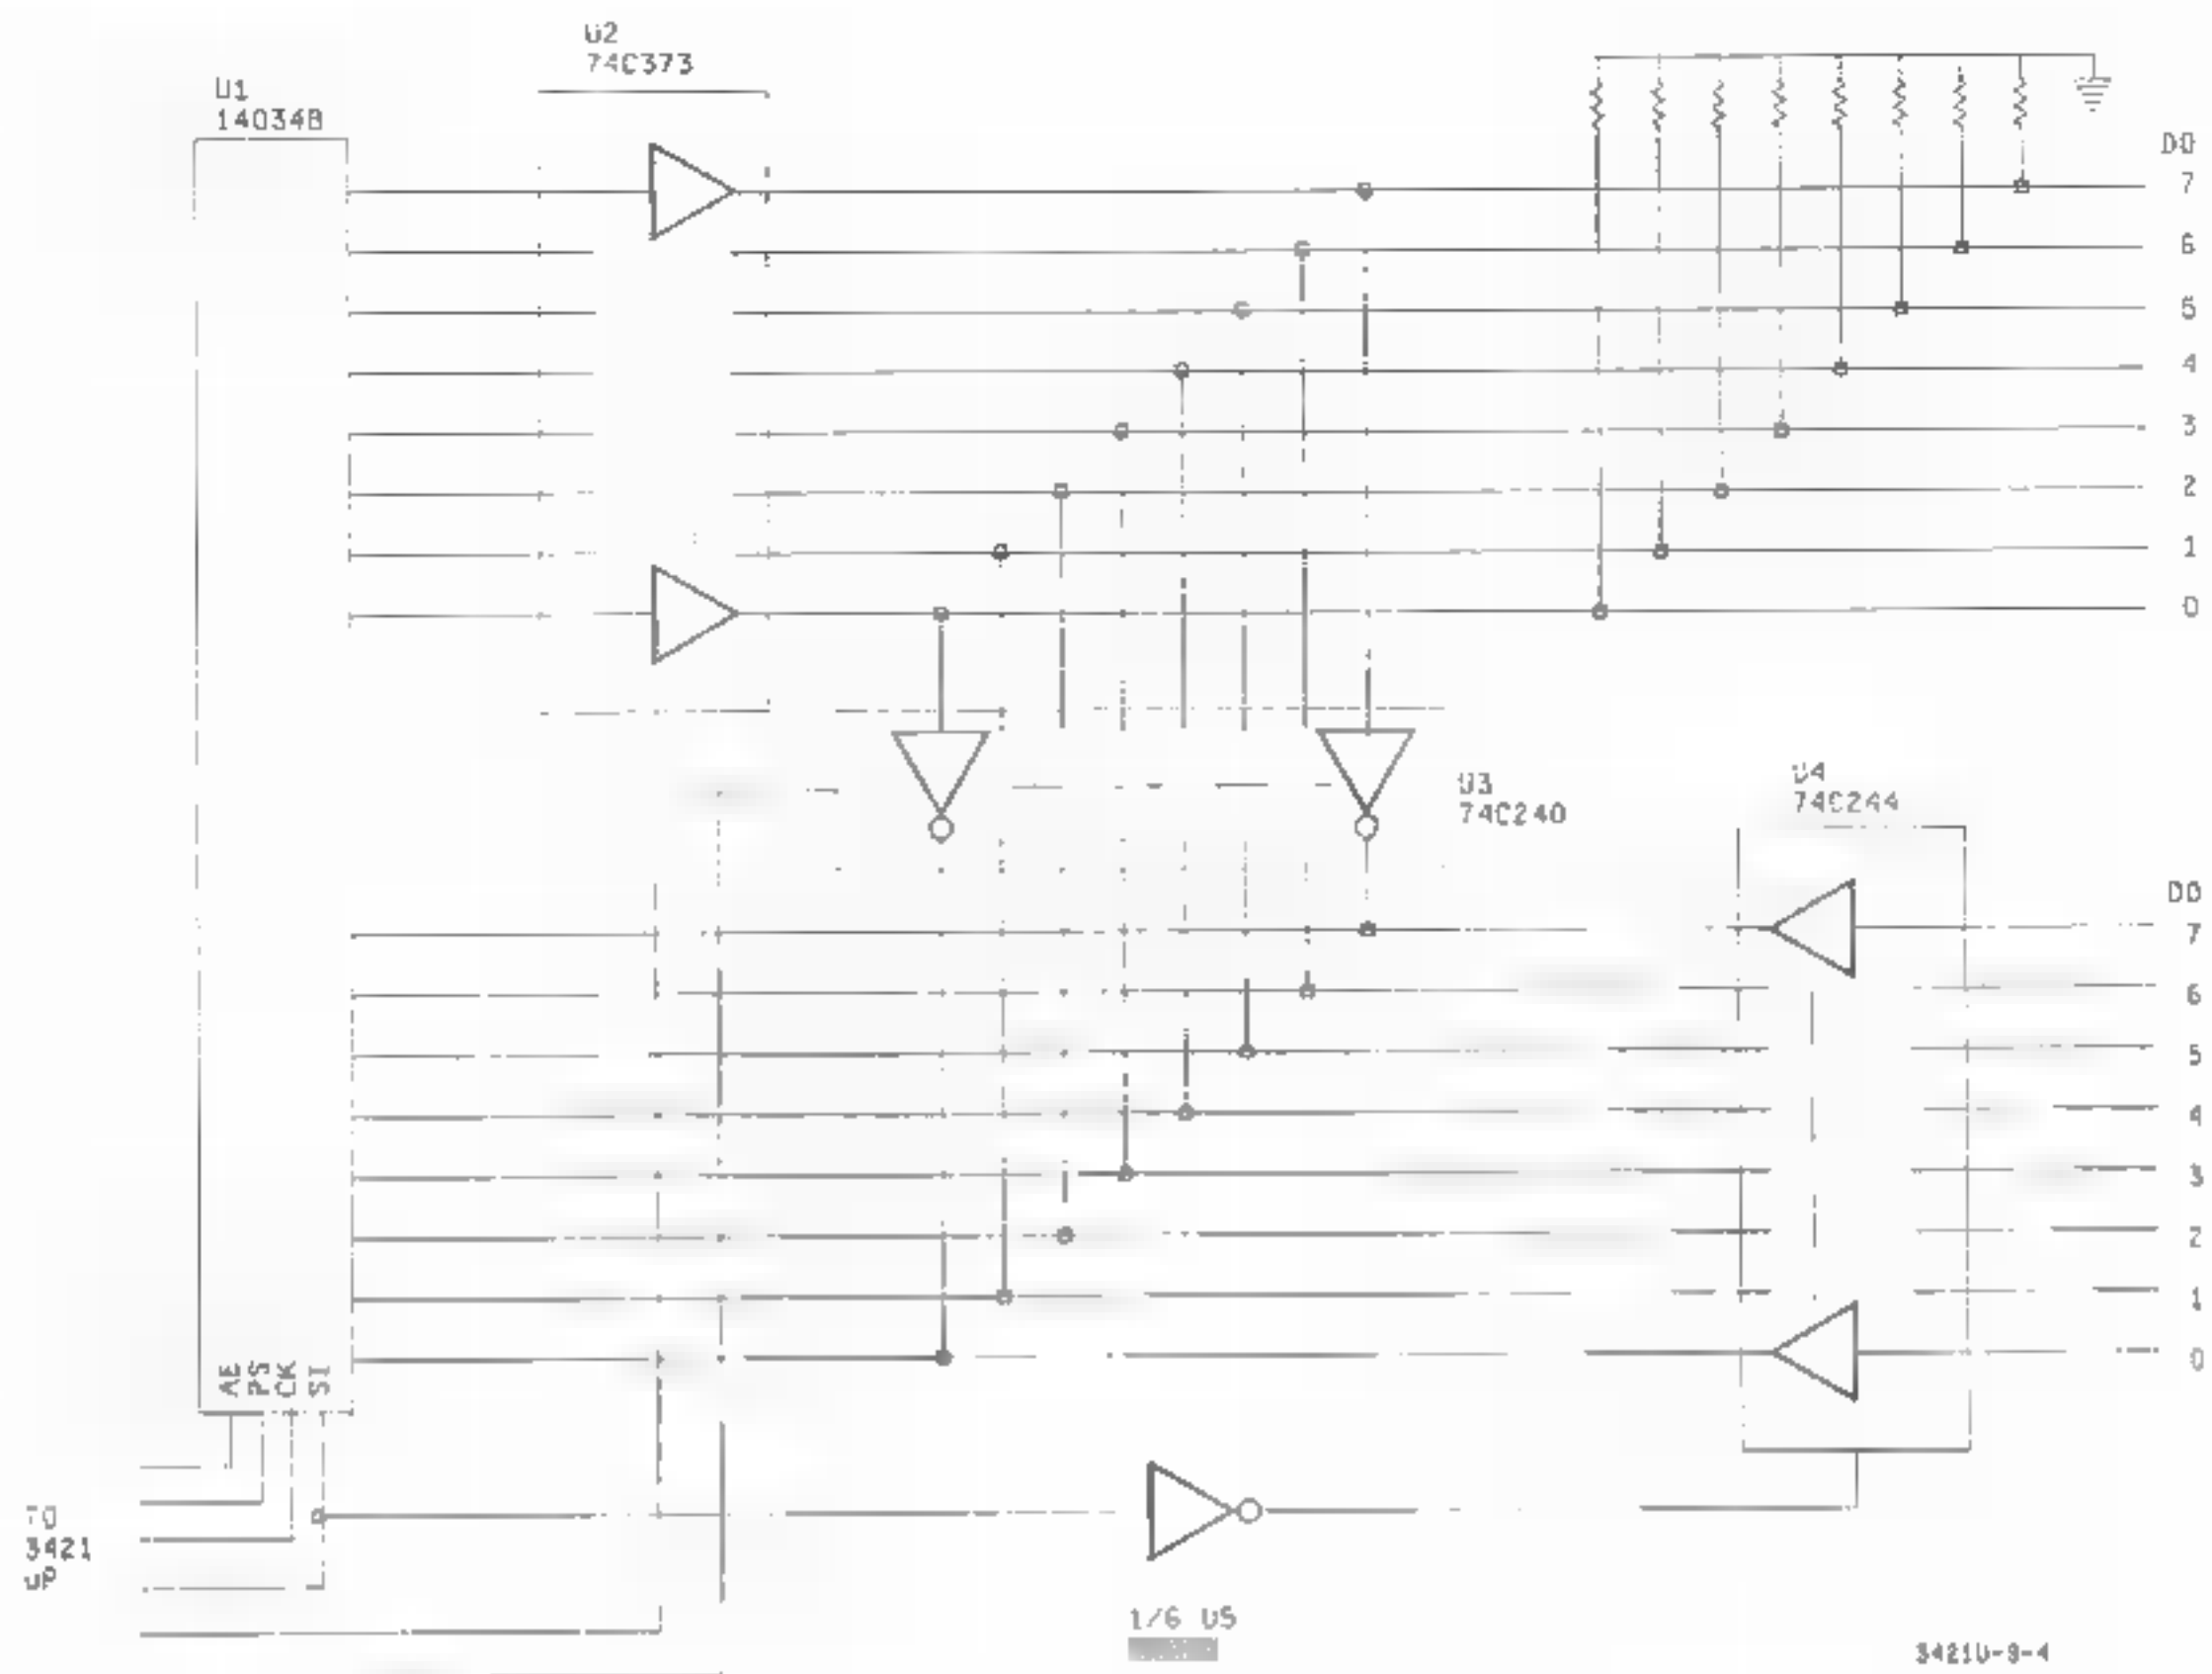


Communication between the 3421A internal microprocessor and the 44464A breadboard is carried on serially. U1 is an 8-bit bidirectional parallel/serial input/output bus register. This means that information from the input port, through U4, is converted to serial information by U1 and sent to the 3421A processor. Likewise, serial information from the processor is sent to U1, converted to parallel, and output through U2. U3 is provided to read back the state of the output port.

OUTPUT
DISABLE

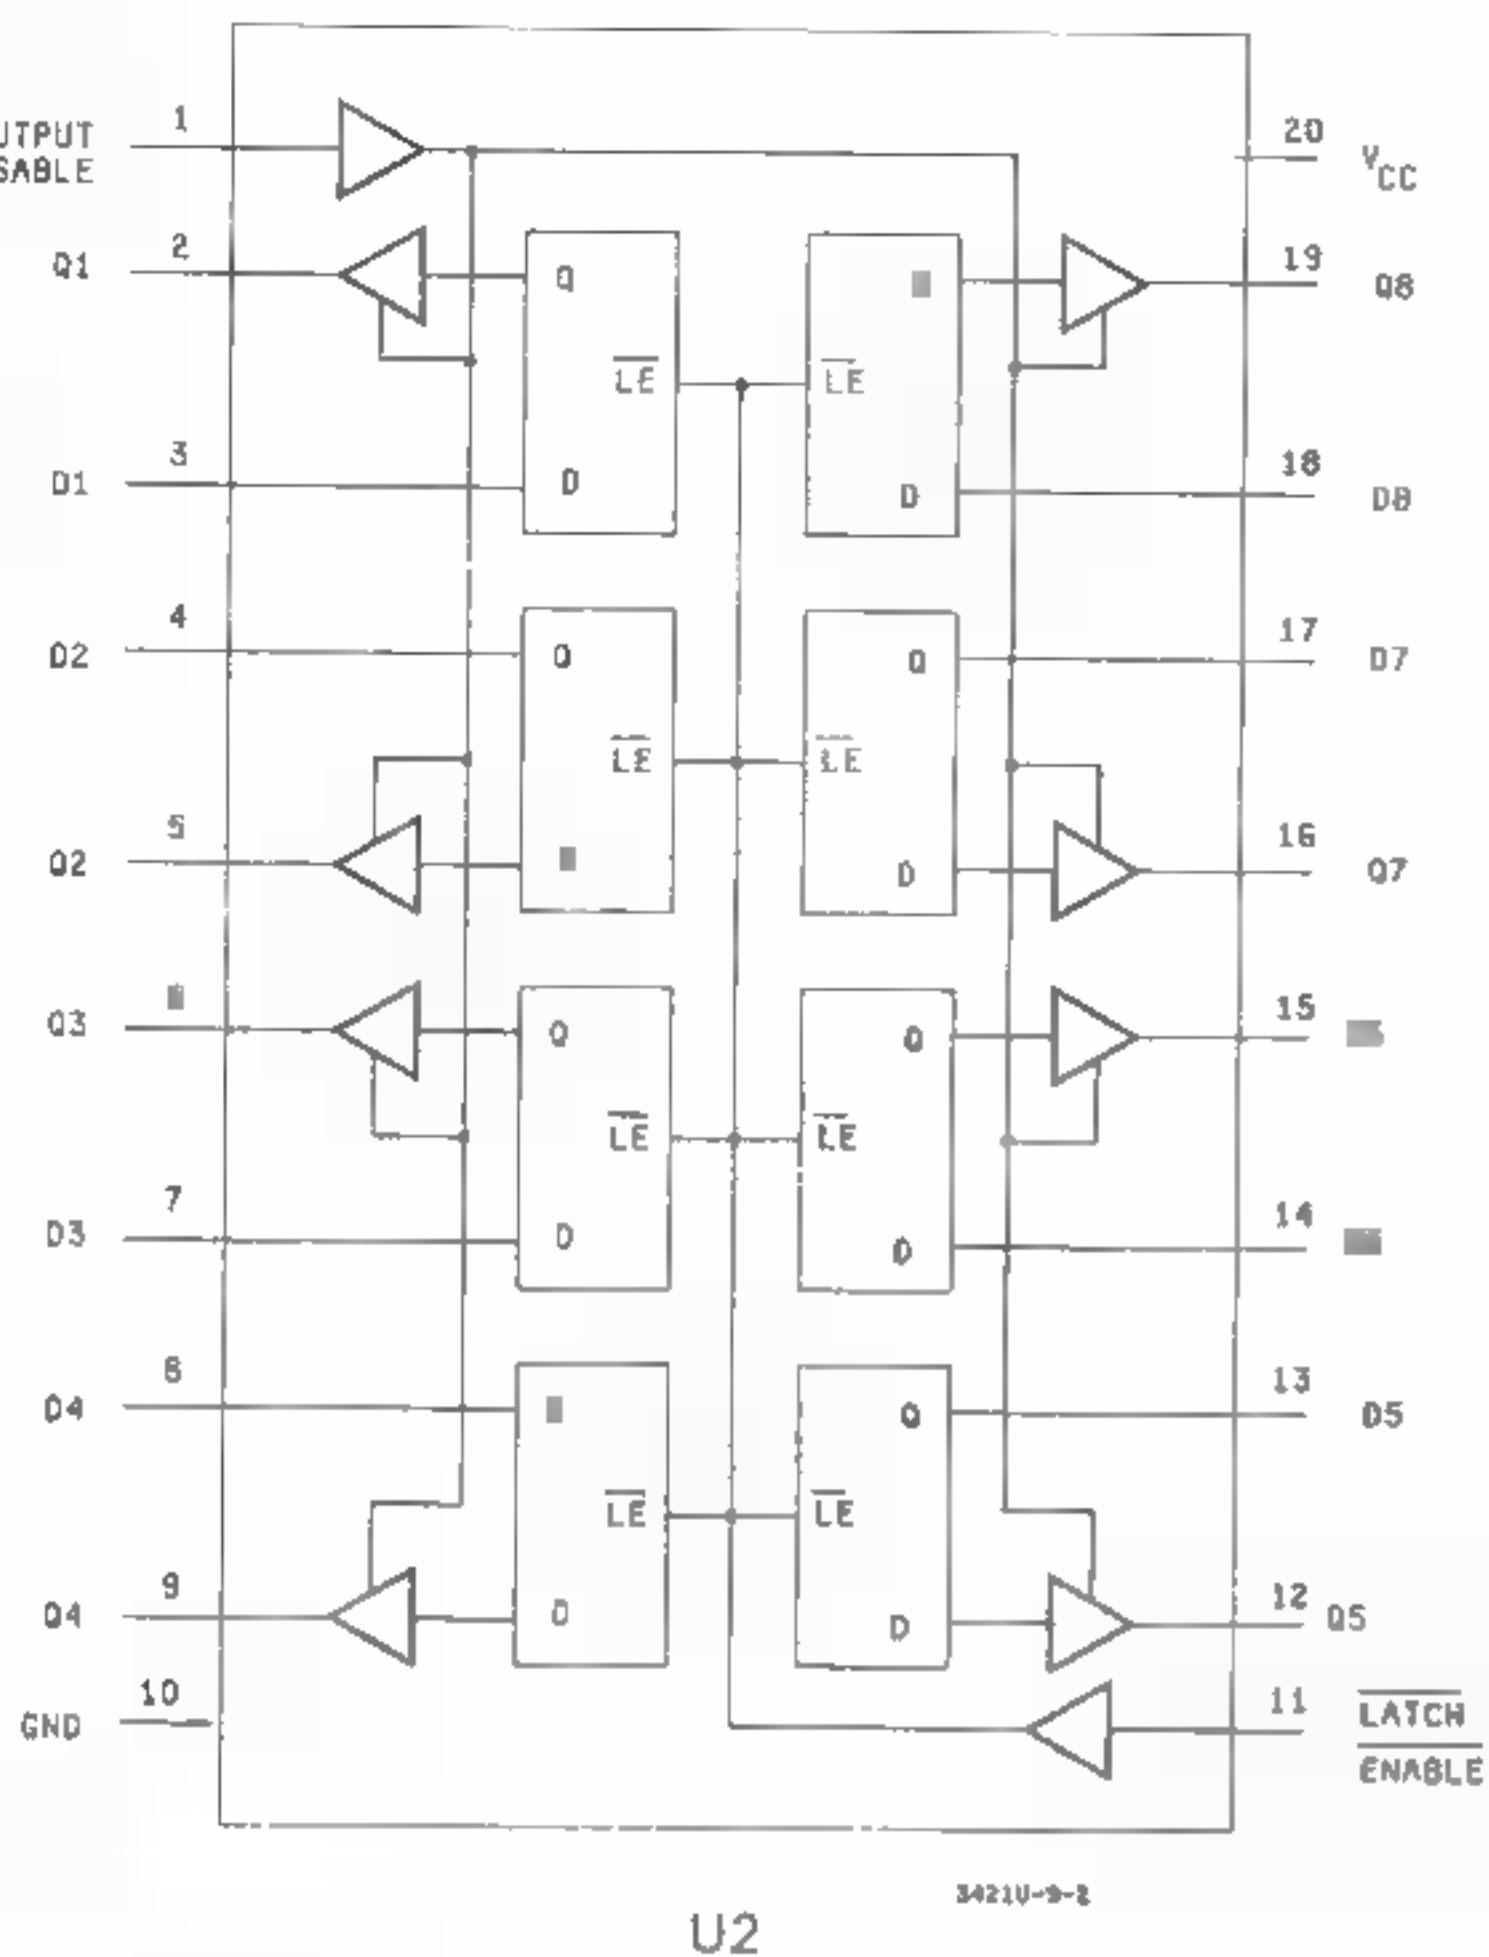


U2

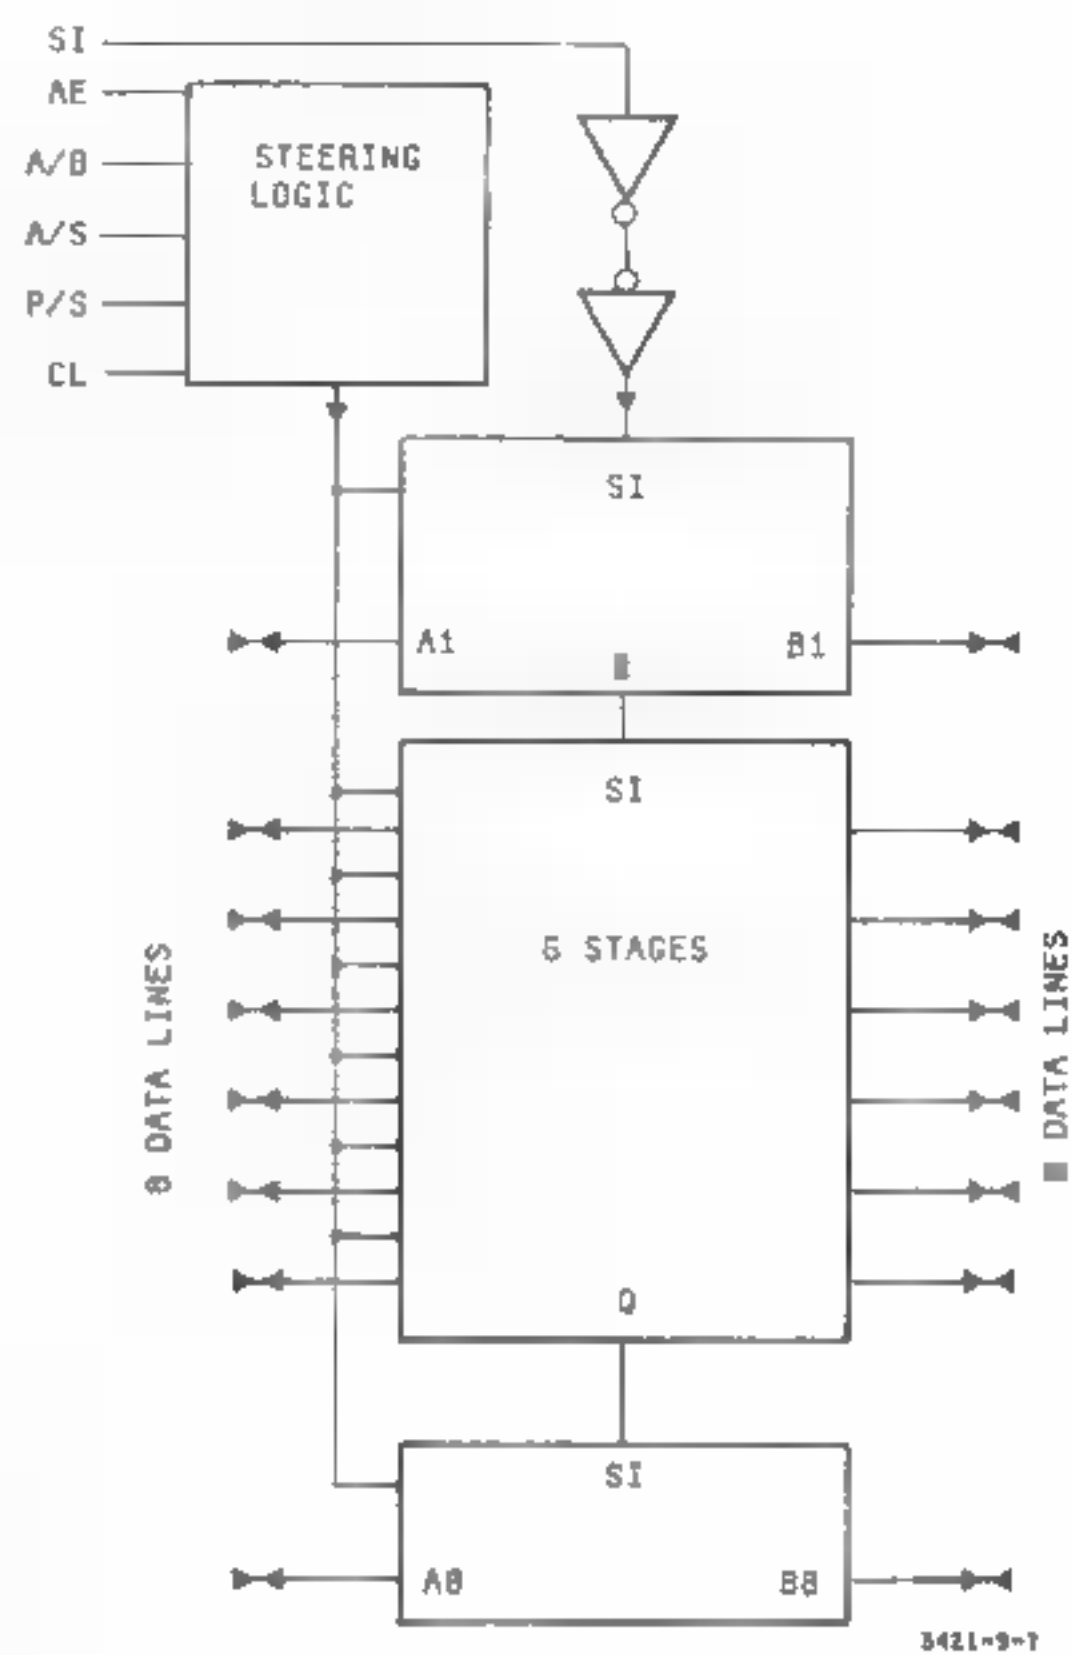


U1

TOP VIEW

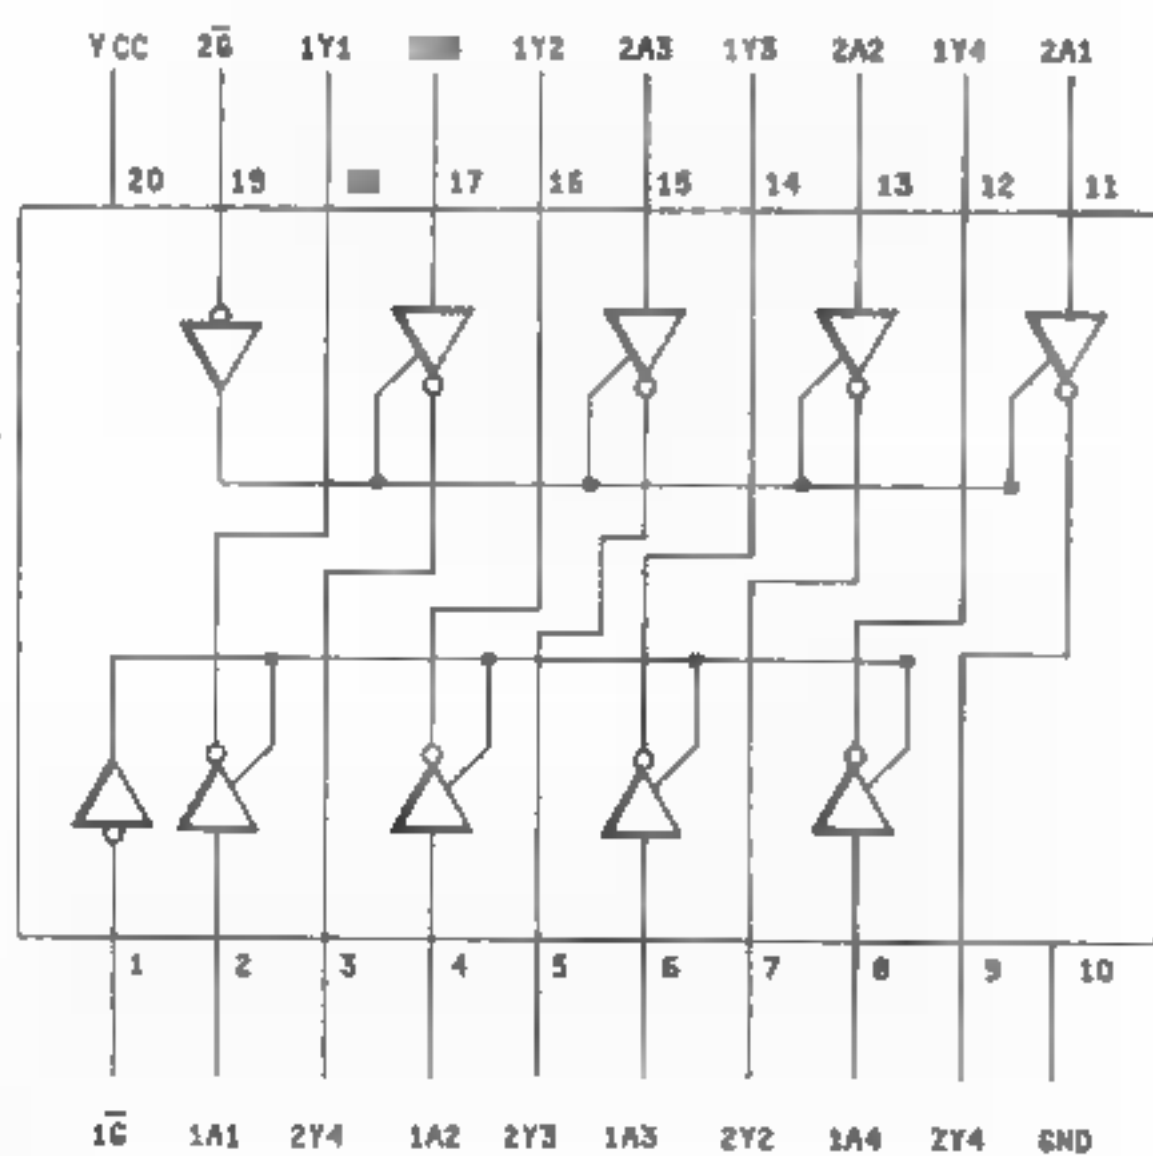



U3


TOP VIEW

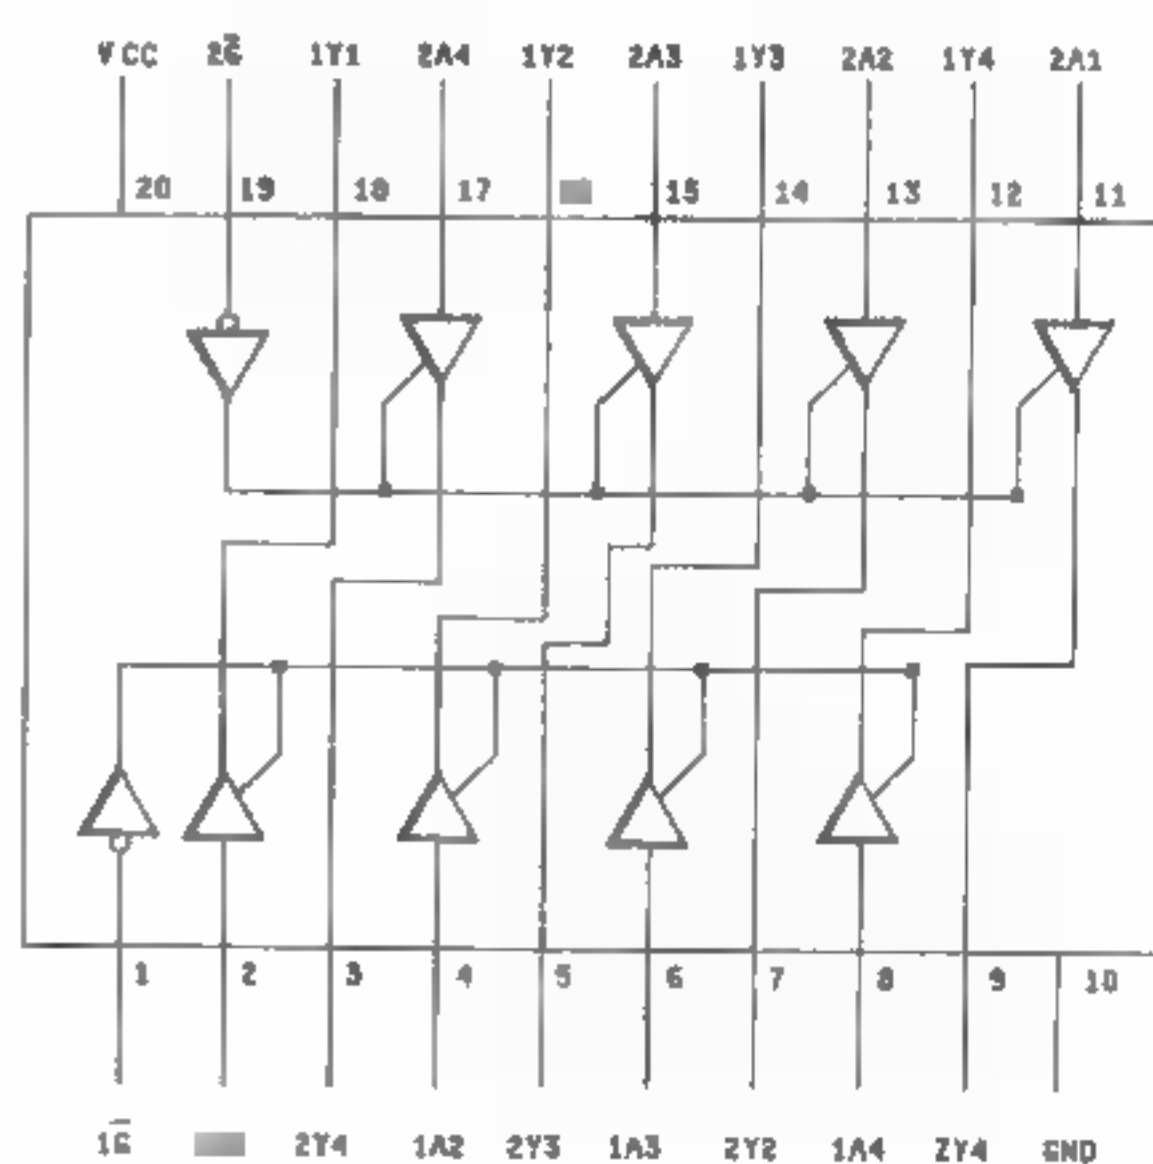

U4

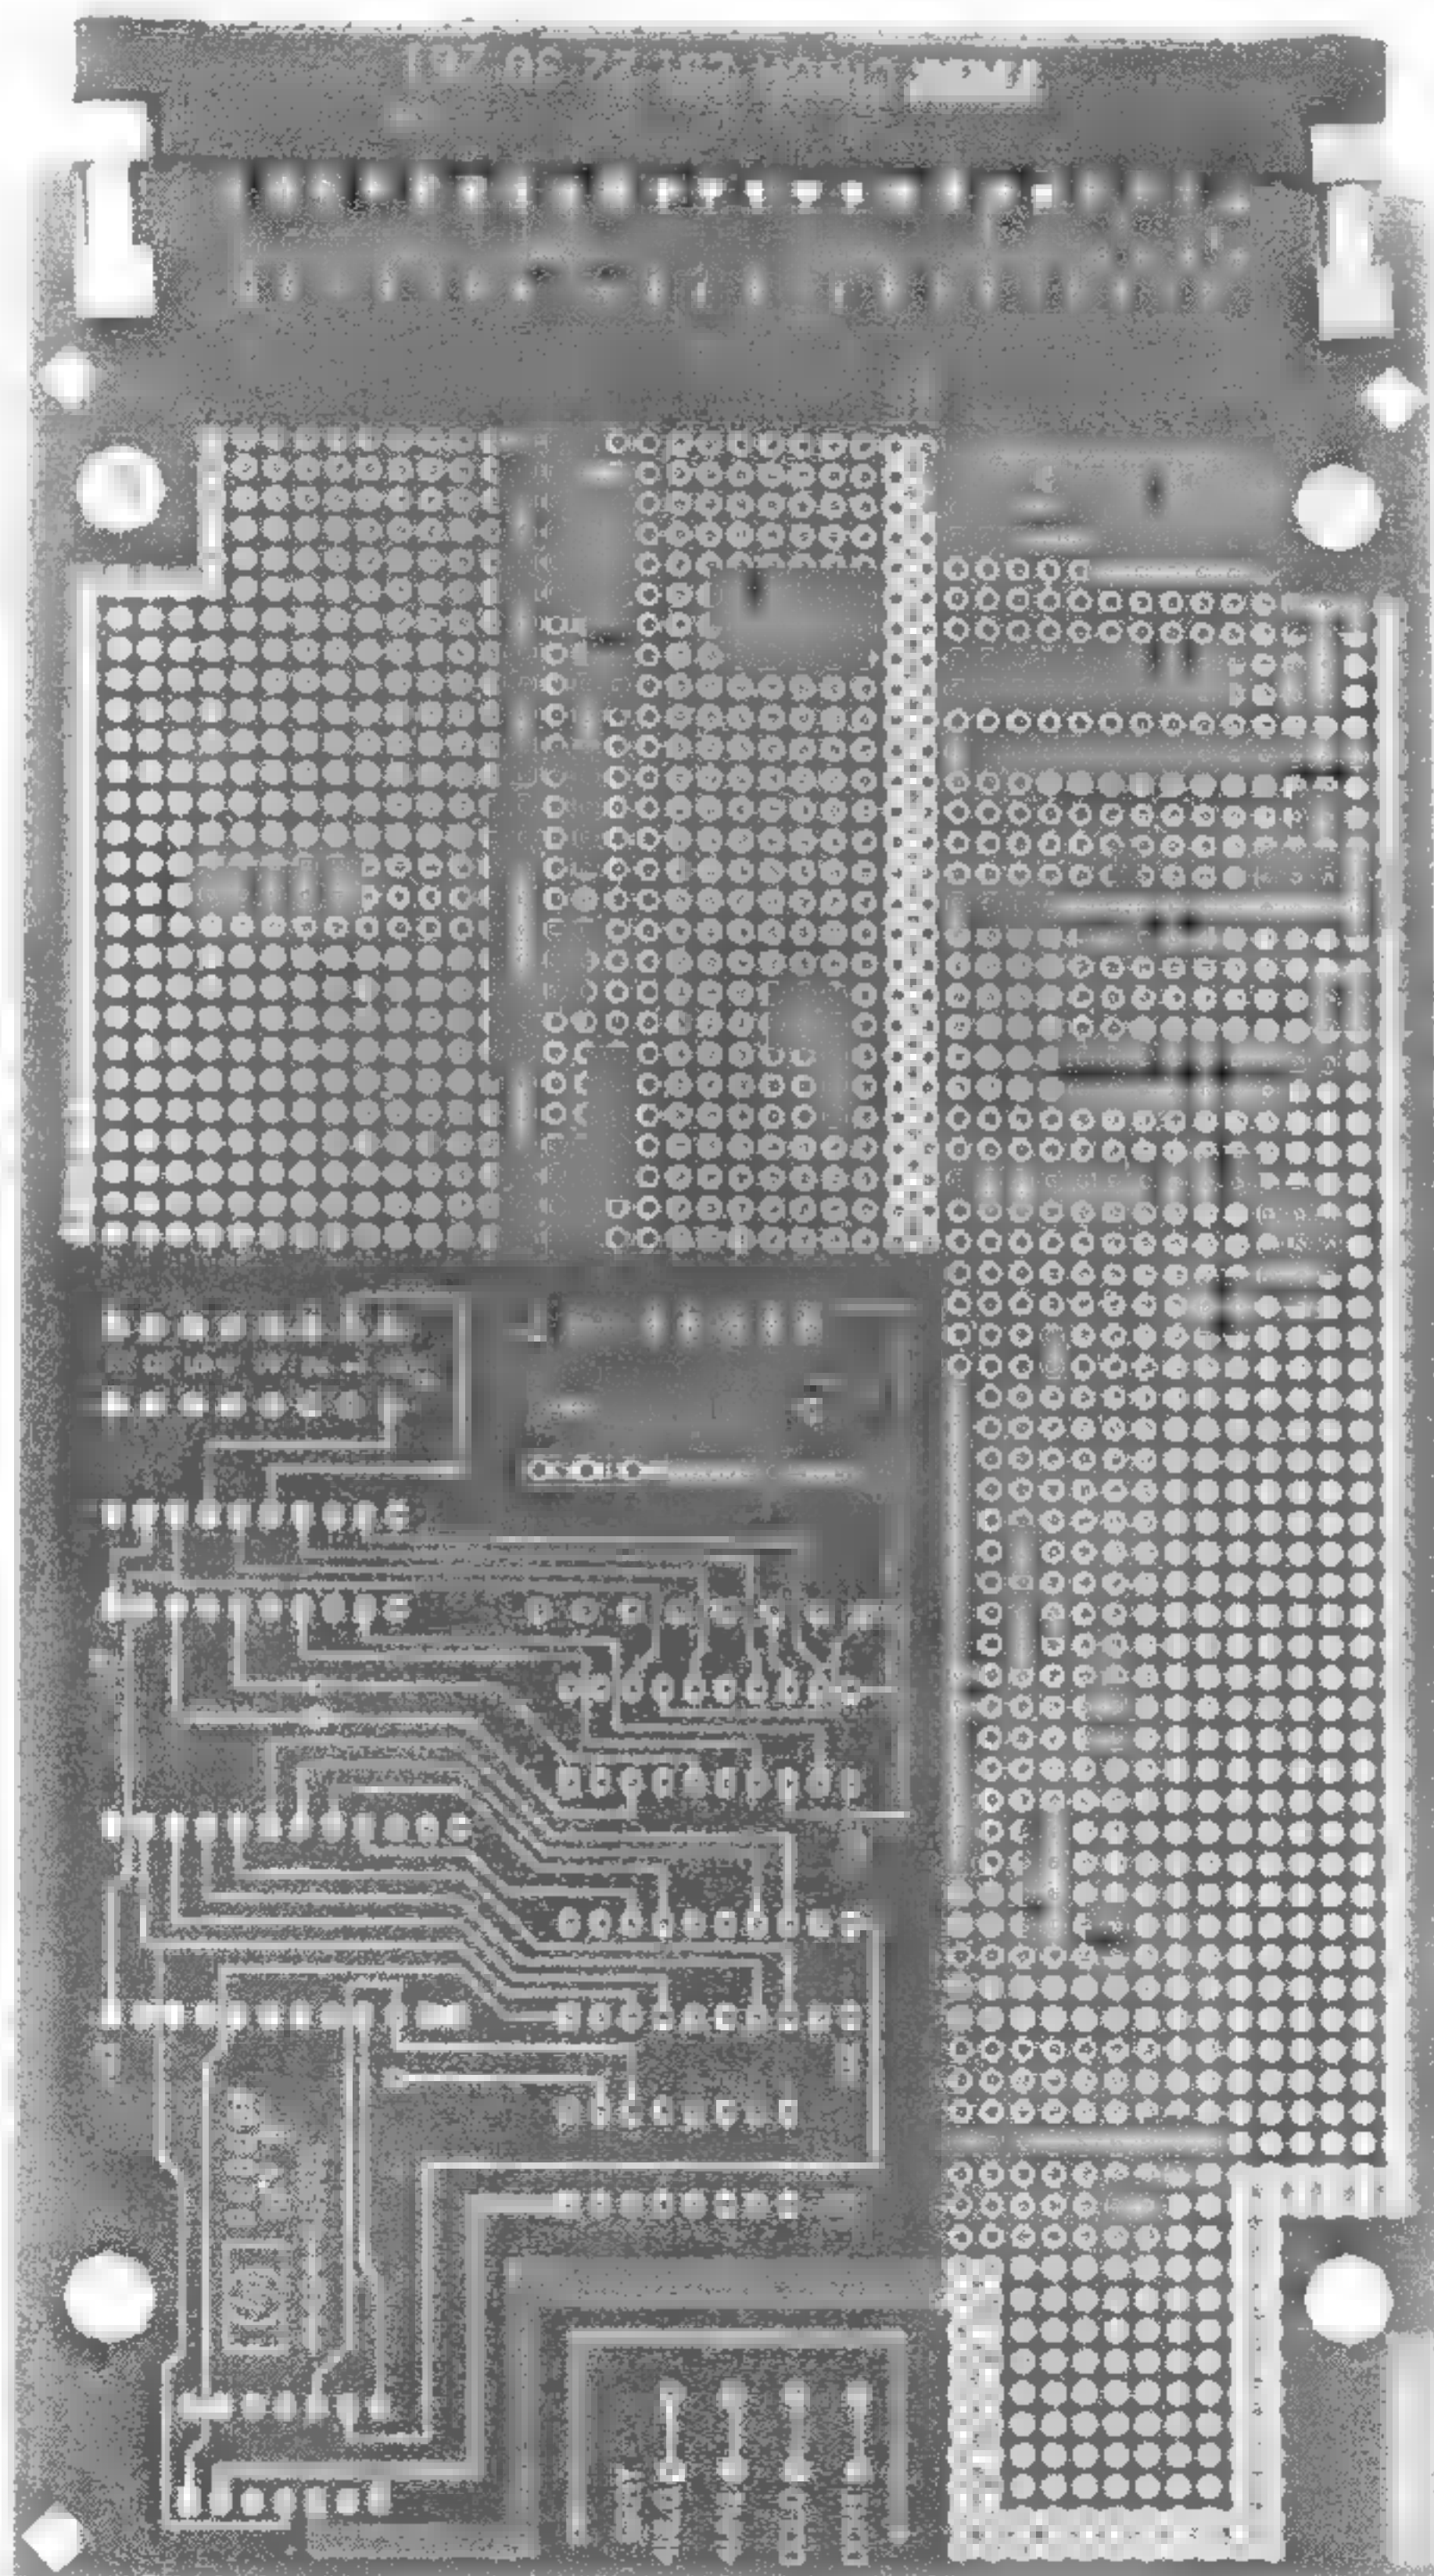

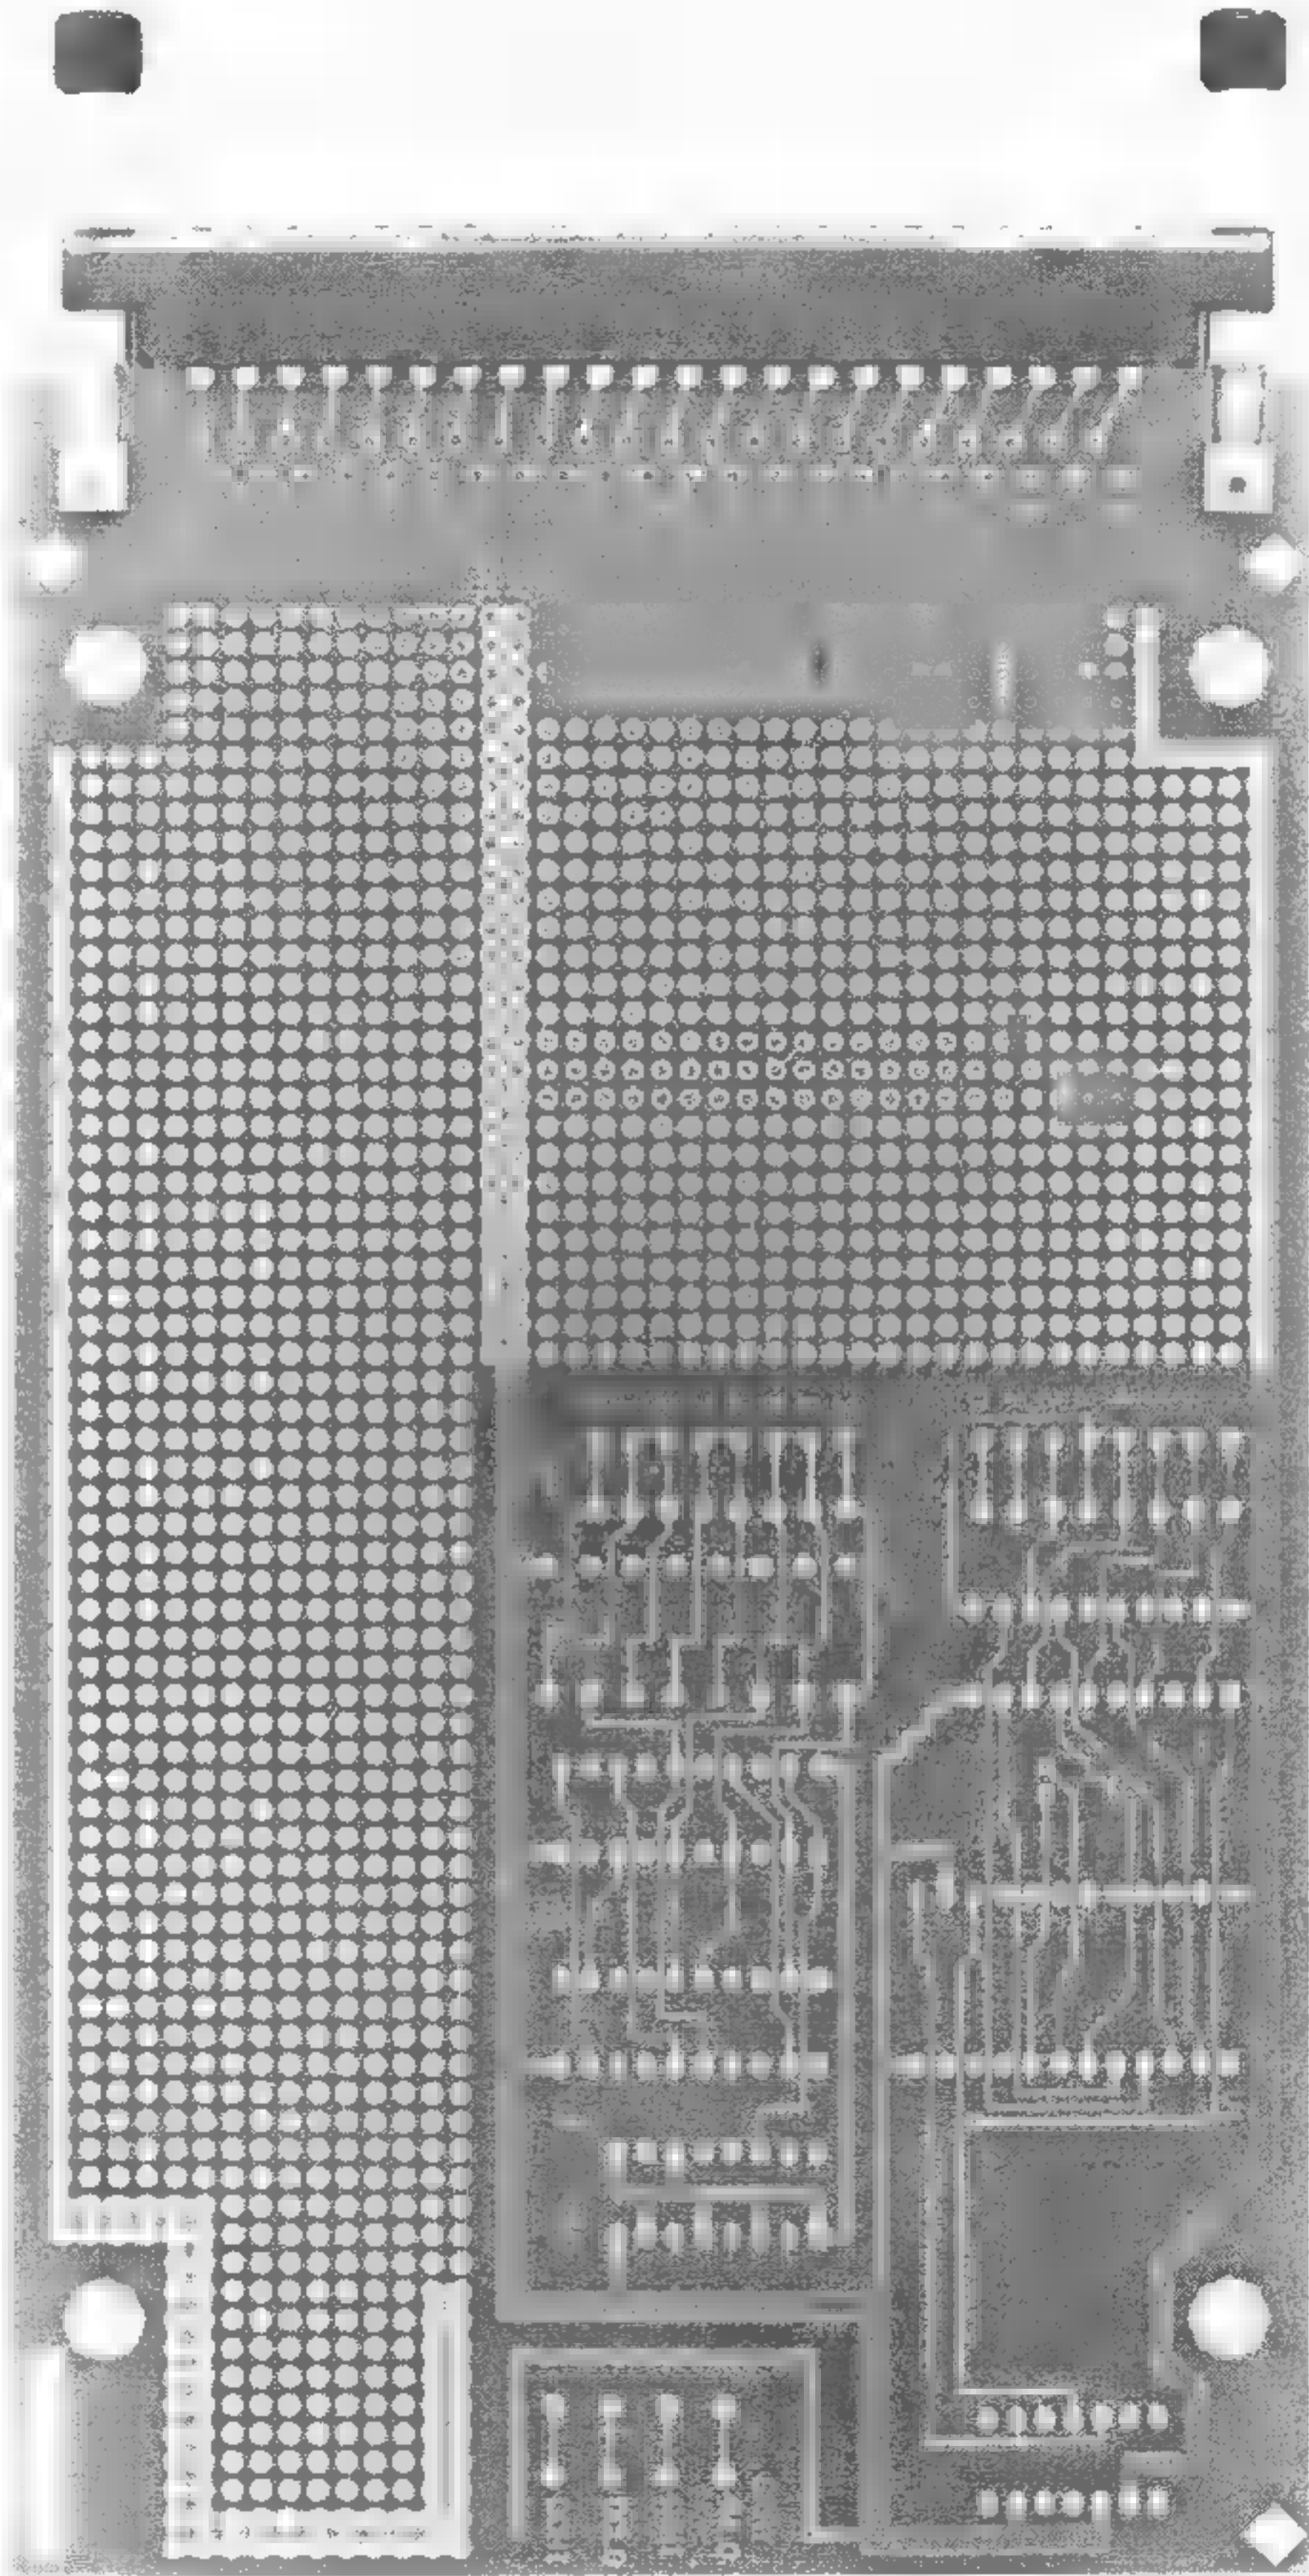

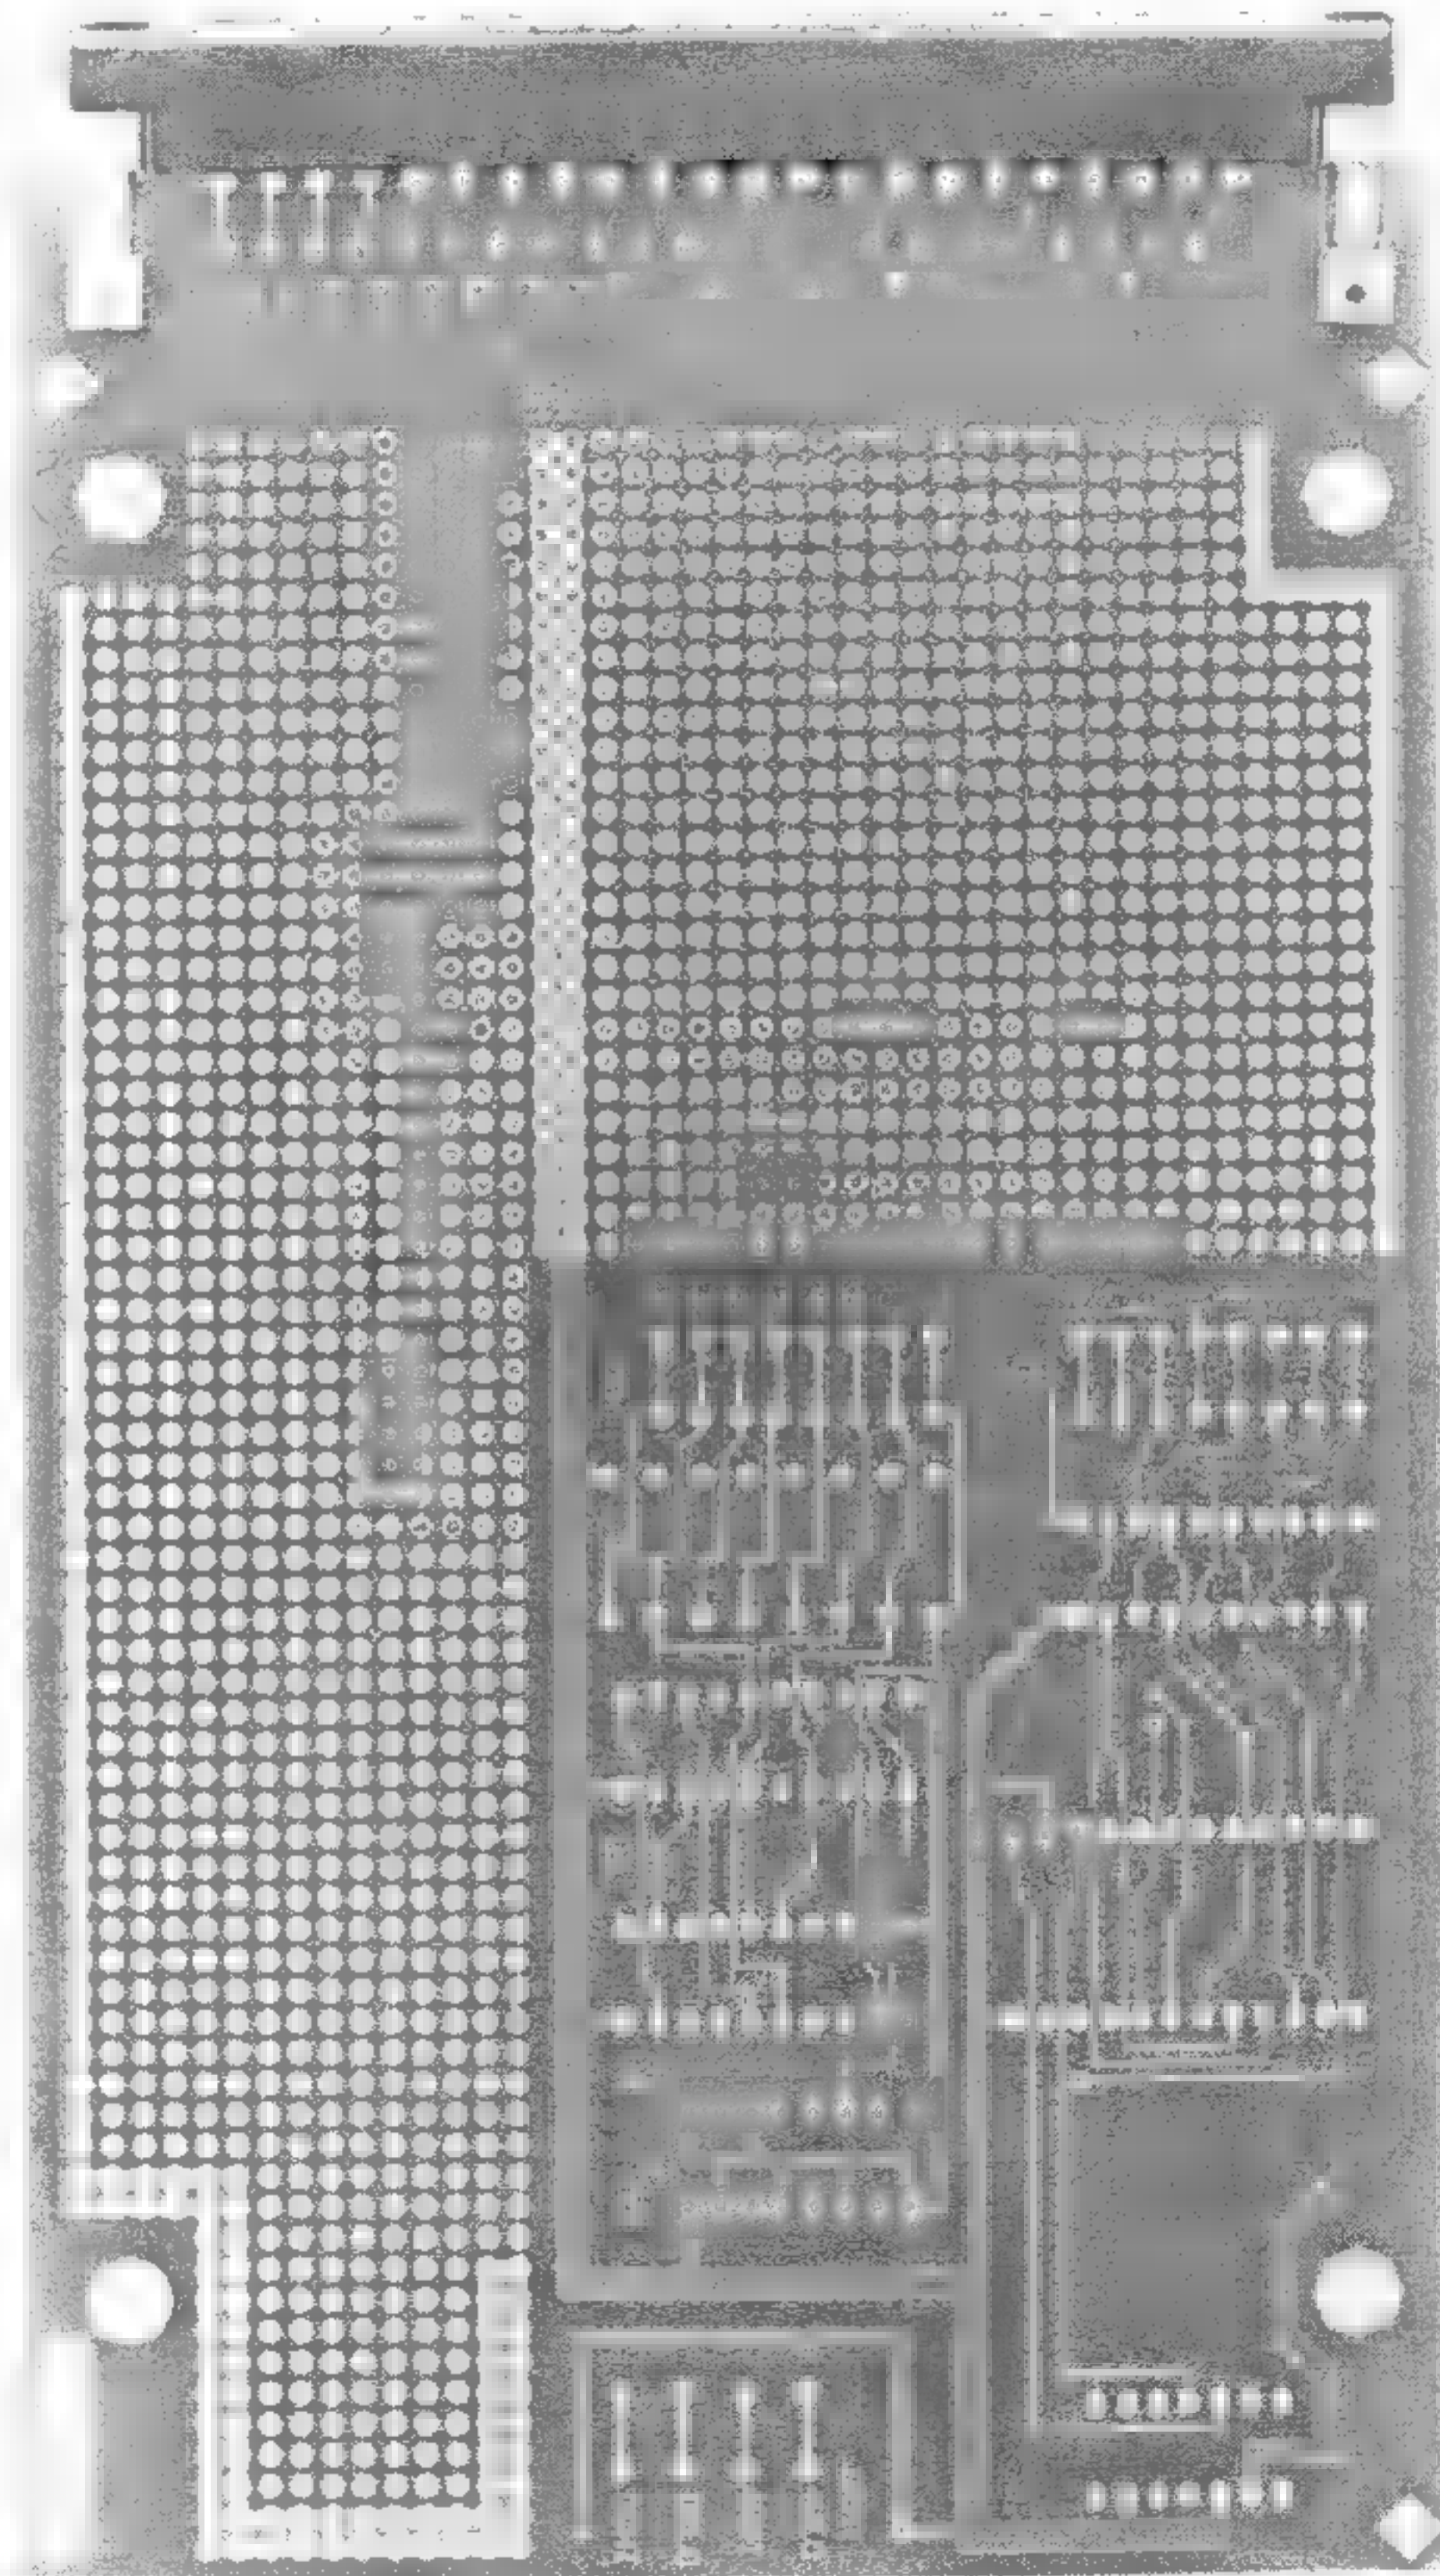

Appendix A

Documentation Worksheet

Introduction

It has long been recognized that failure to document a measurement system, or documenting the system after its development, results in considerable extra effort. This is especially true when attempting to diagnose system failures. It can be very frustrating, for example, to suspect a defective thermocouple, and because of inadequate documentation, replace the wrong one. This is not only time consuming but costly. This appendix presents a simple method of documenting your measurement system to help alleviate these problems and to help in the setup procedure. Only two worksheets are provided, therefore you may want to tear one out and duplicate it for future use.

Worksheets

The Documentation Worksheets presented here were designed to be filled out while you are wiring transducers to the 3421A. Later, they can be used as a guide when writing programs and testing. Instructions for completing the worksheets are found on the backside of the worksheets.

These worksheets serve only as a guide for your system. That is, they may not be applicable to all situations and you may need to modify them for your individual needs. Figure A1 shows several examples of how worksheets may be filled out.

Date/Time: 8/11/82		System: THERMAL		Test:				
Slot/Card Type	Card Terminals	Channel	Type of Transducer	Function	Values			Comments Location, Action
					Min	Typ	Max	
Slot 0 Relay	3	3	T-1198 Thermocouple	°C		23.2°C		Grid Location: A-5
"	4	4	"	"		25.6°C		" " A-6
"	5	5	"	"		25.8°C		" " A-2
"	6	6	"	"		27.3°C		" " A-3
"	8	8	225232 2 wire Thermocouple	°C		279.18 °C		279.5°C Computer Controls Resistance to temperature
Slot 1 Relay	2	12		AC Line Voltage		12.2VAC		Multiply measured value by 10. This channel uses 10:1 divider.
"	3	13			13.0 VDC	19.79 VDC	25.0 VDC	Alarm sounds if min or max limits exceeded.
"	4	14			3.25 VDC	3.718 VDC	3.60 VDC	Alarm sounds if min or max limits exceeded.
Slot 1 Relay	9	10	(Actuator) Alarm					Sounds if channel 10 out of limits.
"	1	11	"					Sounds if channel 11 out of limits.
Slot 2 Digital		20	switch					Radial arm position switch "O" closed in position.
"		21	switch					" Gate Closed.

Figure A-1. Worksheet Examples

Event Log

In addition to the Documentation Worksheets, you may want to maintain an Event Log. Types of Event Log entries include changes in the setup, when and why the changes were made, transducer failures and any circumstances surrounding their failure, and changes in a process (e.g., use of a different brand of detergent in a washer). Each entry should include at least the following four items:

1. What the event is and the extent of change.
2. Where the event took place or was observed.
3. When the occurrence happened or was noticed.
4. The fix - if the event was a failure.

An example of an Event Log entry would be:

Power failure 10:43 a.m. 10/22

Changed T22 type K thermocouple 11:05 a.m. 10/22

Oven #3 overheated to 1700°C 3:48 p.m.

T22 appears to be bad reading 4:10 p.m. 10/22

From the Event Log, apparently T22 was change to a type K thermocouple (it was a type J, see Worksheet example), but the change was not entered into the program. While most problems are not solved this easily, the Event Log can provide valuable insight into seemingly unexplained changes in a system.

Another piece of documentation you may find useful is ■ single page cover sheet to identify the documentation package. This cover sheet might incorporate linearization equations, transducer manufacturers and replacement part numbers, wire batch numbers, and any other pertinent information.

DOCUMENTATION WORKSHEET

INSTRUCTIONS

DATE/TIME: The date and/or time of the original setup should be entered here. Dates and/or times of minor alterations should be made in the left hand margin next to the addition or alteration.

SYSTEM NAME: The setup name is used to identify a particular measurement system. This is especially important when more than one system is in use.

TEST AREA: This entry should be an overall description of where the system is being used or what it is measuring.

SLOT/CARD TYPE: Refer to chapters 2, 5, and 6 of this manual for a discussion of the 3421A slots. The slot number must be known and whether the slot contains an 8-bit Digital I/O card or ■ 10 channel multiplexer card.

CARD TERMINALS: Record the terminal block connector numbers for each transducer. Refer to chapters 5 and 6 of this manual for discussions on card terminals. As a diagnostic aid it is important to record the terminal connections.

CHANNEL: This entry is the channel number that you specify in your program. Refer to chapters 5 and 6 for more information.

TRANSDUCER TYPE: Indicate the type of transducer used on that channel. For example, J type thermocouple, pressure transducer, etc. You may also want to indicate the replacement part number for that transducer.

UNITS/LINEARIZATION: Enter the units of the measurement and any linearization equations. Examples include pressure, liquid flow rate, FT/Lbs of torque, $^{\circ}\text{F} = 32.0 + 1.8^{\circ}\text{C}$, etc.

VALUES/LIMITS: List a typical value for that measurement and the measurement units. Some tests require that an action take place if certain limits are exceeded. The values for these limits should be entered under MAX. and MIN.

COMMENTS, ACTIONS, ETC.: This entry should include anything not already specified that might be appropriate to the measurement. Possible entries include the specific location of the transducer, actions taken if limits are exceeded, etc.

DOCUMENTATION WORKSHEET

INSTRUCTIONS

DATE/TIME: The date and/or time of the original setup should be entered here. Dates and/or times of minor alterations should be made in the left hand margin next to the addition or alteration.

SYSTEM NAME: The setup name is used to identify a particular measurement system. This is especially important when more than one system is in use.

TEST AREA: This entry should be an overall description of where the system is being used or what it is measuring.

SLOT/CARD TYPE: Refer to chapters 2, 5, and 6 of this manual for a discussion of the 3421A slots. The slot number must be known and whether the slot contains an 8-bit Digital I/O card or ■ 10 channel multiplexer card.

CARD TERMINALS: Record the terminal block connector numbers for each transducer. Refer to chapters 5 and 6 of this manual for discussions on card terminals. As a diagnostic aid it is important to record the terminal connections.

CHANNEL: This entry is the channel number that you specify in your program. Refer to chapters 5 and 6 for more information.

TRANSDUCER TYPE: Indicate the type of transducer used on that channel. For example, J type thermocouple, pressure transducer, etc. You may also want to indicate the replacement part number for that transducer.

UNITS/LINEARIZATION: Enter the units of the measurement and any linearization equations. Examples include pressure, liquid flow rate, FT/Lbs of torque, $^{\circ}\text{F} = 32.0 + 1.8^{\circ}\text{C}$, etc.

VALUES/LIMITS: List a typical value for that measurement and the measurement units. Some tests require that an action take place if certain limits are exceeded. The values for these limits should be entered under MAX. and MIN.

COMMENTS, ACTIONS, ETC.: This entry should include anything not already specified that might be appropriate to the measurement. Possible entries include the specific location of the transducer, actions taken if limits are exceeded, etc.

Appendix B

HP-IL/HP-IB


Introduction

An interface is the means by which a computer and the 3421A or other instrument communicate. This appendix provides a slightly more detailed overview of the two interfaces used with the 3421A: HP-IL and HP-IB. Although the information in this appendix is controller independent, the information may be 3421A dependent.

General HP-IL Description

Hewlett-Packard Interface Loop (HP-IL) is a two wire interface. As the name implies, devices are connected in a serial loop structure. Data or information, in the form of digital 'frames', travels from one device to the next around the loop.

The interface loop consists of a calculator/computer and up to 29 peripheral devices such as the 3421A. Information is transferred from one device to the next around the loop in one direction. If the information is not intended for ■ particular device (see paragraph on addressing), the device merely passes the information on to the next device. When the information reaches the intended device, that device responds as directed by the information. The information is then sent on to the next device. In this way, the calculator/computer can send information to and receive information from selected devices in the loop according to the device's capabilities. The following figure shows ■ typical interface loop system.

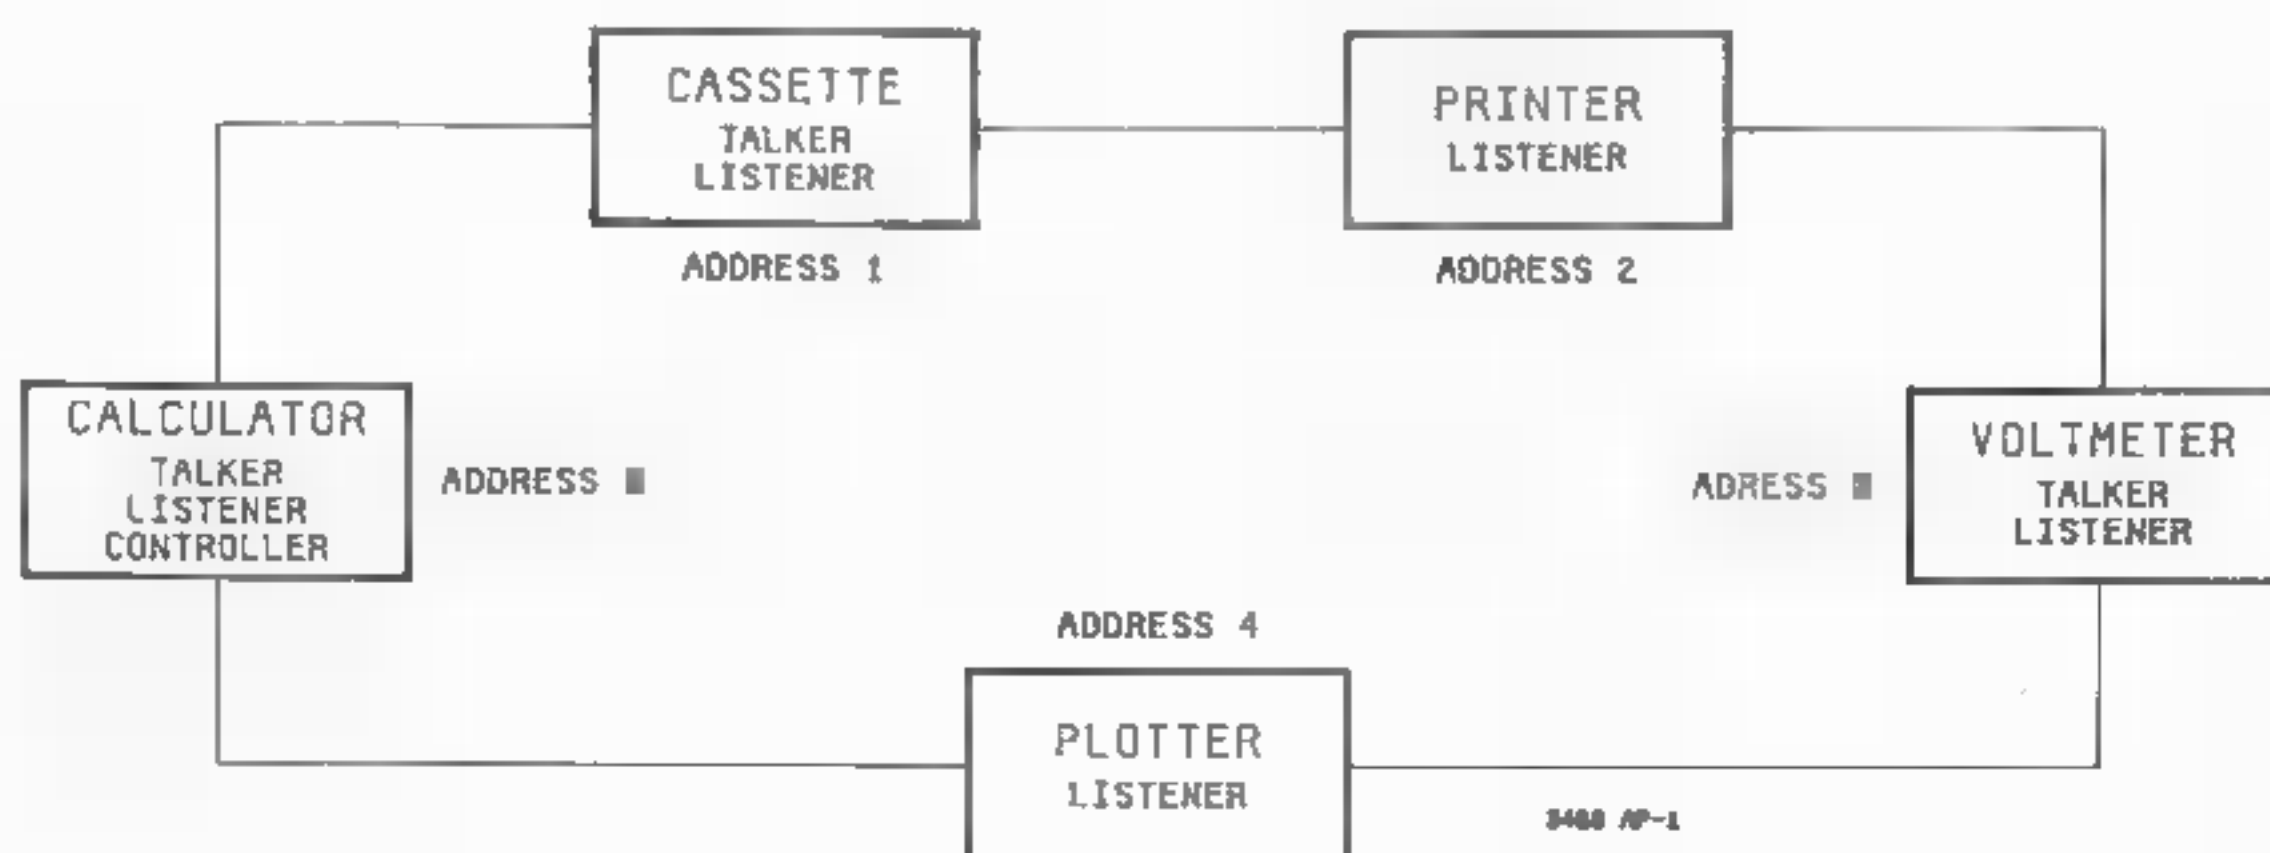

Functional Overview

Each device in the loop will possess one or more of the three basic device capabilities: Controller, Talker, or Listener. The controller, as the name implies, has

the responsibility to control loop activity. The -hp- Model 41C/CV handheld calculator and the -hp- Model 85 desktop computer are examples of devices which serve as controllers. They must, of course, be equipped with the proper interface module. Controllers transmit all commands to other devices in the loop and have Talker and Listener capabilities. The 3421A cannot serve as a controller. Only one device in the loop may serve as a controller.

Talkers are devices that have the ability to send data or information (but not commands) through the loop. Note that a talker will not actually send data or information until told to do so by the controller. The 3421A has Talker capabilities. The 3421A does not have a Talk-only mode as do some instruments.

Listeners are devices with the capability to receive information through the loop. Listeners must remain inactive until told to listen by the controller. The 3421A has Listener capabilities.

Addressing

Each device in the loop is assigned a unique address by the controller. For example, if the 3421A is the only device in the loop, other than the controller, the controller will assign it an address of "1". The address of the controller is always "0". Addresses permit the controller to specify or "select" a particular device in the loop when sending commands. Addresses are assigned to devices sequentially around the loop in the direction of information flow. The first device in the loop after the controller is assigned an address of "1". The second device is assigned an address of "2", and so on around the loop.

Look at the figure of the typical HP-IL system again. Individual devices are shown with their basic capabilities, loop addresses, and direction of information flow.

Technical Overview

Fundamentally, HP-IL is a bit-serial, byte-serial, unidirectional interface. It uses a two wire balanced differential drive system and three level encoding for bits. Messages are sent through the loop as a sequence of eleven bits called a message frame. Commands, such as Listen, are made up of one or more message frames. There are three major classifications of frames: Command, Ready, and Data. Three of the eleven bits are used to specify the type of frame. The remaining eight bits are data bits and specify the particular message within the classification.

HP-IL protocol provides excellent error detection. Commands and data make a complete circuit of the loop. In other words, the originating device must receive the information back after all other devices have received and re-transmitted it. By comparing returning information with what was sent out, errors are automatically detected.

Normally, only one message is in transit around the loop at any given time. In general, when a device sends a message it waits until the message is returned before transmitting the next message. This part of the process is called loop handshaking and guarantees that Talkers and Controllers do not send information faster than other devices can accept them.

HP-IL has a theoretical maximum transmission speed of 20,000 bytes per second. In a typical implementation though, this rate is lowered to somewhere between 3,000 and 5,000 bytes per second. This speed is sufficient to transmit more than a full single-spaced typewritten page of data every second.

3421A Loop Capabilities

The following table lists the HP-IL functions that the 3421A responds to and uses.


R	The 3421A handshakes as ■ receiver.
D	Handshakes as a driver to the next device.
AH	Handshakes as an acceptor.
SH1	Handshakes as ■ source.
T1,2, 3,4,6	Basic Talker, send Status, send Device ID, send Accessory ID, Unaddressed as a talker when addressed as Listener.
TE0	No extended Talker capability.
L1,3	Basic Listener, Unaddressed to listen when addressed to talk
LE0	No extended listener.
C0	The 3421A cannot serve as a controller.
AA1	Can be autoaddressed by the controller.
AE0	No auto-extended addressing capability.
AM0	No multiple addressing capability.
DC2	The 3421A responds to Device Clear and Selected Device Clear interface commands.
DT1	The 3421A responds to a Device Trigger interface command.
RLO	Remote, Local, and Local Lockout are ignored since the 3421A can only be controlled by a controller.
SR2	Basic Service Request and Asynchronous Service Request capability.
PP0	The 3421A does not respond to parallel poll.
PD1	The 3421A has a power-down mode.
DD0	The 3421A does not implement device dependent Talker or Listener commands.
MS0	The 3421A does not have manual service request capability.

General HP-IB Description

The Hewlett-Packard Interface Bus (HP-IB) is Hewlett-Packard's implementation of IEEE Standard 488-1978, "Standard Digital Interface for Programmable Instrumentation."

It is a carefully defined interface which simplifies the integration of various instruments and computers into systems. The interface provides for messages in digital form to be transferred between two or more HP-IB compatible devices.


The HP-IB is a parallel bus of 16 active signal lines grouped into three sets, according to function, to interconnect up to 15 devices. A pictorial view of the HP-IB connector and its pin designations are shown in the following illustration. Also shown is a diagram of the interface connections and Bus structure.

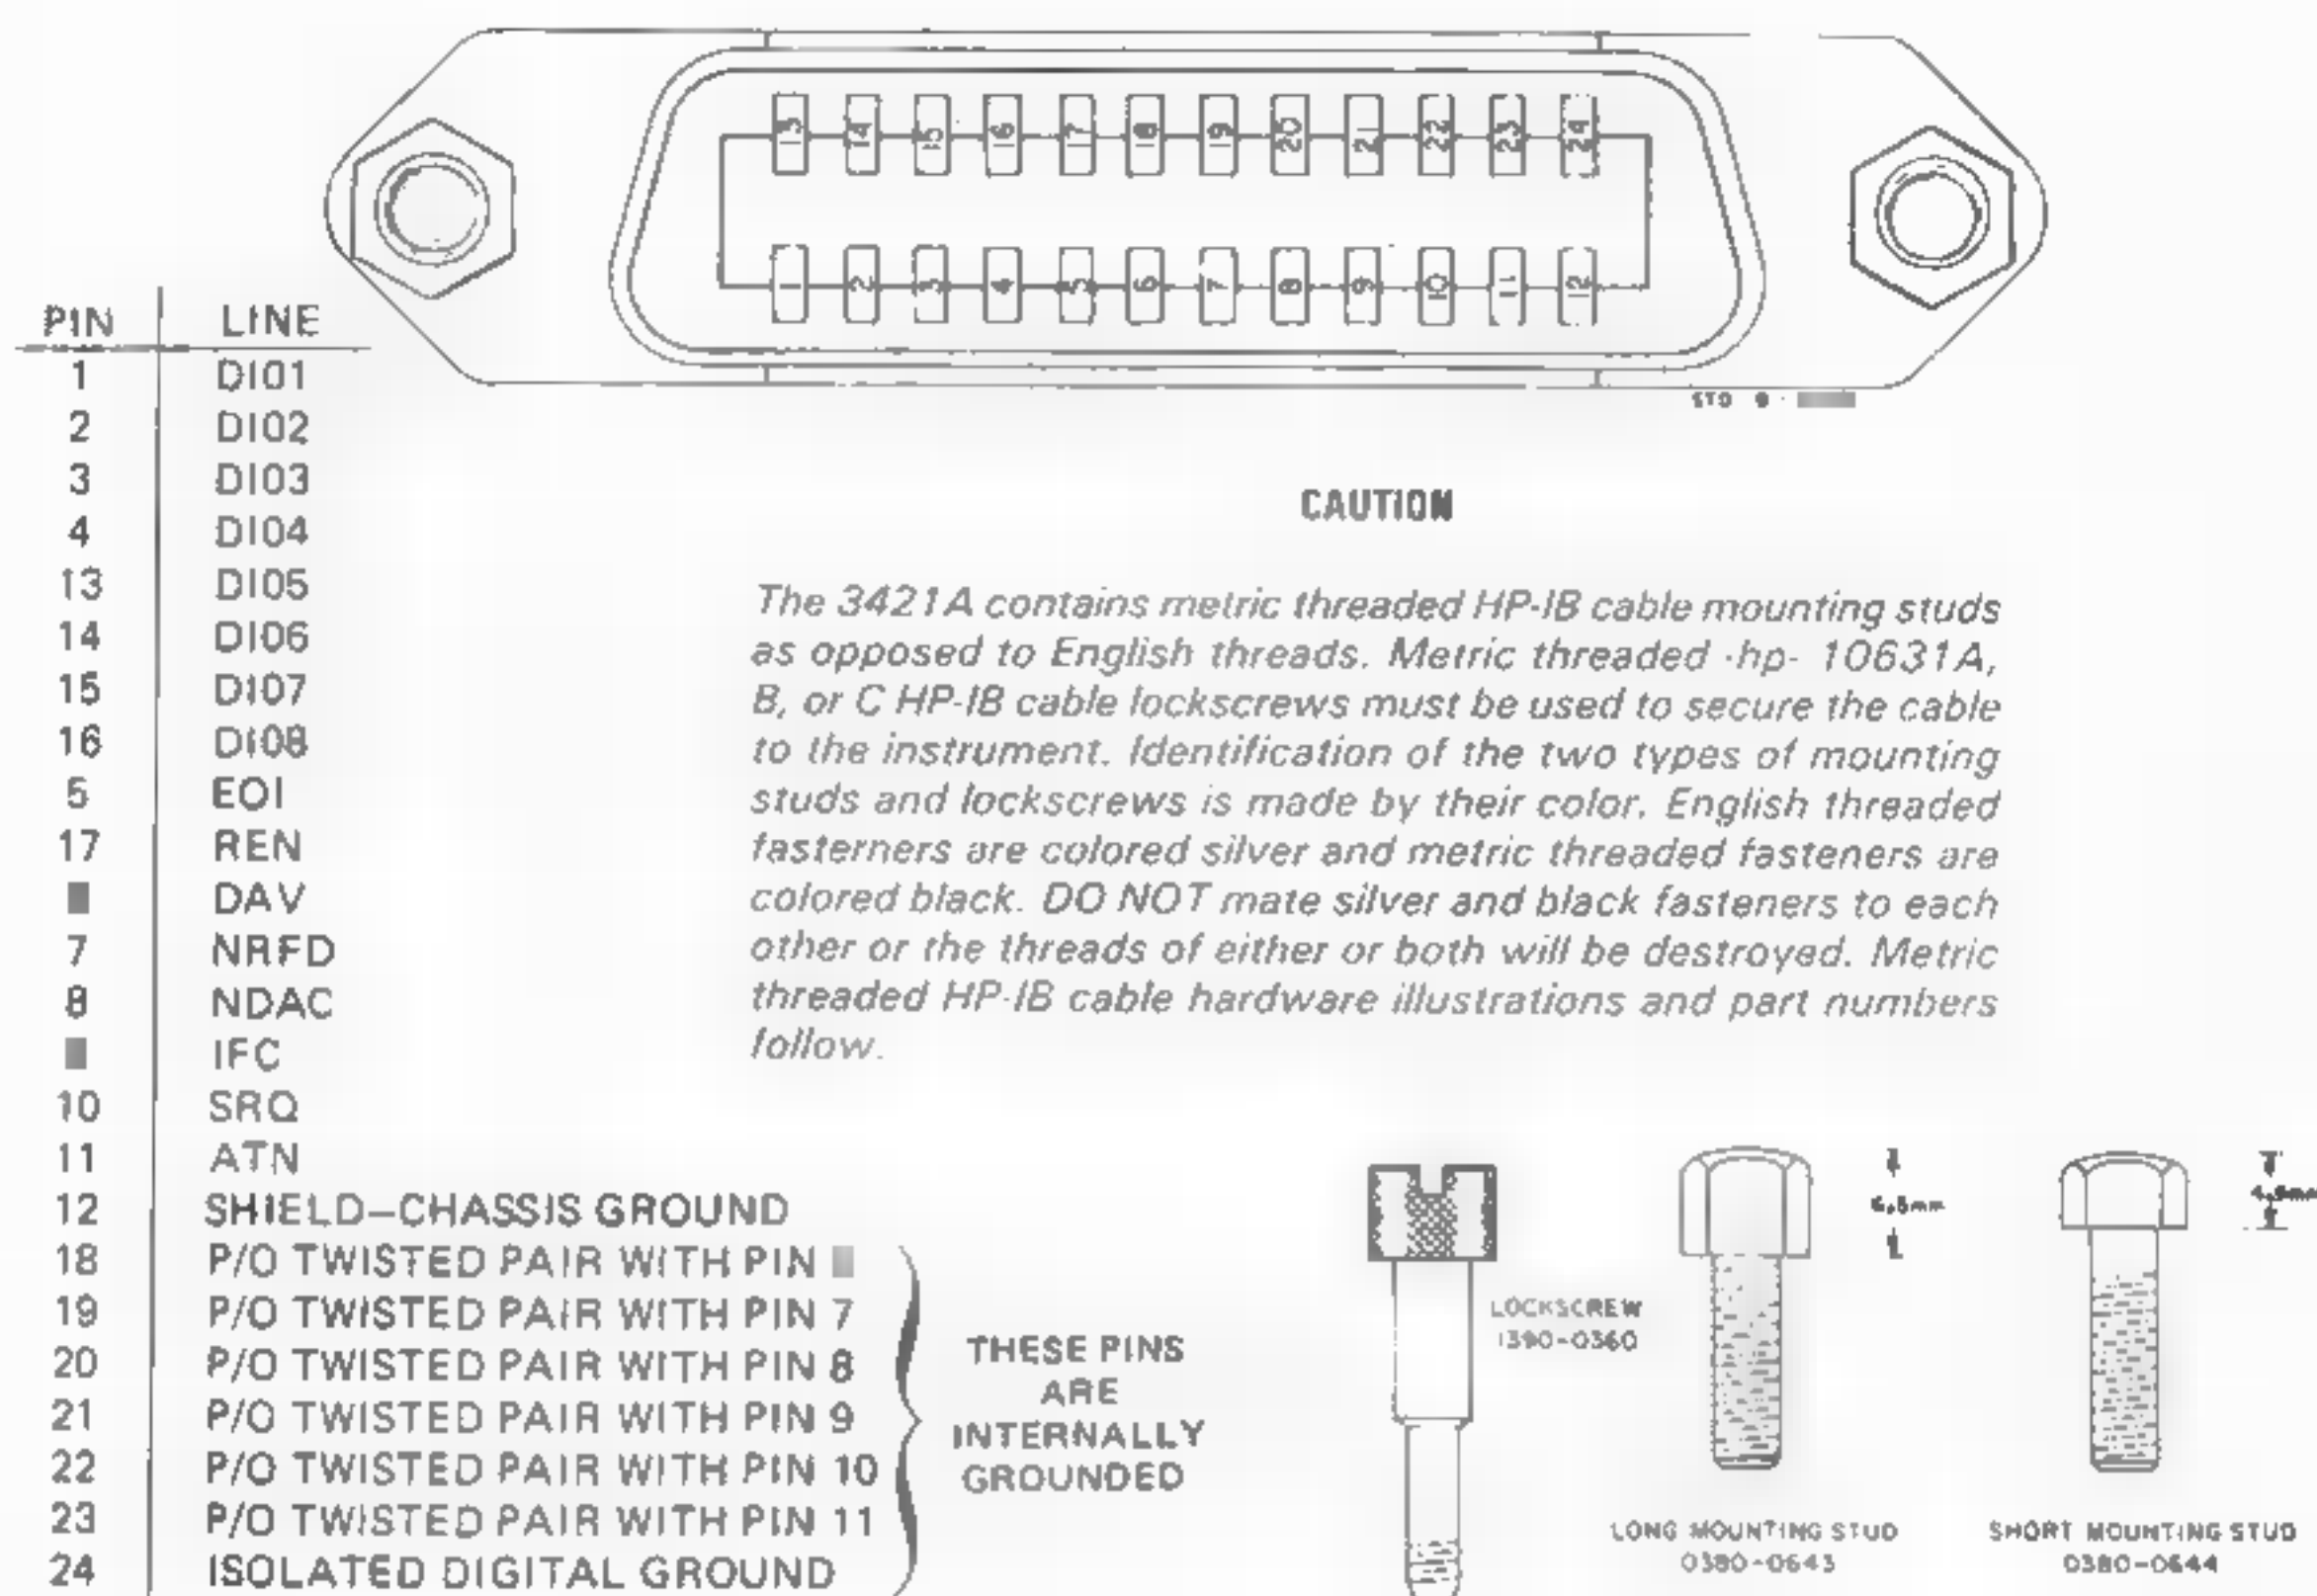

Eight signal lines, termed DATA lines, are in the first set. The Data lines are used to transmit data in the form of coded messages. These messages are used to program the instrument function, transfer measurement data, coordinate instrument operation and read its measurement data. Input and Output of messages, in bit parallel - byte serial form, are also transferred in the data lines. A 7-bit ASCII code normally represents each piece of data.

Data is transferred by means of an interlocking "handshake" technique which permits data transfer (asynchronously) at the rate of the slowest active device used in that transfer. The three DATA BYTE CONTROL lines coordinate the handshaking and form the second set of lines.

The remaining five GENERAL INTERFACE MANAGEMENT lines are used to manage the devices on the HP-IB. This includes activating all connected devices at once, clearing the interface, and others. For a detailed description of the HP-IB lines, commands, in-

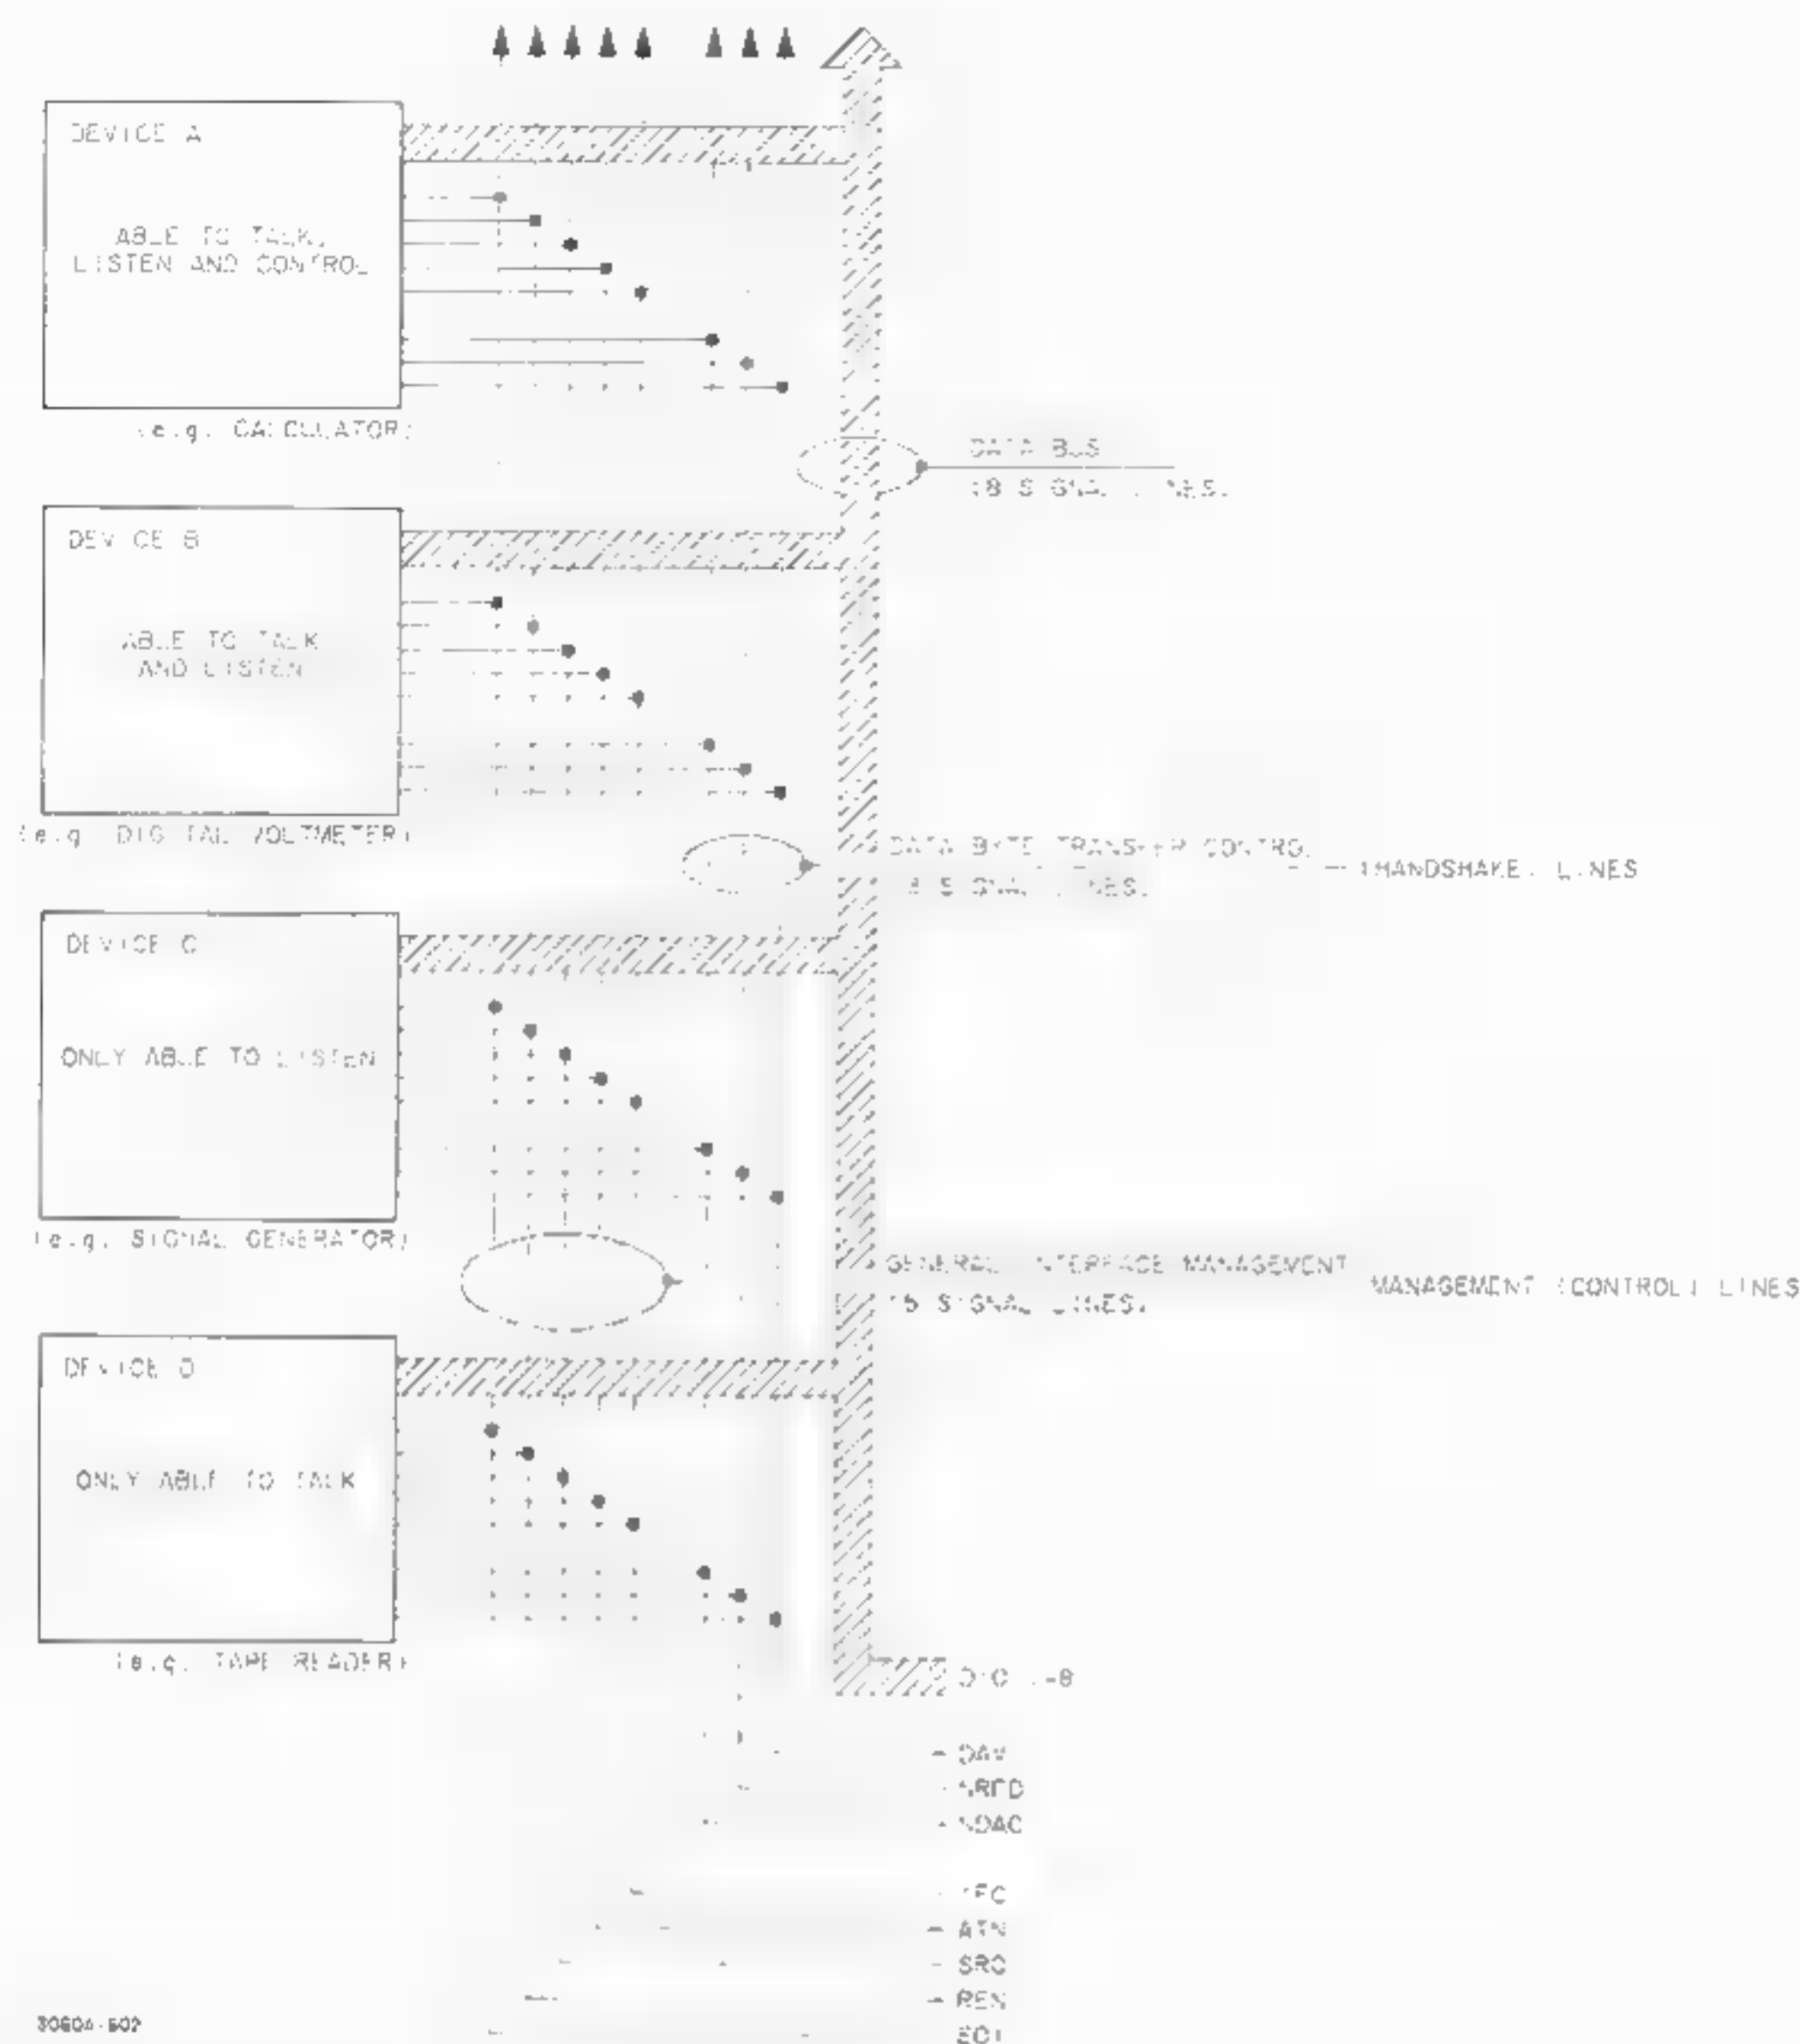

ternal operations, etc., refer to the HP-IB Abbreviated Description Manual, -hp- part number 5955-2903. A condensed description is also available in the Condensed Description of the Hewlett-Packard Interface Bus Manual, -hp- part number 59401-90090. The manuals are available through your local -hp- Sales and Service Office.

As with HP-IL, devices can be classified as either Controllers, Talkers, or Listeners. These are defined as follows.

a. **Controllers:** The device that can specify which device(s) on the Bus is a Talker or Listener. There can be two types of controllers; an Active Controller and a System Controller. The Active Controller is the current controlling device. The System Controller can, however, take control of the Bus even if it is not the Active Controller. There can only be one Active controller at any given time, even if several controllers are on the Bus.

b. **Talkers:** A talker is any device that is able to send information over the Bus when

it has been addressed. Only one Talker may be active at a time; usually the one that is currently addressed to send data. All HP-IB computers, most HP-IB instruments and of course the 3421A, are Talkers.

c. Listeners: Devices which receive information over the Bus, when they have been addressed to listen are called Listeners. A device may or may not be both a Talker and a Listener. The 3421A has Listener capabilities.

3421A Bus Capabilities

The 3421A interfaces to the HP-IB as defined by the IEEE Standard 488-1978. The interface function subset which the 3421A implements is specified in the table below.

SH1	Source handshake capabilities.
AH1	Acceptor handshake capabilities.
T6	Basic Talker, with Serial Poll, no Talk only mode, and un-addressed to Talk when receives its Listen address.
TE0	No extended Talker.
LE0	No extended Listener.
L4	Basic Listener, unaddressed to listen when receives its Talk address.
SR1	Complete Service Request capability.
RLO	Remote Only capability.
PPO	No Parallel Poll capability.
DC1	Complete Device Clear capability.
DT1	Complete Device Trigger capability.
CO	No Controller capability.

Interface Terms

The following is used to define many of the terms and concepts used to describe HP-IL and HP-IB systems operations.

- Address. Each device connected to the interface has a unique address assigned to it. With HP-IL, the address is assigned by the controller. In HP-IB, the address is set by switches in the instrument. The address is used to specify which device connected to the interface will receive (Addressed to Listen) or send (Addressed to Talk) information.
- Byte. A byte is a unit of information consisting of 8 binary digits called bits.
- Clear. The Clear message causes the listening device(s) or all the devices connected to the interface to return to their predefined device-dependent state.

- Device. Any instrument or unit that is HP-IL (or HP-IB) compatible is called a "Device."
- Device Dependent. An action a device performs in response to information sent through the interface. The action is a characteristic of a particular instrument and will probably vary from device to device.
- Polling. Polling is process typically used by ■ controller to locate a device that has requested service from the controller. There are two types of polling: Serial Poll and Parallel Poll.
 1. Serial Poll. When the controller executes a serial poll, the addressed device sends one byte of operational information called ■ Status Byte. If more than one device connected to the interface is capable of requesting service, each device must be serial polled until the device that requested service is located.
 2. Parallel Poll. This method obtains a Status Bit from 8 devices connected to the interface. The 3421A does not respond to a Parallel Poll.
- Require Service. A device can send this message at any time to signify that it needs some type of interaction with the controller. Of course the device must be pre-programmed to send the Service Request and the controller must be pre-programmed to respond.

INDEX

	Page		Page
A		E	
Abnormal Condition	68,111	Electronic Calibration	20
AC VOLTAGE MEASUREMENTS	43,78,143	Error Format	57
Accessories	178	Event Log	232
Actuator/Multiplexer Jumpers	210	Event Occurred	64
Actuators	153	F	
Addressing	51	FINDID	116
ADVANCED COMMANDS	23,85,136	FOUR-WIRE RESISTANCE	
Advanced Programming	72	MEASUREMENTS	36,79,146
Attenuators	151,212	FREQUENCY MEASUREMENTS	24,81,150
AUTOIO	117	Front Panel	13
Autoranging	44	Front Panel Program	123
Autozero	31,41	H	
B		HP-IB	184
BATTERY OPERATION	19	HP-IB Address Selection	185
Block Diagram (Breadboard)	230	HP-IB Addressing	53
Breadboard Voltmeter Input Connections	218	HP-IB Configuration	208
C		HP-IB Description	239
CALIBRATION	20,42	HP-IB Option	13
Calibration Enable	20	HP-IL	183
CHANNEL COMMANDS	83,154	HP-IL Address Selection	184
CHANNEL CONTROL COMMANDS	89	HP-IL Addressing	52
Channel Display	28	HP-IB Description	237
CHANNEL LIST	54,84,99,140,155	HP-IB Interface Control	102
Channel Numbering and Addressing	21,139	HP-IL vs. HP-IB	49
CHANNELS	21,138	I	
Cleaning	188,216	INA	106
CLEAR	60	IND	104
Close Digital Output Switch	173	Information Transfer	49
COMMAND DIRECTORY (blue pages)	77	Initial Inspection	179
COMMANDS	22	Initialization	120
common Mode Noise	160	Input Port	164
control Switches	34	Input/Output Port (Breadboard)	224
Counter	24,149	Installation	181
Current Loop	161	INSTANT	107
D		INSTRUMENT CONTROL COMMANDS	91
Data Acquisition and Control	2	Interface Capabilities	59
Data Logger	132	Interface Connections	183
Data Ready	109	Interface Terms	242
DC VOLTAGE MEASUREMENTS	42,78,142	L	
Digital Clear	174	LISTEN	119
DIGITAL COMMANDS	82,86	LOCAL	60,118
Digital Logic Interface	175	LOCAL LOCKOUT	60
Digital Monitor Commands	167	Logger Program	132
Digital Set	174	Low Battery	19,114
Digital Trigger	66,155,171		
Digits of Resolution	43		
Disassembly Instructions	196		
DISPLAY	27		
Documentation Worksheets	231		

M	Page
MANIO	117
Manual Ranging	44
Measurements	141
MONITOR COMMANDS	87
Monitor Commands	167
N	
Noise Rejection	159
Normal Mode Rejection	43
O	
Ohms Measurement Jumpers	212
Open Digital Output Switch	173
Operating Characteristics	11
OPTIMIZING READING RATES	30
Option Installation/Removal	195
OUTA	103
Output Format	57
Output Port	172
Overload Format	58
Overview of the 3421A	13
P	
Power Down/Power Failure	154
POWER DOWN/POWER UP	29
Power Requirements, Cords	180
Power Supply Limitations (Breadboard)	220
Programming Hints	54,99
PWRDN (Power Down)	114
PWRUP (Power Up)	115
R	
Radiated Noise (Breadboard)	221
Ranging	44
Read Channel List	175
Read Input Bits	165,166
Read Program	133
READ STATE REGISTERS	92
Reading Rate	31
Reading Ready	66
Readings Output Format	57
REAR PANEL	13,33
Receiving Data From the 3421A	56,101
REFERENCE MEASUREMENTS	80
Reference Temperature	38
Relay Control	175
REMOTE	60,118
Repair Service	187
REQUIRE SERVICE	61
Reset Switch	34
RESISTANCE MEASUREMENTS	35,43,144

S	Page
Safety Considerations	182
SELECT	103
Self Test	18
Sending Instructions to the 3421A	53,98
Serial Number	187
Serial Poll	71
Shielding	159
Shipping Instructions	187
Signal Environment	30
Signal Ended Measurements	157
Solar Heating Demonstration	3
Specifications	189
SPOLL	71
SRQ	61
SRQ Mask	62
Standard Commands	22
State Registers	92
Status Register	62,107
Strain Relief	207
Switch Configuration	208
Switching Inductive Loads	220
System Increment	155
T	
T-Type Thermocouples	38
Temperature Calibration	20
TEMPERATURE MEASUREMENTS	37,73,80
Temperature Measurements	127,148
Temperature Measurements	129
Terminal Block Edge Connector	214,215
TEST/RESET	39
Theory of Operation (Breadboard)	229
Thermal gradients (Breadboard)	220
Thermistor	73,127
Thermocouple	74
Thermocouple Temperature Measurements	37,148
Thermocouples	129
Totalize	25
TOTALIZE COUNTER	81
Totalize Counter	150
TRIGGER	72,106
Triggering	45
TURN-ON	17
Turn-on/Reset	27
TWO-WIRE RESISTANCE MEASUREMENTS	36,79,145
U	
Unconditionally Close	156
Unpacking Instructions	179

V	Page	W	Page
Voltage and Resistance Measurements (Breadboard)	222	Warranty Information	185
Voltage Measurements	142	Worksheets	231
VOLTMETER	41	Write to Digital Output Port	173
Voltmeter Ranges	45		

Product Line Sales/Support Key

- Key Product Line
 A Analytical
 CM Components
 C Computer Systems Sales only
 CH Computer Systems Hardware Sales and Services
 CS Computer Systems Software Sales and Services
 E Electronic Instruments ■ Measurement Systems
 M Medical Products
 MP Medical Products Primary SRO
 MS Medical Products Secondary SRO
 P Personal Computation Products
 * Sales only for specific product line
 ** Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They ■ not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is ■■■■ for specific products.

HP distributors are printed in italics.

ANGOLA

Telectra
Empresa Técnica de Equipamentos
Eléctricos, S.A.R.L.
R. Barbosa Rodrigues, 41-1 DT.
Caixa Postal 6487
LUANDA
 Tel: 35515, 35516
 E,M,P

ARGENTINA

Hewlett-Packard Argentina S.A.
 Avenida Santa Fe 2035
 Martinez 1640 BUENOS AIRES
 Tel: 798-5735, 792-1293
 Telex: 17595 BIONAR
 Cable: HEWPACKARG
 A,E,CH,CS,P
Biotron S.A.c.i.Me.l
Av Paseo Colon 221, ■ Piso
1398 BUENOS AIRES
 Tel: 30-4846, 30-1851
 Telex: 17595 BIONAR
 M
Fate S.A. I.C.I.Electronica
Venezuela 1326
1095 BUENOS AIRES
 Tel: 37-9020, 37-9026/9
 Telex: 9234 FATEN AR
 P

AUSTRALIA

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd.
 153 Greenhill Road
PARKSIDE, S.A. 5063
 Tel: 272-5911
 Telex: 82536
 Cable: HEWPAARD Adelaide
 A*,CH,CM,E,MS,P

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
 5th Floor
 Teachers Union Building
 495-499 Boundary Street
SPRING HILL, Queensland 4000
 Tel: 229-1544
 Telex: 42133
 Cable: HEWPAARD Brisbane
 A,CH,CM,E,M,P

Canberra, Australia Capital Territory Office

Hewlett-Packard Australia Ltd.
 121 Wollongong Street
FYSHWICK, A.C.T. 2609
 Tel: 80 4244
 Telex: 62650
 Cable: HEWPAARD Canberra
 CH,CM,E,P

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
 31-41 Joseph Street
BLACKBURN, Victoria 3130
 Tel: 89-6351
 Telex: 31-024
 Cable: HEWPAARD Melbourne
 A,CH,CM,CS,E,MS,P

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
 261 Stirling Highway
CLAREMONT, W.A. 6010
 Tel: 383-2188
 Telex: 93859
 Cable: HEWPAARD Perth
 A,CH,CM,E,MS,P

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
 17-23 Talavera Road
 P.O. Box 308
NORTH RYDE, N.S.W. 2113
 Tel: 887-1611
 Telex: 21561
 Cable: HEWPAARD Sydney
 A,CH,CM,CS,E,MS,P

AUSTRIA

Hewlett-Packard Ges.m.b.H.
 Grottenhofstrasse 94
 Verkaufsburo Graz
A-8052 GRAZ
 Tel: 291-5-66
 Telex: 32375
 CH,CM,E*
 Hewlett-Packard Ges.m.b.H.
 Slangholweg ■
A-4020 LINZ
 Tel: 0732 51585
 CH

Hewlett-Packard Ges.m.b.H.
 Liebigasse 1
 P.O. Box 72
A-1222 VIENNA
 Tel: (0222) 23-65-11-0
 Telex: 134425 HEPA A
 A,CH,CM,CS,E,MS,P

BAHRAIN

Green Salon
P.O. Box 557
BAHRAIN
 Tel: 25503-250950
 Telex: 84419
 P
Wael Pharmacy
P.O. Box 648
BAHRAIN
 Tel: 256123
 Telex: 8550 WAEI GJ
 M

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
 Blvd de la Woluwe, 100
 Woluwedal
B-1200 ■■■■
 Tel: (02) 762-32-00
 Telex: 23-494 paloben bru
 A,CH,CM,CS,E,MP,P

BRAZIL

Hewlett-Packard do Brasil I.e.C. Ltda.
 ■■■■ Rio Negro, 750
ALPHAVILLE 06400 Barueri SP
 Tel: 421-1311
 Telex: 011 33872 HPBR-BR
 Cable: HEWPACK ■■■■ Paulo
 A,CH,CM,CS,E,MS
 Hewlett-Packard do Brasil I.e.C. Ltda.
 Avenida Epitacio Pessoa, 4664
 22471 ■■■■ JANEIRO-RJ
 Tel: 286-0237
 Telex: 02-21905 HPBR-BR
 Cable: HEWPACK ■■■■ de Janeiro
 A,CH,CM,E,MS,P*

CANADA

Alberta

Hewlett-Packard (Canada) Ltd.
 210, 7220 Fisher Street S.E.
CALGARY, ■■■■ T2H ■■■■
 ■■■■: (403) 253-2713
 A,CH,CM,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
 11620A-168th Street
EDMONTON, ■■■■ ■■■■ 3T9
 Tel: (403) 452-3670
 A,CH,CM,CS,E,MS,P*

British Columbia

Hewlett-Packard (Canada) Ltd.
 10691 Shellbridge Way
 ■■■■
 British Columbia V6X 2W7
 Tel: (604) 270-2277
 Telex: 610-922-5059
 A,CH,CM,CS,E*,MS,P*

Manitoba

Hewlett-Packard (Canada) Ltd.
 380-550 Century Street
WINNIPEG, Manitoba R3H 0Y1
 Tel: (204) 786-6701
 A,CH,CM,E,MS,P*

New Brunswick

Hewlett-Packard (Canada) Ltd.
 37 Sheadiac Road
MONCTON, New Brunswick E2B 2VQ
 Tel: (506) 855-2841
 CH**

Nova Scotia

Hewlett-Packard (Canada) Ltd.
 P.O. Box 931
 900 ■■■■ Road
DARTMOUTH, Nova Scotia B2Y 3Z6
 Tel: (902) 469-7820
 Telex: 01931470
 CH,CM,CS,E*,MS,P*

Ontario

Hewlett-Packard (Canada) Ltd.
 552 ■■■■ Street
LONDON, Ontario ■■■■ 2S5
 Tel: (519) 686-9181
 A,CH,CM,E*,MS,P*
 Hewlett-Packard (Canada) Ltd.
 6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
 Tel: (416) 678-9430
 Telex: 06983644
 A,CH,CM,CS,E,MP,P

Hewlett-Packard (Canada) Ltd.
 2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
 Tel: (613) 820-6483
 A,CH,CM,CS,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
 220 Yorkland Blvd., Unit #11
WILLOWDALE, Ontario M2J 1R5
 Tel: (416) 499-9333
 CH

Quebec

Hewlett-Packard (Canada) Ltd.
 17500 South Service Road
 Trans-Canada Highway
KIRKLAND, Quebec H9J 2M5
 Tel: (514) 697-4232
 Telex: 05821521
 A,CH,CM,CS,E,MP,P*
 Hewlett-Packard (Canada) Ltd.
 Les Galeries du Vallon
 2323 Du Versant Nord
STE. FOY, Quebec G1N 4C2
 Tel: (418) 687-4570
 CH

CHILE

Jorge Calcagni y Cia. Ltda.
Arturo Burihe 065
Casilla 16475
SANTIAGO ■■■■
 Tel: 222-0222
 Telex: Public Booth 0001
 A,CM,E,M
Olympia (Chile) Ltda.
Av. Rodrigo de Araya 1045
Casilla 256-V
SANTIAGO 21
 Tel: 2-25-50-44
 Telex: 340 ■■■■ OLYMP CK
 Cable: Olympiachile Santiagochile
 CH,CS,P

CHINA, People's Republic of

China Hewlett-Packard Rep. Office
P.O. Box 418
1A Lane 2, Luchang St
Beiwei Rd., Xuanwu District
BEIJING
 Tel: 33-1947, 33-7426
 Telex: 22601 CTSHP CN
 Cable: 1920
 A,CH,CM,CS,E,P

COLOMBIA

Instrumentación
H. A. Langebaek ■ Kier S.A.
Carrera 7 No. 48-75
Apartado Aereo 6287
BOGOTA, 1 D.E.
 Tel: 287-8877
 Telex: 44400 INST CO
 Cable: AARIS Bogota
 A,CM,E,M,P

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSE
 Tel: 24-38-20, 24-08-19
 Telex: 2367 GALGUR
 CM,E,M

CYPRUS

Telerex Ltd.
P.O. Box 4809
14C Stassinios Avenue
NICOSIA
 Tel: 62698
 Telex: 2894 Levidocy
 E,M,P

CZECHOSLOVAKIA

Hewlett-Packard
 Obchodni Zastupitelství v CSSR
 Post. schránka 27
CS-118 01 PRAHA 011
 Tel: 66-296
 Telex: 121353 IHC

DENMARK

Hewlett-Packard A/S
 Datavej 52
DK-3460 Birkerød
 Tel: (02) 81-66-40
 Telex: 37409 hpas dk
 A,CH,CM,CS,E,MS,P
 Hewlett-Packard A/S
 Navejvej 1
DK-8600 SILKEBORG
 Tel: (06) 82-71-66
 Telex: 37409 hpas dk
 CH,CM,E

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
Casilla 6423 CCI
QUITO
 Tel: 450-975, 243-052
 Telex: 2548 CYEDE ED
 A,CM,E,P
Hospitalar S.A.
Robles 625
Casilla 3590
QUITO
 Tel: 545-250, 545-122
 Telex: 2485 HOSPTL ED
 Cable: HOSPITALAR-Quito
 M

EGYPT

International Engineering Associates
24 Hussein Hagazi Street
Kasr-el-Aini
CAIRO
 Tel: 23-829
 Telex: 93830
 CH,CS,E,M
Informatic For Systems
22 Talaat Harb Street
CAIRO
 Tel: 759006
 Telex: 93938 FRANK UN
 CH,CS,P
Egyptian International Office
for Foreign Trade
P.O. Box 2558
CAIRO
 Tel: 984935
 Telex: 93337 EGPOR
 P

EL SALVADOR

IPESA de El Salvador S.A.
29 Avenida Norte 1216
SAN SALVADOR
 Tel: 26-6858, 26-6888
 Telex: Public Booth 20107
 A,CH,CM,CS,E,P

FINLAND

Hewlett-Packard Oy
 Revonluentie 7
SF-02100 ESPOO 10
 Tel: (90) 455-0211
 Telex: 121563 hewpa sf
 A,CH,CM,CS,E,MS,P
 Hewlett-Packard Oy
 Aaloksenkatu 10-C
SF-40720-72 JYVASKYLA
 Tel: (941) 216318
 CH
 Hewlett-Packard Oy
 Kainuuntie 1-C
SF-90140-14 OULU
 Tel: (981) 338785
 CH



SALES & SUPPORT OFFICES

Arranged alphabetically by country

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 Les Milles Cedex

AIX-EN-PROVENCE
Tel: (42) 59-41-02
Telex: 410770F
A,CH,CM,E,MS,P*

Hewlett-Packard France
Boite Postale No. 503
F-25026 BESANCON
28 Rue de la Republique
F-25000 BESANCON
Tel: (81) 83-16-22
CH,M

Hewlett-Packard France
Bureau de Vente de Lyon
Chemin des Mouilles
Boite Postale 182
F-69130 ECULLY Cedex
Tel: (78) 33-81-25
Telex: 310617F
A,CH,CM,CS,E,MP

Hewlett-Packard France
Immeuble France Evry
Tour Lorraine
Boulevard de France
F-91035 EVRY Cedex
Tel: (60) 77-96-60
Telex: 692315F
CM,E

Hewlett-Packard France
5th Avenue Raymond Chanas
F-38320 EYBENS
Tel: (76) 25-81-41
Telex: 980124 HP GRENOB
CH,CM

Hewlett-Packard France
Centre d'Affaire Paris-Nord
Bâtiment Ampère ■ étage
Rue de la Commune de Paris
Boite Postale 300
F-93153 LE BLANC MESNIL
Tel: (01) 885-44-52
Telex: 211032F
CH,CM,CS,E,MS

Hewlett-Packard France
Le Montesquieu
Avenue du President JF Kennedy
F-33700 MERIGNAC
Tel: (56) 34-00-84
Telex: 550105F
CH,CM,E,MS

Hewlett-Packard France
32 Rue Lothaire
F-57000 METZ
Tel: (87) 65-53-50
CH,CM

Hewlett-Packard France
1 Bis Rue Julien Videment
F-44200 NANTES
Tel: 40-89-33-38
CH**

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
F-91947 Les Ulis Cedex ORSAY
Tel: (6) 907-78-25
Telex: 600048F
A,CH,CM,CS,E,MP,P

Hewlett-Packard France
Paris Porte-Maillot
13, 15 25 Bd. De L'Amiral Bruix
F-75782 PARIS Cedex 16
Tel: (01) 502-12-20
Telex: 613663F
CH,CM,MS,P

Hewlett-Packard France
2 Allée de la Bourgonnette
F-35100
Tel: (99) 51-42-44
Telex: 740912F
CH,CM,E,MS,P*

Hewlett-Packard France
98 Avenue de Bretagne
F-76100 ROUEN
Tel: (35) 63-57-66 CH** ,CS

Hewlett-Packard France
4 Rue Thomas Mann
Boite Postale 56
F-67200 STRASBOURG
Tel: (88) 28-56-46
Telex: 890141F
CH,CM,E,MS,P*

Hewlett-Packard France
20 Chemin de ■ Cépierre
F-31081 TOULOUSE Cedex
Tel: (61) 40-11-12
Telex: 531639F
A,CH,CM,CS,E,P*

Hewlett-Packard France
Immeuble Péricentre
Rue Van Gogh
F-59650 VILLENEUVE D'ASQ
Tel: (20) 91-41-25
Telex: 160124F
CH,CM,E,MS,P*

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Technisches Büro Berlin
Keithstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 24-90-86
Telex: 018 3405 hpbld
A,CH,CM,E,M,P,X

Hewlett-Packard GmbH
Technisches Büro Böblingen
Herrenberger Strasse 110
D-7030 BOBLINGEN
Tel: (07031) 667-1
Telex: bbn or
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Technisches Büro Düsseldorf
Emanuel-Leutze-Strasse 1
D-4000 DUSSELDORF
Tel: (0211) 5971-1
Telex: 085/86 533 hpd d
A,CH,CM,CS,E,MS,P

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
D-6000 FRANKFURT 56
Tel: (0611) 50-04-1
Telex: 04 13249 hpfm ■
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Technisches Büro Hamburg
Kapstadtring 5
D-2000 HAMBURG 60
Tel: (040) 63804-1
Telex: 021 63 032 hphh d
A,CH,CM,CS,E,MS,P

Hewlett-Packard GmbH
Technisches Büro Hannover
Am Grossmarkt ■
D-3000 HANNOVER 91
Tel: (0511) 46-60-01
Telex: 092 3259
A,CH,CM,E,MS,P

Hewlett-Packard GmbH
Technisches Büro Mannheim
Rosslauer Weg 2-4
D-6800 MANNHEIM
Tel: (0621) 70050
Telex: 0462105
A,C,E

Hewlett-Packard GmbH
Technisches Büro Ulm
Messerschmittstrasse 7
D-7910 NEU ULM
Tel: 0731-70241
Telex: 0712816 HP ULM-D
A,C,E*

Hewlett-Packard GmbH
Technisches Büro Nürnberg
Neumeyerstrasse ■
D-8500 NÜRNBERG
Tel: (0911) 52 20 83-87
Telex: 0623 860
CH,CM,E,MS,P

Hewlett-Packard GmbH
Technisches Büro München
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: (089) 6117-1
Telex: 0524985
A,CH,CM,E,MS,P

GREAT BRITAIN

Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
ALTRINCHAM
Cheshire WA14 1NU
Tel: (061) 928-6422
Telex: 668068
A,CH,CS,E,M

Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton
BRISTOL ■ 2BN, Avon
Tel: (027) ■
Telex: 444302
CH,CM,M,P

Hewlett-Packard Ltd.
14 Wesley Street
CASTLEFORD
Yorkshire WF10 ■
Tel: (0977) 550016
Telex: 5557355
CH

Hewlett-Packard Ltd.
(Pinewood)
■ ■ ■ ■ ■
EASTHAMPTON
Wokingham
Berkshire, RG11 3LL
Tel: 3446 3100
Telex: 84-88-05
CH,CS,E

Hewlett-Packard Ltd.
Fourier House
257-263 High Street
LONDON COLNEY
Herts., AL2 1HA, St. ■ ■ ■ ■ ■
Tel: (0727) 24400
Telex: 1-8952716
CH,CS,E

Hewlett-Packard Ltd.
Quadrangle
106-118 Station Road
REDHILL, Surrey
Tel: (0737) 68655
Telex: 947234 CH,CS,E

Hewlett-Packard Ltd.
Westminster House
190 Stratford Road
SHIRLEY, Solihull
West Midlands B90 3BJ
Tel: (021) 7458800
Telex: 339105
CH

Hewlett-Packard Ltd.
West End House 41
High Street, West End
SOUTHAMPTON
Hampshire SO3 3DQ
Tel: (703) 886767
Telex: 477138
CH

Hewlett-Packard Ltd.
King Street Lane
WINNERSH, Wokingham
Berkshire RG11 5AR
Tel: (0734) 784774
Telex: 847178
A,CH,E,M

GREECE

Kostas Karayannis S.A.
■ Omirou Street
ATHENS 133
Tel: 32-30-303, 32-37-371
Telex: 21 59 62 RKAR GR
A,CH,CM,CS,E,M,P

PLAISIO S.A.
G. Gerardos
24 Stournara Street
ATHENS
Tel: 36-11-160
Telex: 21 9492
P

GUATEMALA

IPESA
Avenida Reforma 3-48, Zona ■
GUATEMALA
Tel: 316627, 314786
Telex: 4192 TEL TRO GU
A,CH,CM,CS,E,M,P

HONG KONG

Hewlett-Packard Hong Kong, Ltd.
G.P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road
■ KONG
Tel: 5-8323211
Telex: 66678 HEWPA HX
Cable: HP ASIA LTD Hong Kong
E,CH,CS,P

CET Ltd.
1402 Tung Way Mansion
199-203 Hennessy Rd.
Wanchia, HONG KONG
Tel: 5-729376
Telex: 85148 CET HX
CM

Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
HONG KONG
Tel: 5-455644
Telex: 74766 SCHMX HX
A,M

ICELAND

Elding Trading Company Inc.
Hafnarmvoti-Tryggvagotu
P.O. Box 895
IS-REYKJAVIK
Tel: 1-58-20, 1-63-03
M

INDIA

Blue Star Ltd.
Sabri Complex II Floor
24 Residency Rd.
BANGALORE 560 025
Tel: 55660
Telex: 0845-430
Cable: BLUESTAR
A,CH,CM,CS,E

Blue Star Ltd.
Band Box House
Prabhadevi
BOMBAY 400 025
Tel: 422-3101
Telex: 011-3751
Cable: BLUESTAR
A,M

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155
Telex: 011-4093
Cable: FROSTBLUE
A,CH,CM,CS,E,M

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Alkapuri, BORDA, 390 005
Tel: 65235
Cable: BLUE STAR
A

Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 12-01-31
Telex: 021-7655
Cable: BLUESTAR
A,M

Blue Star Ltd.
133 Kodambakkam High Road
MADRAS 600 034
Tel: 82057
Telex: 041-379
Cable: BLUESTAR
A,M

Blue Star Ltd.
Bhandari House, 7th/8th Floors
91 Nehru Place
NEW DELHI 110 024
Tel: 682547
Telex: 031-2463
Cable: BLUESTAR
A,CH,CM,CS,E,M

Blue Star Ltd.
15/16-C Wallisley Rd.
PUNE 411 011
Tel: 22775
Cable: BLUE STAR
A

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057
Telex: 0155-459
Cable: BLUEFROST
A,E

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthankuzhi
TRIVANDRUM 695 013
Tel: 65799
Telex: 0884-259
Cable: BLUESTAR
E

INDONESIA

BERCA Indonesia P.T.
P.O.Box 496/JKT.
Jl. Abdul Muis 62
JAKARTA
Tel: 373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA
P

INDONESIA (Con't.)

BERCA Indonesia P.T.
Wisma Antara Bldg., 17th floor
JAKARTA
A,CS,E,M

BERCA Indonesia P.T.
P.O. Box 174/SBY.
Jl. Kutei No. 11
SURABAYA
Tel: 68172
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA
A*,E,M,P

IRAQ

Hewlett-Packard Trading S.A.
Mansoor City 9B/3/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPARAO IK
CH,CS

IRELAND

Hewlett-Packard Ireland Ltd.
Kestrel House
Clanwilliam Court
Lower Mount Street
DUBLIN 2, Eire
Tel: (1) 60 88 00
Telex: 30439
A,CH,CM,CS,E,M,P
Cardiac Services Ltd.
Kilmore Road
Artane
DUBLIN 5, Eire
Tel: (01) 351820
Telex: 30439
M

ISRAEL

Electronics Engineering Division
Motorola Israel Ltd.
16 Kramenetski Street
P.O. Box 25016
TEL-AVIV 67899
Tel: 3-338973
Telex: 33569 Motil IL
Cable: BASTEL Tel-Aviv
A,CH,CM,CS,E,M,P

ITALY

Hewlett-Packard Italiana S.p.A.
Traversa 99C
Giulio Petrone, 19
I-70124 BARI
Tel: (080) 41-07-44
M

Hewlett-Packard Italiana S.p.A.
Via Martin Luther King, 38/111
I-40132 BOLOGNA
Tel: (051) 402394
Telex: 511630
CH,CM,E,MS

Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43G/C
I-95126 CATANIA
Tel: (095) 37-10-87
Telex: 970291
C,P

Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio 9
I-20063 CERNUSCO SUL NAVIGLIO
Tel: (2) 903691
Telex: 334632
A,CH,CM,CS,E,MP,P

Hewlett-Packard Italiana S.p.A.
Via Nuova san Rocco A
Capodimonte, 62/A
I-80131 NAPLES
Tel: (081) 7413544
Telex: 710698
A,CH,CM,E

Hewlett-Packard Italiana S.p.A.
Viale G. Modugno 33
I-16156 GENOVA PEGLI
Tel: (010) 68-37-07
E,C

Hewlett-Packard Italiana S.p.A.
Via Turazza 14
I-35100 PADOVA
Tel: (049) 664888
Telex: 430315
A,CH,CM,E,MS

Hewlett-Packard Italiana S.p.A.
Viale C. Pavese 340
I-00144
Tel: (06) 54831
Telex: 610514
A,CH,CM,CS,E,MS,P*

Hewlett-Packard Italiana S.p.A.
Corso Svizzera, 184
I-10149
Tel: (011) 74 4044
Telex: 221079
CH,CM,E

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Inoue Building
1-21-8, Asahi-cho
ATSUGI, Kanagawa 243
Tel: (0462) 28-0451
CM,C*,E

Yokogawa-Hewlett-Packard Ltd.
Sannomiya Dai-ichi Seimei Bldg.
69 Kyo-machi, Chuo-ku
KOBE, 650
Tel: (078) 392-4791
C,E

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi Yasoji Bldg 4F
3-4 Chome Tsukuba
KUMAGAYA, Saitama
Tel: (0485) 24-6563
CH,CM,E

Yokogawa-Hewlett-Packard
Asahi Shinbun Dai-ichi Bldg., 2F
4-7 Hanabata-cho
KUMAMOTO-SHI, 860
Tel: (0983) 54-7311
CH,E

Yokogawa-Hewlett-Packard Ltd.
Shin Kyoto Center Bldg. 5F
614 Siokoji-cho
Nishitruhigashi, Karasuma
Siokoji-dori, Shimogyo-ku
KYOTO 600
Tel: 075-343-0921
CH,E

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Building
1-4-73, San-no-maru
MITO, Ibaragi 310
Tel: (0292) 25-7470
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Sumitomo Seimei Nagoya Bldg.
11-2 Shimo-sasajima-cho
Nakamura-ku
NAGOYA, Aichi 450
Tel: (052) 571-5171
CH,CM,CS,E,MS

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 4th Floor
5-4-20 Nishinakajima
Yodogawa-ku
OSAKA, 532
Tel: (06) 304-6021
Telex: YHPOSA 523-3624
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
27-15, 1-chome
Yabe
SAGAMIHARA-SHI PREF. 229
Tel: 427-591311
Telex: 8912
CH**,E**

Yokogawa-Hewlett-Packard Ltd.
Shinjuku Dai-ichi Seimei 6F
■ 7-1, Nishi Shinjuku
Shinjuku-ku, TOKYO
Tel: 03-348-4611-5
CH,E

Yokogawa-Hewlett-Packard Ltd.
3-29-21 Takaido-Higashi
Suginami-ku TOKYO 168
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
Yasudaseimei Yokohama
Nishiguchi Bldg.
3-304 Tsuruya-cho
Kanagawa-ku
YOKOHAMA, Kanagawa, 221
Tel: (045) 312-1252
CH,CM,E

JORDAN

Mouasher Cousins Company
P.O. Box 1387
AMMAN
Tel: 24907, 39907
Telex: 21456 SABCO JO
CH,E,M,P

KENYA

ADCOM Ltd., Inc.
City House, Wabera Street
P.O. Box 30635
Tel: 331955
Telex: 22639
E,M

KOREA

Samsung Electronics Computer Division
76-561 Yeoksam-Dong
Kangnam-Ku
C.P.O. ■ 2775
SEOUL
Tel: 555-7555, 555-5447
Telex: K27364 SAMSAN
A,CH,CM,CS,E,M,P

KUWAIT

Al-Khalidya Trading ■ Contracting
P.O. Box 830 Safat
KUWAIT
Tel: 42-4910, 41-1726
Telex: 2481 Areeg kt
CH,E,M

Photo & Cine Equipment
P.O. Box 270 Safat
KUWAIT
Tel: 42-2846, 42-3801
Telex: 2247 Matin
P

LEBANON

G.M. Dolmadjian
Achrafieh
P.O. Box 165. 167
Tel: 290293
MP

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
■ de la Woluwe, ■
Woluwedael
B-1200
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,CH,CM,CS,E,MP,P

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
1st Floor, Bangunan ■
American
Jalan Semantan, Damansara Heights
■ ■ 23-03
Tel: 943022
Telex: MA31011
A,CH,E,M,P*

Protel Engineering
Lot 319, Satok Road
P.O. Box 1917
Kuching, SARAWAK
Tel: 53544
Telex: MA 70904 PROMAL
Cable: PROTELENG
A,E,M

MALTA

Philip Toledo Ltd.
Natabile Rd.
MRIEHEL
Tel: 447 47, 455 66
Telex: MW.649
P

MEXICO

Hewlett-Packard Mexicana, S.A. de C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco 16020
MEXICO CITY
Tel: (905) 676-4600
Telex: 017-74-507
A,CH,CS,E,MS,P

Hewlett-Packard Mexicana, S.A. de C.V.
Rio Volga ■
Colonia ■ Valle
MONTERREY, N.L.
Tel: 78-42-93, 78-42-40, 78-42-41
Telex: 038-410
CH

ECISA
Taine 229 10 Pisa
Polanco D.F.
C.P. 11570
Tel: (905) 250-5391
M

MOROCCO

Dolbeau
81 rue Karatchi
CASABLANCA
Tel: 3041-82, 3068-38
Telex: 23051, 22822
E

Gerep
2 rue d'Agadir
Boite Postale 156
CASABLANCA
Tel: 272093, 272095
Telex: 23 739
P

NETHERLANDS

Hewlett-Packard Nederland B.V.
Van Heuven Goedhardlaan 121
NL 1181KK AMSTELVEEN
P.O. Box 667
NL 1180 ■ AMSTELVEEN
Tel: (20) 47-20-21
Telex: 13 216
A,CH,CM,CS,E,MP,P

Hewlett-Packard Nederland B.V.
Bongerd ■
NL 2906VK CAPPELLE, A/D IJssel
P.O. Box 41
NL 2900 AA CAPELLE, IJssel
Tel: (10) 51-64-44
Telex: 21261 HEPAC NL
A,CH,CM,CS

Koning en Hartman Electrotechniek B.V.
Koperwerf 30
2544 En den Haag
The NETHERLANDS
Tel: 070-210101
Telex: 31528
CM

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
169 Manukau Road
P.O. Box 26-189
Epsom, AUCKLAND
Tel: 687-159
Cable: HEWPAC Auckland
CH,CM,E,P*

Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, WELLINGTON 3
P.O. Box 9443
Courtenay Place, WELLINGTON 3
Tel: 877-199
Cable: HEWPAC Wellington
CH,CM,E,P

Northrop Instruments & Systems Ltd.
369 Khyber Pass Road
P.O. Box 8602
AUCKLAND
Tel: 794-091
Telex: 60605
A,M

Northrop Instruments & Systems Ltd.
110 Mandeville St.
P.O. Box 8388
CHRISTCHURCH
Tel: 486-928
Telex: 4203
A,M

Northrop Instruments ■ Systems Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 3380
A,M

NORTHERN IRELAND

Cardiac Services Company
95A Finaghy Road South
BELFAST BT 10 0BY
Tel: (0232) 625-586
Telex: 747626
M

NORWAY

Hewlett-Packard Norge A/S
Folke Bernadottesvei 50
P.O. Box 3558
N-5033 FYLLINGSDALEN (BERGEN)
Tel: (05) 16-55-40
Telex: 16621 hpnas n
CH,CM,E

Hewlett-Packard Norge A/S
Oesterndalen 18
P.O. Box 34
N-1345 OESTERAS
Tel: (02) 17-11-80
Telex: 16621 hpnas n
A*,CM,E,MS,P

OMAN

Khimji Ramdas
P.O. Box 19
MUSCAT
Tel: 72-22-17, 72-22-25
Telex: 3289 BROKER MB MUSCAT
P

PAKISTAN

Mushko & Company Ltd.
1-B, Street 43
Sector F-8/1
ISLAMABAD
Tel: 26875
Cable: FEMUS Rawalpindi
A,E,M

SALES & SUPPORT OFFICES

Arranged alphabetically by country

PAKISTAN (Con't.)

Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 511027, 512927
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi
A,E,M,P*

PANAMA

Electrónico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA 5
Tel: 64-2700
Telex: 3438 ELECTRON PG
A,CM,E,M,P
Foto Internacional, S.A.
Colon Free Zone, Apartado 2068
COLON 3
Tel: 45-2333
Telex: 379 8626, IMPORT PG
P

PERU

Cia Electro Médica S.A.
Los Flamencos 145, San Isidro
Casilla 1030
LIMA 1
Tel: 41-4325, 41-3703
Telex: Pub. Booth 25306
A,CM,E,M,P

PHILIPPINES

The Online Advanced Systems
Corporation
Rico House, Amoroso Cor. Herrera
Street
Legaspi Village, Makati
P.O. Box 1510
Metro MANILA
Tel: 85-35-81, 85-34-91, 85-32-21
Telex: 3274 ONLINE
A,CH,CS,E,M
Electronic Specialists and
Proponents Inc.
690-B Epifanio de los Santos
Avenue
Cubao, QUEZON CITY
P.O. Box 2649 Manila
Tel: 98-96-81, 98-96-82, 98-96-83
Telex: 40018, 42000 ITT GLOBE
MACKAY BOOTH
P

POLAND

Buro Informacji Technicznej
Hewlett-Packard
Ul. Stawki 2, 6P
PL00-950 WARSZAWA
Tel: 39-59-62, 39-67-43
Telex: 812453 hepa pl

PORTUGAL

Telectra-Empresa Técnica de
Equipamentos Eléctricos S.a.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-LISBON 1
Tel: (19) 68-60-72
Telex: 12598
CH,CS,E,P
Mundinter
Intercambio Mundial de Comércio
S.a.r.l.
P.O. Box 2761
Avenida Antonio Augusto de Aguiar
138
P-LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M

PUERTO RICO

Hewlett-Packard Puerto Rico
P.O. Box 4407
CAROLINA, Puerto Rico 00630
Calle 272 Edificio 203
Urb. Country Club
RIO PIEDRAS, Puerto Rico 00924
Tel: (809) 762-7255
Telex: 345 0514
A,CH,CS

QATAR

Nasser Trading & Contracting
P.O. Box 1563
DOHA
Tel: 22170
Telex: 4439 NASSER
M
Computearbia
P.O. Box 2570
DOHA
Tel: 329515
Telex: 4806 CHPARB
P

ROMANIA

Hewlett-Packard Reprezentanta
Boulevard Nicolae Balcescu 16
BUCURESTI
Tel: 130725
Telex: 10440

SAUDI ARABIA

Modern Electronic Establishment
P.O. Box 193
AL-KHOBAR
Tel: 864-4678
Telex: 670136
Cable: ELECTA AL-KHOBAR
CH,CS,E,M,P
Modern Electronic Establishment
P.O. Box 1228, Baghdadiah Street
JEDDAH
Tel: 642-0229
Telex: 401035
Cable: ELECTA JEDDAH
CH,CS,E,M,P
Modern Electronic Establishment
P.O. Box 2728
RIYADH
Tel: 491-9715, 491-6387
Telex: 200756
CH,CS,E,M,P

SCOTLAND

Hewlett-Packard Ltd.
Royal Bank Buildings
Swan Street
BRECHIN, Angus, Scotland
Tel: (03562) 3101-2
CH,CM

Hewlett-Packard Ltd.

SOUTH QUEENSFERRY
West Lothian, EH30 9GT
GB-Scotland
Tel: (031) 3311188
Telex: 72682
A,CH,CM,CS,E,M

SINGAPORE

Hewlett-Packard Singapore (Pty.)
Ltd.
P.O. Box 58 Alexandra Post Office
SINGAPORE, 9115
6th Floor, Inchcape House
450-452 Alexandra Road
SINGAPORE 0511
Tel: 631788
Telex: HPSGSO RS 34209
Cable: HEWPACK, Singapore
A,CH,CS,E,MS,P
Dynamar International Ltd.
Unit 05-11 Block 6
Kolam Ayer Industrial Estate
SINGAPORE 1334
Tel: 747-6188
Telex: RS26283
CM

SOUTH AFRICA

Hewlett-Packard South Africa (Pty.)
Ltd.
P.O. Box 120
Howard Place
Pine Park Center, Forest Drive,
Pinelands
CAPE PROVINCE 7450
Tel: 53-7955, 53-7956, 53-7957
Telex: 57-20006
A,CH,CM,E,MS,P
Hewlett-Packard South Africa (Pty.)
Ltd.
P.O. Box 37099
Overport
DURBAN 4067
Tel: 28-4178, 28-4179, 28-4110
Telex: 6-22954
CH,CM
Hewlett-Packard South Africa (Pty.)
Ltd.
P.O. Box 33345
Glenstanlia 0010 TRANSVAAL
1st Floor East
Constantia Park Ridge Shopping
Centre
Constantia Park
PRETORIA
Tel: 982043
Telex: 32163
CH,E
Hewlett-Packard South Africa (Pty.)
Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877
Cable: HEWPACK Johannesburg
A,CH,CM,CS,E,MS,P

SPAIN

Hewlett-Packard Española S.A.
c/Enlaza, 321
E-BARCELONA
Tel: (3) 322-24-51, 321-73-54
Telex: 52603 hpbee
A,CH,CM,CS,E,MS,P
Hewlett-Packard Española S.A.
c/San Vicente
Edificio I, 7 B
E-BILBAO 1
Tel: (4) 23-8306, (4) 23-8206
A,CH,CM,E,MS

Hewlett-Packard Española S.A.

Calle Jerez 3
E-MADRID 16
Tel: (1) 458-2600
Telex: 23515 hpe
A,CM,E
Hewlett-Packard Española S.A.
c/o Costa Brava 13
Colonia Mirasierra
E-MADRID 34
Tel: (1) 734-8061, (1) 734-1162
CH,CS,M

Hewlett-Packard Española S.A.

Av Ramón y Cajal 1-9
Edificio Sevilla 1,
E-SEVILLA 5
Tel: 64-44-54, 64-44-58
Telex: 72933
A,CM,CS,MS,P
Hewlett-Packard Española S.A.
C/Ramon Gordillo, 1 (Entlo.3)
E-VALENCIA 10
Tel: 361-1354, 361-1358
CH,CM,P

SWEDEN

Hewlett-Packard Sverige AB
Sunnanvagen 14K
S-22226 LUND
Tel: (046) 13-69-79
Telex: (854) 10721 (via SPANGA
office)
CH,CM

Hewlett-Packard Sverige AB
Vasstra Vintergatan 9
S-70344 ÖREBRO
Tel: (19) 10-48-80
Telex: (854) 10721 (via SPANGA
office)
CH,CM
Hewlett-Packard (Schweiz) AG
Skalholtsgatan 9, Kista
Box 19
S-16393 SPANGA
Tel: 750-2000
Telex: 854-10721
A,CH,CM,CS,E,MS,P
Hewlett-Packard Sverige AB
Fröfallsgatan 30
S-42132 VÄSTRA-FRÖLUNDA
Tel: (031) 49-09-50
Telex: (854) 10721 (via SPANGA
office)
CH,CM,E,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASLE
Tel: (61) 33-59-20
A,CM
Hewlett-Packard (Schweiz) AG
Bahnhofweg 44
3018 BERN
Tel: (031) 56-24-22
CH,CM
Hewlett-Packard (Schweiz) AG
47 Avenue Blanc
CH-1202 GENEVA
Tel: (022) 32-48-00
CH,CM,CS
Hewlett-Packard (Schweiz) AG
29 Chemin Château Bloc
CH-1219 LE LIGNON-Geneva
Tel: (022) 96-03-22
Telex: 27333 hpag ch
Cable: HEWPACKAG Geneva
A,CM,E,MS,P
Hewlett-Packard (Schweiz) AG
CH-8967
Tel: (57) 50-111
Telex: 59933 hpag ch
Cable: HPAG CH
A,CH,CM,CS,E,MS,P

SYRIA

General Electronic Inc.
Nuri Basha-Ahmet Ebn Kays Street
P.O. Box 5781
DAMASCUS
Tel: 33-24-87
Telex: 11215 ITIKAL
Cable: ELECTROBOR DAMASCUS
E
Middle East Electronics
Place Azmé
Boite Postale 2308
DAMASCUS
Tel: 334592
Telex: 11304 SATACO SY
M,P

TAIWAN

Hewlett-Packard Far East Ltd.
Kaohsiung Office
2/F 88-2, Chung Cheng 3rd Road
KAHNSIUNG
Tel: 241-2318, 261-3253
CH,CS
Hewlett-Packard Far East Ltd.
Taichung Office
#33, Cheng Yi Rd.
10th Floor, Room 5
TAICHUNG
Tel: (042) 289274

Hewlett-Packard Far East Ltd.
Taiwan Branch
5th Floor
205 Tun Hwa North Road
TAIPEI
Tel: (02) 751-0404
Cable: HEWPACK Taipei
A,CH,CM,CS,E,M,P
Ing Lih Trading Co.
3rd Floor 18, Po-Ai Road
TAIPEI 100
Tel: (02) 3111914
Cable: INGLIH TAIPEI
A

THAILAND

Unimesa
30 Patpong Ave., Suriwong
BANGKOK 5
Tel: 234 091, 234 092
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok
A,C,E,M
Bangkok Business Equipment Ltd.
5/5-6 Dejo Road
BANGKOK
Tel: 234-8670, 234-8671
Telex: 87669-BEQUIPT TH
Cable: BUSIQUIPT Bangkok
P

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
50/A Jerningham Avenue
P.O. Box 732
PORT-OF-SPAIN
Tel: 62-44213, 62-44214
Telex: 235,272 HUGCO WG
A,CM,E,M,P

TUNISIA

Tunis Electronique
31 Avenue de la Liberté
TUNIS
Tel: 280-144
E,P
Corema
1 ter. Av. de Carthage
TUNIS
Tel: 253-821
Telex: 12319 CABAM TN
M

TURKEY

Teknim Company Ltd.
Iran Caddesi No. 7
Kavaklidere, ANKARA
Tel: 275800
Telex: 42155
E
E.M.A.
Medina Eldem Sokak No.41/6
Yüksel Caddesi
ANKARA
Tel: 175 622
M,P

UNITED ARAB EMIRATES

Emilac Ltd.
P.O. Box 1641
SHARJAH
Tel: 354121, 354123
Telex: 68136 Emilac Sh
CH,CS,E,M,P

UNITED KINGDOM

Great Britain

NORTHERN IRELAND

SCOTLAND



SALES & SUPPORT OFFICES

Arranged alphabetically by country

Hewlett-Packard Co.
P.O. Box 280
330 Progress Rd.
DAYTON, OH 45449
Tel: (513) 859-8202
A,CH,CM,E*,MS

Oklahoma

Hewlett-Packard Co.
P.O. Box 32008
Oklahoma City, OK 73123
1503 W. Gore Blvd., Suite #2
LAWTON, OK 73505
Tel: (405) 248-4248
C

Hewlett-Packard Co.
P.O. Box 32008
OKLAHOMA CITY, OK 73123
304 N. Meridian Avenue, Suite A
OKLAHOMA CITY, OK 73107
Tel: (405) 946-9499
A*,CH,E*,MS

Hewlett-Packard Co.
Suite 121
9920 E. 42nd Street
TULSA, OK 74145
Tel: (918) 665-3300
A*,CH,CS,M*

Oregon

Hewlett-Packard Co.
1500 Valley River Drive
Suite 330
EUGENE, OR 97401
Tel: (503) 683-8075
C

Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A,CH,CS,E*,MS

Pennsylvania

Hewlett-Packard Co.
1021 8th Avenue
King of Prussia Industrial Park
KING OF PRUSSIA, PA 19406
Tel: (215) 265-7000
Telex: 510-680-2670
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A,CH,CS,E,MP

South Carolina

Hewlett-Packard Co.
P.O. Box 21708
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29210
Tel: (803) 732-0400
CH,E,MS

Hewlett-Packard Co.
Koger Executive Center
Chesterfield Bldg., Suite 124
GREENVILLE, SC 29615
Tel: (803) 748-5601
C

Tennessee

Hewlett-Packard Co.
P.O. Box 22490
224 Peters Road
Suite 102
KNOXVILLE, TN 37922
Tel: (615) 691-2371
A*,CH,MS

Hewlett-Packard Co.
3070 Directors Row
MEMPHIS, TN 38131
Tel: (901) 346-8370
A,CH,MS

Hewlett-Packard Co.
230 Great Circle Road
Suite 216
NASHVILLE, TN 32228
Tel: (615) 255-1271
MS*

Texas

Hewlett-Packard Co.
Suite 310W
7800 Shoalcreek Blvd.
AUSTIN, TX 78757
Tel: (512) 459-3143
E

Hewlett-Packard Co.
Suite C-110
4171 North Mesa
EL PASO, TX 79902
Tel: (915) 533-3555, 533-4489
CH,E*,MS*

Hewlett-Packard Co.
5020 Mark IV Parkway
FORT WORTH, TX 76106
Tel: (817) 625-6361
CH,CS*

Hewlett-Packard Co.
P.O. Box 42816
HOUSTON, TX 77042
10535 Harwin Street
HOUSTON, TX 77036
Tel: (713) 776-6400
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
3309 67th Street
Suite 24
LUBBOCK, TX 79413
Tel: (806) 799-4472
M

Hewlett-Packard Co.
P.O. Box 1270
RICHARDSON, TX 75080
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
P.O. Box 32993
SAN ANTONIO, TX 78216
1020 Central Parkway South
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
CH,CS,E,MS

Utah

Hewlett-Packard Co.
P.O. Box 26626
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A,CH,CS,E,MS

Virginia

Hewlett-Packard Co.
P.O. Box 9669
2914 Hungary Spring Road
RICHMOND, VA 23228
Tel: (804) 285-3431
A,CH,CS,E,MS

Hewlett-Packard Co.
3106 Peters Creek Road, N.W.
ROANOKE, VA 24019
Tel: (703) 563-2205
CH,E*

Hewlett-Packard Co.
5700 Thurston Avenue
Suite 111
VIRGINIA BEACH, VA 23455
Tel: (804) 460-2471
CH,MS

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
Suite A
708 North Argonne Road
SPOKANE, WA 99211
Tel: (509) 922-7000
CH,CS

West Virginia

Hewlett-Packard Co.
MacCorkle Ave., S.E.
CHARLESTON, WV 25304-4297
Tel: (304) 925-0492
A,MS

Wisconsin

Hewlett-Packard Co.
150 S. Sunny Slope
BROOKFIELD, WI 53005
Tel: (414) 784-8800
A,CH,CS,E*,MP

URUGUAY

Pablo Ferrando S.A.C. e.I.
Avenida 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 80-2586
Telex: Public Booth 901
A,CM,E,M
Guillermo Kraft del Uruguay S.A.
Av. Lib. Brig. Gral. Lavalleja 2707
MONTEVIDEO
Tel: 234588, 234808, 201531
Telex: 6245 ACTOUR UY
P

U.S.S.R.

Hewlett-Packard Co.
Representative Office
Pokrovsky Blvd. 4/17 KV12
MOSCOW 101000 Tel: 294-2024
Telex: 7825 HEWPACK SU

VENEZUELA

Hewlett-Packard de Venezuela C.A.
Apartado 50933
3A Transversal Los Ruices
Edificio Segre
CARACAS 1071
Tel: 239-4133
Telex: 25146 HEWPACK
A,CH,CS,E,MS,P
Colimodio S.A.
Apartado 1053
Este 2-Sur 21 No. 148
CARACAS 1010
Tel: 571-35-11
Telex: 21529
M

YUGOSLAVIA

Iskra-Commerce-Representation of
Hewlett-Packard
Sava Centar Delegacija 30
Milentija Popovica
11170 BEOGRAD
Tel: 638-762
Telex: 12042, 12322 YU SAV CEN
Iskra-Commerce-Representation of
Hewlett-Packard
Kopraska
61000 LJUBLJANA
Tel: 321674, 315879
Telex:

ZAIRE

Computer & Industrial Engineering
25 Avenue de Justice
B.P. 10-976
Kinshasa /Zaire
GOMBE
Tel: 32063
Telex: 21-457 SGEKIN ZR
CH,CS

ZIMBABWE

Field Technical Sales
45 Kelvin Road, North
P.B. 3458
SALISBURY
Tel: 705 231
Telex: 4-122 RH
C,E,M,P

■ If there is ■ sales office listed for your area, contact one of these headquarters offices.

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
7 Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 98-96-51
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

ASIA

Hewlett-Packard Asia Ltd.
8th Floor, Sun Hung Kai Center
30 Harbor Rd.
G.P.O. Box 795
HONG KONG
Tel: 5-832 3211
Telex: 66678 HEWPA HX
Cable: ASIA LTD Hong Kong

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
Wehlstrasse 29
P.O.Box 7
A-1205 VIENNA
Tel: (222) 35-16-210
Telex: 135823/135066

NORTHERN EUROPE

Hewlett-Packard S.A.
Uilenstede 475
NL-1183 AG AMSTELVEEN
The Netherlands
P.O.Box 999
NL-1180 AZ AMSTELVEEN
The Netherlands
Tel: 437771

OTHER EUROPEAN

Hewlett-Packard S.A.
7 Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 98-96-51
Telex: 27835 hpse
Cable: HEWPACKSA Geneve
(Offices in the World Trade Center)

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
Mediterranean and Middle East
Operations
Centre
32 Kifissias Ave.
Amaroussion, ATHENS, Greece
Tel: 808-0359 808-0429
Telex: 21-6588
Cable: HEWPACKSA Athens

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
Rockville, MD 20850
Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
P.O. Box 105005
450 Interstate N. Parkway
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
3939 Lankersim Blvd.
LOS ANGELES, CA 91604
Tel: (213) 877-1282

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-1501
Telex: 034-8300
Cable: HEWPACK

14 April 1982 5952-8900



UNITED STATES

Alabama

Hewlett-Packard Co.
700 Century Park South
Suite 128

BIRMINGHAM, AL 35226
Tel: (205) 822-6802
CH,MP

Hewlett-Packard Co.
P.O. Box 4207
8290 Whitesburg Drive, S.E.
HUNTSVILLE, AL 35802
Tel: (205) 881-4591
CH,CM,CS,E,M*

Alaska

Hewlett-Packard Co.
1577 "C" Street Plaza, Suite 252
ANCHORAGE, AK 99501
Tel: (907) 276-5709
CH*

Arizona

Hewlett-Packard Co.
2336 East Magnolia Street
PHOENIX, AZ 85034
Tel: (602) 273-8000
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
2424 East Aragon Road
TUCSON, AZ 85706
Tel: (602) 889-4631
CH,E,MS**

Arkansas

Hewlett-Packard Co.
P.O. Box 5646
Brady Station
LITTLE ROCK, AR 72215
111 N. Filmore
LITTLE ROCK, AR 72205
Tel: (501) 664-8773, 376-1844
MS

California

Hewlett-Packard Co.
111 South Hill Dr.
BRISBANE, CA 94005
Tel: (415) 330-2500
CH,CS
Hewlett-Packard Co.
7621 Canoga Avenue
CANOGA PARK, CA 91304
Tel: (213) 702-8300
A,CH,CS,E,P

Hewlett-Packard Co.
1579 W. Shaw Avenue
FRESNO, CA 93711
Tel: (209) 221-6821
MS

Hewlett-Packard Co.
1430 East Orangethorpe
FULLERTON, CA 92631
Tel: (714) 870-1000
CH,CM,CS,E,MP

Hewlett-Packard Co.
5400 W. Rosecrans Boulevard
LAWDALE, CA 90260
P.O. Box 92105
LOS ANGELES, CA 90009
Tel: (213) 970-7500
CH,CM,CS,MP

Hewlett-Packard Co.
3939 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91604
Tel: (213) 877-1282
Regional Headquarters

Hewlett-Packard Co.
3200 Hillview Avenue
PALO ALTO, CA 94304
Tel: (415) 857-8000
CH,CS,E

Hewlett-Packard Co.
646 W. North Market Boulevard
SACRAMENTO, CA 95834
Tel: (916) 929-7222
A*,CH,CS,E,MS

Hewlett-Packard Co.
9606 Aero Drive
P.O. Box 23333 SAN DIEGO, CA
92123

Tel: (714) 279-3200
CH,CM,CS,E,MP

Hewlett-Packard Co.
P.O. Box 4230
Fullerton, CA 92631
363 Brookhollow Drive
SANTA ANA, CA 92705
Tel: (714) 641-0977
A,CH,CM,CS,MP

Hewlett-Packard Co.
Suite A
5553 Hollister

SANTA BARBARA, CA 93111
Tel: (805) 964-3390

Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95050
Tel: (408) 988-7000
A,CH,CM,CS,E,MP

Colorado

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 771-3455
A,CH,CM,CS,E,MS

Connecticut

Hewlett-Packard Co.
47 Barnes Industrial Road South
P.O. Box 5007
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,CH,CM,CS,E,MS

Florida

Hewlett-Packard Co.
P.O. Box 24210
2901 N.W. 62nd Street
FORT LAUDERDALE, FL 33307
Tel: (305) 973-2600
CH,CS,E,MP

Hewlett-Packard Co.
4080 Woodcock Drive, #132
Brownell Building
JACKSONVILLE, FL 32207
Tel: (904) 398-0663
C*,E*,MS**

Hewlett-Packard Co.
P.O. Box 13910
6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (305) 859-2900
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
6425 N. Pensacola Blvd.
Suite 4, Building 1
PENSACOLA, FL 32505
Tel: (904) 476-8422
A,MS

Hewlett-Packard Co.
5750 North Hoover, Suite 123
TAMPA, FL 33614
Tel: (813) 872-0900
A*,CH,CM,CS,E*,M*

Georgia

Hewlett-Packard Co.
P.O. Box 105005
ATLANTA, GA 30348
2000 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Telex: 810-766-4890
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
Executive Park Suite 100
AUGUSTA, GA 30907
Tel: (404) 736-0592
MS

Hewlett-Packard Co.
P.O. Box 2103
1172 N. Davis Drive
MAINE SPRING, GA 31099
Tel: (912) 923-8831
E

Hawaii

Hewlett-Packard Co.
Kawaiahao Plaza, Suite 190
567 South King Street
HONOLULU, HI 96813
Tel: (808) 526-1555
A,CH,E,MS

Idaho

Hewlett-Packard Co.
250 S. Beechwood
1st Floor, JUB Engineering Bldg.
BOISE, ID 83702
Tel: (208) 376-6000
CH,M*

Illinois

Hewlett-Packard Co.
211 Prospect Road, Suite C
BLOOMINGTON, IL 61701
Tel: (312) 663-0383
CH,MS**

Hewlett-Packard Co.
1100 31st Street
DOWNERS GROVE, IL 60515
Tel: (312) 960-5760
CH,CS

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
A,CH,CM,CS,E,MP

Indiana

Hewlett-Packard Co.
P.O. Box 50807
7301 No. Shadeland Avenue
INDIANAPOLIS, IN 46250
Tel: (317) 842-1000
A,CH,CM,CS,E,MS

Iowa

Hewlett-Packard Co.
1776 22nd Street, Suite 1
WEST DES MOINES, IA 50319
Tel: (515) 224-1435
CH,MS**
Hewlett-Packard Co.
2415 Heinz
IOWA CITY, IA 52240
Tel: (319) 351-1020, 366-6477
CH,E*,MS

Kansas

Hewlett-Packard Co.
1644 W. Rock Road
WICHITA, KS 67207
Tel: (316) 684-8491
CH

Kentucky

Hewlett-Packard Co.
10170 Linn
Suite 525
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A,CH,CS,MS

Louisiana

Hewlett-Packard Co.
P.O. Box 1449
KENNER, LA 70062
160 James Drive East
DETAHAN, LA 70047
Tel: (504) 467-4100
A,CH,CS,E,MS

Maryland

Hewlett-Packard Co.
7121 Standard Drive
HANOVER, MD 21076
Tel: (301) 796-7700
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
Telex: 710-828-9685
A,CH,CM,CS,E,MP

Massachusetts

Hewlett-Packard Co.
32 Hartwell Avenue
LEXINGTON, MA 02173
Tel: (617) 861-8960
A,CH,CM,CS,E,MP

Michigan

Hewlett-Packard Co.
23855 Research Drive
FARMINGTON HILLS, MI 48024
Tel: (313) 476-6400
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
4326 Cascade Road S.E.
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
CH,CS,MS

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
A,CH,CM,CS,E,MP

Mississippi

Hewlett-Packard Co.
P.O. Box 5028
1675 Lakeland Drive
JACKSON, MS 39216
Tel: (601) 982-9363
MS

Missouri

Hewlett-Packard Co.
11131 Colorado Avenue
KANSAS CITY, MO 64137
Tel: (816) 763-8000
Telex: 910-771-2087
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
1024 Executive Parkway
ST. LOUIS, MO 63141
Tel: (314) 878-0200
A,CH,CS,E,MP

Nebraska

Hewlett-Packard
7101 Mercy Road
Suite 101, IBX Building
OMAHA, NE 68106
Tel: (402) 392-0948
CM,MS

Nevada

Hewlett-Packard Co.
Suite D-130
5030 Paradise Blvd.
LAS VEGAS, NV 89119
Tel: (702) 736-6610
MS**

New Jersey

Hewlett-Packard Co.
Crystal Brook Professional Building
Route 35
EATONTOWN, NJ 07724
Tel: (201) 542-1384
A*,C*,E*,P*
Hewlett-Packard Co.
W120 Century Road
PARAMUS, NJ 07652
Tel: (201) 265-5000
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
60 New England Av. West
PISCATAWAY, NJ 08854
Tel: (201) 981-1199
A,CH,CM,CS,E

New Mexico

Hewlett-Packard Co.
P.O. Box 11634
ALBUQUERQUE, NM 87112
11300 Lomas Blvd., N.E.
ALBUQUERQUE, NM 87123
Tel: (505) 292-1330
Telex: 910-989-1185
CH,CS,E,MS

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
Telex: 710-444-4691
A,CH,E,MS
Hewlett-Packard Co.
P.O. Box 297
9600 Main Street
CLARENCE, NY 14031
Tel: (716) 759-8621
Telex: 710-523-1893
CH

Hewlett-Packard Co.
200 Cross Keys Office
FAIRPORT, NY 14450
Tel: (716) 223-9950
Telex: 510-253-0092
CH,CM,CS,E,MS

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A,CH,CM,E,MS
Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 8th Avenue
NEW YORK, NY 10119
Tel: (212) 971-0800
CH,CS,E*,M*

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 921-0300
Telex: 510-221-2183
A,CH,CM,CS,E,MS

North Carolina

Hewlett-Packard Co.
4915 Water's Edge Drive
Suite 160
RALEIGH, NC 27606
Tel: (919) 851-3021
C,M

Hewlett-Packard Co.
P.O. Box 26500
5605 Roanne Way
GREENSBORO, NC 27450
Tel: (919) 852-1800
A,CH,CM,CS,E,MS

Ohio

Hewlett-Packard Co.
9920 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
CH,CS,MS

Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
Telex: 810-423-9430
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
962 Crupper Ave.
COLUMBUS, OH 43229
Tel: (614) 436-1041
CH,CM,CS,E*

